Operation **Special Function Operation** 1) Begin by establishing connections between your Host Computers and the SolidKVM SK06 Switch. 1) Mouse Traversal Function: Utilize USB cables to connect the Host Computers to the USB-B ports of the KVM Switch. Place the mouse on the far right side of the display and continue to slide to the right for 2 seconds, Subsequently, link the MIC and stereo ports of the Host Computers to the corresponding ports the Switch automatically switches to the next port. Switching order is: $PC1 \rightarrow PC2 \rightarrow PC1 \rightarrow ...$; located above the KVM Switch "HDMI In" using 3.5mm audio cables. Complete this step by 2) USB-B detection switching function: connecting the Host Computers to the KVM Switch "HDMI In" ports using HDMI cables. Upon When the KVM Switch detects that a PC is connected to the USB-B port of the Switch, it completion, the "Online" indicators will light up, confirming successful connections. immediately switches to this PC and the corresponding "Online" and "Select" indicators light up. For instance, if PC1 is already connected and PC2 is subsequently connected to the KVM 2) Proceed to connect peripheral devices. Attach the keyboard and mouse to the USB-A ports Switch via the USB-B port, it swiftly switches to PC2. located on the back panel of the KVM Switch. Then, respectively connect microphones and 2) When the current selected PC is powered off or the USB cable is dialed out, the KVM Switch amplifiers to either the MIC and stereo ports on the front panel or above the Switch "HDMI Out" automatically switches to the next PC with the power on and the USB port connected. using 3.5mm audio cables. For display connectivity, link a display to the Switch "HDMI Out" using an HDMI cable. 3) Hotkey function (It doesn't work on functional keyboard and only the 2 USB-A ports on the back 3) Power on the KVM Switch by supplying it with DC 5V and pressing the power button. Upon

Installation Procedures

| Number | Hotkey Combination | Function Description |
|--------|--|---|
| 1 | Scroll Lock++Scroll Lock + \rightarrow or \downarrow 1 | Switch to the next port |
| | Scroll Lock++ Scroll Lock +←or↑ | Switch to the previous port |
| | Scroll Lock++ Scroll Lock +[N] | Switch to PC N |
| | Scroll Lock++ Scroll Lock +S | Automatic switching function(Default: 15 seconds) |
| 5 | Scroll Lock++ Scroll Lock +I+[N]+[Enter] | Set the automatic switching interval (5~999 seconds |
| 5 | Scroll Lock++ Scroll Lock +B+[1/0] | Buzzer on/off (Default: on) |
| | Scroll Lock++ Scroll Lock +F+L+A+S+H+[Enter] | All resume hotkey default mode |





Connection Diagram (Back Panel)

Fax: information please contact the appropriate department below or call us at +1 (818) 727-7000. Disclaimer

Technical Support / Sales Info / RMA

Hours: 9:00 am - 5:00 pm PST

Mon - Fri (excluding holidays)

Connection Diagram (Front Panel)

1 and 2: For input selection 1 specifies PC1 and 2 specifies PC2 For loop switching, Order: $PC1 \rightarrow PC2 \rightarrow PC1 \rightarrow ...$ 6) For external function, connect printer/scanner/U-disk to the USB-A ports on the Switch front panel.

activation, the "Power" indicator will light up, confirming that power is operational. Ensure that the USB-B ports are connected properly, and the "Online" indicators will light up. The "Select" indicator

4) Utilize the buttons located on the Switch front panel to select the input source. Upon selection, the corresponding "Select" indicator will light up, and the display will showcase the corresponding

image. Subsequently, the selected Host Computers can be controlled using a keyboard and mouse.

5) The remote control functionality mirrors the manual buttons, facilitating input selection and

will light up to denote the currently selected Host Computers.

control with equal efficiency and precision.

Installation Procedures

PC: Personal Computer

Corporate Headquarters 12979 Arroyo Ave San Fernando, CA 91340 - USA

Contact Information

Office: +1 (818) 727-7000 Tell: +1 (818) 727-7000 (DOM/INTL) +1 (818) 875-0002 +1 (818) 875-0002 Email: info@rocstor.com Email: support@rocstor.com

Corporate, Government and Academic Customers Our Corporate Sales Team's goal is to help our U.S.A. and Canadian customers find a storage solution that best serves their needs. We will help you determine your best purchasing options. For more

General Sales Information: sales@rocstor.com Corporate sales information: corporate sales@rocstor.com Educational sales information: academic sales@rocstor.com Federal, State & Local government sales information: government_sales@rocstor.com

Resellers/Business Development/OEM Partners All Channel National and International Resellers, VARs, Consultants...

Contact Rocstor Channel Sales: Call: +1 (818) 727-7000

Email: reseller info@rocstor.com

©2024 Rocstor, Inc. All rights reserved. Rocstor is registered trademark of Rocstor, Inc. Apple®, the Apple logo, Mac®, MacBook®, MacBook Pro®, MacBook Air®, iPad®, iPad Air®, iPad mini®, iPad Air®, iPhone®, MacOS® are registered trademarks of Apple, Inc. Google® and Chromebook™ are registered trademarks of Google, LLC. Microsoft® is registered trademarks of Microsoft corporation. Al other product names and logos mentioned herein may be trademarks of their respective companies. Thunderbolt is a trademark of Intel Corporation or its subsidiaries. USB Type-C® and USB-C® are registered trademark of USB Implementers Forum. The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Feature and specification are subject to change without notice. All trademarks and registered trademarks are the property of their respective. All rights reserved. CEF® Zo



Rocstor SolidKVM SK06 4K HDMI and USB 3.0 2×1 KVM Switch



User Manual Y10A329-B1

Important Safety Notice

WARNING: Please follow these safety instructions. Failure to do so may result damages or injury. It is normal that the SolidKVM SK06 unit adapter becomes very warm during use.

Please note that:

Continuous contact with warm surfaces for extended time may cause discomfort or injury. In order to reduce the possibility of overheating or heat-related injuries, always allow needed ventilation around the SolidKVM SK06 unit and use care when handling it. Avoid instances where your skin is in extended contact with the hub when plugged into the host computer. It is not recommended to sleep with the adapter when plugged into a host computer. Avoid placing the hub adapter under a pillow, blanket, or your body when connected to a host computer. If you have a medical condition that affects your ability to detect heat against the body, extra care should be used. Never use the adapter in locations with water, such as a sink, bathtub, or shower stall. Never connect or disconnect the adapter with wet hands.

Introduction

Rocstor introduces a high-performance HDMI-KVM switcher. It seamlessly routes high-definition video (in various resolutions up to 4kx2k@60Hz) and audio from multiple sources to display units. This HDMI-KVM switcher features not only key-press switching functionality but also intelligent and hot-pluggable capabilities.

Package Contents


Before utilizing this unit, kindly inspect the packaging to ensure the following items are included:

- Main Unit x1
- 5V/3A Power Adapter x1
- IR Remote Control x1
- IR Extender x1
- USB 3.0-B Male to USB 3.0-A Male Cable x2
- User Manual x1
- Ear Hanger Bracket x2 (Optional)

Features

- Supports resolution up to 4Kx2K@60Hz
 - Supports RGB 4:4:4/ YCbCr 4:4:4/ YCbCr 4:2:2/ YCbCr 4:2:0
 - Supports KVM function
 - Supports a HDMI display and a set of Keyboard and Mouse to control two PCs with HDMI ports
 - Supports 6Gbps per channel (18Gbps all channels) bandwidth Supports 12bit per channel (36bit all channels) deep color
 - Supports HDCP 2.2/1.4
 - Supports 3D
 - Supports HDR
 - Supports infrared remote control function
 - Supports for switching LED indications
 - Supports Windows 2000/XP/Vista/Win7/Win8/Win10/Linux/Apple Mac OS

Front Panel

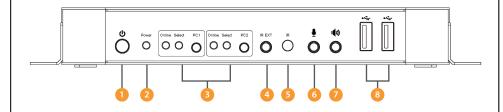

Power Button: Press to turn on/off the unit.


Panel Description (Front Panel)

- 2 Power Indicator: The LED will light up once the DC/5V is provided and the unit is turned on.
- 3 Ilnput Selection: When PC1/PC2/PC3/PC4 is selected, the corresponding "Select" lights up to indicate input selection("Select" LEDs flash in a loop under automatic switching mode). "Online"
- 4 IR EXT: Connect IR Extender to this port for IR signal reception from the remote control.
- 6 IR: For IR signal reception from the remote control.

LED lights up when the corresponding USB-B port is connected.

- 6 ♣ 3.5mm MIC input port.
- 3.5mm stereo output port.
- 8 ♣ USB 3.0 ports, mainly used for connecting to printers, scanners, U-disk, etc.

Back Panel

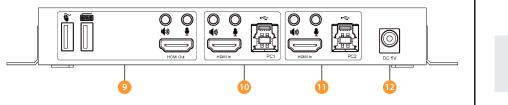

Output ports:

Connect to a mouse or a keyboard. Connect **to** a keyboard or a mouse.

Panel Description (Back Panel)

Connect • to an amplifier.

Connect \$\ \text{to a MIC.}

Connect "HDMI Out" to HDMI display.

- 10 PC1 input ports: Respectively connect to HDMI, USB, MIC, stereo ports of PC1.
- 11 PC2 input ports: Respectively connect to HDMI, USB, MIC, stereo ports of PC2.
- 12 DC 5V: Plug the 5V DC power supply into the unit.

Specifications

USB 2.0-A x2 (Back) **Console Connectors** HDMI Female x1(Back) 3.5mm Stereo Jack 2x (Green, 1 Front, 1 Back) 3.5mm Stereo Jack x2 (Pink, 1 Front, 1 Back) KVM Connectors USB 3.0-B x2 (Back) HDMI Female x2 (Back) 3.5mm Stereo Jack x2 (Green, Back) 3.5mm Stereo Jack x2 (Pink, Back) **USB HUB Connectors** USB 3.0-A x2 (Front) Resolution 3840x2160@60Hz Max Resolution 4096x2160@60Hz

HDMI Bandwidth Mechanical

Operating Frequency

Connectors

Material Metal 7x2.9x1in - (178x75x26mm) Size (L-W-H)

Weight (Net) Warranty

Limited Warranty 3 Years

Environmental 0°C to 45°C (32°F to 113°F) Operating Temperature

Operating Humidity 10% to 85% RH (no condensation) -10°C to 80°C (14°F to 176°F) Storage Temperature

12.9lbs - (366.3g)

Storage Humidity 5% to 90 % RH (no condensation) Power Requirement

External Power Supply DC 5V Power Consumption (Max)

±8kV (air-gap discharge) & ±4kV (contact discharge) ESD Protection

Regulatory Approvals

Certifications

Power Supply Accessories

User Manual

English Version

FCC, CE

FCC, CE