

# DISKASHUR® DT<sup>3</sup> User Manual



**Please make sure you remember your PIN (password), without it, there is no way to access the data on the drive.**

If you are having difficulty using your diskAshur DT<sup>3</sup> please contact our support team by email - [support@istorage-uk.com](mailto:support@istorage-uk.com) or by phone on +44 (0) 20 8991 6260.

Copyright © iStorage, Inc 2024. All rights reserved.

Windows is a registered trademark of Microsoft Corporation.  
All other trademarks and copyrights referred to are the property of their respective owners.

Distribution of modified versions of this document is prohibited without the explicit permission of the copyright holder.

Distribution of the work or derivative work in any standard (paper) book form for commercial purposes is prohibited unless prior permission is obtained from the copyright holder.

DOCUMENTATION IS PROVIDED AS IS AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID

iStorage diskAshur DT<sup>3</sup> User Manual v1.3



All trademarks and brand names are the property of their respective owners

Trade Agreements Act (TAA) Compliant



## Table of Contents

Introduction .....	4
Box contents .....	4
diskAshur DT <sup>3</sup> Layout .....	4
1. LED indicators and their actions .....	5
2. LED States .....	5
3. Connecting your diskAshur DT <sup>3</sup> .....	6
4. First Time Use.....	6
5. Unlocking diskAshur DT <sup>3</sup> with the Admin PIN .....	7
6. How to enter Admin Mode .....	7
7. Changing the Admin PIN .....	8
8. Setting a User PIN Policy .....	9
9. How to delete the User PIN Policy .....	10
10. How to check the User PIN Policy .....	10
11. Adding a New User PIN in Admin Mode .....	11
12. Changing the User PIN in Admin Mode .....	12
13. Deleting the User PIN in Admin Mode .....	12
14. How to unlock diskAshur DT <sup>3</sup> with User PIN .....	13
15. Changing the User PIN in User Mode .....	13
16. Switching on the backlit LED keypad .....	14
17. Switching off the backlit LED keypad .....	14
18. Creating a One-Time User Recovery PIN .....	15
19. Deleting the One-Time User Recovery PIN .....	15
20. Activating Recovery Mode and Creating New User PIN .....	16
21. Set User Read-Only in Admin Mode .....	16
22. Enable User Read/Write in Admin Mode .....	17
23. Set Global Read-Only in Admin Mode .....	17
24. Enable Global Read/Write in Admin Mode .....	18
25. How to configure a Self-Destruct PIN .....	18
26. How to delete the Self-Destruct PIN .....	19
27. How to Unlock with the Self-Destruct PIN .....	19
28. How to configure an Admin PIN after a Brute Force attack or Reset .....	20
29. Setting the unattended Auto-Lock .....	20
30. Turn off the unattended Auto-Lock .....	21
31. How to check the unattended Auto-Lock .....	22
32. Set Read-Only in User Mode .....	22
33. Enable Read/Write in User Mode .....	23
34. Brute Force Hack Defence Mechanism .....	23
35. How to set the User PIN Brute Force Limitation .....	24
36. How to check the User PIN Brute Force Limitation .....	25
37. How to perform a complete reset .....	26
38. How to configure diskAshur DT <sup>3</sup> as Bootable .....	26
39. How to disable the diskAshur DT <sup>3</sup> Bootable feature .....	27
40. How to check the Bootable setting .....	27
41. How to configure the Encryption Mode .....	28
42. How to check the Encryption Mode .....	29
43. How to configure the Disk type .....	30
44. How to check the Disk type setting .....	30
45. Initialising and formatting diskAshur DT <sup>3</sup> for Windows .....	31
46. Initialising and formatting diskAshur DT <sup>3</sup> in Mac OS .....	33
47. Initialising and formatting diskAshur DT <sup>3</sup> in Linux OS .....	35
48. Hibernating, Suspending or Logging off from the Operating System .....	38
49. How to check Firmware in Admin Mode .....	38
50. How to check Firmware in User Mode .....	39
51. Technical Support .....	40
52. Warranty and RMA information .....	40

## Introduction

Thank you for purchasing the new iStorage diskAshur DT<sup>3</sup>.

The diskAshur DT<sup>3</sup> is an easy to use, ultra-secure, password protected, hardware encrypted portable hard drive with capacities of up to 22TB and rising. The diskAshur DT<sup>3</sup> encrypts data in transit and at rest using 256-bit full disk hardware encryption.

The diskAshur DT<sup>3</sup> incorporates a Common Criteria EAL 5+ Hardware Certified secure microprocessor, which employs built-in physical protection mechanisms designed to defend against external tamper, bypass attacks and fault injections. Unlike other solutions, the diskAshur DT<sup>3</sup> reacts to an automated attack by entering the deadlock frozen state, which renders all such attacks as useless. In plain and simple terms, without the PIN there's no way in!

## Box Contents





















- iStorage diskAshur DT<sup>3</sup>
- USB Cable
- Universal Mains Adapter
- QSG - Quick Start Guide

## diskAshur DT<sup>3</sup> Layout



1. USB 3.2 (Gen 1) Type-C Interface  
*USB Type C & A cables included.*
2. Mains Power Port
3. Power Switch ON/OFF
4. Desk Lock Slot
5. LED lights  
*RED - Locked. SOLID GREEN - Unlocked. FLASHING GREEN - Data transfer. BLUE - Admin mode*
6. Tamper proof and tamper evident design.  
*All critical components are covered by a layer of super tough epoxy resin.*
7. On-device crypto chip.
8. Epoxy coated, wear resistant, backlit (user selectable), alphanumeric keypad.
9. On-device Common Criteria EAL 5+ Certified Secure Microprocessor.
10. SHIFT button
11. UNLOCK button

## 1. LED indicators and their actions


LED	LED State	Description	LED	LED State	Description
	RED Solid 	Locked drive (in either <b>Standby</b> or <b>Reset</b> states)		BLUE Solid 	Drive in <b>Admin mode</b>
	RED Double blink 	Incorrect PIN entry	  	RED, GREEN and BLUE Blinking together   	Waiting for <b>User</b> PIN entry
	GREEN Solid 	Drive <b>unlocked</b>	 	GREEN and BLUE Blinking together  	Waiting for <b>Admin</b> PIN entry
	GREEN Blinking 	Data transfer in progress			

## 2. LED States

### To wake from Idle State

Idle state is defined as when the drive is not being used and all LEDs are off.

To wake diskAshur DT<sup>3</sup> from the idle state do the following.

Power up and connect the diskAshur DT <sup>3</sup> to a USB port on your computer.		A solid RED LED switches on indicating the drive is in Standby State
--	---	--

### To enter Idle State

To force diskAshur DT<sup>3</sup> to enter Idle State, execute either of the following operations:

- Safely eject, disconnect drive from your computer and power off, RED LED will switch off (idle state).

### Power-on States

After the drive wakes from the Idle State, it will enter one of the following states shown in the table below.

Power-on State	LED indication	Encryption Key	Admin PIN	Description
Initial Shipment State	RED and GREEN Solid	✓	✗	Waiting for configuration of an Admin PIN (First Time Use)
Standby	RED Solid	✓	✓	Waiting for Admin, User or Recovery PIN entry
Reset	RED Solid	✗	✗	Waiting for configuration of an Admin PIN

### 3. Connecting your diskAshur DT<sup>3</sup>

Be sure to read the following information before you begin to use the diskAshur DT<sup>3</sup>.



**Attention:** Use only the cables provided with your diskAshur DT<sup>3</sup>. You may damage the drive if you use a cable not included with the diskAshur DT<sup>3</sup>.

1. Ensure that the power switch on the back of the diskAshur DT<sup>3</sup> is in the **OFF** position.
2. Connect the diskAshur DT<sup>3</sup> to a power outlet using the included AC Adapter.
3. Attach the USB cable to the diskAshur DT<sup>3</sup> and to an available USB port on your computer.
4. Turn the power switch on the back of the diskAshur DT<sup>3</sup> to the **ON** position.
5. The indicator lights will switch on to a solid **RED** and **GREEN** LEDs, indicating the drive is in the initial shipment state and that an Admin PIN will need to be configured as described in Section 4 (First Time Use). Once an Admin PIN has been configured from the 'Initial Shipment State', only a solid **RED** LED will switch on whenever the diskAshur DT<sup>3</sup> is powered on.

### 4. First Time Use

The iStorage diskAshur DT<sup>3</sup> is supplied in the '**Initial Shipment State**' with no pre-set Admin PIN. A **8-64** digit Admin PIN must be configured before the drive can be used. Once an Admin PIN has been successfully configured, it will then not be possible to switch the drive back to the 'Initial Shipment State'.

#### PIN Requirements:

- Must be between 8-64 digits in length
- Must not contain only repetitive numbers, e.g. (3-3-3-3-3-3-3)
- Must not contain only consecutive numbers, e.g. (1-2-3-4-5-6-7-8), (7-8-9-0-1-2-3-4), (8-7-6-5-4-3-2-1)
- The **SHIFT** (↑) key can be used for additional combinations (e.g. **SHIFT** (↑) **+1** is a separate value to just 1).





**Password Tip:** You can configure a memorable word, name, phrase or any other Alphanumeric PIN combination by simply pressing the button with the corresponding letters on it.

#### Examples of these types of Alphanumeric PINs are:

- For "**Password**" press the following buttons:  
**7** (pqrs) **2** (abc) **7** (pqrs) **7** (pqrs) **9** (wxyz) **6** (mno) **7** (pqrs) **3** (def)
- For "**iStorage**" press the following buttons:  
**4** (ghi) **7** (pqrs) **8** (tuv) **6** (mno) **7** (pqrs) **2** (abc) **4** (ghi) **3** (def)

Using this method, long and easy to remember PINs can be configured.

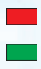With your diskAshur DT<sup>3</sup> powered on, follow the instructions in the table below to configure an Admin PIN and unlock the diskAshur DT<sup>3</sup> for the first time.




Instructions - First Time Use	LED	LED State
1. Connect the diskAshur DT <sup>3</sup> to a powered USB port on your computer		Solid RED and GREEN LEDs switch on indicating the drive is in the Initial Shipment State
2. Press and hold down both <b>Unlock (Ⓛ) + 1</b> buttons		LEDs turn to blinking GREEN and solid BLUE
3. Enter a <b>New Admin PIN</b> (8-64 digits) and press the <b>Unlock (Ⓛ)</b> button once		Blinking GREEN and solid BLUE LEDs switch to a GREEN blink then back to Blinking GREEN and solid BLUE LEDs
4. Re-enter your <b>New Admin PIN</b> and press the <b>Unlock (Ⓛ)</b> button once		BLUE LED rapidly blinks then switches to a solid BLUE LED and finally to a solid GREEN LED indicating the Admin PIN has been successfully configured and the drive is unlocked and ready to be used

### Locking the diskAshur DT<sup>3</sup>

To lock the drive, safely eject from your host operating system and then unplug from the USB port. If data is being written to the drive, ejecting the diskAshur DT<sup>3</sup> will result in incomplete data transfer and possible data corruption.




## 5. Unlocking diskAshur DT<sup>3</sup> with the Admin PIN

To unlock the diskAshur DT<sup>3</sup> with the Admin PIN, please follow the simple steps in the table below.

1. Connect the diskAshur DT <sup>3</sup> to a USB port on your computer		A solid RED LED switches on indicating the drive is in Standby State
2. In Standby State (solid RED LED) press the <b>Unlock (Ⓛ)</b> button once		GREEN and BLUE LEDs blink together
3. With the GREEN and BLUE LEDs blinking together, enter the <b>Admin PIN</b> and then press the <b>Unlock (Ⓛ)</b> button once		The GREEN LED blinks several times and then switches to a solid GREEN LED indicating the drive has been successfully unlocked as Admin and is ready to be used

## 6. How to enter Admin Mode

To Enter Admin Mode, do the following.

1. Connect the diskAshur DT <sup>3</sup> to a powered USB port on your computer		A solid RED LED switches on indicating the drive is in Standby State
2. In Standby State (solid RED LED) Press and hold down both <b>Unlock (Ⓛ) + 1</b> buttons		GREEN and BLUE LEDs blink together
3. Enter your <b>Admin PIN</b> and press the <b>Unlock (Ⓛ)</b> button once		A solid BLUE LED switches on indicating the drive is in Admin mode

### To Exit Admin Mode

To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 7. Changing the Admin PIN

### PIN Requirements:

- Must be between 8-64 digits in length
- Must not contain only repetitive numbers, e.g. (3-3-3-3-3-3-3)
- Must not contain only consecutive numbers, e.g. (1-2-3-4-5-6-7-8), (7-8-9-0-1-2-3-4), (8-7-6-5-4-3-2-1)
- The SHIFT key can be used for additional combinations (e.g. **SHIFT (↑)+1** is a separate value to just 1).




**Password Tip:** You can configure a memorable word, name, phrase or any other Alphanumerical PIN combination by simply pressing the button with the corresponding letters on it.

### Examples of these types of Alphanumerical PINs are:

- For **“Password”** press the following buttons:  
**7 (pqrs) 2 (abc) 7 (pqrs) 7 (pqrs) 9 (wxyz) 6 (mno) 7 (pqrs) 3 (def)**
- For **“iStorage”** press the following buttons:  
**4 (ghi) 7 (pqrs) 8 (tuv) 6 (mno) 7 (pqrs) 2 (abc) 4 (ghi) 3 (def)**

Using this method, long and easy to remember PINs can be configured.

To change the Admin PIN, first enter the **“Admin Mode”** as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

<p>1. In Admin mode press and hold down both the <b>Unlock (🔓) + 2</b> buttons</p>		<p>Solid BLUE LED will change to blinking GREEN and solid BLUE LEDs</p>
<p>2. Enter <b>NEW Admin PIN</b> and then press the <b>Unlock (🔓)</b> button once</p>		<p>Blinking GREEN and solid BLUE LEDs will switch to a single GREEN LED blink and then back to blinking GREEN and solid BLUE LEDs</p>
<p>3. Re-enter the <b>NEW Admin PIN</b> and then press the <b>Unlock (🔓)</b> button once</p>		<p>Blinking GREEN and solid BLUE LEDs change to a rapidly blinking BLUE LED and finally to a solid BLUE LED indicating the Admin PIN has been successfully changed</p>

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.



## 8. Setting a User PIN Policy

The Administrator can set a restriction policy for the User PIN. This policy includes setting the minimum length of the PIN (from 8 to 64 digits), as well as requiring or not the input of one or more 'Special Characters'. The "Special Character" functions as both the 'SHIFT (↑) + digit' buttons pressed down together.

To set a User PIN Policy (restrictions), you will need to enter 3 digits, for instance '091', the first two digits (09) indicate the minimum PIN length (in this case, 9) and the last digit (1) denotes that one or more 'Special Characters' must be used, in other words 'SHIFT (↑) + digit'. In the same way, a User PIN Policy can be set without the need of a 'Special Character', for instance '120', the first two digits (12) indicate the minimum PIN length (in this case, 12) and the last digit (0) meaning no Special Character is required.

Once the Administrator has set the User PIN Policy, for instance '091', a new User PIN will need to be configured - see section 11, 'Adding a New User PIN in Admin Mode'. If the Administrator configures the User PIN as '247688314' with the use of a 'Special Character' (SHIFT (↑) + digit pressed down together), this can be placed anywhere along your 8-64 digit PIN during the process of creating the User PIN as shown in the examples below.

- A. 'SHIFT (↑) + 2', '4', '7', '6', '8', '8', '3', '1', '4',
- B. '2', '4', 'SHIFT (↑) + 7', '6', '8', '8', '3', '1', '4',
- C. '2', '4', '7', '6', '8', '8', '3', '1', 'SHIFT (↑) + 4',



**Note:**

- If a 'Special Character' was used during the configuration of the User PIN, for instance, example 'B' above, then the drive can only be unlocked by entering the PIN with the 'Special Character' entered precisely in the order configured, as per example 'B' above - ('2', '4', 'SHIFT (↑) + 7', '6', '8', '8', '3', '1', '4').
- More than one 'Special Character' can be used and placed along your 8-64 digit PIN.
- Users are able to change their PIN but are forced to comply with the set 'User PIN Policy' (restrictions), if and when applicable.
- Setting a new User PIN Policy will automatically delete the User PIN if one exists.
- This policy does not apply to the 'Self-Destruct PIN'. The complexity setting for the Self-Destruct PIN and Admin PIN is always 8-64 digits, with no special character required.



To set a **User PIN Policy**, first enter the "Admin Mode" as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

<p>1. In Admin mode, press and hold down both <b>Unlock (Ⓟ) + 7</b> buttons</p>		<p>Solid BLUE LED will change to blinking GREEN and BLUE LEDs</p>
<p>2. Enter your <b>3 digits</b>, remember the first two digits denote minimum PIN length and last digit (0 or 1) whether or not a special character has been used.</p>		<p>Blinking GREEN and BLUE LEDs will continue to blink</p>
<p>3. Press the <b>SHIFT (↑)</b> button once</p>		<p>Blinking GREEN and BLUE LEDs will change to a solid GREEN LED and finally to a solid BLUE LED indicating the User PIN Policy has been successfully set.</p>

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 9. How to delete the User PIN Policy

To delete the **User PIN Policy**, first enter the “**Admin Mode**” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.


<p>1. In Admin mode, press and hold down both <b>Unlock (🔓) + 7</b> buttons</p>		<p>Solid BLUE LED will change to blinking GREEN and BLUE LEDs</p>
<p>2. Enter <b>080</b> and press the <b>SHIFT (↑)</b> button once</p>		<p>Blinking GREEN and BLUE LEDs will change to a solid GREEN LED and finally to a solid BLUE LED indicating the User PIN Policy has been successfully deleted</p>

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 10. How to check the User PIN Policy

The Administrator is able to check the User PIN Policy and can identify the minimum PIN length restriction and whether or not the use of a Special Character has been set by noting the LED sequence as described below.

To check the User PIN Policy, first enter the “**Admin Mode**” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

<p>1. In Admin mode press and hold down both <b>SHIFT (↑) + 7</b> buttons</p>		<p>Solid BLUE LED will change to blinking GREEN and BLUE LEDs</p>
<p>2. Press the <b>Unlock (🔓)</b> button and the following happens;</p> <ol style="list-style-type: none"> <li>All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>A RED LED blink equates to ten (10) units of a PIN.</li> <li>Every GREEN LED blink equates to a single (1) unit of a PIN</li> <li>A BLUE blink indicates that a 'Special Character' was used.</li> <li>All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>LEDs return to solid BLUE</li> </ol>		

The table below describes the LED behaviour whilst checking the User PIN Policy, for instance if you have set a 12 digit User PIN with the use of a Special Character (121), the RED LED will blink once (1) and the GREEN LED will blink twice (2) followed by a single (1) BLUE LED blink indicating that a **Special Character** must be used.

PIN Description	3 digit Setup	RED	GREEN	BLUE
12 digit PIN with use of a Special Character	121	1 Blink	2 Blinks	1 Blink
12 digit PIN with NO Special Character used	120	1 Blink	2 Blinks	0
9 digit PIN with use of a Special Character	091	0	9 Blinks	1 Blink
9 digit PIN with NO Special Character used	090	0	9 Blinks	0

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.




## 11. Adding a New User PIN in Admin Mode

 **Important:** The creation of a New User PIN must comply with the 'User PIN Policy' if one has been configured as described in section 8, which imposes a minimum PIN length and whether a 'Special Character' has been used. The Administrator can Refer to section 10 to check the user PIN restrictions.

PIN requirements:

- Must be between 8-64 digits in length
- Must not contain only repetitive numbers, e.g. (3-3-3-3-3-3-3)
- Must not contain only consecutive numbers, e.g. (1-2-3-4-5-6-7-8), (7-8-9-0-1-2-3-4), (8-7-6-5-4-3-2-1)
- The **SHIFT (↑)** button can be used for additional PIN combinations - e.g. **SHIFT (↑) + 1** is a different value than just 1. See section 8, 'Setting a User PIN Policy'.

To add a **New User PIN**, first enter "**Admin Mode**" as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode press and hold down both <b>Unlock (Ⓟ) + 3</b> buttons		Solid BLUE LED will change to blinking GREEN and solid BLUE LEDs
2. Enter <b>New User PIN</b> and press <b>Unlock (Ⓟ)</b> button		Blinking GREEN and solid BLUE LEDs will switch to a single GREEN LED blink and then back to blinking GREEN and solid BLUE LEDs
3. Re-enter the <b>New User PIN</b> and press <b>Unlock (Ⓟ)</b> button again		Blinking GREEN and solid BLUE LEDs change to a rapidly blinking GREEN LED and finally to a solid BLUE LED indicating a New User PIN has been successfully configured

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 12. Changing the User PIN in Admin Mode



**Important:** Changing the User PIN must comply with the 'User PIN Policy' if one has been configured as described in section 8, which imposes a minimum PIN length and whether a 'Special Character' has been used. The Administrator can refer to section 10 to check the user PIN restrictions.

To change an existing **User PIN**, first enter the "**Admin Mode**" as described in section 6. Once the drive is in **Admin Mode** (solid **BLUE** LED) proceed with the following steps.

1. In Admin mode press and hold down both <b>Unlock (Ⓛ) + 3</b> buttons		Solid <b>BLUE</b> LED will change to blinking <b>GREEN</b> and solid <b>BLUE</b> LEDs
2. Enter <b>New User PIN</b> and press <b>Unlock (Ⓛ)</b> button once		Blinking <b>GREEN</b> and solid <b>BLUE</b> LEDs will switch to a single <b>GREEN</b> LED blink and then back to blinking <b>GREEN</b> and solid <b>BLUE</b> LEDs
3. Re-enter the <b>New User PIN</b> and press <b>Unlock (Ⓛ)</b> button once		Blinking <b>GREEN</b> and solid <b>BLUE</b> LEDs change to a rapidly blinking <b>GREEN</b> LED and finally to a solid <b>BLUE</b> LED indicating the User PIN has been successfully changed

**Note:** To immediately exit Admin Mode (solid **BLUE** LED), press and hold down the **SHIFT (↑)** button for a second - the solid **BLUE** LED switches to a solid **RED** LED.

## 13. Deleting the User PIN in Admin Mode


To delete an existing **User PIN**, first enter the "**Admin Mode**" as described in section 6. Once the drive is in **Admin Mode** (solid **BLUE** LED) proceed with the following steps.

1. In Admin mode press and hold down both <b>SHIFT (↑) + 3</b> buttons		Solid <b>BLUE</b> LED will change to a blinking <b>RED</b> LED
2. Press and hold down both <b>SHIFT (↑) + 3</b> buttons again		Blinking <b>RED</b> LED will change to a solid <b>RED</b> LED and then to a solid <b>BLUE</b> LED indicating the User PIN has been successfully deleted

**Note:** To immediately exit Admin Mode (solid **BLUE** LED), press and hold down the **SHIFT (↑)** button for a second - the solid **BLUE** LED switches to a solid **RED** LED.

## 14. How to unlock diskAshur DT<sup>3</sup> with User PIN

To unlock the diskAshur DT<sup>3</sup> with the **User PIN**, proceed with the following steps.


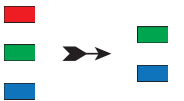


<p>1. In a standby state (solid <b>RED</b> LED) Press and hold down both the <b>SHIFT (↑) + Unlock (🔓)</b> buttons</p>		<p><b>RED</b> LED switches to all LEDs, <b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b> blinking on and off</p>
<p>2. Enter <b>User PIN</b> and press the <b>Unlock (🔓)</b> button once</p>		<p><b>RED</b>, <b>GREEN</b> and <b>BLUE</b> blinking LEDs will change to a blinking <b>GREEN</b> LED then to a solid <b>GREEN</b> LED indicating drive successfully unlocked in User Mode</p>

## 15. Changing the User PIN in User Mode





**Important:** Changing the User PIN in User mode (**GREEN** LED) must comply with the 'User PIN Policy' if one has been configured as described in section 8, which imposes a minimum PIN length and whether a 'Special Character' has been used.

To change the **User PIN**, first unlock the diskAshur DT<sup>3</sup> with the User PIN as described in section 14. Once the drive is in **User Mode** (solid **GREEN** LED) proceed with the following steps.

<p>1. In User mode (<b>GREEN</b> LED) press and hold down both <b>Unlock (🔓) + 4</b> buttons</p>		<p>Solid <b>GREEN</b> LED will change to all LEDs, <b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b> blinking on and off</p>
<p>2. Enter your <b>Existing User PIN</b> and press the <b>Unlock (🔓)</b> button once</p>		<p>LEDs will switch to a single <b>GREEN</b> LED blink and then back to blinking <b>GREEN</b> and solid <b>BLUE</b> LEDs</p>
<p>3. Enter <b>New User PIN</b> and press the <b>Unlock (🔓)</b> button once</p>		<p>Blinking <b>GREEN</b> and solid <b>BLUE</b> LEDs will switch to a single <b>GREEN</b> LED blink and then back to blinking <b>GREEN</b> and solid <b>BLUE</b> LEDs</p>
<p>4. Re-enter <b>New User PIN</b> and press the <b>Unlock (🔓)</b> button once</p>		<p>Blinking <b>GREEN</b> and solid <b>BLUE</b> LEDs will switch to a rapidly blinking <b>GREEN</b> LED and then to a solid <b>GREEN</b> LED indicating the User PIN has been successfully changed</p>

## 16. Switching on the backlit LED keypad



To aid with low-light visibility, the diskAshur DT<sup>3</sup> is equipped with an LED backlit keypad. To switch on the LED backlit keypad, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode press and hold down both <b>2 &amp; 6</b> buttons		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press <b>Unlock</b> (Ⓛ) button		Blinking GREEN and BLUE LEDs will switch to a solid GREEN LED and then to a solid BLUE LED indicating the backlit keypad has been activated and will switch on the next time the drive is powered up

**Note:** After setting the diskAshur DT<sup>3</sup> to switch ON the LED backlit keypad, the drive must be first powered off and then powered back on again to activate. To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT** (↑) button for a second - the solid BLUE LED switches to a solid RED LED.

## 17. Switching off the backlit LED keypad

To switch off the LED backlit keypad, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.




1. In Admin mode press and hold down both <b>2 &amp; 3</b> buttons		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press <b>Unlock</b> (Ⓛ) button		Blinking GREEN and BLUE LEDs will switch to a solid GREEN LED and then to a solid BLUE LED indicating the backlit keypad has been deactivated and will switch off the next time the drive is powered up

**Note:** After setting the diskAshur DT<sup>3</sup> to switch OFF the LED backlit keypad, the drive must be first powered off and then powered back on again to activate. To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT** (↑) button for a second - the solid BLUE LED switches to a solid RED LED.

## 18. Creating a One-Time User Recovery PIN

The User Recovery PIN is extremely useful in situations where a user has forgotten their PIN to unlock the diskAshur DT<sup>3</sup>. To activate the recovery mode, the user must first enter the correct One-Time Recovery PIN, if one has been configured. The user PIN recovery process does not impact the data, encryption key and Admin PIN, however the user is forced to configure a new 8-64 digit User PIN.



To configure a One-Time 8-64 digit User Recovery PIN, first enter the “**Admin Mode**” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode press and hold down both <b>Unlock (Ⓛ) + 4</b> buttons		Solid BLUE LED will change to blinking GREEN and solid BLUE LEDs
2. Enter a <b>One-Time Recovery PIN</b> and press <b>Unlock (Ⓛ)</b> button		Blinking GREEN and solid BLUE LEDs will switch to a single GREEN LED blink and then back to blinking GREEN and solid BLUE LEDs
3. Re-enter your <b>One-Time Recovery PIN</b> and press <b>Unlock (Ⓛ)</b> button again		Blinking GREEN and solid BLUE LEDs change to a rapidly blinking GREEN LED and finally to a solid BLUE LED indicating the One-Time Recovery PIN has been successfully configured

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 19. Deleting the One-Time User Recovery PIN

To delete the One-Time User Recovery PIN, first enter the “**Admin Mode**” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.





1. In Admin mode press and hold down both <b>SHIFT (↑) + 4</b> buttons		Solid BLUE LED will change to blinking RED LED
2. Press and hold down both <b>SHIFT (↑) + 4</b> buttons again		Blinking RED LED will become solid RED and then switch to a solid BLUE LED indicating that the One-Time User Recovery PIN has been successfully deleted


**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 20. Activating Recovery Mode and Creating New User PIN

The User Recovery PIN is extremely useful in situations where a user has forgotten their PIN to unlock the diskAshur DT<sup>3</sup>. To activate the recovery mode, the user must first enter the correct One-Time Recovery PIN, if one has been configured. The user PIN recovery process does not impact the data, encryption key and Admin PIN, however the user is forced to configure a new 8-64 digit User PIN.

To activate the Recovery process and configure a new User PIN, proceed with the following steps.

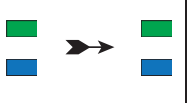1. In <b>Standby State</b> (RED LED) press and hold down both <b>Unlock (δ) + 4</b> buttons		Solid RED LED will change to blinking RED and GREEN LEDs
2. Enter the One-Time <b>Recovery PIN</b> and press the <b>Unlock (δ)</b> button		GREEN and BLUE LEDs alternate on and off then to a solid GREEN LED and finally to blinking GREEN and solid BLUE LEDs
3. Enter a <b>New User PIN</b> and press the <b>Unlock (δ)</b> button		Blinking GREEN and solid BLUE LEDs change to a single GREEN LED blink then back to blinking GREEN and solid BLUE LEDs
4. Re-enter your <b>New User PIN</b> and press the <b>Unlock (δ)</b> button again		GREEN LED blinks rapidly then becomes solid GREEN indicating the recovery process has been successful and a new user PIN configured





**Important:** The creation of a new User PIN must comply with the 'User PIN Policy' if one has been configured as described in section 8, which imposes a minimum PIN length and whether a special character has been used. Refer to section 10 to check the user PIN restrictions.

## 21. Set User Read-Only in Admin Mode

With so many viruses and Trojans infecting USB drives, the Read-Only feature is especially useful if you need to access data on the USB drive when used in a public setting. This is also an essential feature for forensic purposes, where data must be preserved in its original and unaltered state that cannot be modified or overwritten.

When the Administrator configures the diskAshur DT<sup>3</sup> and restricts User access to Read-Only, then only the Administrator can write to the drive or change the setting back to Read/Write as described in section 22. The User is restricted to Read-Only access and cannot write to the drive or change this setting in user mode.

To set the diskAshur DT<sup>3</sup> and restrict User access to Read-Only, first enter the "Admin Mode" as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode, press and hold down both "7 + 6" buttons.		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press the <b>Unlock (δ)</b> button once		GREEN and BLUE LEDs will change to a solid GREEN LED and then to a solid BLUE LED indicating the drive has been configured and restricts User access to Read-Only



**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT** (↑) button for a second - the solid BLUE LED switches to a solid RED LED.

## 22. Enable User Read/Write in Admin Mode

To set the diskAshur DT<sup>3</sup> back to Read/Write, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode, press and hold down both “7 + 9” buttons.		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press the <b>Unlock</b> (Ⓛ) button once		GREEN and BLUE LEDs change to a solid GREEN LED then to a solid BLUE LED indicating the drive is configured as Read/Write

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT** (↑) button for a second - the solid BLUE LED switches to a solid RED LED.

## 23. Set Global Read-Only in Admin Mode

When the Administrator configures the diskAshur DT<sup>3</sup> and restricts it to Global Read-Only, then neither the Administrator nor the User can write to the drive and both are restricted to Read-Only access. Only the Administrator is able to change the setting back to Read/Write as described in section 24.


To set the diskAshur DT<sup>3</sup> and restrict Global access to Read-Only, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode, press and hold down both “5 + 6” buttons.		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press <b>Unlock</b> (Ⓛ) button		GREEN and BLUE LEDs will change to a solid GREEN LED and then to a solid BLUE LED indicating the drive has been configured and restricts Global access to Read-Only

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT** (↑) button for a second - the solid BLUE LED switches to a solid RED LED.

## 24. Enable Global Read/Write in Admin Mode

To set the diskAshur DT<sup>3</sup> back to Read/Write from the Global Read-Only setting, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.




1. In Admin mode, press and hold down both “5 + 9” buttons.		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press <b>Unlock</b> (Ⓝ) button		GREEN and BLUE LEDs change to a solid GREEN LED then to a solid BLUE LED indicating the drive is configured as Read/Write

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT** (↑) button for a second - the solid BLUE LED switches to a solid RED LED.

## 25. How to configure a Self-Destruct PIN

You can configure a self-destruct PIN which when entered performs a Crypto-Erase on the drive (encryption key is deleted). This process deletes all configured PINs and renders all data stored on the drive as inaccessible (lost forever), the drive will then show as unlocked GREEN LED. Running this feature will cause the self-destruct PIN to become the New User PIN and the drive will need to be formatted before it can be reused.



To set the Self-Destruct PIN, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode, press and hold down both <b>Unlock</b> (Ⓝ) + 6 buttons		Solid BLUE LED will change to blinking GREEN and solid BLUE LEDs
2. Configure and enter a 8-64 digit <b>Self-Destruct PIN</b> and press the <b>Unlock</b> (Ⓝ) button		Blinking GREEN and solid BLUE LEDs will switch to a single GREEN LED blink and then back to blinking GREEN and solid BLUE LEDs
3. Re-enter your <b>Self-Destruct PIN</b> and press the <b>Unlock</b> (Ⓝ) button		GREEN LED will rapidly blink and then change to a solid BLUE LED to indicate the Self-Destruct PIN has been successfully configured

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT** (↑) button for a second - the solid BLUE LED switches to a solid RED LED.

## 26. How to Delete the Self-Destruct PIN

To delete the Self-Destruct PIN, first enter the “**Admin Mode**” as described in section 6. Once the drive is in **Admin Mode** (solid **BLUE** LED) proceed with the following steps.

1. In Admin mode, press and hold down both <b>SHIFT (↑) + 6</b> buttons		Solid <b>BLUE</b> LED will change to a blinking <b>RED</b> LED
2. Press and hold down <b>SHIFT (↑) + 6</b> buttons again		Blinking <b>RED</b> LED will become solid and then change to a solid <b>BLUE</b> LED indicating the Self-Destruct PIN was successfully deleted

**Note:** To immediately exit Admin Mode (solid **BLUE** LED), press and hold down the **SHIFT (↑)** button for a second - the solid **BLUE** LED switches to a solid **RED** LED.



## 27. How to unlock with the Self-Destruct PIN



**Warning:** When the Self-Destruct mechanism is activated, all data, the encryption key and the Admin/User PINs are deleted. **The Self-Destruct PIN becomes the User PIN.** No Admin PIN exists after the Self-Destruct mechanism is activated. The diskAshur DT<sup>3</sup> will need to be reset (see ‘How to perform a complete reset’ Section 37, on page 26) first in order to configure an Admin PIN with full Admin privileges including the ability to configure a new User PIN.

When used, the self-destruct PIN will **delete ALL data, the encryption key, Admin/User PINs** and then unlock the drive. Activating this feature will cause the **Self-Destruct PIN to become the New User PIN** and the diskAshur DT<sup>3</sup> will need to be formatted before any new data can be added to the drive.

To activate the Self-Destruct mechanism, the drive needs to be in the standby state (solid **RED** LED) and then proceed with the following steps.

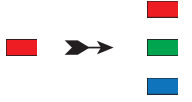1. In <b>Standby State</b> (solid <b>RED</b> LED), press and hold down both the <b>SHIFT (↑) + Unlock (Ⓛ)</b> buttons		<b>RED</b> LED switches to all LEDs, <b>RED, GREEN &amp; BLUE</b> blinking on and off
2. Enter the <b>Self-Destruct PIN</b> and press the <b>Unlock (Ⓛ)</b> button		<b>RED, GREEN</b> and <b>BLUE</b> blinking LEDs will change to a blinking <b>GREEN</b> LED and then to a solid <b>GREEN</b> LED indicating the diskAshur DT <sup>3</sup> has successfully self-destructed




## 28. How to configure an Admin PIN after a Brute Force attack or Reset

It will be necessary after a Brute Force attack or when the diskAshur DT<sup>3</sup> has been reset to configure an Admin PIN before the drive can be used.

**PIN Requirements:**

- Must be between 8-64 digits in length
- Must not contain only repetitive numbers, e.g. (3-3-3-3-3-3-3-3)
- Must not contain only consecutive numbers, e.g. (1-2-3-4-5-6-7-8), (7-8-9-0-1-2-3-4), (8-7-6-5-4-3-2-1)
- The SHIFT key can be used for additional combinations (e.g. **SHIFT (↑)+1** is a separate value to just 1).

If the diskAshur DT<sup>3</sup> has been brute forced or reset, the drive will be in standby state (solid RED LED). to configure an Admin PIN proceed with the following steps.



<p>1. In Standby state (solid RED LED), press and hold down both <b>SHIFT (↑) + 1</b> buttons</p>		<p>Solid RED LED will change to blinking GREEN and solid BLUE LEDs</p>
<p>2. Enter <b>New Admin PIN</b> and press <b>Unlock (Ⓟ)</b> button</p>		<p>Blinking GREEN and solid BLUE LEDs will switch to a single GREEN LED blink and then back to blinking GREEN and solid BLUE LEDs</p>
<p>3. Re-enter the <b>New Admin PIN</b> and press <b>Unlock (Ⓟ)</b> button</p>		<p>Blinking GREEN LED and solid BLUE LED change to a blinking BLUE LED and then to a solid BLUE LED indicating the Admin PIN was successfully configured.</p>

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 29. Setting the unattended Auto-Lock

To protect against unauthorised access if the drive is unlocked and unattended, the diskAshur DT<sup>3</sup> can be set to automatically lock after a pre-set amount of time. In its default state, the diskAshur DT<sup>3</sup> unattended Auto Lock time-out feature is turned off. The unattended Auto Lock can be set to activate between 5 - 99 minutes if and when the drive is inactive (no data being written/read).



To set the unattended Auto Lock time-out feature, first enter the “**Admin Mode**” as described in section 6. Once the drive is in **Admin Mode** (solid **BLUE** LED) proceed with the following steps.

<p>1. In Admin mode, press and hold down both <b>Unlock (Ⓟ) + 5</b> buttons</p>		<p>Solid <b>BLUE</b> LED will change to blinking <b>GREEN</b> and <b>BLUE</b> LEDs</p>
<p>2. Enter the amount of time that you would like to set the Auto Lock time-out feature for, the minimum time that can be set is 5 minutes and the maximum being 99 minutes (5-99 minutes). For example enter:  <b>05 for 5 minutes (press ‘0’ followed by a ‘5’)</b>  <b>20 for 20 minutes (press ‘2’ followed by a ‘0’)</b>  <b>99 for 99 minutes (press ‘9’ followed by another ‘9’)</b></p>		
<p>3. Press the <b>SHIFT (↑)</b> button</p>		<p>Blinking <b>GREEN</b> and <b>BLUE</b> LEDs will change to a solid <b>GREEN</b> for a second and then finally to a solid <b>BLUE</b> LED indicating the Auto Lock time-out is successfully configured</p>

**Note:** To immediately exit Admin Mode (solid **BLUE** LED), press and hold down the **SHIFT (↑)** button for a second - the solid **BLUE** LED switches to a solid **RED** LED.

### 30. Turn off the unattended Auto-Lock

To turn off the unattended Auto Lock time-out feature, first enter the “**Admin Mode**” as described in section 6. Once the drive is in **Admin Mode** (solid **BLUE** LED) proceed with the following steps.


<p>1. In Admin mode, press and hold down both <b>Unlock (Ⓟ) + 5</b> buttons</p>		<p>Solid <b>BLUE</b> LED will change to blinking <b>GREEN</b> and <b>BLUE</b> LEDs</p>
<p>2. Enter <b>00</b> and press the <b>SHIFT (↑)</b> button</p>		<p>Blinking <b>GREEN</b> and <b>BLUE</b> LEDs will change to a solid <b>GREEN</b> for a second and then finally to a solid <b>BLUE</b> LED indicating the Auto Lock time-out has been successfully disabled</p>

**Note:** To immediately exit Admin Mode (solid **BLUE** LED), press and hold down the **SHIFT (↑)** button for a second - the solid **BLUE** LED switches to a solid **RED** LED.

## 31. How to check the unattended Auto-Lock

The Administrator is able to check and determine the length of time set for the unattended Auto Lock time-out feature by simply noting the LED sequence as described in the table below.

To check the unattended auto-lock, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode press and hold down <b>SHIFT (↑) + 5</b>		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press the <b>Unlock (Ⓟ)</b> button and the following happens; <ol style="list-style-type: none"> <li>All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>Each RED LED blink equates to ten (10) minutes.</li> <li>Every GREEN LED blink equates to one (1) minute.</li> <li>All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>LEDs return to solid BLUE</li> </ol>		



The table below describes the LED behaviour whilst checking the unattended auto-lock, for instance if you have set the drive to automatically lock after **25** minutes, the RED LED will blink twice (**2**) and the GREEN LED will blink five (**5**) times.

Auto-Lock in minutes	RED	GREEN
5 minutes	0	5 Blinks
15 minutes	1 Blink	5 Blinks
25 minutes	2 Blinks	5 Blinks
40 minutes	4 Blinks	0

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 32. Set Read-Only in User Mode

To set the diskAshur DT<sup>3</sup> to Read-Only, first enter the “User Mode” as described in section 14. Once the drive is in **User Mode** (solid GREEN LED) proceed with the following steps.

1. In User mode, press and hold down both “ <b>7 + 6</b> ” buttons. (7=Read + 6=Only)		Solid GREEN LED will change to blinking GREEN and BLUE LEDs
2. Press <b>Unlock (Ⓟ)</b> button		GREEN and BLUE LEDs will change to a solid GREEN LED indicating the drive is configured as Read-Only



**Note:** 1. If a User set the drive as Read-Only, Admin can override this by setting the drive as Read/Write in Admin mode.  
2. If Admin set the drive as Read-Only, the User cannot set the drive as Read/Write.

### 33. Enable Read/Write in User Mode

To set the diskAshur DT<sup>3</sup> to Read/Write, first enter the “**User Mode**” as described in section 14. Once the drive is in **User Mode** (solid GREEN LED) proceed with the following steps.

1. In User mode, press and hold down “ <b>7 + 9</b> ” buttons. (7=Read + 9=Write)		Solid GREEN LED will change to blinking GREEN and BLUE LEDs
2. Press <b>Unlock</b> (Ⓟ) button		GREEN and BLUE LEDs will change to a solid GREEN LED indicating the drive is configured as Read/Write



**Note:** 1. If a User set the drive as Read-Only, Admin can override this by setting the drive as Read/Write in Admin mode.  
2. If Admin set the drive as Read-Only, the User cannot set the drive as Read/Write.

### 34. Brute Force Hack Defence Mechanism

The diskAshur DT<sup>3</sup> incorporates a defence mechanism to protect the drive against a Brute Force attack. By default, the brute force limitation for **Admin PIN** and **User PIN** is set to **10** consecutive incorrect PIN entries, for the **Recovery PIN** it is **5**. Three independent brute force counters are used to record the incorrect attempts for each PIN authorisation. If a user enters an incorrect Admin PIN ten consecutive times, (broken down into 5,3,2, clusters as described below) the drive will be reset and all data will be lost forever. If a user enters an incorrect Recovery PIN or User PIN and exceed the respective brute force limitation, the corresponding PINs will be cleared but the data will still exist on the drive.

**Note:** The brute force limitation is programmed to initial values when the drive is completely reset or self-destruct feature is activated. If Admin changes the User PIN, or a new User PIN is set when activating recovery feature, the User PIN brute force counter is cleared but the brute force limitation is not affected. If Admin changes the Recovery PIN, the Recovery PIN brute force counter is cleared.

Successful authorisation of a certain PIN will clear the brute force counter for that particular PIN, but not affect the other PINs brute force counter. Failed authorisation of a certain PIN will increase the brute force counter for that particular PIN, but not affect the other PINs brute force counter.

- If a user enters an **incorrect User PIN** 10 consecutive times, the User PIN will be deleted but the data, Admin PIN and Recovery PIN remain intact and accessible.
- If an **incorrect Recovery PIN** is entered 5 consecutive times, the Recovery PIN is deleted but the data and Admin PIN remain intact and accessible.
- The **Admin PIN** uses a more sophisticated defence mechanism in comparison to the User and Recovery PINs. After **5 consecutive incorrect Admin PIN entries**, the drive will lock and the **RED, GREEN** and **BLUE** LEDs will light up solid. At this point the following steps need to be taken in order to allow the User a further **3** PIN entries.

- Enter PIN “47867243” and press the **KEY (Ⓟ)** button, **GREEN** and **BLUE** LEDs blink together. The drive is now ready to accept a further **3** Admin PIN entries
- After a total of 8 consecutive incorrect Admin PIN entries, the drive will lock and the **RED**, **GREEN** and **BLUE** LEDs will blink alternately. At this point the following steps need to be taken in order to get the final **2** PIN entries (10 in total).
- Enter PIN “47867243” and press the **KEY (Ⓟ)** button, **GREEN** and **BLUE** LEDs blink together, the drive is now ready to accept the final **2** PIN entries (10 in total).
- After a total of 10 incorrect Admin PIN attempts, the encryption key will be deleted and all data and PINs stored on the drive will be lost forever.

The table below assumes that all three PINs have been set up and highlights the effect of triggering the brute force defence mechanism for each individual PIN.

PIN used to unlock drive	Consecutive incorrect PIN entries	Description of what happens
User PIN	10	<ul style="list-style-type: none"> <li>• The User PIN is deleted.</li> <li>• The Recovery PIN, the Admin PIN and all data remain intact and accessible.</li> </ul>
Recovery PIN	5	<ul style="list-style-type: none"> <li>• The Recovery PIN is deleted.</li> <li>• The Admin PIN and all data remain intact and accessible.</li> </ul>
Admin PIN	5  3  2  (10 in total)	<ul style="list-style-type: none"> <li>• After <b>5</b> consecutive incorrect Admin PIN entries, the drive will lock and all LEDs light up solid.</li> <li>• Enter PIN “47867243” and press the <b>KEY (Ⓟ)</b> button to get <b>3</b> further PIN entries.</li> <li>• After a total of <b>8</b> (5+3) consecutive incorrect Admin PIN entries, the drive will lock and the LEDs blink alternately.</li> <li>• Enter PIN “47867243” and press the <b>KEY (Ⓟ)</b> button to get the final <b>2</b> PIN entries (10 in total).</li> <li>• After a total of 10 consecutive incorrect Admin PIN entries, the encryption key will be deleted and all data and PINs stored on the drive will be lost forever.</li> </ul>



**Important:** A new Admin PIN must be configured if the pre-existing Admin PIN was brute forced, refer to Section 28 on page 20 on ‘[How to Configure an Admin PIN after a Brute Force attack or Reset](#)’, the diskAshurDT<sup>3</sup> will also need to be formatted before any new data can be added to the drive.



## 35. How to set the User PIN Brute Force Limitation

**Note:** The User PIN brute force limitation setting is defaulted to 10 consecutive incorrect PIN entries when the drive is either completely reset, brute forced or the self-destruct PIN is activated.

The brute force limitation for diskAshur DT<sup>3</sup> User PIN can be reprogrammed and set by the administrator. This feature can be set to allow attempts from 1 to 10 consecutive incorrect PIN entries.



To configure the User PIN brute force limitation, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.


1. In Admin mode, press and hold down both <b>7 + 0</b> buttons		Solid BLUE LED will change to GREEN and BLUE LEDs blinking together
2. Enter the number of attempts for the brute force limitation (between 01-10), for example enter: <ul style="list-style-type: none"> <li>• <b>01</b> for 1 attempt</li> <li>• <b>10</b> for 10 attempts</li> </ul>		
3. Press the <b>SHIFT (↑)</b> button once		Blinking GREEN and BLUE LEDs will switch to a solid GREEN LED for a second and then to a solid BLUE LED indicating the brute force limitation was successfully configured

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 36. How to check the User PIN Brute Force Limitation

The Administrator is able to observe and determine the number of consecutive times an incorrect User PIN is allowed to be entered before triggering the Brute Force defence mechanism by simply noting the LED sequence as described below.

To check the brute force limitation setting, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode press and hold down both <b>2 + 0</b> buttons		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press the <b>Unlock (🔓)</b> button and the following happens; <ol style="list-style-type: none"> <li>a. All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>b. Each RED LED blink equates to ten (10) units of a brute force limitation number.</li> <li>c. Every GREEN LED blink equates to one (1) single unit of a brute force limitation number.</li> <li>d. All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>e. LEDs return to solid BLUE</li> </ol>		



The table below describes the LED behaviour whilst checking the brute force limitation setting, for instance if you have set the drive to brute force after **5** consecutive incorrect PIN entries, the GREEN LED will blink five (**5**) times.

Brute Force Limitation Setting	RED	GREEN
2 attempts	0	2 Blinks
5 attempts	0	5 Blinks
10 attempts	1 Blink	0

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.


## 37. How to perform a complete reset

To perform a complete reset, the diskAshur DT<sup>3</sup> must be in standby state (solid RED LED). Once the drive is reset then all Admin/User PINs, the encryption key and all data will be deleted and lost forever and the drive will need to be formatted before it can be reused. To reset the diskAshur DT<sup>3</sup> proceed with the following steps.

1. In standby state (solid RED LED) , press and hold down “0” button		Solid RED LED will change to all LEDs, RED, GREEN and BLUE blinking alternately on and off
2. Press and hold down both 2 + 7 buttons		RED, GREEN and BLUE alternating LEDs will become solid for a second and then to a solid RED LED indicating the drive has been reset




 **Important:** After a complete reset a new Admin PIN must be configured, refer to Section 28 on page 20 on ‘How to Configure an Admin PIN after a Brute Force attack or Reset’, the diskAshur DT<sup>3</sup> will also need to be formatted before any new data can be added to the drive.

## 38. How to configure diskAshur DT<sup>3</sup> as Bootable

 **Note:** When the drive is set as bootable, ejecting the drive from Operating System will not force the LED to turn RED. The drive stays solid GREEN and needs to be unplugged for next time use. The default setting of the diskAshur DT<sup>3</sup> is configured as non-bootable.

The diskAshur DT<sup>3</sup> is equipped with a bootable feature to accommodate power cycling during a host boot process. When booting from the diskAshur DT<sup>3</sup>, you are running your computer with the operating system that is installed on the diskAshur DT<sup>3</sup>.

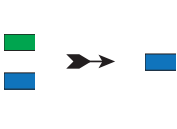


To set the drive as bootable, first enter the “Admin Mode” as described in section 6. Once the drive is in Admin Mode (solid BLUE LED) proceed with the following steps.

1. In Admin mode, press and hold down both <b>Unlock (Ⓟ) + 9</b> buttons		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press “0” followed by a “1” (01)		GREEN and BLUE LEDs will continue to blink
3. Press the <b>SHIFT (↑)</b> button once		Blinking GREEN and BLUE LEDs will change to a solid GREEN LED and finally to a solid BLUE LED indicating the drive has been successfully configured as bootable

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 39. How to disable the diskAshur DT<sup>3</sup> Bootable feature


To disable the diskAshur DT<sup>3</sup> Bootable Feature, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode, press and hold down both <b>Unlock (Ⓛ) + 9</b> buttons		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press “0” followed by another “0” (00)		GREEN and BLUE LEDs will continue to blink
3. Press the <b>SHIFT (↑)</b> button once		Blinking GREEN and BLUE LEDs will change to a solid GREEN LED and finally to a solid BLUE LED indicating the bootable feature has been successfully disabled

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 40. How to check the Bootable setting

To check the bootable setting, first enter the “Admin Mode” as described in section 6. Once the drive is in **Admin Mode** (solid BLUE LED) proceed with the following steps.

1. In Admin mode press and hold down both <b>SHIFT (↑) + 9</b> buttons		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Press the <b>Unlock (Ⓛ)</b> button and one of the following two scenarios will happen;		
<ul style="list-style-type: none"> <li>• <b>If diskAshur DT<sup>3</sup> is configured as Bootable, the following happens;</b> <ol style="list-style-type: none"> <li>a. All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>b. GREEN LED blinks once.</li> <li>c. All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>d. LEDs return to solid BLUE</li> </ol> </li> <li>• <b>If diskAshur DT<sup>3</sup> is NOT configured as Bootable, the following happens;</b> <ol style="list-style-type: none"> <li>a. All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>b. All LEDs are off</li> <li>c. All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>d. LEDs return to solid BLUE</li> </ol> </li> </ul>		

**Note:** To immediately exit Admin Mode (solid BLUE LED), press and hold down the **SHIFT (↑)** button for a second - the solid BLUE LED switches to a solid RED LED.

## 41. How to configure the Encryption Mode



**WARNING:** Changing the encryption mode from AES-XTS (default state) to AES-ECB or AES-CBC will delete the encryption key and cause the diskAshur DT<sup>3</sup> to reset and render all data as inaccessible and lost forever!

Perform the following steps to configure the diskAshur DT<sup>3</sup> encryption mode to either **AES-ECB** indicated by the number '01', or **AES-XTS** indicated by the number '02', or **AES-CBC** indicated by the number '03'. This feature is set as AES-XTS (02) by default. Please note all critical parameters will be deleted when switching to a different encryption mode and will cause the drive to reset.

To set the diskAshur DT<sup>3</sup> encryption mode, first enter the **Admin Mode** as described in section 6. Once the diskAshur DT<sup>3</sup> is in **Admin Mode** (solid BLUE LED) proceed with the following steps.


1. In Admin Mode, press and hold down both 'KEY (⌘) + 1' buttons.		Solid BLUE LED will change to blinking GREEN and BLUE LEDs
2. Enter 01 to set as <b>AES-ECB</b> Enter 02 to set as <b>AES-XTS (default state)</b> Enter 03 to set as <b>AES-CBC</b>		GREEN and BLUE LEDs will continue to blink
3. Press the <b>SHIFT</b> (↑) button once.		GREEN and BLUE LEDs will change to a solid GREEN LED and then to a solid RED LED ( <b>Reset State</b> ) indicating the encryption mode was successfully changed



**Important:** After configuring the encryption mode, the diskAshur DT<sup>3</sup> completely resets and a new Admin PIN must be configured, refer to Section 28 on page 20 on 'How to Configure an Admin PIN after a Brute Force attack or Reset'.

## 42. How to check the encryption mode

To check the diskAshur DT<sup>3</sup> encryption mode, first enter the **Admin Mode** as described in section 6. Once the drive is in **Admin Mode** (solid **BLUE** LED) proceed with the following steps.

<p>1. In Admin Mode press and hold down both 'SHIFT (↑) + 1' buttons</p>		<p>Solid <b>BLUE</b> LED will change to blinking <b>GREEN</b> and <b>BLUE</b> LEDs</p>
<p>2. Press the <b>KEY (⌘)</b> button and the following happens:</p> <ul style="list-style-type: none"> <li>• <b>If the encryption mode is configured as AES-ECB, the following happens:</b> <ol style="list-style-type: none"> <li>a. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li>b. <b>GREEN</b> LED blinks once.</li> <li>c. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li>d. LEDs return to solid <b>BLUE</b></li> </ol> </li> <li>• <b>If the encryption mode is configured as AES-XTS, the following happens:</b> <ol style="list-style-type: none"> <li>a. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li>b. <b>GREEN</b> LED blinks twice.</li> <li>c. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li>d. LEDs return to solid <b>BLUE</b></li> </ol> </li> <li>• <b>If the encryption mode is configured as AES-CBC, the following happens:</b> <ol style="list-style-type: none"> <li>a. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li>b. <b>GREEN</b> LED blinks three times.</li> <li>c. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li>d. LEDs return to solid <b>BLUE</b></li> </ol> </li> </ul>		

**Note:** To immediately exit Admin Mode (solid **BLUE** LED), press and hold down the **SHIFT (↑)** button for a second - the solid **BLUE** LED switches to a solid **RED** LED.

## 43. How to configure the Disk type

The diskAshur DT<sup>3</sup> can be configured as either a 'Removable Disk' or 'Local Disk (default state)'. All critical parameters will be erased when switching to a different disk type, deleting all PINs, the encryption key and data and causing the drive to enter the reset state.



**WARNING:** Changing the disk type as either a 'Removable Disk' or 'Local Disk (default state)' will delete the encryption key and cause the diskAshur DT<sup>3</sup> to reset and render all data as inaccessible and lost forever!

Perform the following steps to configure the diskAshur DT<sup>3</sup> disk type to either a Removable Disk (**00**) or Local Disk (**01**). This feature is set as Local Disk (**01**) by default. Please note all critical parameters will be erased when switching to a different encryption mode causing the drive to reset.

To set the diskAshur DT<sup>3</sup> encryption mode, first enter the **Admin Mode** as described in section 6. Once the diskAshur DT<sup>3</sup> is in **Admin Mode** (solid **BLUE** LED) proceed with the following steps.

1. In Admin Mode, press and hold down both 'KEY (⌘) + 8' buttons.		Solid <b>BLUE</b> LED will change to blinking <b>GREEN</b> and <b>BLUE</b> LEDs
2. Enter <b>00</b> to set as <b>Removable Disk</b> Enter <b>01</b> to set as <b>Local Disk (default state)</b>		<b>GREEN</b> and <b>BLUE</b> LEDs will continue to blink
3. Press the <b>SHIFT</b> (↑) button once.		<b>GREEN</b> and <b>BLUE</b> LEDs will change to a solid <b>GREEN</b> LED and then to a solid <b>RED</b> LED ( <b>Reset State</b> ) indicating the disk type was successfully changed



**Important:** After changing the disk type, the diskAshur DT<sup>3</sup> completely resets and a new Admin PIN must be configured, refer to Section 28 on page 20 on 'How to Configure an Admin PIN after a Brute Force attack or Reset'.

## 44. How to check the Disk type setting

To check the diskAshur DT<sup>3</sup> disk type setting, first enter the **Admin Mode** as described in section 6. Once the drive is in **Admin Mode** (solid **BLUE** LED) proceed with the following steps.

1. In Admin Mode press and hold down both 'SHIFT (↑) + 8' buttons		Solid <b>BLUE</b> LED will change to blinking <b>GREEN</b> and <b>BLUE</b> LEDs
2. Press the <b>KEY (⌘)</b> button and the following happens:		
<ul style="list-style-type: none"> <li>• <b>If the disk type is configured as 'Removable', the following happens:</b> <ol style="list-style-type: none"> <li>a. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second and then switch off.</li> <li>b. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second again and then switch off.</li> <li>d. LEDs return to solid <b>BLUE</b></li> </ol> </li> <li>• <b>If the disk type is configured as 'Local', the following happens:</b> <ol style="list-style-type: none"> <li>a. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li>b. <b>GREEN</b> LED blinks once.</li> <li>c. All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li>d. LEDs return to solid <b>BLUE</b></li> </ol> </li> </ul>		


## 45. Initialising and formatting diskAshur DT<sup>3</sup> for Windows

After a 'Brute Force Attack' or a complete reset the diskAshur DT<sup>3</sup> will delete all PINs, data and the encryption key. You will need to initialise and format the diskAshur DT<sup>3</sup> before it can be used.


To format your diskAshur DT<sup>3</sup>, do the following:

1. Configure a new Admin PIN - see page 20, section 28, 'How to configure an Admin PIN after a Brute Force attack or reset'.
2. With the diskAshur DT<sup>3</sup> in standby state (RED LED), press the **Unlock (Ⓟ)** button once and enter **New Admin PIN** to unlock (blinking GREEN LED).
3. **Windows 7:** Right click **Computer** and then click **Manage** and then select **Disk Management**  
**Windows 8:** Right-click left corner of desktop and select **Disk Management**  
**Windows 10:** Right click on the start button and select **Disk Management**
4. In the Disk Management window, the diskAshur DT<sup>3</sup> is recognised as an unknown device that is uninitialized and unallocated. A message box should appear for you to choose between MBR and GPT partition style. GPT stores multiple duplicates of this data over the disk, as a result it's much more robust. On an MBR disk, the partitioning and boot information is stored inside single place.


Select the partition style and click **OK**.

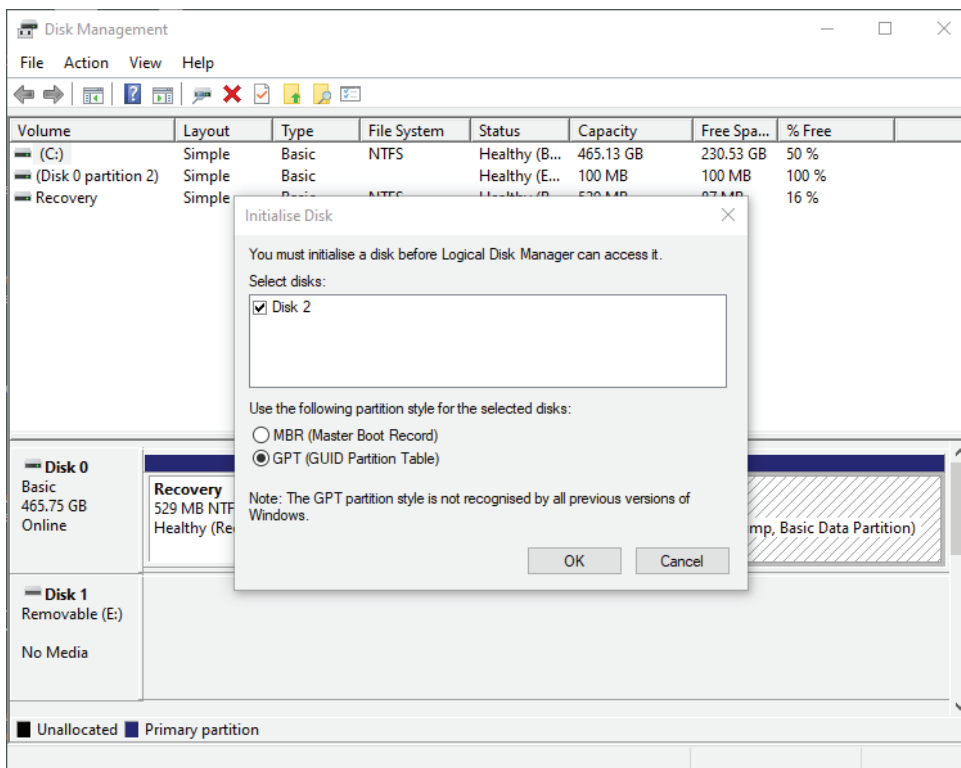

5. Right-click in the blank area over the **Unallocated** section, and then select **New Simple Volume**.

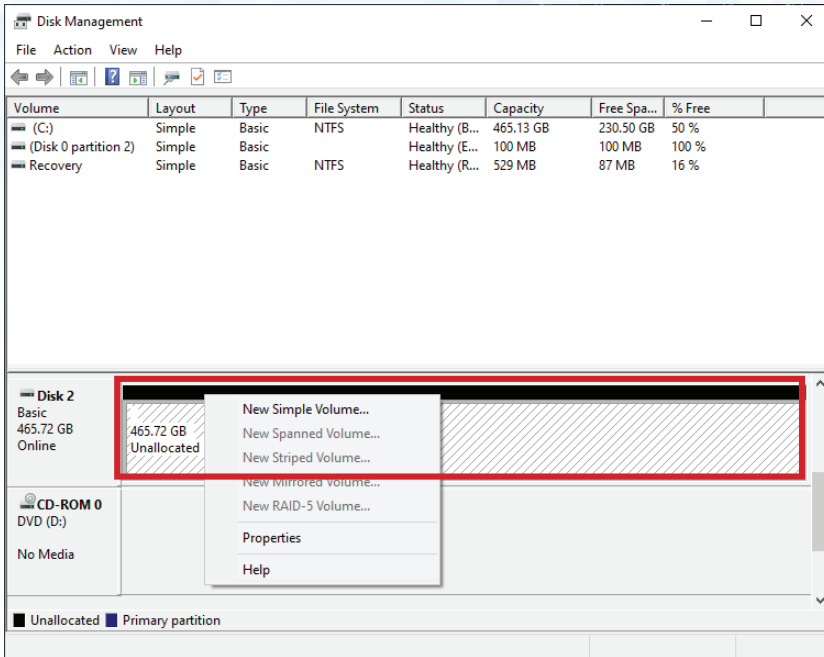

6. The Welcome to the New Simple Volume Wizard window opens. Click Next.

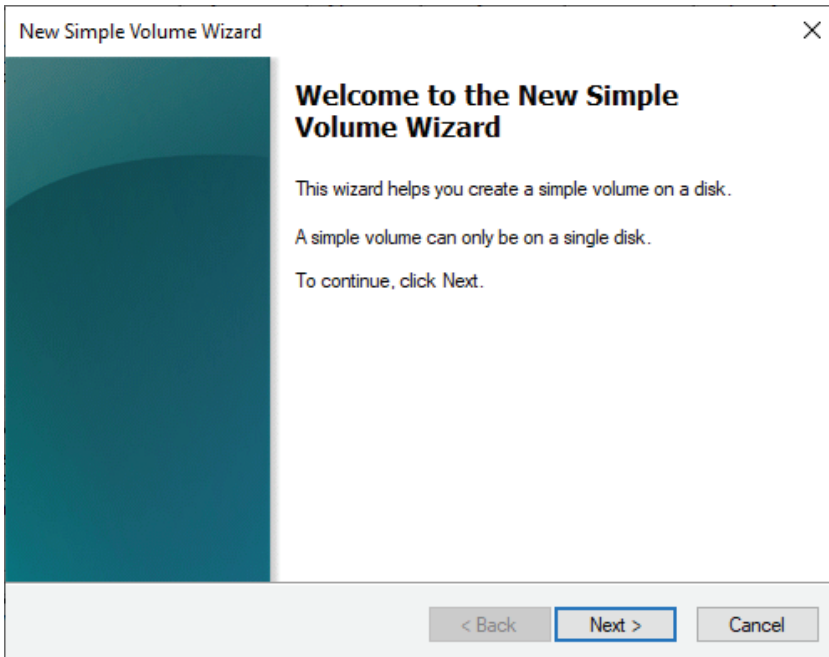

7. If you need only one partition, accept the default partition size and click **Next**.
8. Assign a drive letter or path and click **Next**.
9. Create a volume label, select Perform a quick format, and then click **Next**.
10. Click **Finish**.
11. Wait until the format process is complete. The diskAshur DT<sup>3</sup> will be recognised and it is available for use.




## 46. Initialising and formatting diskAshur DT<sup>3</sup> in Mac OS


After a 'Brute Force Attack' or a complete reset the diskAshur DT<sup>3</sup> will delete all PINs, data and the encryption key. You will need to initialise and format the diskAshur DT<sup>3</sup> before it can be used.

To initialize and format the diskAshur DT<sup>3</sup>:

1. Select diskAshur DT<sup>3</sup> from the list of drives and volumes. Each drive in the list will display its capacity, manufacturer, and product name, such as '**iStorage diskAshur DT<sup>3</sup> Media**'.

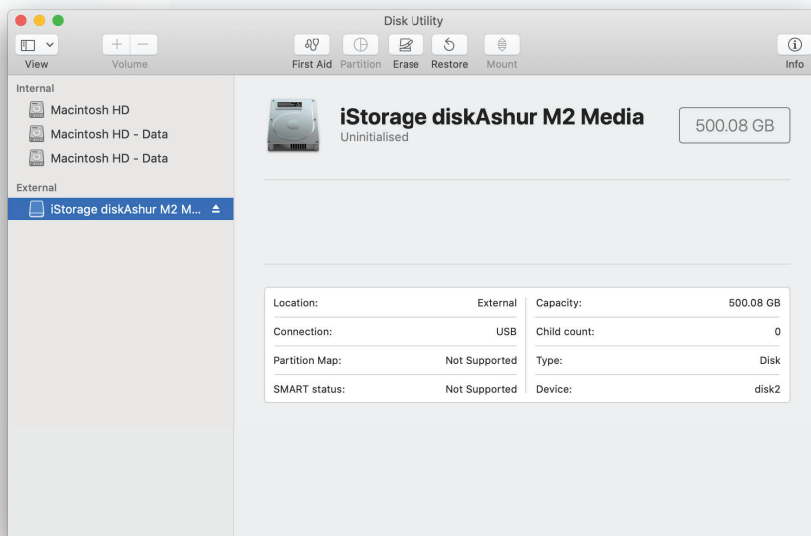


2. Click the '**Erase**' button under Disk Utility.
3. Enter a name for the drive. The default name is Untitled. The name of the drive will eventually appear on the desktop.

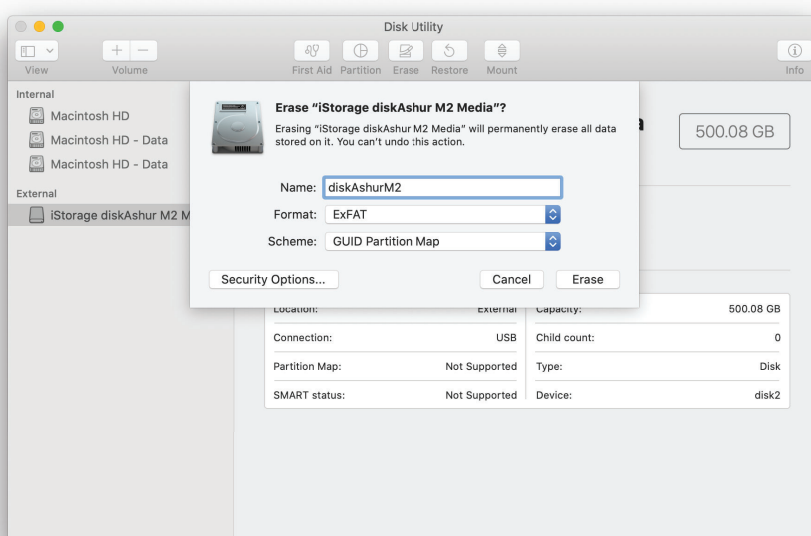

4. Select a scheme and volume format to use. The Volume Format dropdown menu lists the available drive formats that the Mac supports. The recommended format type is 'Mac OS Extended (Journaled).' For cross platform use exFAT. The scheme format dropdown menu lists the available schemes to use. We recommend using 'GUID Partition Map' on drives larger than 2TB.




5. Click the 'Erase' button. Disk Utility will unmount the volume from the desktop, erase it, and then remount it on the desktop.

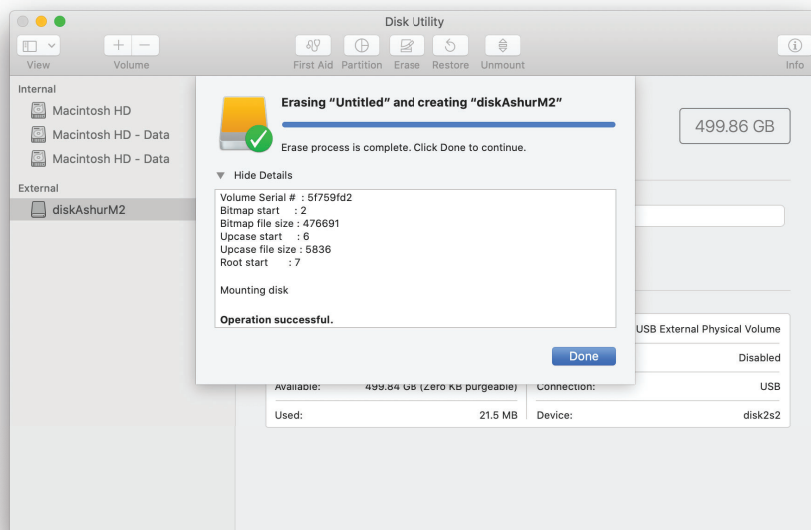


## 47. Initialising and formatting diskAshur DT<sup>3</sup> in Linux OS


1. Open **'Show Application'** and type **'Disks'** in the search box. Click on the **'Disks'** utility when displayed.

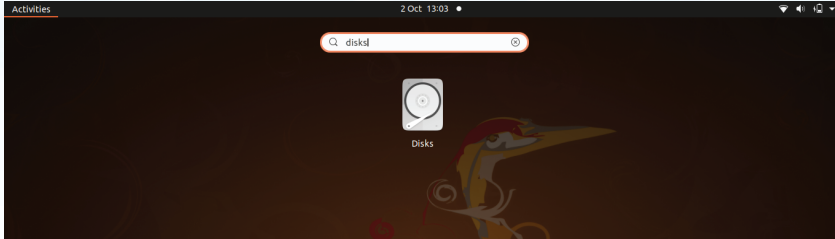


2. Click to select the drive (500 GB Hard Disk) under **'Devices'**. Next click on the gears icon under **'Volumes'** and then click on **'Format Partitons'**.

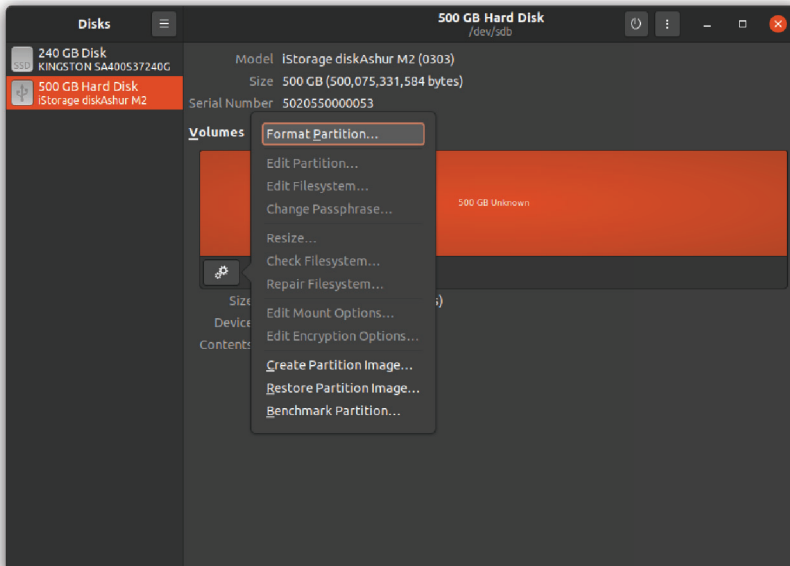


3. Select **'Compatible with all systems and devices (FAT)'** for the **'Type'** option. And enter a name for the drive, e.g: diskAshur DT<sup>3</sup>. Then, click the **'Format'** button.

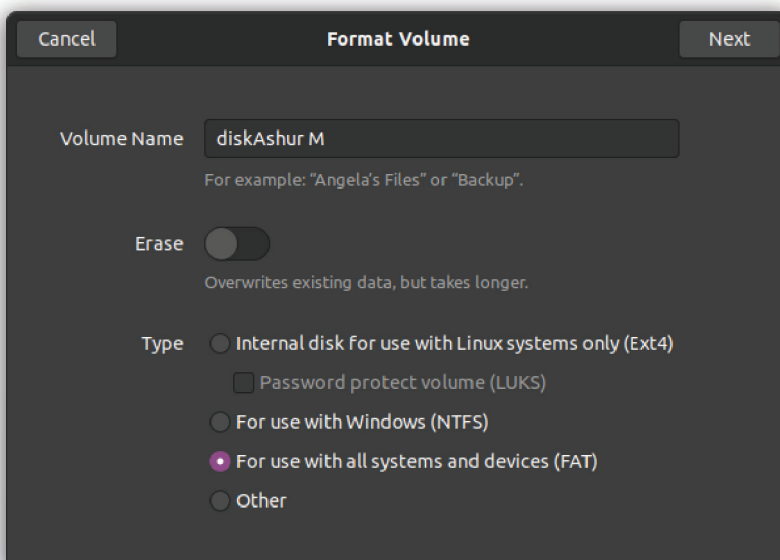


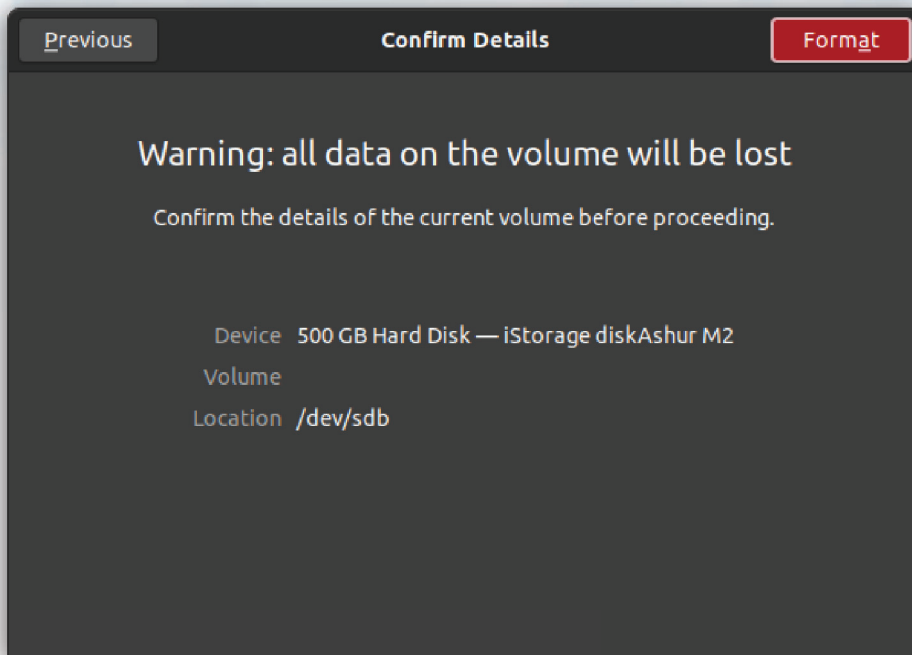


4. After the format process is finished, click Play button to mount the drive to Ubuntu.

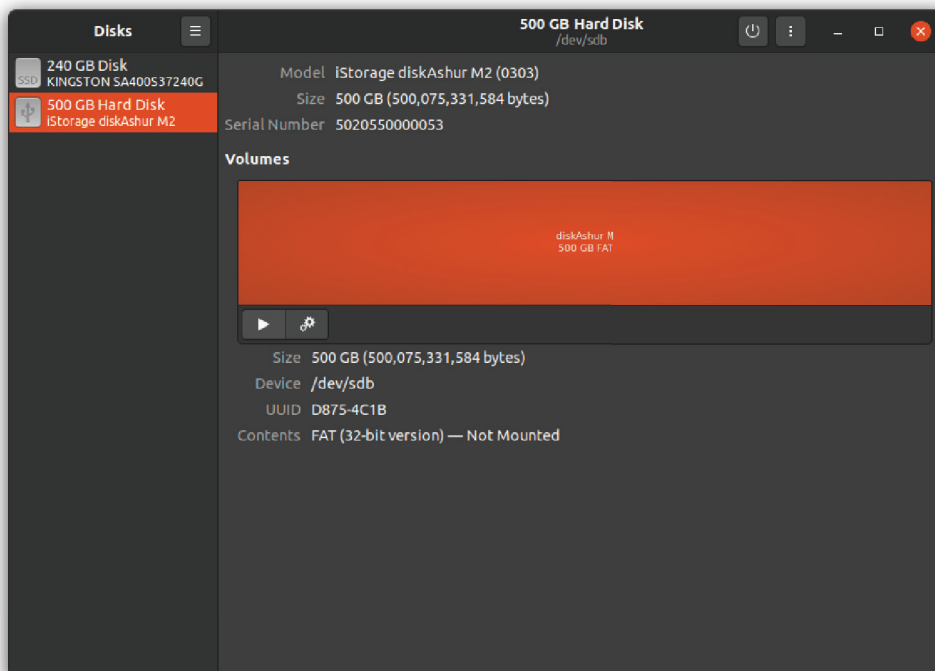

5. Now the drive should be mounted to Ubuntu and ready to use.

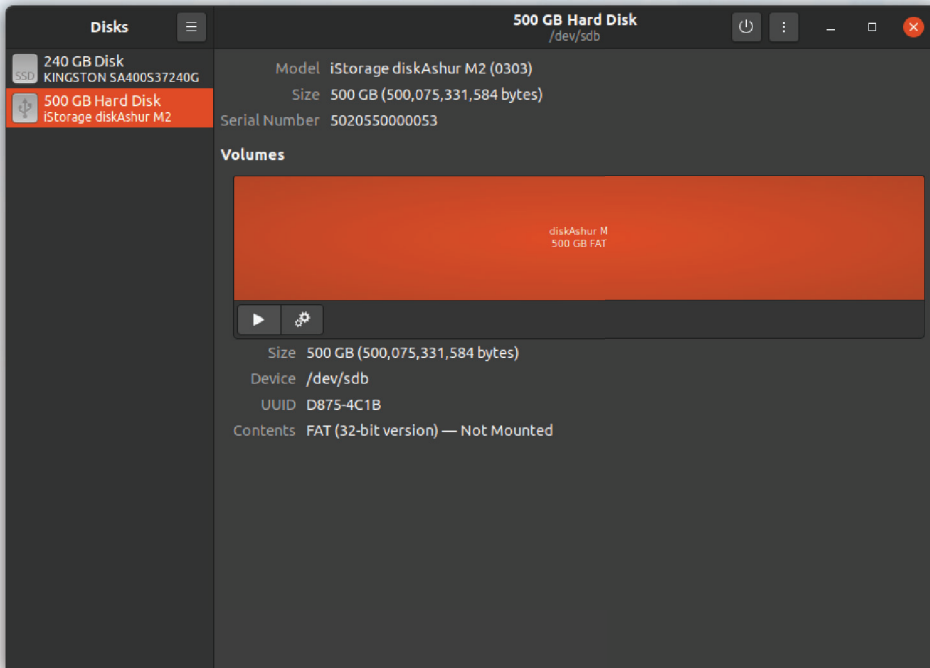

6. The disk will be shown as seen in the image below. You can click the disk icon to open your drive.

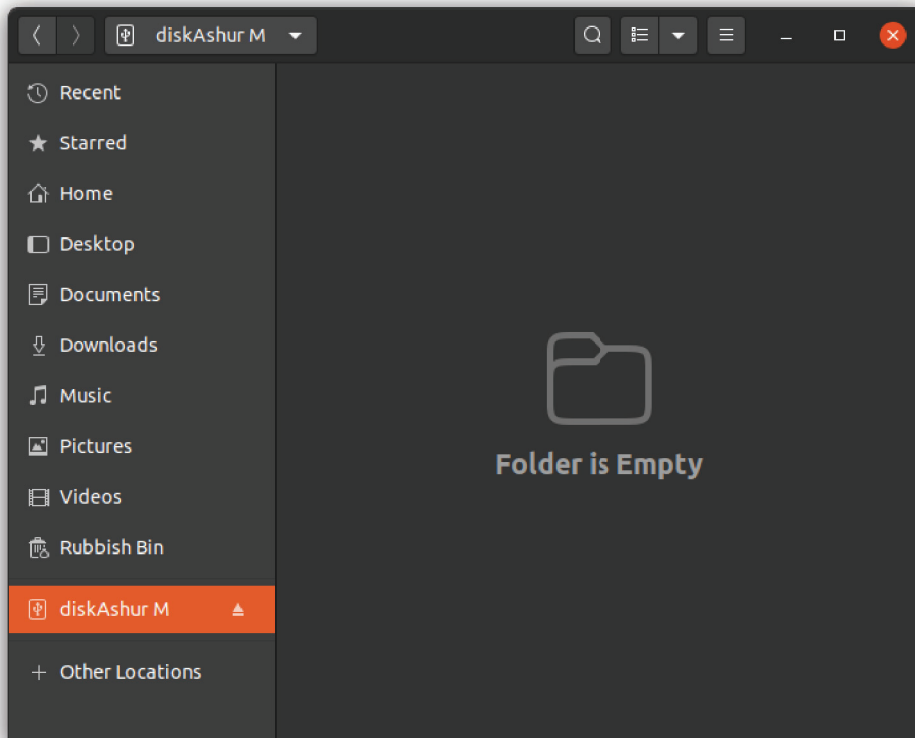

## 48. Hibernating, Suspending, or Logging off from the Operating System

Be sure to save and close all the files on your diskAshur DT<sup>3</sup> before hibernating, suspending, or logging off from the operating system.

It is recommended that you lock the diskAshur DT<sup>3</sup> manually before hibernating, suspending, or logging off from your system.

To lock the drive, safely eject the diskAshur DT<sup>3</sup> from your host operating system and then unplug from the USB port. If data is being written to the drive, safely ejecting and unplugging the diskAshur DT<sup>3</sup> will result in incomplete data transfer and possible data corruption.



**Attention:** To ensure your data is secure, be sure to lock your diskAshur DT<sup>3</sup> if you are away from your computer.

## 49. How to check Firmware in Admin mode


To check the firmware revision number, first enter the “Admin Mode” as described in section 6. Once the drive is in Admin Mode (solid BLUE LED) proceed with the following steps.

<p>1. In Admin mode press and hold down both “<b>3 + 8</b>” buttons</p>		<p>Solid BLUE LED will change to blinking GREEN and BLUE LEDs</p>
<p>2. Press the <b>Unlock</b> (🔓) button once and the following happens;</p> <ol style="list-style-type: none"> <li>All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>RED LED blinks indicating the integral part of the firmware revision number.</li> <li>GREEN LED blinks indicating the fractional part.</li> <li>BLUE LED blinks indicating the last digit of the firmware revision number</li> <li>All LED's (RED, GREEN &amp; BLUE) become solid for 1 second.</li> <li>RED, GREEN &amp; BLUE LEDs switch to a solid BLUE LED</li> </ol>		

For example, if the firmware revision number is ‘1.9’, the RED LED will blink once (1) and the GREEN LED will blink nine (9) times. Once the sequence has ended the RED, GREEN & BLUE LED's will blink together once and then return to Admin mode, a solid BLUE LED.

## 50. How to check Firmware in User Mode

To check the firmware revision number, first enter the “**User Mode**” as described in section 14. Once the drive is in **User Mode** (solid **GREEN** LED) proceed with the following steps.

<p>1. In User mode press and hold down both “<b>3 + 8</b>” buttons until <b>GREEN</b> and <b>BLUE</b> LEDs blink together</p>		<p>Solid <b>GREEN</b> LED will change to blinking <b>GREEN</b> and <b>BLUE</b> LEDs</p>
<p>2. Press the <b>Unlock</b> (<b>Ⓛ</b>) button and the following happens;</p> <ol style="list-style-type: none"> <li>All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li><b>RED</b> LED blinks indicating the integral part of the firmware revision number.</li> <li><b>GREEN</b> LED blinks indicating the fractional part.</li> <li><b>BLUE</b> LED blinks indicating the last digit of the firmware revision number</li> <li>All LED's (<b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b>) become solid for 1 second.</li> <li><b>RED</b>, <b>GREEN</b> &amp; <b>BLUE</b> LEDs switch to a solid <b>BLUE</b> LED</li> </ol>		

For example, if the firmware revision number is ‘**1.9**’, the **RED** LED will blink once (**1**) and the **GREEN** LED will blink nine (**9**) times. Once the sequence has ended the **RED**, **GREEN** & **BLUE** LED's will blink together once and then return to the User mode, a solid **GREEN** LED.

## 51. Technical Support

iStorage provides the following helpful resources for you:

Website:

<https://www.istorage-uk.com>

E-mail Support:

[support@istorage-uk.com](mailto:support@istorage-uk.com)

Telephone Support:

**+44 (0) 20 8991-6260.**

iStorage Technical Support Specialists are available from 9:00 a.m. to 5:30 p.m. GMT - Monday through Friday.

## 52. Warranty and RMA information

### ISTORAGE PRODUCT DISCLAIMER AND WARRANTY

iStorage warrants that on delivery and for a period of 36 months from delivery, its Products shall be free from material defects. However, this warranty does not apply in the circumstances described below. iStorage warrants that the Products comply with the standards listed in the relevant data sheet on our website at the time you place your order.

These warranties do not apply to any defect in the Products arising from:

- fair wear and tear;
- wilful damage, abnormal storage or working conditions, accident, negligence by you or by any third party;
- if you or a third party fail(s) to operate or use the Products in accordance with the user instructions;
- any alteration or repair by you or by a third party who is not one of our authorised repairers; or
- any specification provided by you.

Under these warranties we will, at our option, either repair, replace, or refund you for, any Products found to have material defects, provided that upon delivery:

- you inspect the Products to check whether they have any material defects; and
- you test the encryption mechanism in the Products.

We shall not be liable for any material defects or defects in the encryption mechanism of the Products ascertainable upon inspection on delivery unless you notify such defects to us within 30 days of delivery. We shall not be liable for any material defects or defects in the encryption mechanism of the Products which are not ascertainable upon inspection on delivery unless you notify such defects to us within 7 days of the time when you discover or ought to have become aware of such defects. We shall not be liable under these warranties if you make or anyone else makes any further use of the Products after discovering a defect. Upon notification of any defect, you should return the defective product to us. If you are a business, you will be responsible for the transportation costs incurred by you in sending any Products or parts of the Products to us under the warranty, and we will be responsible for any transportation costs we incur in sending you a repaired or replacement Product. If you are a consumer, please see our terms and conditions.

Products returned must be in the original packaging and in clean condition. Products returned otherwise will, at the Company's discretion, either be refused or a further additional fee charged to cover the additional costs involved. Products returned for repair under warranty must be accompanied by a copy of the original invoice, or must quote the original invoice number and date of purchase.

If you are a consumer, this warranty is in addition to your legal rights in relation to Products that are faulty or not as described. Advice about your legal rights is available from your local Citizens' Advice Bureau or Trading Standards office.

The warranties set out in this clause apply only to the original purchaser of a Product from iStorage or an iStorage authorized reseller or distributor. These warranties are non-transferable.

EXCEPT FOR THE LIMITED WARRANTY PROVIDED HEREIN, AND TO THE EXTENT PERMITTED BY LAW, ISTORAGE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES OF MERCHANTABILITY; FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT. ISTORAGE DOES NOT WARRANT THAT THE PRODUCT WILL OPERATE ERROR-FREE. TO THE EXTENT THAT ANY IMPLIED WARRANTIES MAY NONETHELESS EXIST BY OPERATION OF LAW, ANY SUCH WARRANTIES ARE LIMITED TO THE DURATION OF THIS WARRANTY. REPAIR OR REPLACEMENT OF THIS PRODUCT, AS PROVIDED HEREIN, IS YOUR EXCLUSIVE REMEDY.

IN NO EVENT SHALL ISTORAGE BE LIABLE FOR ANY LOSS OR ANTICIPATED PROFITS, OR ANY INCIDENTAL, PUNITIVE, EXEMPLARY, SPECIAL, RELIANCE OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOST REVENUES, LOST PROFITS, LOSS OF USE OF SOFTWARE, DATA LOSS, OTHER LOSS OR RECOVERY OF DATA, DAMAGE TO PROPERTY, AND THIRD-PARTY CLAIMS, ARISING OUT OF ANY THEORY OF RECOVERY, INCLUDING WARRANTY, CONTRACT, STATUTORY OR TORT, REGARDLESS OF WHETHER IT WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOTWITHSTANDING THE TERM OF ANY LIMITED WARRANTY OR ANY WARRANTY IMPLIED BY LAW, OR IN THE EVENT THAT ANY LIMITED WARRANTY FAILS OF ITS ESSENTIAL PURPOSE, IN NO EVENT WILL ISTORAGE'S ENTIRE LIABILITY EXCEED THE PURCHASE PRICE OF THIS PRODUCT. | 4823-2548-5683.3



# iStorage®

© iStorage, 2024. All rights reserved.  
iStorage Limited, iStorage House, 13 Alperton Lane  
Perivale, Middlesex. UB6 8DH, England  
Tel: +44 (0) 20 8991 6260 | Fax: +44 (0) 20 8991 6277  
e-mail: [info@istorage-uk.com](mailto:info@istorage-uk.com) | web: [www.istorage-uk.com](http://www.istorage-uk.com)