

PRO Series

LCD Monitor

PRO MP251 E2 (3PD2)

User Guide

Contents

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	5
Monitor Overview	6
Connecting the Monitor to PC	8
OSD Setup	9
Navi Key	9
Hot Key	9
OSD Menus	10
Professional	10
Image	12
Input Source	13
Navi Key	14
Settings	14
Specifications	16
Preset Display Modes	18
Troubleshooting	19
Safety Instructions	20
TÜV Rheinland Certification	22
Regulatory Notices	23

Revision

V1.0, 2024/08

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents

Monitor	PR0 MP251 E2
Documentation	Quick Start Guide
Accessories	Stand with Screw(s)
	Stand Base with Screw(s)
	Screw(s) for Wall Mount Bracket(s)
	Power Cord
	External Power Supply
Cables	High Speed HDMI™ Cable (Optional)




Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country and model.
- The included power cord is exclusively for this monitor and should not be used with other products.

Installing the Monitor Stand

- 1. Leave the monitor in its protective packaging. Align and gently push the stand bracket towards the monitor groove until it locks in place.
- 2. Align and gently push the cable organizer towards the stand until it locks in place.
- 3. Align and gently push the base towards the stand until it locks in place.
- Make sure the stand assembly is properly installed before setting the monitor upright.

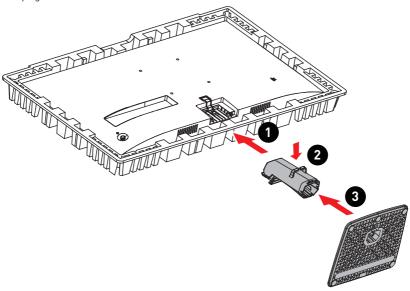

⚠

Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any
 mechanical damages to the product including removal of the polarizing film may
 affect the warranty!



Adjusting the Monitor


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.



Avoid touching the display panel when adjusting the monitor.



Monitor Overview

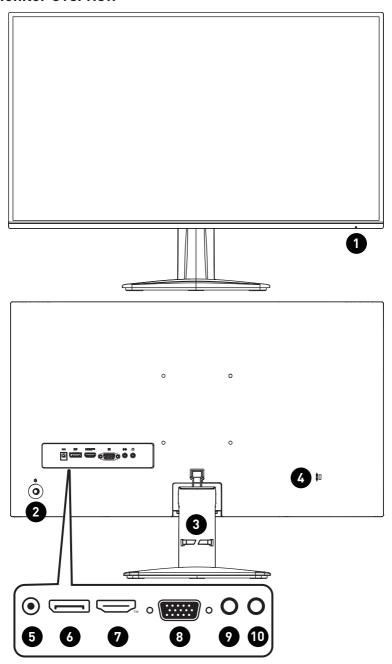

A	Power LED
	Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.
2	Power Button/ Navi Key
3	Cable Organizer
4	Kensington Lock
5	Power Jack
6	DisplayPort
	Supports 1920x1080@120Hz as specified in DisplayPort 1.4a.
7	HDMI™ Connector H⊃ I
	Supports HDMI™ CEC, 1920x1080@120Hz as specified in HDMI™ 2.0.
8	D-Sub Port
9	Line-in Jack
	For audio playback through the speakers, connect the device's Line-out jack to this Line-in jack when using the D-Sub port.
10	Headphone Jack

Connecting the Monitor to PC

 
- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- **3.** Assemble the external power supply & power cord. (Figure A)
- **4.** Connect the external power supply to the monitor power jack. (Figure B)
- **5.** Plug the power cord into the electrical outlet. (Figure C)
- **6.** Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.




) Important

External Power Supply may vary by country.

Optional

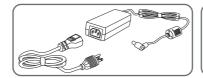



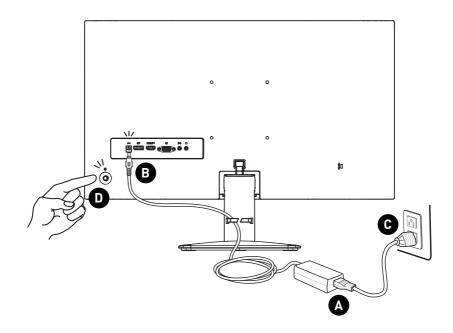

OSD Setup

This chapter provides you with essential information on OSD Setup.




Important

All information is subject to change without prior notice.

Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

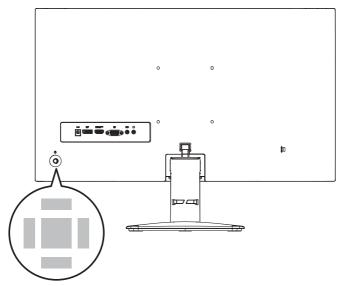

Up/ Down/ Left/ Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus


Middle:

- launching the On-Screen Display (OSD)
- · entering submenus
- · confirming a selection or setting

Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

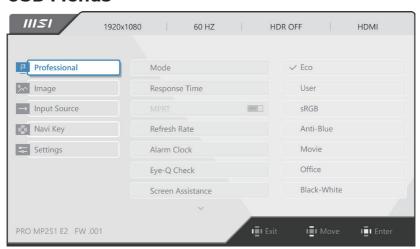



Important

The following settings will be grayed out when HDR signals are received:

- MPRT
- Low Blue Light
- HDCR

- Brightness
- Contrast
- Color Temperature

Professional

1st Level Menu	2nd/3rd Level Menu	Description		
Mode	Eco	Use Up or Down Button to select and p		
	User	mode effects. • Press the Middle Rutton to confirm and	 mode effects. Press the Middle Button to confirm and apply 	
	sRGB your mode type.	your mode type.	ttorr to commin and appty	
		Activating sRGB will a		
	Movie	Affected Function	Function Status	
	Movie	» Color Temperature		
	Office	» Low Blue Light	Unable to select	
	Black-White	» Contrast		
Response Time	Normal	Setting to Fastest will reach the shortest response time and help improve blurred ima when playing very fast games.		
	Fast			
	Fastest			

1st Level Menu	2nd/3rd Lev	rel Menu	Description	
MPRT	OFF ON		MPRT is available wh 85 Hz.	en the refresh rate is over
			Activating MPRT will affect:	
			Affected Function	Function Status
			» Brightness » Response Time	Unable to select
			» HDCR » Adaptive-Sync	Set to OFF
Refresh Rate	Location	Left Top	Location is adjustable	
		Right Top	the Middle Button to Refresh Rate Locatio	confirm and apply your n.
		Left Bottom	This monitor follows System's preset Screen	and works at the Operating
		Right Bottom	System's preset Scre	en Refresh Rate.
	OFF			
	ON			
Alarm Clock	Location	Left Top • After setting the time, press the		, press the Middle Button
		Right Top	to activate the timer. • Users have to manually restore their preset Alarm Clock after any AC power loss and reconnection.	
		Left Bottom		
		Right Bottom	- reconnection.	
	OFF	•		
	15:00	00:01 ~ 99:59		
	30:00			
	45:00			
	60:00			
Eye-Q Check	OFF		Select OFF to disable	*
			Activating Eye-Q Che	
			» Info. On Screen	Function Status Set to OFF
	Amsler Grid		Select Amsler Grid to field.	check your central vision
	Astigmatism Posture Correction		Select Astigmatism to	o check your blurred vision.
			Select Posture Corre posture when sitting.	

1st Level Menu	2nd/3rd Level Menu	Description	
Screen Assistance	None [+] [+] -	Users can adjust Screen mode.	een Assistance in any
Screen Size	Auto 4:3 16:9	Users can adjust Scre resolution and any sc	een Size in any mode, any reen refresh rate.
Adaptive-Sync	OFF ON	Adaptive-Sync preven Activating Adaptive-S Affected Function MPRT	*

Image

1st Level Menu	2nd/3rd Level Menu	Description
Brightness	0-100	Properly adjust Brightness according to the surrounding lighting.
Contrast	0-100	Properly adjust Contrast to relax your eyes.
Sharpness	0-5	Sharpness improves clarity and details of images.
Image	OFF	Image Enhancement enhances image edges to
Enhancement	Weak	improve their acutance.
	Medium	
	Strong	
	Strongest	
Low Blue Light	OFF	Low Blue Light protects your eyes against blue
	ON	light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.
		When Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.
		This monitor is a Low Blue Light monitor which will decrease the blue light emitted without adjusting the OSD settings.

1st Level Menu	2nd/3rd Level Menu		Description	
HDCR	OFF ON		HDCR enhances image quality by increasing the contrast of images. Activating HDCR will affect:	
			Affected Function	Function Status
			» Brightness	Unable to select
Color Temperature	Cool		Use Up or Down Butto mode effects.	on to select and preview
	Normal			ton to confirm and apply
	Warm		your mode type.	
	Customization	R (0-100)	 Users can adjust Colo Customization mode. 	
		G (0-100)		
		B (0-100)		
Auto Config			For D-Sub only, this s when detecting other	setting will be grayed out input sources.
Clock (For D-Sub)	0-100		Adjusting the clock to noise.	reduce Vertical-Line
(101 2 345)			For D-Sub only, this s when detecting other	setting will be grayed out input sources.
Phase (For D-Suh)			Adjusting the phase t noise.	o reduce Horizontal-Line
(1 01 2 3 4 5)			For D-Sub only, this s when detecting other	setting will be grayed out input sources.
H.Position			Adjusting the horizon	tal position of the image.
(For D-Sub)			For D-Sub only, this s when detecting other	setting will be grayed out input sources.
V.Position			Adjusting the vertical	
(For D-Sub)			For D-Sub only, this s when detecting other	setting will be grayed out input sources.

Input Source

1st Level Menu	2nd Level Menu	Description
HDMI™		Select an Input Source from the list.
DP		
D-Sub		
Auto Scan	OFF	Users can use the Navi Key to select Input Source at below status:
	ON	While "Auto Scan" is set to "OFF" with the monitor at power saving mode;
		While "No Signal" message box is shown on the monitor.

Navi Key

1st Level Menu	2nd Level Menu	Description
Up	0FF	All Navi Key items can be adjusted via OSD Menus.
Down	Brightness	
Left Right	Mode	
1	Alarm Clock	
	Input Source	
	Refresh Rate	
	Info. On Screen	
	Audio Volume	

Settings

1st Level Menu	2nd Level Menu	Description
Language		Users have to press the Middle Button to confirm and
	English	apply the Language setting.
	Français	Language is an independent setting. Users' own language setting will override the factory default. When
	Deutsch	users set Reset to Yes, Language will not be changed.
	Italiano	
	Español	
	한국어	
	日本語	
	Русский	
	Português	
	简体中文	
	Bahasa Indonesia	
	Türkçe	
	(More languages coming soon)	
Transparency	0~5	Users can adjust Transparency in any mode.
OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.
Power Button	When set to OFF, users can press the power buturn off the monitor.	When set to OFF, users can press the power button to turn off the monitor.
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.

1st Level Menu	2nd Level Menu	Description
HDMI™ CEC	OFF	HDMI TM CEC (Consumer Electronics Control) supports Con Discharge Alice and Control May Visual Control Con Discharge Alice and Control May Visual Control Con Discharge Alice and Control Co
	ON	Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC-capable.
		If HDMI™ CEC is set to ON:
		The monitor will automatically power on when the CEC device is turned on.
		The CEC device will enter power saving mode when the monitor is turned off.
		 When Sony PlayStation®, Nintendo® Switch™, or Xbox Series X S console is connected, Game Mode and Pro Mode will be automatically set to default modes and can be adjusted to users' preferred modes later.
Info. On Screen	OFF	The information of the monitor status will be shown on
	ON	the right side of the screen.
Audio Volume	0-100	Users can adjust Audio Volume in any mode.
Reset	YES	Users can Reset and restore settings to original OSD
	NO NO	Default in any mode.

Specifications

Monitor	PR0 MP251 E2			
Size	24.5 inch			
Curvature	Flat			
Panel Type	IPS			
Resolution	1920x1080 (FHD)			
Aspect Ratio	16:9			
Brightness	Typical SDR 300 nits			
Contrast Ratio	1500:1			
Refresh Rate	120Hz			
Response Time	1ms (MPRT)			
1/0	• 1 x D-Sub Port			
	• 1 x DisplayPort			
	• 1 x HDMI™ Connector			
	• 1 x Headphone Jack			
View Angles	178°(H) , 178°(V)			
DCI-P3*/ sRGB	79% / 99%			
Surface Treatment	Anti-glare			
Display Colors	16.7M, 8bits (6bits + Hi FRC)			
Speaker	2W x2			
Monitor Power Options	12V === 2.5A (Optional)			
	12V === 2.0A (Optional)			
External Power Supply**	Model: ADPC2045			
Power Input	100~240Vac, 50~60Hz, 0.75A			
Power Output	12V === 2.5A			
Adjustment (Tilt)	-5° ~ 20°			
Kensington Lock	Yes			
VESA Mounting	• Plate Type: 100 x 100 mm			
	Screw Type: M4 x 10 mm			
	Thread Diameter: 4 mm			
	• Thread Pitch: 0.7 mm			
	Thread Length: 10 mm			
Dimension (W x H x D)	556.9 x 413.9 x 188.2 mm			
Weight Net	2.70 kg			
Gross	4.90 kg			

Monitor		PRO MP251 E2	
Environment	Operating	• Temperature: 0°C to 40°C	
		Humidity: 20% to 90%, non-condensing	
		• Altitude: 0 ~ 5000m	
	Storage	• Temperature: -20°C to 60°C	
		Humidity: 10% to 90%, non-condensing	

^{*} Based on CIE1976 test standards.

^{**} External Power Supply may vary by country.

Preset Display Modes



All information is subject to change without prior notice.

Claudend	Resolution		Standard	Standard Default Mode		
Standard	Resolution		HDMI™	DP	D-Sub	
VGA	640x480	@60Hz	V	V	V	
		@67Hz	V	V	V	
		@72Hz	V	V	V	
		@75Hz	V	V	V	
Dos-Mode	720x480	@60Hz				
	720x576	@50Hz				
SVGA	800x600	@56Hz	V	V	V	
		@60Hz	V	V	V	
		@72Hz	V	V	V	
		@75Hz	V	V	V	
XGA	1024x768	@60Hz	V	V	V	
		@70Hz	V	V	V	
		@75Hz	V	V	V	
SXGA	1280x1024	@60Hz	V	V	V	
		@75Hz	V	V	V	
WXGA+	1440x900	@60Hz	V	V	V	
WSXGA+	1680x1050		V	V	V	
Full HD	1920x1080	@60Hz	V	V	V	
		@85Hz	V	V		
		@100Hz	V	V		
		@120Hz	V	V		
Video Timing Resolution	480P		V			
	576P		V			
	720P		V			
	1080P	@60Hz	V			
	1080P	@120Hz	V			

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- · Avoid using any video extension cables.
- · Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

 TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.



- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828

www.msi.com

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, \mathbb{N}^2 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

 
As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.

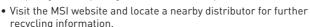



Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice

msi MsI 微星





Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.



The terms HDMI™, HDMI™ High-Definition Multimedia Interface, HDMI™ Trade dress and the HDMI™ Logos are trademarks or registered trademarks of HDMI™ Licensing Administrator, Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.