

# **Dell Keyboard**


## **for Latitude 7030 Rugged Extreme Tablet**


### **User's Guide**


Rugged Tablet Model: Latitude 7030  
Regulatory Model: T18GKYBL

 **DELL**Technologies

# Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your computer.

 **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

**Copyright © 2023 Dell Inc. or its subsidiaries. All rights reserved.** Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.


September 2023

Rev. A00

# Contents

<b>Features</b> . . . . .	<b>4</b>
<b>Setting up the keyboard</b> . . . . .	<b>5</b>
Removing the tablet . . . . .	6
<b>Keyboard shortcuts</b> . . . . .	<b>8</b>
<b>Rugged Control Center</b> . . . . .	<b>9</b>
Customizing Keyboard Shortcuts . . . . .	9
Creating Keyboard Macros . . . . .	12
Configuring the keyboard backlight . . . . .	14
<b>Troubleshooting</b> . . . . .	<b>16</b>
<b>Warranty information</b> . . . . .	<b>16</b>
Limited warranty and return policies . . . . .	16

# Features

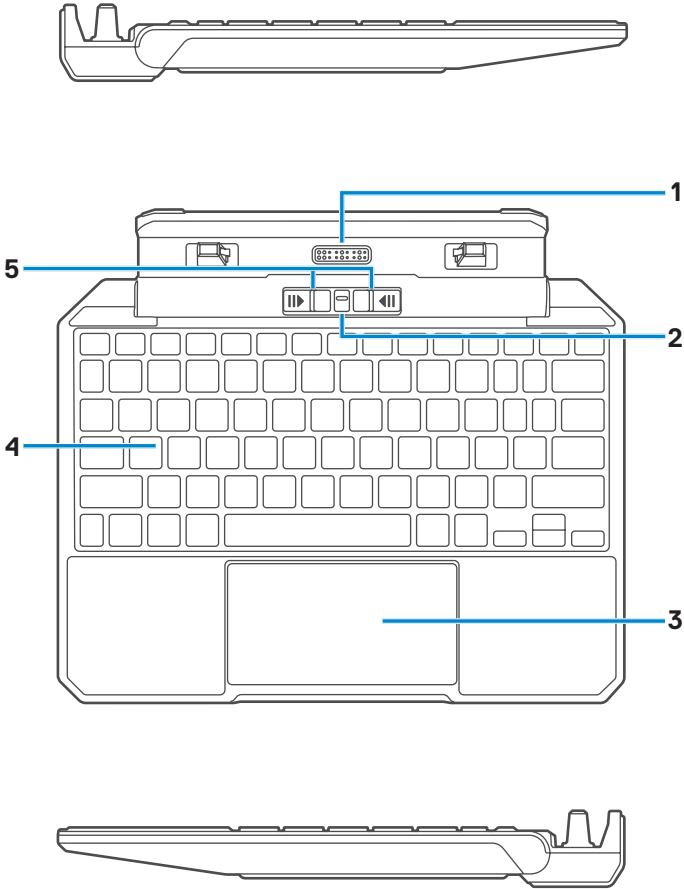


1. Docking pogo connectors
2. Tablet lock
3. Clickpad
4. Keyboard
5. Tablet release sliders


# Setting up the keyboard

**⚠ WARNING:** Before setting up the keyboard, read the safety information that shipped with the keyboard and tablet. For more information, see [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).


1. Open the hinge on the keyboard to a fully open angle.

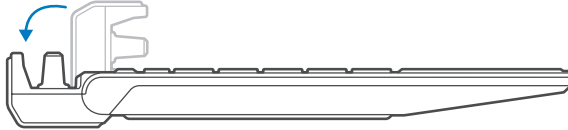

2. Insert the tablet into the compartment adjacent to the hinge, ensuring that the alignment pegs on the keyboard align with the corresponding ports on the bottom side of the tablet until they firmly lock into position.

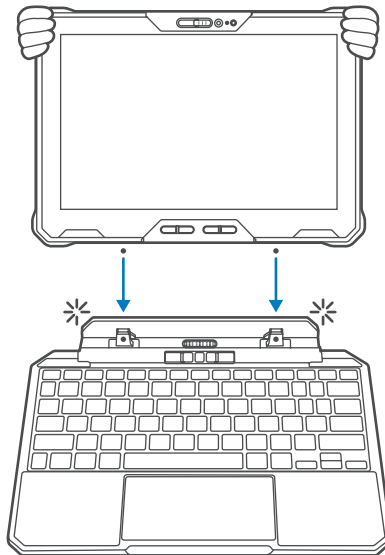


3. Slide the tablet lock upwards into the lock position that is optional.

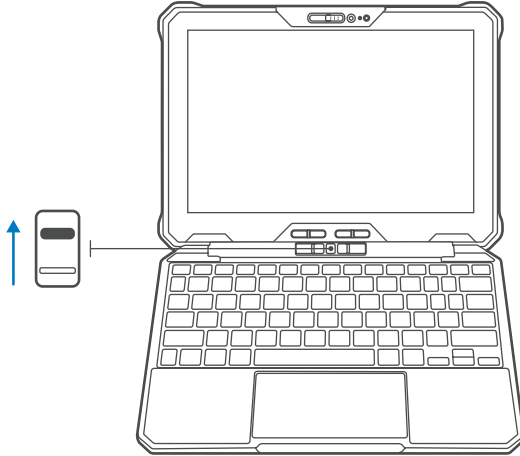


## Removing the tablet

1. If the tablet lock is currently in the locked position, slide it downward to unlock it.

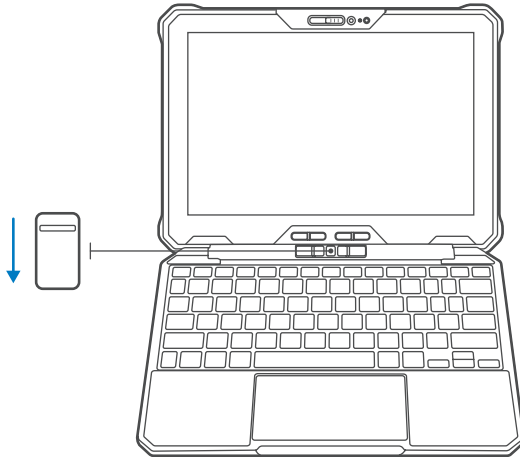


2. Simultaneously press and slide both tablet release sliders inward while lifting the tablet out of the hinge.

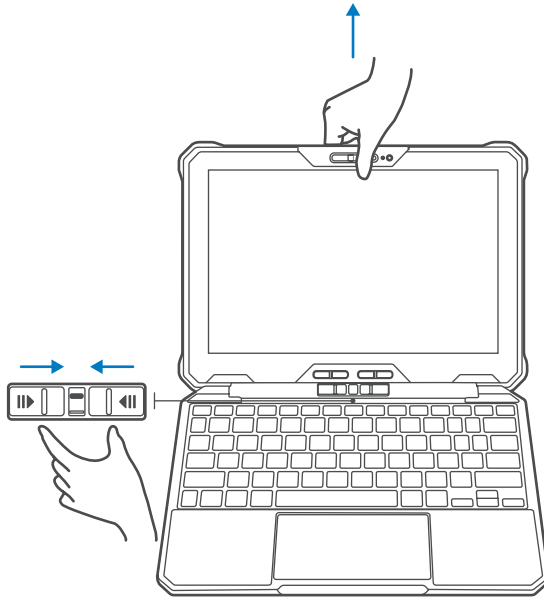

# Keyboard shortcuts

The following table is a list of shortcuts available on the keyboard.

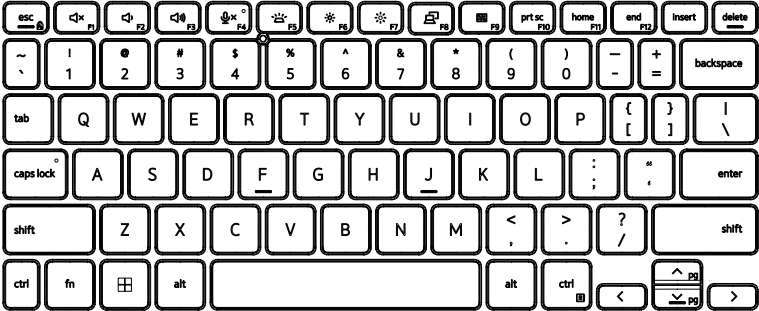


Function Key	Result
F1	Mute audio
F2	Decrease volume
F3	Increase volume
F4	Mute microphone
F5	Keyboard backlight brightness
F6	Decrease screen brightness
F7	Increase screen brightness
F8	Switch to external display
F9	Scroll lock
F10	Print screen
F11	Home
F12	End
Fn + Esc	Toggle Fn-key lock


Additional keyboard shortcuts can be customized through the Rugged Control Center application on the Latitude 7030 Rugged Extreme Tablet. For more information on the Rugged Control Center application, see “**Rugged Control Center**”.



# Rugged Control Center

Rugged Control Center is an application on the Latitude 7030 Rugged Extreme Tablet that allows you to customize keyboard shortcuts and configure the keyboard backlight.

 **NOTE:** If you cannot find the Rugged Control Center on the tablet, utilize the search function within the operating system to search for **Rugged Control Center**.

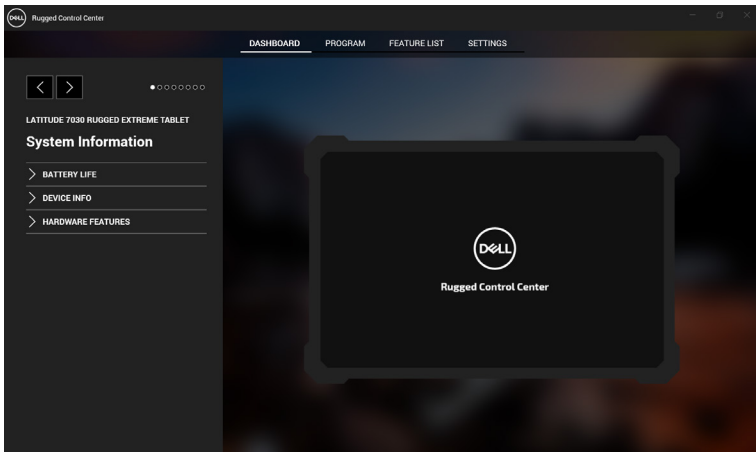

## Customizing Keyboard Shortcuts


You can customize the following key combinations on your keyboard as shortcuts for various actions: **Fn + Q**, **Fn + W**, **Fn + E**, **Fn + T**, **Fn + A**, **Fn + D**, **Fn + F**, and **Fn + G**.

You can select actions such as enabling selected tools or modes, opening selected applications, designated websites, system menus, or running a saved keyboard macro.


To customize any of the above-mentioned key combinations:

1. Launch **Rugged Control Center**.


2. Tap or click **PROGRAM**.

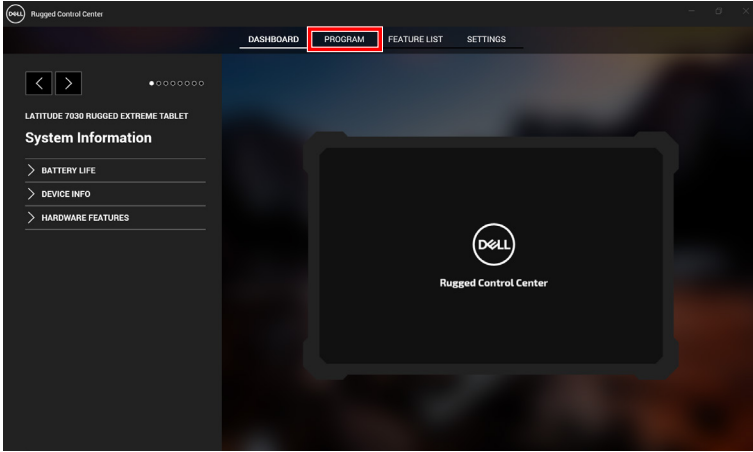


3. Tap or click  on the **Keyboard Shortcuts** option.

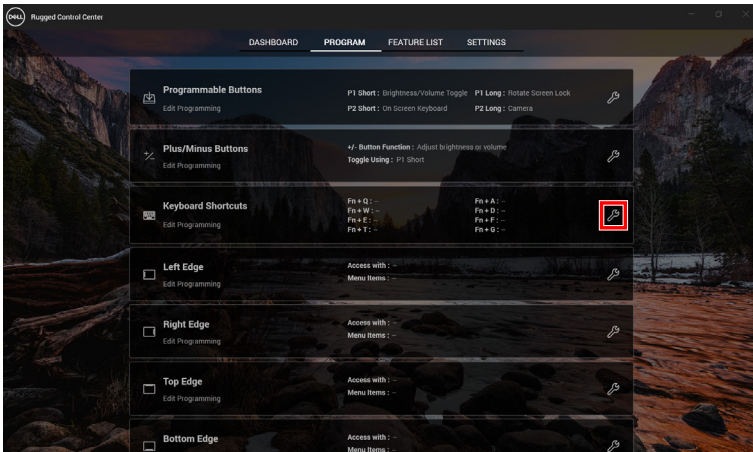

- Use the following methods to customize a key combination:
  - Tap or click the drop-down menu, and select the required option.
  - Go to **FEATURE LIST**, and drag and drop the required option to the keyboard shortcut section.

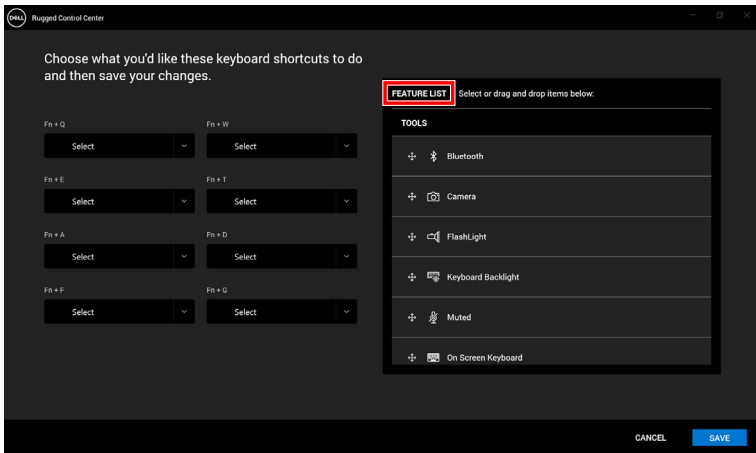


- Tap or click **SAVE**.

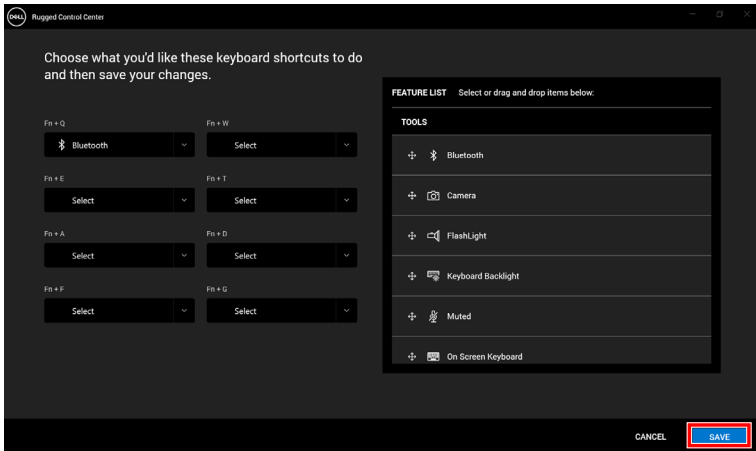


# Creating Keyboard Macros

A keyboard macro is a sequence of keystrokes that can be saved and then repeated on command through a keyboard shortcut. To save a keyboard macro:


1. Dock your tablet onto the keyboard.
2. Follow the steps in the **Customizing Keyboard Shortcuts** section to enter the **Keyboard Shortcuts** menu.
3. Navigate to the **KEYBOARD MACROS** section within the **FEATURE LIST** sub-menu, and then tap or click **ADD KEYBOARD MACRO**.

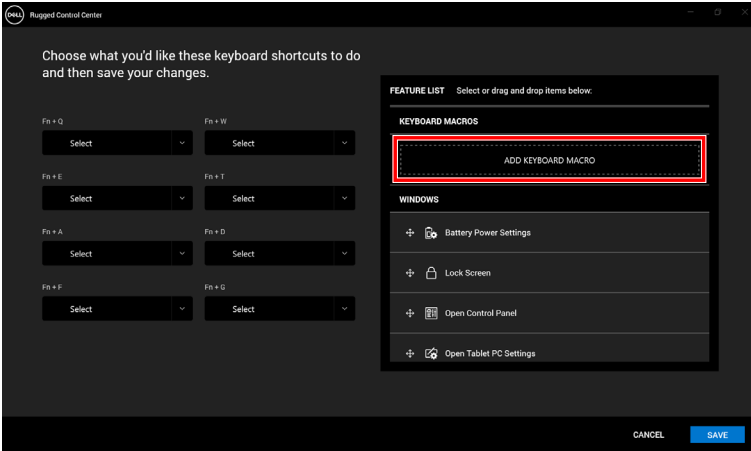

4. Tap or click **RECORD**.

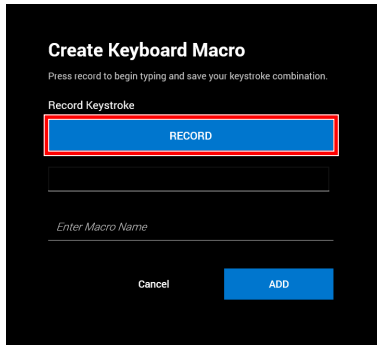

5. Enter the keyboard combination and click **Stop**.

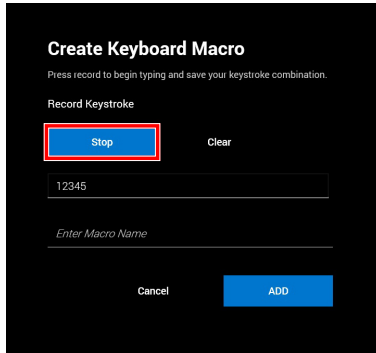

**Create Keyboard Macro**  
Press record to begin typing and save your keystroke combination.

Record Keystroke


Stop Clear

12345

Enter Macro Name

Cancel ADD

6. Enter the keyboard macro name in the **Enter Macro Name** field.

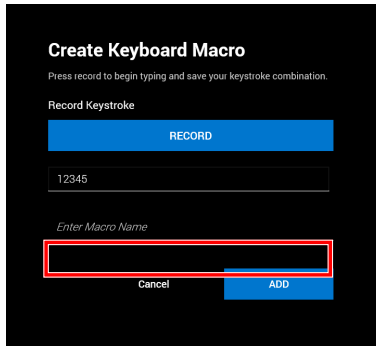

**Create Keyboard Macro**  
Press record to begin typing and save your keystroke combination.

Record Keystroke


RECORD

12345

Enter Macro Name

Cancel ADD

7. Tap or click **ADD**.

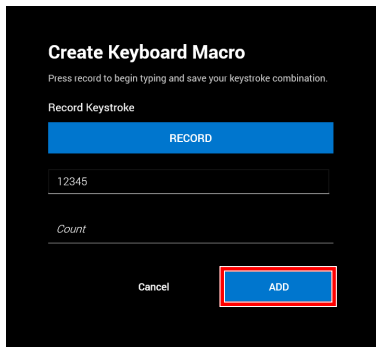

**Create Keyboard Macro**  
Press record to begin typing and save your keystroke combination.

Record Keystroke

RECORD

12345

Count


Cancel ADD

Once you have created the macro, you can set it as a keyboard shortcut by following the steps in the **Customizing Keyboard Shortcuts** section.


# Configuring the keyboard backlight

To configure the keyboard backlight:


1. Launch **Rugged Control Center**.
2. Tap or click **SETTINGS**.

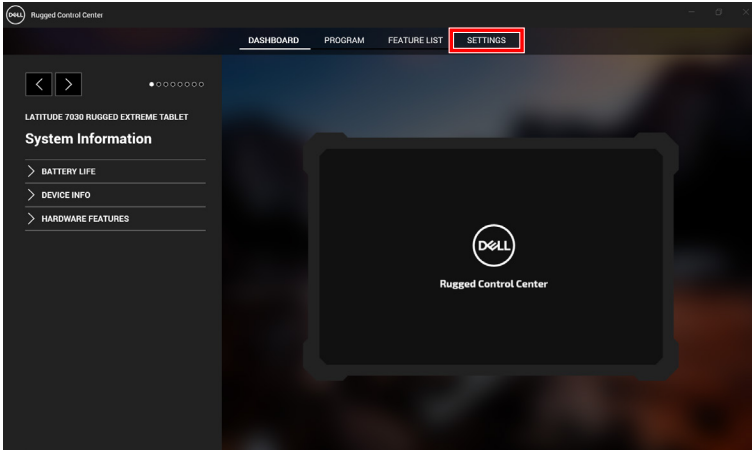

3. Tap or click **KEYBOARD BACKLIGHT**.

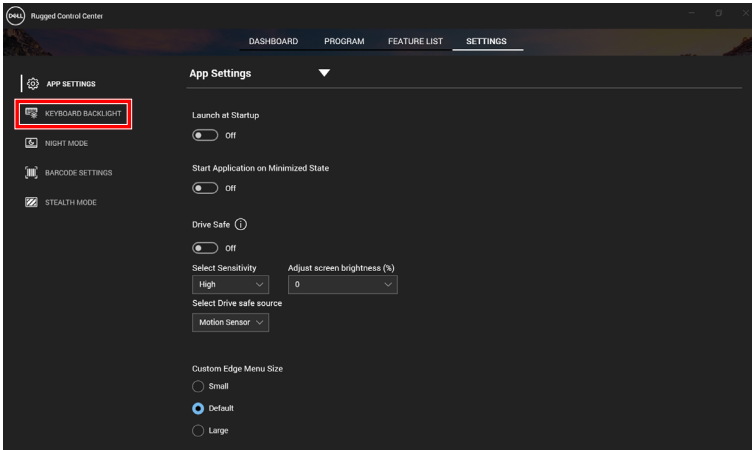


The following options are available to configure the keyboard backlight:

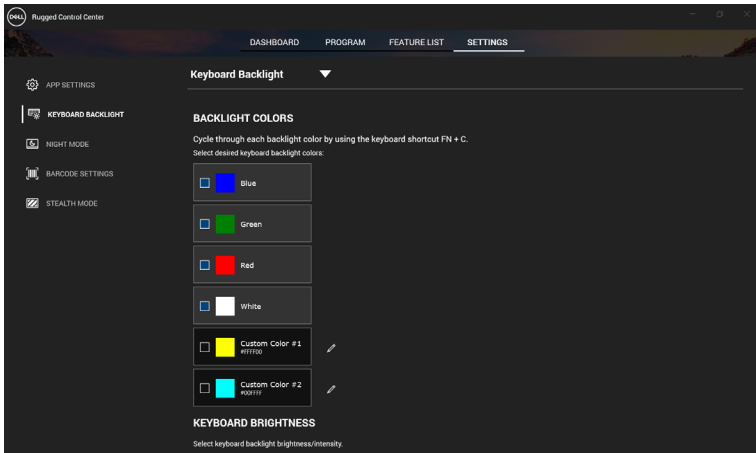

### BACKLIGHT COLORS

Allows you to select up to six colors for the keyboard backlight to switch through when you press the **Fn + C**.

- Select the checkbox next to each color to toggle between the colors.
- Tap or click  to create a custom color for the keyboard backlight.


### KEYBOARD BRIGHTNESS

Allows you to select the brightness level of the keyboard backlight.

### TIME OUT

Allows you to select the amount of idle time before the keyboard backlight automatically turns off based on type of the power supply.

# Troubleshooting

 **NOTE:** This keyboard is compatible with specific Dell tablets. For a list of supported devices, see <https://www.dell.com>.

Problem	Possible solutions
The keyboard is not functioning	<b>1.</b> Undock and then re-dock the keyboard
The buttons are not working	<b>2.</b> Check if anything is blocking the connectors on the keyboard and/or tablet
The clickpad is not responding	<b>3.</b> Check for any damaged pins, dirt etc. on the connectors. Clean and reconnect the keyboard <b>4.</b> Restart the tablet

## Warranty information

### Limited warranty and return policies

Dell-branded products carry a one-year limited hardware warranty. If purchased together with a Dell computer, it will follow the computer's warranty.