



1/2-Slot Charging via USB-C

Charge the device(s) using a Samsung 25W PD Charger. Plug the USB-C cable from the charger into the side of the charging cradle for 1-slot cradles or the back for 2-slot cradles.(A)

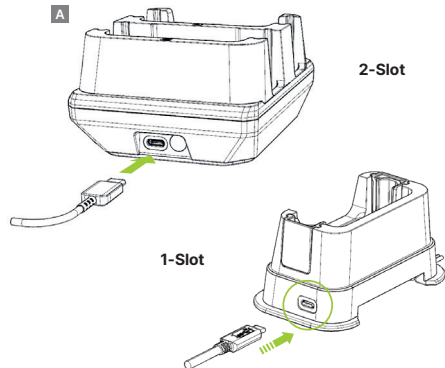

10-Slot Charging via DC Connector

Use the 12V/10A DC power adaptor to charge multiple devices.(B)

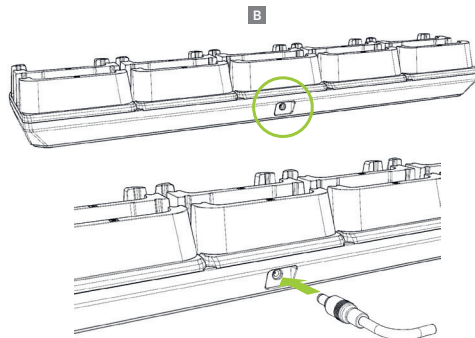

Visit our website for more information



100 Village Blvd Ste 300 Princeton, NJ 08540
+1 609-256-4700 [p](mailto:info@koamtac.com) | +1 609-228-4373 [f](http://www.koamtac.com)
info@koamtac.com | www.koamtac.com



KOAMTAC 1SCC/2SCC/10SCC Base Charging Cradle Mini Guide




* All pictures shown are for illustration purpose only.
Actual product may vary.

For details on warranty, certifications, and legal compliance, please refer to koamtac.com and the Reference Manual.

Available Device Spacers



 
XC6P-BASIC Spacer
For XCover6 Pro



XC6P-SC Spacer
For XCover6 Pro with Smartcase



 XC6P-SC-EXTBAT Spacer
For XCover6 Pro with Smartcase + Smartcase Extended Battery Pack



SKX6P-BOOT Spacer
For SKX6Pro with Protective Boot



SKX6P-INSERT Spacer
For SKX6Pro without Protective Boot




SKX6P-PISTOL-NB Spacer
For SKX6Pro Pistol Grip without Protective Boot



SKX6P-PISTOL-BOOT Spacer
For XCover6 Pro Pistol Grip with Protective Boot



 XC7-BASIC Spacer
For XCover7



KDC1000-SXC7 Spacer
For KDC1000/1100 XCover7



XC7-PISTOL Spacer
For KDC1000/1100 XCover7 Pistol Grip

 


iPhone 15(P) Spacer
For KDC1000/1100 iPhone 15/15 Pro




iPhone-PISTOL Spacer
For KDC1000/1100 iPhone Pistol Grip

Available Battery Spacers



 
BAT-XC6P Spacer
For XCover6 Pro Genuine Spare Battery



BAT-SKX Spacer
For SKX6Pro 2000mAh Extended Battery

Installing Spacers


1. Grip the spacer on the outsides and press down into the cradle. Or, press the top of the spacer until you hear a click. (A)

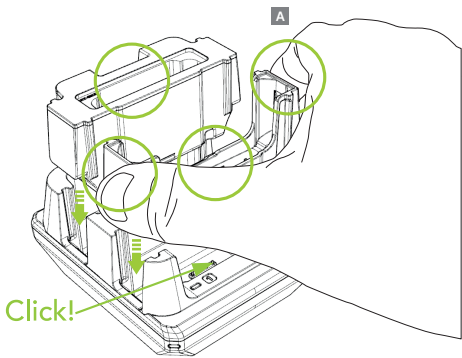


Removing Spacers

Device Spacers: Put your finger inside and against the side of the spacer, then lift the spacer out of the cradle. (B)

Battery Spacers: Remove the spacer by gripping the spacer on the outsides and lifting it up. (C)

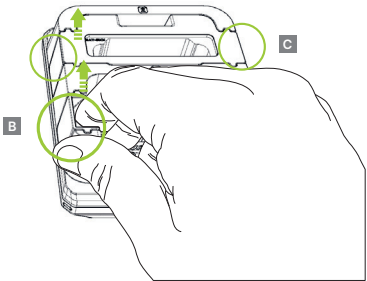


Cradle Power Status LED

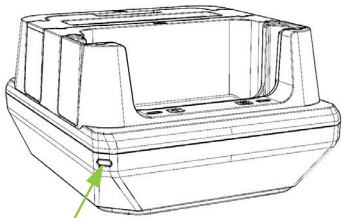

Main Power Status LED

Green : Always on when the cradle is powered on

Charging Status LED

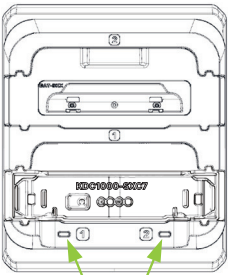

Status LED

Green : Blinks 3 times then stays lit while the cradle is powered on.

Green: Fully charged
Orange: Charging
Blinking Red: Charging Issue