

# Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

PB14250/PB14250 2-in-1

(Intel Core Ultra 200U Series/Intel Core 100U and  
200U Series)

Owner's Manual

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

<b>Chapter 1: Views of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1</b>	<b>8</b>
Right	8
Left	8
Top	10
Front	11
Bottom	12
Locate the Service Tag or Express Service Code label of your computer	12
Modes	13
Battery-status light	15
<b>Chapter 2: Set up your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1</b>	<b>16</b>
<b>Chapter 3: Specifications of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1</b>	<b>18</b>
Dimensions and weight	18
Processor	18
Chipset	19
Operating system	19
Memory	19
External ports and slots	20
Internal slots	21
Ethernet	21
Wireless module	21
WWAN module	22
Audio	23
Keyboard	24
Keyboard shortcuts of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1	24
Storage	26
Camera	26
Touchpad	27
Power adapter	27
Power adapter requirements (for computers shipped with 3-cell, 45 Wh battery)	28
Power adapter requirements (for computers shipped with 3-cell, 55 Wh battery)	28
Battery	29
Power requirements (for computers shipped with 3-cell, 45 Wh battery)	30
Power requirements (for computers shipped with 3-cell, 55 Wh battery)	31
Display	31
Fingerprint reader (optional)	33
GPU—Integrated	33
Multiple display support matrix	34
Hardware security	34
Smart-card reader	34
Contactless smart card reader	34
Contacted smart card reader	38
Operating and storage environment	39

<b>Chapter 4: Working inside your computer.....</b>	<b>40</b>
Safety instructions.....	40
Before working inside your computer.....	40
Safety precautions.....	43
Electrostatic discharge—ESD protection.....	43
ESD Field Service kit .....	44
Transporting sensitive components.....	45
After working inside your computer.....	45
BitLocker.....	45
Recommended tools.....	46
Screw list.....	46
Major components of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.....	47
<b>Chapter 5: Removing and installing Customer Replaceable Units (CRUs).....</b>	<b>50</b>
SIM-card tray.....	50
Removing the SIM-card tray.....	50
Installing the SIM-card tray.....	51
Base cover.....	52
Removing the base cover.....	52
Installing the base cover.....	55
Battery.....	58
Rechargeable Li-ion battery precautions.....	58
Removing the battery.....	58
Installing the battery.....	59
Battery cable.....	60
Removing the battery cable.....	60
Installing the battery cable.....	61
Memory module.....	62
Removing the memory module.....	62
Installing the memory module .....	63
Wireless Wide Area Network (WWAN) card.....	64
Removing the WWAN card.....	64
Installing the WWAN card.....	65
Solid State Drive (SSD).....	67
Removing the M.2 2230 solid state drive (SSD).....	67
Installing the M.2 2230 solid state drive (SSD) .....	68
Removing the M.2 2280 solid state drive (SSD) .....	68
Installing the M.2 2280 solid state drive (SSD).....	69
Wireless Local Area Network (WLAN) card.....	70
Removing the WLAN card.....	70
Installing the WLAN card.....	71
Speakers.....	72
Removing the speakers.....	72
Installing the speakers.....	73
<b>Chapter 6: Removing and installing Field Replaceable Units (FRUs).....</b>	<b>75</b>
Fan and heat-sink assembly.....	75
Removing the fan and heat-sink assembly.....	75

Installing the fan and heat-sink assembly.....	76
USH board.....	78
Removing the USH board.....	78
Installing the USH board .....	79
Smart card reader.....	80
Removing the smart card reader .....	80
Installing the smart card reader .....	82
System board.....	84
Removing the system board.....	84
Installing the system board .....	86
Wireless Local Area Network (WLAN) antenna module.....	88
Removing the WLAN antenna module.....	88
Installing the WLAN antenna module.....	90
USB Type-C connector module.....	91
Removing the USB Type-C connector module.....	91
Installing the USB Type-C connector module.....	92
I/O board.....	93
Removing the I/O board.....	93
Installing the I/O board.....	95
Power button with optional fingerprint reader.....	97
Removing the power button with optional fingerprint reader.....	97
Installing the power button with optional fingerprint reader.....	98
Display assembly.....	99
Removing the display assembly .....	99
Installing the display assembly .....	101
Display bezel.....	104
Removing the display bezel .....	104
Installing the display bezel .....	109
Display panel.....	111
Removing the display panel.....	111
Installing the display panel.....	114
Display hinge caps.....	117
Removing the display hinge caps .....	117
Installing the display hinge caps .....	118
RGB/IR camera.....	120
Removing the RGB/IR camera.....	120
Installing the RGB/IR camera.....	121
Display cable for RGB/IR camera.....	122
Removing the display cable for RGB/IR camera .....	122
Installing the display cable for RGB/IR camera .....	123
MIPI camera.....	125
Removing the MIPI camera.....	125
Installing the MIPI camera.....	126
Display cable for MIPI camera.....	127
Removing the display cable for MIPI camera.....	127
Installing the display cable for MIPI camera.....	128
Middle-board cable.....	129
Removing the middle-board cable .....	129
Installing the middle-board cable .....	130
Middle board.....	132

Removing the middle board .....	132
Installing the middle board .....	132
Display back-cover and antenna assembly.....	133
Removing the display back-cover and antenna assembly .....	133
Installing the display back-cover and antenna assembly.....	135
Keyboard.....	136
Removing the keyboard.....	136
Installing the keyboard.....	138
Palm-rest assembly.....	141
Removing the palm-rest assembly.....	141
Installing the palm-rest assembly.....	142
<b>Chapter 7: Software.....</b>	<b>145</b>
Operating system.....	145
Drivers and downloads.....	145
<b>Chapter 8: BIOS Setup.....</b>	<b>146</b>
Entering BIOS Setup program.....	146
Navigation keys.....	146
F12 One Time Boot menu.....	146
View Advanced Setup options.....	147
View Service options.....	147
System setup options.....	147
Updating the BIOS.....	163
Updating the BIOS in Windows.....	163
Updating the BIOS in Linux and Ubuntu.....	164
Updating the BIOS using the USB drive in Windows.....	164
Updating the BIOS from the One-Time boot menu.....	164
System and setup password.....	164
Assigning a System Setup password.....	165
Deleting or changing an existing system password or setup password.....	165
Clearing system and setup passwords.....	166
<b>Chapter 9: Troubleshooting.....</b>	<b>167</b>
Handling swollen rechargeable Li-ion batteries.....	167
Dell SupportAssist Pre-boot System Performance Check diagnostics.....	167
Running the SupportAssist Pre-Boot System Performance Check.....	168
Built-in self-test (BIST).....	168
(Motherboard Built-In Self-Test) M-BIST.....	168
Logical Built-in Self-test (L-BIST).....	169
LCD Built-in Self-Test (LCD-BIST).....	169
System-diagnostic lights.....	169
Recovering the operating system.....	170
Real-Time Clock (RTC Reset).....	171
Backup media and recovery options.....	171
Network power cycle.....	171
Drain flea power (perform hard reset).....	171
<b>Chapter 10: Getting help and contacting Dell.....</b>	<b>173</b>

**Chapter 11: Revision history..... 174**

# Views of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

## Right

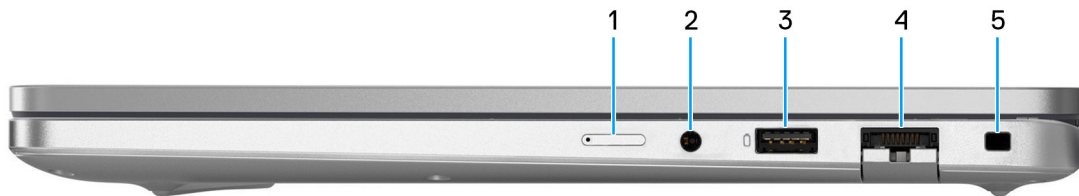


Figure 1. Right view

### 1. Nano-SIM card slot (optional)

Insert a SIM card to connect to a mobile broadband network.

**NOTE:** Availability of the SIM card slot depends on the region and configuration ordered.

### 2. Global headset jack

Connect headphones or a headset (headphone and microphone combo).

### 3. USB 3.2 Gen 1 (5 Gbps) port with PowerShare

Connect devices such as external storage devices and printers. It provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.

**NOTE:** If your computer is turned off or in a hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.

### 4. Optional RJ45 ethernet (1 Gbps) port

Connect an RJ45 ethernet cable from a router or a broadband modem for network or Internet access, with a transfer rate of 10/100/1000 Mbps (maximum 1 Gbps).

### 5. Security-cable slot (wedge-shaped)

Connect a security cable to prevent unauthorized movement of your computer.

## Left

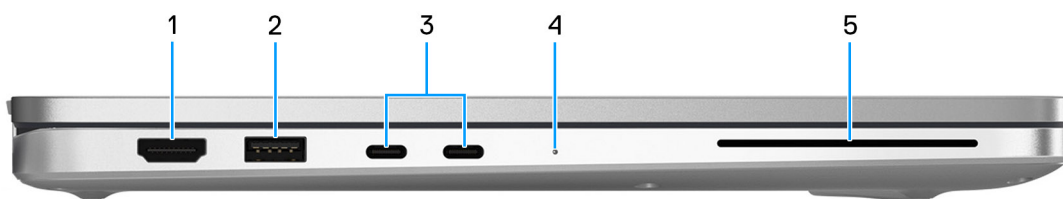


Figure 2. Left view

### 1. **HDMI 2.1 Transition-minimized differential signaling (TMDS) port**

Connect to a TV, external display or another HDMI-in enables device. Provides video and audio output.

### 2. **USB 3.2 Gen 1 (5 Gbps) port**

Connect devices such as external storage devices and printers. Provides data transfer rate of up to 5 Gbps.

### 3. **Thunderbolt 4 (40 Gbps) with DisplayPort Alt Mode/USB Type-C/USB4/Power Delivery**

Supports USB4, DisplayPort 2.1, Thunderbolt 4 and also enables you to connect to an external display using a display adapter. Provides data transfer rates of up to 40 Gbps for USB4 and Thunderbolt 4.

**NOTE:** You can connect a Dell Docking Station to the Thunderbolt 4 ports. For more information, search in the Knowledge Base Resource at [Dell Support Site](#).

**NOTE:** A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

**NOTE:** USB4 is backward compatible with USB 3.2, USB 2.0, and Thunderbolt 3.

**NOTE:** Thunderbolt 4 supports two 4K displays or one 8K display.

### 4. **Battery-status light**

Indicates the battery-charge status.

- White—Battery is charging.
- Solid yellow—Battery charge is low.
- Blinking yellow—Battery charge is critical.
- Off—Battery is fully charged.

### 5. **Smart card reader slot (optional)**

Using smart card provides authentication in corporate networks.

# Top

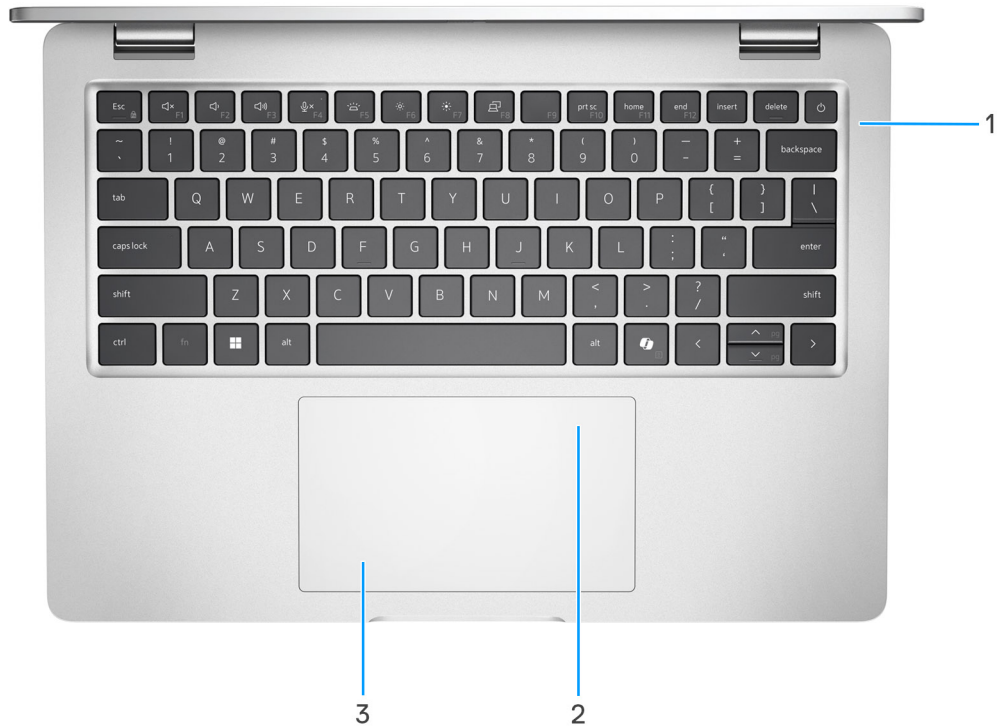


Figure 3. Top view

## 1. Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

**NOTE:** When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 10 seconds to force shut-down the computer.

**NOTE:** The power-status light on the power button is available only on computers without the fingerprint reader. Computers that are shipped with the fingerprint reader that is integrated on the power button will not have the power-status light on the power button.

If the power button has a fingerprint reader, place your finger on the power button to log in.

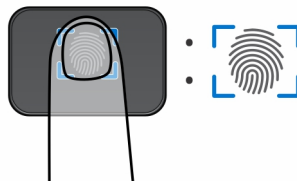


Figure 4. Active area of the fingerprint reader

**NOTE:** The highlighted area indicates the actual active fingerprint reader area, and the image is for illustration purposes only.

**NOTE:** You can customize power-button behavior in Windows. For more information, see [Manuals at Dell Support Site](#).


**2. NFC/Contactless smart card reader (optional)**

Enables NFC-enabled devices to communicate with your computer.

**3. Touchpad**

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two fingers tap to right-click.

## Front

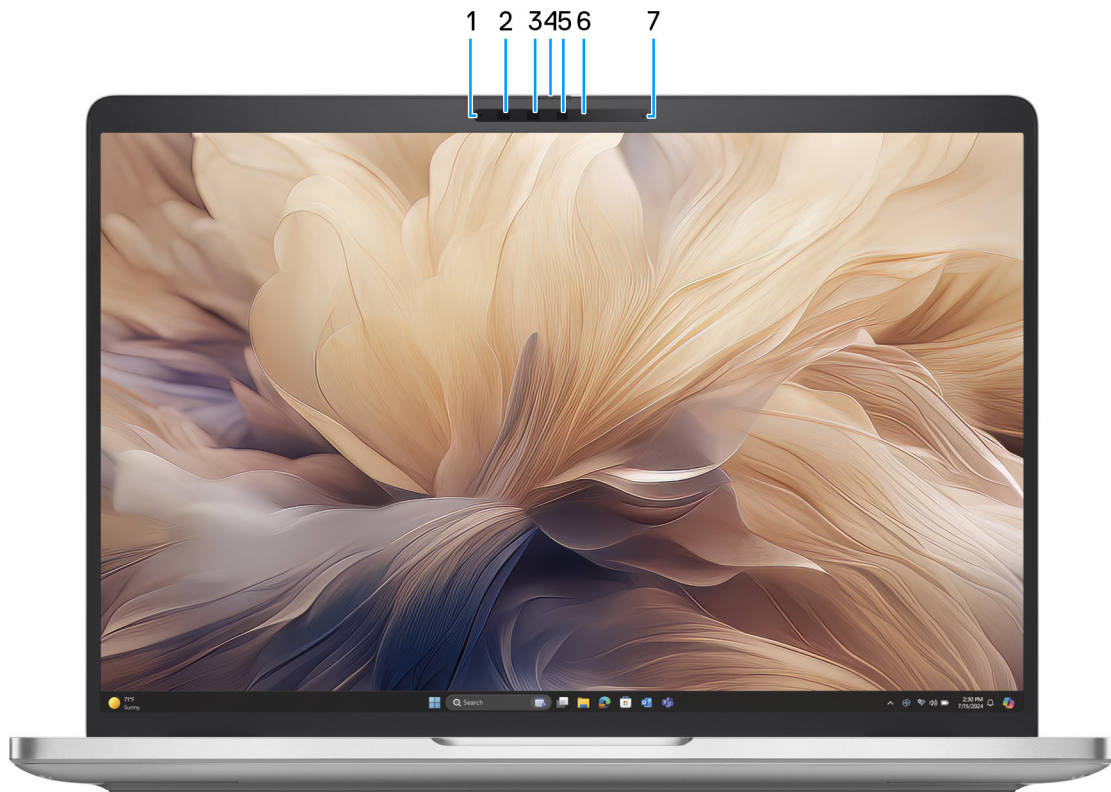

**Figure 5. Front view**

**1. Left microphone**

Provides digital sound input for audio recording and voice calls.

**2. Infrared camera (optional)**

Enhances security when paired with Windows Hello face authentication.

**3. Infrared emitter (optional)**

The infrared emitter emits infrared light, which enables the infrared camera to sense and track motion.

**4. Camera shutter**

Slide the privacy shutter to the left to access the camera lens.

**5. Camera**

A camera enables you to video chat, capture photos, and record videos.

**6. Camera-status light**

Turns on when the camera is in use.

**7. Right microphone**

Provides digital sound input for audio recording and voice calls.

# Bottom

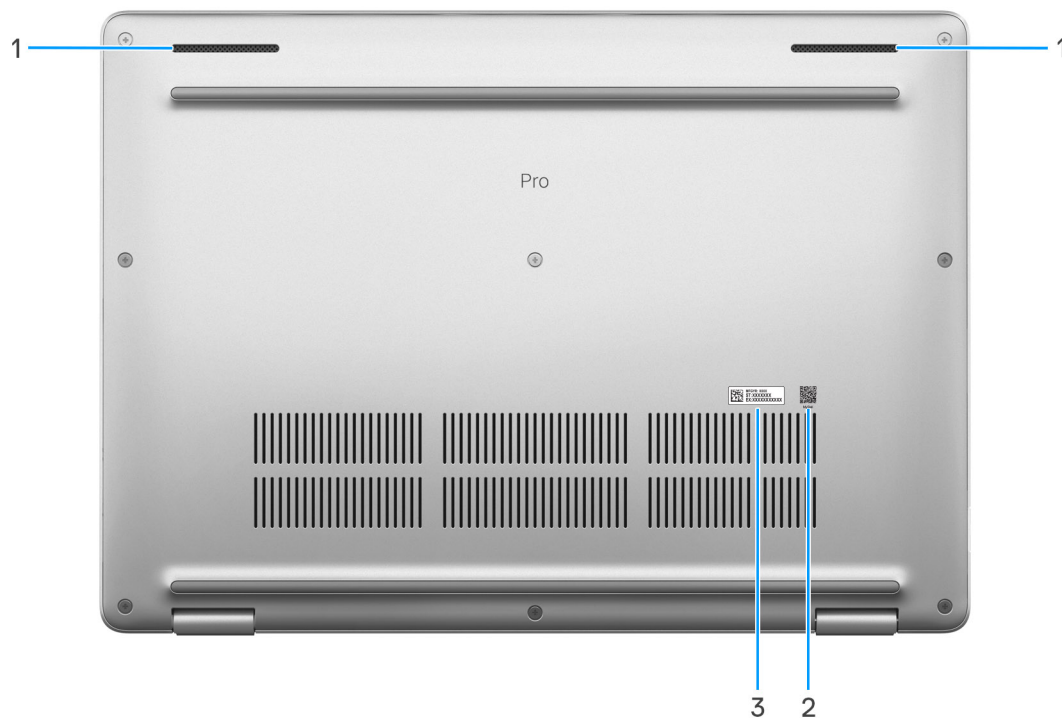


Figure 6. Bottom View

## 1. Speakers (2)

Provide audio output.

## 2. MyDell QR Code

MyDell is your hub for content personalized to your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1, including videos, articles, manuals, and easy access to support.


## 3. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

# Locate the Service Tag or Express Service Code label of your computer

The Service Tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information. The Express Service Code is a numeric version of the Service Tag.

For more information about how to find the Service Tag of your computer, search in the Knowledge Base Resource at the [Dell Support Site](#).

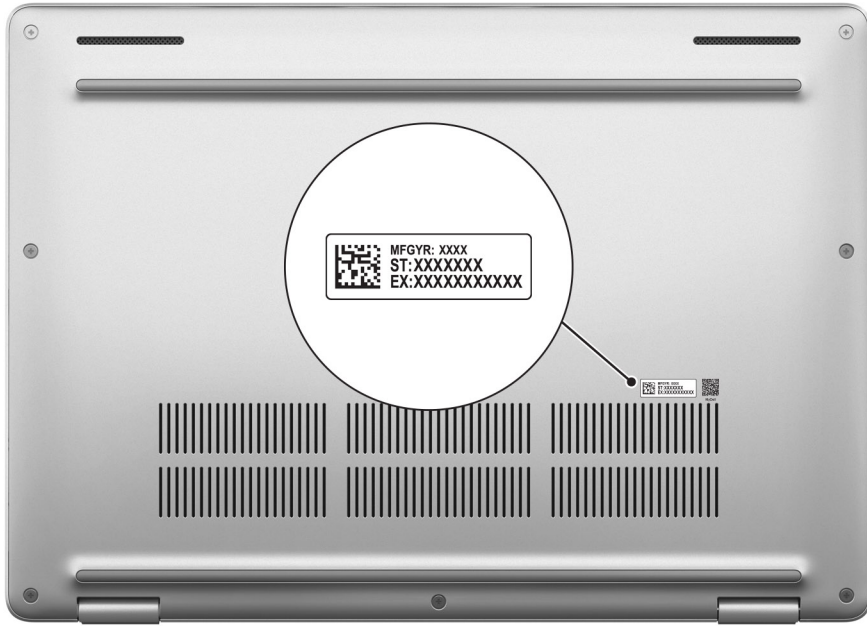

**Figure 7. Service Tag/Express Service Code location**

## Modes

The following modes are supported only on Dell Pro Plus 14 2-in-1 configuration.

### Notebook



**Figure 8. Notebook mode**

## Tablet



**Figure 9. Tablet Mode**

## Stand



**Figure 10. Stand mode**

## Tent



**Figure 11. Tent mode**

# Battery-status light

The following table lists the battery-status light of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 1. Battery-status light behavior**

Power source	LED behavior	System power state	Battery charge level
AC adapter	Off	S0 or S5	100%
AC adapter	Solid white	S0 or S5	< 100%
Battery	Off	S0 or S5	11-100%
Battery	Solid amber	S0 or S5	< 10%

- S0 (ON): The computer is turned on.
- S3 (Sleep): Screen is off and computer is in sleep mode.
- S4 (Hibernate): The computer consumes the least power in the Hibernate state than in the ON or OFF state. The computer is almost in the OFF state. The context data is written to a storage device, allowing you to resume from where you left after the computer is turned on.
- S5 (OFF): The computer is in a shutdown state.

# Set up your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

## About this task

**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## Steps

1. Connect the power adapter and press the power button.

**Figure 12. Connect the power adapter and press the power button.**



**NOTE:** The battery may go into power-saving mode during shipment to conserve charge on the battery. Ensure that the power adapter is connected to your computer when it is turned on for the first time.

2. Finish the operating system setup.

### For Ubuntu:

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, search in the Knowledge Base Resource at [Dell Support Site](#).

### For Windows:

Follow the on-screen instructions to complete the setup. When setting up, it is recommended that you:





- Connect to a network for Windows updates.

**NOTE:** If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the Internet, sign-in with an existing Microsoft account or create an account. If not connected to the Internet, create an offline account.

- On the **Support and Protection** screen, enter your contact details.
3. Locate and use Dell apps from the Windows Start menu—Recommended.

**Table 2. Locate Dell apps**

Resources	Description
	<p>Dell Optimizer is an application that is designed to enhance computer performance and productivity by optimizing settings for power, battery, display, collaboration touchpad, and presence detection. It also provides access to applications purchased with your new computer.</p> <p>For more information, see Dell Optimizer User's Guide at <a href="#">Dell Support Site</a>.</p>
	<p><b>Dell Product Registration</b></p> <p>Register your computer with Dell.</p>
	<p><b>Dell Help &amp; Support</b></p> <p>Access help and support for your computer.</p>
	<p><b>SupportAssist</b></p> <p>SupportAssist is a proactive and predictive technology that offers automated technical support for Dell computers. It proactively monitors both hardware and software, addressing performance issues, preventing security threats, and automating engagement with Dell Technical Support.</p> <p>For more information, see SupportAssist documentation at <a href="#">Dell Support Site</a>.</p> <p><b>NOTE:</b> In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p>

# Specifications of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

## Dimensions and weight

The following table lists the height, width, depth, and weight of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 3. Dimensions and weight**

Description	400 nits thin & light non-touch screen	300 nits touch screen and non-touch screen/400 nits touch screen and non-touch screen	2-in-1 300 nits touch screen	500 nits touch screen
Height:				
Front height	19.78 mm (0.78 in.)	19.50 mm (0.77 in.)	19.92 mm (0.78 in.)	19.50 mm (0.77 in.)
Rear height	19.77 mm (0.77 in.)	19.98 mm (0.79 in.)	20.17 mm (0.79 in.)	19.98 mm (0.79 in.)
Maximum height	19.95 mm (0.79 in.)	21.20 mm (0.83 in.)	20.25 mm (0.80 in.)	21.20 mm (0.83 in.)
Width	313.50 mm (12.34 in.)	313.50 mm (12.34 in.)	313.50 mm (12.34 in.)	313.50 mm (12.34 in.)
Depth	224 mm (8.82 in.)	224 mm (8.82 in.)	224 mm (8.82 in.)	224 mm (8.82 in.)
Weight <i>i</i> <b>NOTE:</b> The weight of your computer depends on the configuration ordered and manufacturing variability.	1.40 kg (3.10 lb)	1.53 kg (3.37 lb)	1.56 kg (3.45 lb)	1.50 kg (3.31 lb)

## Processor

The following table lists the details of the processors that are supported by your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 4. Processor**

Description	Option one	Option two	Option three	Option four	Option five	Option six	Option seven	Option eight	Option nine
Processor type	Intel Core Ultra 5 225U	Intel Core Ultra 5 235U	Intel Core Ultra 7 255U	Intel Core Ultra 7 265U	Intel Core 3 100U	Intel Core 5 120U	Intel Core 5 220U	Intel Core 7 150U	Intel Core 7 250U
Processor wattage	15 W	15 W	15 W	15 W	15 W	15 W	15 W	15 W	15 W

**Table 4. Processor (continued)**

Description	Option one	Option two	Option three	Option four	Option five	Option six	Option seven	Option eight	Option nine
Processor core count	12	12	12	12	6	10	10	10	10
Processor thread count	14	14	14	14	8	12	12	12	12
Processor speed	Up to 4.8 GHz	Up to 4.9 GHz	Up to 5.2 GHz	Up to 5.3 GHz	Up to 4.7 GHz	Up to 5 GHz	Up to 5 GHz	Up to 5.4 GHz	Up to 5.4 GHz
Processor cache	12 MB	12 MB	12 MB	12 MB	10 MB	12 MB	12 MB	12 MB	12 MB
Integrated graphics	Intel Graphics	Intel Graphics	Intel Graphics	Intel Graphics	Intel Graphics	Intel Graphics	Intel Graphics	Intel Graphics	Intel Graphics

## Chipset

The following table lists the details of the chipset that is supported by your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 5. Chipset**

Description	Option one	Option two
Processors	Intel Core Ultra 200U series	Intel Core 100U and 200U series
Chipset	Integrated in the processor	Integrated in the processor
DRAM bus width	64-bit	64-bit
Flash EPROM	64 MB	64 MB
PCIe bus	Up to Gen4	Up to Gen4

## Operating system

Your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1 supports the following operating systems:

- Windows 11 Pro
- Windows 11 Home
- Ubuntu Linux 24.04

**NOTE:** If you downgrade your computer from Windows 11 to Windows 10 22H2, Dell Technologies support will follow the Microsoft Windows 10 End of Support plan.

## Memory

The following table lists the memory specifications that are supported by your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 6. Memory specifications**

Description	Values
Memory slots	Two SODIMM slots

**Table 6. Memory specifications (continued)**

Description	Values
Memory type	DDR5
Memory speed	<ul style="list-style-type: none"> <li>Intel Core Ultra 200U series: 5600 MT/s</li> <li>Intel Core 100U and 200U series: 5200 MT/s</li> </ul>
Maximum memory configuration	64 GB
Minimum memory configuration	8 GB
Memory size per slot	8 GB, 16 GB, 32 GB or 64 GB
Memory configurations supported	<ul style="list-style-type: none"> <li>8 GB: 1 x 8 GB, DDR5</li> <li>16 GB: 2 x 8 GB, DDR5</li> <li>16 GB: 1 x 16 GB, DDR5</li> <li>32 GB: 2 x 16 GB, DDR5</li> <li>32 GB: 1 x 32 GB, DDR5</li> <li>64 GB: 2 x 32 GB, DDR5</li> </ul>

## External ports and slots

The following table lists the external ports and slots on your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.


**Table 7. External ports and slots**

Description	Values
Network port	One optional RJ45 ethernet port (1 Gbps)
USB ports	<ul style="list-style-type: none"> <li>Thunderbolt 4.0 (40 Gbps) with DisplayPort Alt Mode/USB Type-C/USB4/Power Delivery</li> </ul> <p><b>i</b> <b>NOTE:</b> You can connect a Dell Docking Station to these ports. For more information, search in the Knowledge Base Resource at <a href="#">Dell Support Site</a>.</p> <ul style="list-style-type: none"> <li>One USB 3.2 Gen 1 (5 Gbps) port with PowerShare</li> <li>One USB 3.2 Gen 1 (5 Gbps) port</li> </ul>
Audio port	One global headset jack
Video port(s)	One HDMI 2.1 Transition-minimized differential signaling (TMDS) port
Media-card reader	One smart card reader slot (optional)
Power-adaptor port	Supported through the USB Type-C ports
Security-cable slot	One wedge-shaped lock slot
SIM-card slot	Nano-SIM card slot (optional)

# Internal slots

The following table lists the internal slots of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 8. Internal slots**

Description	Values
M.2	<ul style="list-style-type: none"> <li>One M.2 Key-M (2230/2280) slot for solid state drive</li> <li>One M.2 2230 Key-E slot for Wi-Fi and Bluetooth combo card</li> <li>One M.2 3042/3052 for WWAN card (optional)</li> </ul> <p> <b>NOTE:</b> To learn more about the features of different types of M.2 cards, search <a href="#">Dell Support Site</a>.</p>

# Ethernet

The following table lists the wired ethernet Local Area Network (LAN) specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 9. Ethernet specifications**

Description	Values
Model	<ul style="list-style-type: none"> <li>Intel I219-LM (1000BASE-T) for vPRO configurations</li> <li>Intel I219-V (1000BASE-T) for non-vPRO configurations</li> </ul>
Transfer rate	10/100/1000 Mbps


# Wireless module

The following table lists the Wireless Local Area Network (WLAN) modules that are supported on your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 10. Wireless module specifications**




Description	Option one	Option two
Model number	Intel Wi-Fi 7 BE201	Intel Wi-Fi 6E AX211
Transfer rate	Up to 5760 Mbps	Up to 2400 Mbps
Frequency bands supported	2.4 GHz/5 GHz/6 GHz	2.4 GHz/5 GHz/6 GHz
Wireless standards	<ul style="list-style-type: none"> <li>WiFi 802.11a/b/g</li> <li>Wi-Fi 4 (WiFi 802.11n)</li> <li>Wi-Fi 5 (WiFi 802.11ac)</li> <li>Wi-Fi 6E (WiFi 802.11ax)</li> <li>Wi-Fi 7 (WiFi 802.11be)</li> </ul>	<ul style="list-style-type: none"> <li>WiFi 802.11a/b/g</li> <li>Wi-Fi 4 (WiFi 802.11n)</li> <li>Wi-Fi 5 (WiFi 802.11ac)</li> <li>Wi-Fi 6E (WiFi 802.11ax)</li> </ul>
Encryption	<ul style="list-style-type: none"> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul>	<ul style="list-style-type: none"> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul>
Bluetooth wireless card	Bluetooth 5.4	Bluetooth 5.3

**Table 10. Wireless module specifications (continued)**

Description	Option one	Option two
 <b>NOTE:</b> The functionality of the Bluetooth wireless card may vary based on the operating system.		

## WWAN module

The following table lists the Wireless Wide Area Network (WWAN) modules that are supported in your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

-  **NOTE:** The WWAN module is available only on certain configurations and in certain regions.
-  **NOTE:** Availability of the eSIM feature on this module may vary depending on your region and the support that is offered by your mobile carrier.
-  **NOTE:** For instructions on how to setup SIM or eSIM connections on your computer, see the *SIM/eSIM Setup Guide for Windows* available with your product documentation at [Dell Support Site](#).

**Table 11. WWAN module specifications**

Description	Option one	Option two
Model number	DW5934e Qualcomm Snapdragon X72 Global 5G Modem	DW5826e Qualcomm Snapdragon SDX12 Global LTE-Advanced
Form factor	M.2 3052 Key-B	M.2 3042 Key-B
Host interface	PCIe Gen3	PCIe Gen3
Network standard	<ul style="list-style-type: none"> <li>• NR FR1 (Sub6) FDD/TDD</li> <li>• LTE FDD/TDD</li> <li>• WCDMA/HSPA+</li> <li>• GPS/GLONASS/Galileo/Beidou</li> </ul>	<ul style="list-style-type: none"> <li>• LTE FDD/TDD</li> <li>• WCDMA</li> <li>• GPS/BDS/GLONASS/Galileo/QZSS</li> </ul>
Transfer data rate	<ul style="list-style-type: none"> <li>• 5G NR: DL 4.14 Gbps/ UL 900 Mbps</li> <li>• LTE: DL 2.0 Gbps (CAT20)/UL 211 Mbps (CAT18)</li> <li>• UMTS: DL DC-HSPA+ Rel8:42 Mbps/UL 5.76 Mbps</li> </ul>	<ul style="list-style-type: none"> <li>• Up to 600 Mbps DL (CAT12)</li> <li>• Up to 150 Mbps UL</li> </ul>
Operating frequency bands	<ul style="list-style-type: none"> <li>• NR (n1, n2, n3, n5, n7, n8, n12, n13, n14, 18, n20, n25, n26, n28, n29, n30, n38, n40, n41, n48, n66, n67, n70, n71, n75, n76, n77, n78, n79, n91, n92, n93, n94)</li> <li>• LTE (B1, B2, B3, B4, B5, B7, B8, B12, B13, B14, B17, B18, B19, B20, B25, B26, B28, B29, B30, B32, B34, B38, B39, B40, B41, B42, B43, B46, B48, B66, B67, B68, B70, B71)</li> <li>• WCDMA/HSPA+ (1, 2, 4, 5, 8)</li> </ul>	<ul style="list-style-type: none"> <li>• LTE (B1, B2, B3, B4, B5, B7, B8, B12, B13, B14, B18, B19, B20, B25, B26, B28, B29, B32, B38, B39, B40, B41, B42, B43, B48, B66, B71)</li> <li>• WCDMA (1, 2, 4, 5, 6, 8, 9, 19)</li> </ul>
Power supply	DC 3.135 V to 3.63 V, typical 3.3 V	DC 3.135 V to 4.4 V, typical 3.3 V
SIM card	Supported through external SIM slot	Supported through external SIM slot
eSIM with dual SIM (DSSA)	Supported	Supported

**Table 11. WWAN module specifications (continued)**

Description	Option one	Option two
	<p><b>i</b> <b>NOTE:</b> The availability of eSIM functionality embedded on the module is dependent on the region and specific carrier requirements.</p>	<p><b>i</b> <b>NOTE:</b> The availability of eSIM functionality embedded on the module is dependent on the region and specific carrier requirements.</p>
Antenna diversity	Supported	Supported
Radio on/off	Supported	Supported
Wake on wireless WAN	Not supported	Supported
Operating temperature	<ul style="list-style-type: none"> <li>Normal operating temperature: –30°C to +70°C</li> <li>Extended operating temperature: –40°C to +85°C</li> <li>Storage temperature: –40°C to +85°C</li> </ul>	<ul style="list-style-type: none"> <li>Normal operating temperature: –30°C to +70°C</li> <li>Extended operating temperature: –40°C to +85°C</li> <li>Storage temperature: –40°C to +85°C</li> </ul>
Antenna connector	<ul style="list-style-type: none"> <li>WWAN Main Antenna X 1</li> <li>WWAN Diversity Antenna X 1</li> <li>4 x 4 MIMO Antenna x 2</li> </ul>	<ul style="list-style-type: none"> <li>WWAN Main Antenna X 1</li> <li>WWAN Diversity Antenna X 1</li> </ul>
<p><b>i</b> <b>NOTE:</b> For instructions to find your computer's International Mobile Equipment Identity (IMEI) number, search <a href="#">Dell Support Site</a>.</p>		

## Audio

The following table lists the audio specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 12. Audio specifications**

Description	Values
Audio controller	Cirrus Logic CS42L43
Stereo conversion	Supported
Internal audio interface	Soundwire interface
External audio interface	Global headset jack
Number of speakers	Two
Internal-speaker amplifier	Not supported
External volume controls	Keyboard shortcut controls
Speaker output:	
Average	2 W
Peak	2.5 W
Microphone	Digital-array microphones in camera assembly

# Keyboard

The following table lists the keyboard specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 13. Keyboard specifications**

Description	Values
Keyboard type	<ul style="list-style-type: none"> <li>Standard non-backlit keyboard</li> <li>Standard backlit keyboard</li> </ul>
Keyboard layout	QWERTY
Number of keys	<ul style="list-style-type: none"> <li>United States and Canada: 79 keys</li> <li>United Kingdom: 80 keys</li> <li>Japan: 83 keys</li> <li>French Canadian Quebec (ACNOR): 81 key</li> </ul>
Key pitch	X = 19.05 mm key pitch Y = 18.05 mm key pitch
Keyboard shortcuts	<p>Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.</p> <p><b>i</b> <b>NOTE:</b> Press Fn+Esc to switch the primary behavior of the function keys (F1-F12) between two modes - multimedia key mode and function key mode.</p> <p><b>i</b> <b>NOTE:</b> You can define the primary behavior of the function keys (F1-F12) by changing Function Key Behavior in BIOS setup program.</p>

## Keyboard shortcuts of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1

**i** **NOTE:** Keyboard characters may differ depending on the keyboard language configuration. Keys that are used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol that is shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol that is shown on the upper part of the key is typed out. For example, if you press **2**, 2 is typed out; if you press **Shift + 2**, @ is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multimedia control, as indicated by the icon on the key. Press the function key to enable the task represented by the icon. For example, pressing F1 mutes the audio (see the table below).

However, if the function keys F1-F12 are needed for specific software applications, multimedia functionality can be disabled by pressing **fn + Esc**. Later, multimedia control can be invoked by pressing **fn** and the respective function key. For example, mute audio by pressing **fn + F1**.

**i** **NOTE:** You can also define the primary behavior of the function keys (F1-F12) by changing **Function Key Behavior** in the BIOS setup program.

**Table 14. Function key primary behavior**

Function key	Primary behavior
F1	Mute or unmute audio
F2	Decrease volume

**Table 14. Function key primary behavior (continued)**

Function key	Primary behavior
F3	Increase volume
F4	Mute or unmute microphone
F5	Turn on or turn off keyboard backlight (optional). <i>NOTE:</i> Nonbacklight keyboards have the F10 function key without the backlight icon and do not support the toggle keyboard backlight function. <i>NOTE:</i> Toggle to cycle the keyboard backlight status through off, low-backlight, and high-backlight.
F6	Decrease display brightness
F7	Increase display brightness
F8	Switch to external display
F10	Print screen
F11	Home
F12	End

The **fn** key is also used with selected keys on the keyboard to invoke secondary functions.

**Table 15. Secondary behavior**

Function key	Secondary behavior
fn + F1	Operating system and application-specific F1 behavior
fn + F2	Operating system and application-specific F2 behavior
fn + F3	Operating system and application-specific F3 behavior
fn + F4	Operating system and application-specific F4 behavior
fn + F5	Operating system and application-specific F5 behavior
fn + F6	Operating system and application-specific F6 behavior
fn + F7	Operating system and application-specific F7 behavior
fn + F8	Operating system and application-specific F8 behavior
fn + F9	Operating system and application-specific F9 behavior
fn + F10	Operating system and application-specific F10 behavior
fn + F11	Operating system and application-specific F11 behavior
fn + F12	Operating system and application-specific F12 behavior
fn + Copilot	Operating system Context menu behavior.
fn + Esc	Toggle Function key lock
fn + PgUp (cursor up)	Scroll up the document or page
fn + PgDn (cursor down)	Scroll down the document or page
fn + P	Toggle privacy screen

# Storage

This section lists the storage options on your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

Your computer supports one M.2 2230/2280 solid state drive. The M.2 2230/2280 solid state drive is the primary storage drive of your computer.

**Table 16. Storage specifications**

Storage type	Interface type	Capacity
M.2 2280 solid state drive, self-encrypting, TLC	PCIe Gen4 NVMe, up to 64 Gbps	Up to 2 TB
M.2 2230 solid state drive, TLC	PCIe Gen4 NVMe, up to 64 Gbps	Up to 1 TB
M.2 2230 solid state drive, QLC	PCIe Gen4 NVMe, up to 64 Gbps	512 GB

# Camera

The following table lists the camera specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 17. Camera specifications**

Description		Values
Number of cameras		One
Camera type		There are three camera options: <ul style="list-style-type: none"> <li>• RGB camera</li> <li>• RGB + IR camera</li> <li>• MIPI + IR camera with Presence Detection (Synaptics)</li> </ul>
Camera location		Front camera
Camera sensor type		CMOS sensor technology
Camera resolution:		
	Still image	<ul style="list-style-type: none"> <li>• 2.07 megapixels</li> <li>• 5.20 megapixels</li> </ul>
	Video	<ul style="list-style-type: none"> <li>• 1920 x 1080 at 30 fps</li> <li>• 2560 x 1440 at 30 fps</li> </ul>
Infrared camera resolution:		
	Video	640 x 360 at 15 fps
Diagonal viewing angle:		
	Camera	<ul style="list-style-type: none"> <li>• 80.2 degrees</li> <li>• 91.2 degrees</li> </ul>
	Infrared camera	86.6 degrees

# Touchpad

The following table lists the touchpad specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 18. Touchpad specifications**

Description		Values
Touchpad resolution:		>= 300 dpi
Touchpad dimensions:		
	Horizontal	125 mm (4.92 in.)
	Vertical	73 mm (2.87 in.)
Touchpad gestures		For more information about the touchpad gestures that are available on: <ul style="list-style-type: none"> <li>• Windows, search <a href="#">Microsoft Support Site</a>.</li> <li>• Ubuntu, search <a href="#">Ubuntu Support Site</a>.</li> </ul>


# Power adapter

The following table lists the power adapter specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 19. Power-adapter specifications**


Description	Option one	Option two	Option three	
Type	60 W AC adapter, USB Type-C	65 W AC adapter, USB Type-C	100 W AC adapter, USB Type-C	
Power-adapter dimensions:				
	Height	22 mm (0.87 in.)	28 mm (1.10 in.)	26.50 mm (1.04 in.)
	Width	55 mm (2.16 in.)	51 mm (2.01 in.)	60 mm (2.36 in.)
	Depth	66 mm (2.60 in.)	112 mm (4.41 in.)	122 mm (4.80 in.)
Input voltage	100 to 240 VAC	100 to 240 VAC	100 to 240 VAC	
Input frequency	50 Hz to 60 Hz	50 to 60 Hz	50 to 60 Hz	
Input current (maximum)	1.70 A	1.70 A	1.70 A	
Output current (continuous)	<ul style="list-style-type: none"> <li>• 20 V/3 A</li> <li>• 15 V/3 A</li> <li>• 9 V/3 A</li> <li>• 5 V/3 A</li> </ul>	<ul style="list-style-type: none"> <li>• 20 V/3.25 A</li> <li>• 15 V/3 A</li> <li>• 9 V/3 A</li> <li>• 5 V/3 A</li> </ul>	<ul style="list-style-type: none"> <li>• 20 V/5 A</li> <li>• 15 V/3 A</li> <li>• 9 V/3 A</li> <li>• 5 V/3 A</li> </ul>	
Rated output voltage	20 VDC/15 VDC/9 VDC/5 VDC	20 VDC/15 VDC/9 VDC/5 VDC	20 VDC/15 VDC/9 VDC/5 VDC	
Temperature range:				
	Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)	0°C to 35°C (32°F to 95°F)
	Storage	-20°C to 70°C (-4°F to 158°F)	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

**Table 19. Power-adapter specifications (continued)**




Description	Option one	Option two	Option three
 <b>CAUTION:</b> Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.			

## Power adapter requirements (for computers shipped with 3-cell, 45 Wh battery)

This section contains the power adapter requirements for the Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.


 **NOTE:** If you did not purchase the Dell-branded power adapter that is recommended for your computer, ensure that the power adapter you use meets the following requirements:

**Table 20. Power adapter requirements for Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1**


Description	Value
Power that is required from a power adapter to achieve optimal performance.	65 W
Power that is required to charge the computer at a slower speed.  <b>NOTE:</b> A warning message may appear informing you about the use of a lower-powered adapter and slower charging speed.	Less than 60 W
Minimum power that is required from a power adapter to operate the computer and charge the battery.  <b>NOTE:</b> A warning message appears informing you about the use of a lower-powered adapter and slower charging speed.	27 W
USB Power Delivery (PD) fast charging	Supported
ExpressCharge mode	Supported  <b>NOTE:</b> The ExpressCharge mode is supported only when the computer with a 45 Wh battery is connected to a power adapter rated at 65 W or higher.

## Power adapter requirements (for computers shipped with 3-cell, 55 Wh battery)

This section contains the power adapter requirements for the Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

 **NOTE:** If you did not purchase the Dell-branded power adapter that is recommended for your computer, ensure that the power adapter you use meets the following requirements:

**Table 21. Power adapter requirements for Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1**

Description	Value
Power that is required from a power adapter to achieve optimal performance.	100 W
Power that is required to charge the computer at a slower speed.  <b>NOTE:</b> A warning message may appear informing you about the use of a lower-powered adapter and slower charging speed.	Less than 60 W

**Table 21. Power adapter requirements for Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1 (continued)**

Description	Value
Minimum power that is required from a power adapter to operate the computer and charge the battery. <b>i</b> <b>NOTE:</b> A warning message appears informing you about the use of a lower-powered adapter and slower charging speed.	27 W
USB Power Delivery (PD) fast charging	Supported
ExpressCharge mode	Supported <b>i</b> <b>NOTE:</b> The ExpressCharge mode is supported only when the computer with a 55 Wh battery is connected to a power adapter rated at 65 W or higher.

## Battery

The following table lists the battery specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 22. Battery specifications**

Description	Option one	Option two	Option three	Option four	
Battery type	3-cell, 45 Wh, ExpressCharge, ExpressCharge Boost	3-cell, 55 Wh, ExpressCharge, ExpressCharge Boost	3-cell, 45 Wh, Long Life Cycle, ExpressCharge, ExpressCharge Boost	3-cell, 55 Wh, Long Life Cycle, ExpressCharge, ExpressCharge Boost	
Battery voltage	11.25 V	11.70 VDC	11.25 VDC	11.70 VDC	
Battery weight (minimum)	0.20 kg (0.44 lb)	0.22 kg (0.48 lb)	0.20 kg (0.44 lb)	0.22 kg (0.48 lb)	
Battery dimensions:					
	Height	72.80 mm (2.83 in.)	72.80 mm (2.83 in.)	72.80 mm (2.83 in.)	72.80 mm (2.83 in.)
	Width	254.80 mm (10.03 in.)	254.80 mm (10.03 in.)	254.80 mm (10.03 in.)	254.80 mm (10.03 in.)
	Depth	6.30 mm (0.25 in.)	6.30 mm (0.25 in.)	6.30 mm (0.25 in.)	6.30 mm (0.25 in.)
Temperature range:					
	Operating	0°C to 45°C (32°F to 113°F)	0°C to 45°C (32°F to 113°F)	0°C to 60°C (32°F to 140°F)	0°C to 60°C (32°F to 140°F)
	Storage	-20°C to 65°C (-4°F to 149°F)	-20°C to 65°C (-4°F to 149°F)	-20°C to 60°C (-4°F to 140°F)	-20°C to 60°C (-4°F to 140°F)
Battery operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.				
Battery charging time (approximate) <b>i</b> <b>NOTE:</b> Control the charging time, duration,	<b>Standard charge/ Predominately AC User Charge Method:</b>	<b>Standard charge/ Predominately AC User Charge Method:</b>	<b>Standard charge/ Predominately AC User Charge Method:</b>	<b>Standard charge/ Predominately AC User Charge Method:</b>	

**Table 22. Battery specifications (continued)**

Description	Option one	Option two	Option three	Option four
<p>start and end time, and so on using the Dell Power Manager application. For more information about Dell Power Manager, search in the Knowledge Base Resource at <a href="#">Dell Support Site</a>.</p>	<ul style="list-style-type: none"> <li>0-15°C maximum allowable charge time from 0 to 100% RSOC is 4 hours</li> <li>16-45°C maximum allowable charge time from 0 to 100% RSOC is 3 hours</li> </ul> <p><b>Express Charge Method :</b></p> <ul style="list-style-type: none"> <li>16-45°C maximum allowable charge time from 0 to 80% RSOC is 1 hour</li> <li>16-45°C maximum allowable charge time from 0 to 100% RSOC is 2 hours</li> </ul> <p><b>Express Charge Boost charge Method :</b></p> <ul style="list-style-type: none"> <li>16-45°C maximum allowable charge time from 0 to 35% RSOC is 20 min</li> </ul>	<ul style="list-style-type: none"> <li>0-15°C maximum allowable charge time from 0 to 100% RSOC is 4 hours</li> <li>16-45°C maximum allowable charge time from 0 to 100% RSOC is 3 hours</li> </ul> <p><b>Express Charge Method :</b></p> <ul style="list-style-type: none"> <li>16-45°C maximum allowable charge time from 0 to 80% RSOC is 1 hour</li> <li>16-45°C maximum allowable charge time from 0 to 100% RSOC is 2 hours</li> </ul> <p><b>Express Charge Boost charge Method :</b></p> <ul style="list-style-type: none"> <li>16-45°C maximum allowable charge time from 0 to 35% RSOC is 20 min</li> </ul>	<ul style="list-style-type: none"> <li>0-15°C maximum allowable charge time from 0 to 100% RSOC is 4 hours</li> <li>16-45°C maximum allowable charge time from 0 to 100% RSOC is 3 hours</li> </ul> <p><b>Express Charge Method :</b></p> <ul style="list-style-type: none"> <li>16-45°C maximum allowable charge time from 0 to 80% RSOC is 1 hour</li> <li>16-45°C maximum allowable charge time from 0 to 100% RSOC is 2 hours</li> </ul> <p><b>Express Charge Boost charge Method :</b></p> <ul style="list-style-type: none"> <li>16-45°C maximum allowable charge time from 0 to 35% RSOC is 20 min</li> </ul>	<ul style="list-style-type: none"> <li>0-15°C maximum allowable charge time from 0 to 100% RSOC is 4 hours</li> <li>16-45°C maximum allowable charge time from 0 to 100% RSOC is 3 hours</li> </ul> <p><b>Express Charge Method :</b></p> <ul style="list-style-type: none"> <li>16-45°C maximum allowable charge time from 0 to 80% RSOC is 1 hour</li> <li>16-45°C maximum allowable charge time from 0 to 100% RSOC is 2 hours</li> </ul> <p><b>Express Charge Boost charge Method :</b></p> <ul style="list-style-type: none"> <li>16-45°C maximum allowable charge time from 0 to 35% RSOC is 20 min</li> </ul>
Coin-cell battery	Not supported	Not supported	Not supported	Not supported
<p><b>CAUTION:</b> Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</p> <p><b>CAUTION:</b> Dell recommends that you charge the battery regularly for optimal power consumption. If your battery charge is completely depleted, connect the power adapter, turn on your computer, and then restart your computer to reduce the power consumption.</p>				

## Power requirements (for computers shipped with 3-cell, 45 Wh battery)

**NOTE:** The information in this section is applicable to the European Union (EU) countries.

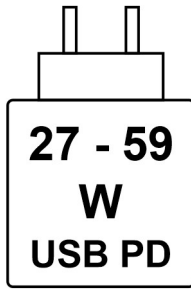


Figure 13. Pictogram for 45 Wh battery

The power that is delivered by the charger must be between a minimum of 27 Watts that is required by the radio equipment, and a maximum of 59 Watts in order to achieve the maximum charging speed.

This computer supports USB Power Delivery (PD) fast charging.

## Power requirements (for computers shipped with 3-cell, 55 Wh battery)

**NOTE:** The information in this section is applicable to the European Union (EU) countries.

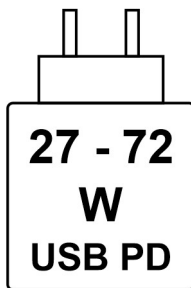


Figure 14. Pictogram for 55 Wh battery

The power that is delivered by the charger must be between a minimum of 27 Watts that is required by the radio equipment, and a maximum of 72 Watts in order to achieve the maximum charging speed.

This computer supports USB Power Delivery (PD) fast charging.

## Display

The following table lists the display specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.


Table 23. Display specifications

Description	Option one	Option two	Option three	Option four	Option five	Option six	Option seven	Option eight
Display type	14-inch Full High Definition (FHD+) <b>NOTE:</b> For laptops only.	14-inch Full High Definition (FHD+) <b>NOTE:</b> For laptops only.	14-inch Quad High Definition (QHD+) <b>NOTE:</b> For laptops only.	14-inch Full High Definition (FHD+) <b>NOTE:</b> For laptops only.	14-inch Full High Definition (FHD+) <b>NOTE:</b> For 2-in-1 laptops only.	14-inch Full High Definition (FHD+) <b>NOTE:</b> For laptops only.	14-inch Full High Definition Plus (FHD+) <b>NOTE:</b> For laptops only.	14-inch Full High Definition Plus (FHD+) <b>NOTE:</b> For laptops only.

**Table 23. Display specifications (continued)**

Description	Option one	Option two	Option three	Option four	Option five	Option six	Option seven	Option eight
Touch options	No	Yes	No	No	Yes	Yes	No	Yes
Privacy option	No	No	No	No	No	Yes	No	No
Anti-glare vs glossy finish	Anti-glare	Anti-glare	Anti-glare	Anti-glare	Anti-reflection	Anti-glare	Anti-glare	Anti-glare
Display-panel technology	In-Plane Switching (IPS)	In-Plane Switching (IPS)	In-Plane Switching (IPS)	In-Plane Switching (IPS)	In-Plane Switching (IPS)	In-Plane Switching (IPS)	In-Plane Switching (IPS)	In-Plane Switching (IPS)
Display-panel dimensions (active area):								
Height	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)	188.50 mm (7.42 in.)
Width	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)	301.59 mm (11.87 in.)
Diagonal	355.60 mm (14 in.)	355.60 mm (14 in.)	355.60 mm (14 in.)	355.60 mm (14 in.)	355.60 mm (14 in.)	355.60 mm (14 in.)	355.60 mm (14 in.)	355.60 mm (14 in.)
Display-panel native resolution	1920 x 1200	1920 x 1200	2560 x 1600	1920 x 1200	1920 x 1200	1920 x 1200	1920 x 1200	1920 x 1200
Luminance (typical)	300 nits	300 nits	300 nits	400 nits	300 nits	500 nits	400 nits	400 nits
Megapixels	2.3	2.3	4.1	2.3	2.3	2.3	2.3	2.3
Color gamut	45% NTSC	100% sRGB	100% sRGB	100% sRGB	100% sRGB	100% sRGB	45% NTSC	100% sRGB
Pixels Per Inch (PPI)	162	162	215.6	162	162	162	162	162
Contrast ratio (typical)	800:1	800:1	1200:1	1200:1	1200:1	1500:1	800:1	800:1
Response time (maximum)	35 ms	35 ms	35 ms	35 ms	35 ms	35 ms	35 ms	35 ms
Refresh rate	60 Hz	60 Hz	<ul style="list-style-type: none"> <li>● 90 Hz</li> <li>● 120 Hz</li> </ul>	60 Hz	60 Hz	60 Hz	60 Hz	60 Hz
Horizontal view angle	+/- 80 degrees (minimum)	+/- 80 degrees (minimum)	+/- 80 degrees (minimum)	+/- 88 degrees (minimum)	+/- 88 degrees (minimum)	+/- 80 degrees (minimum)	+/- 80 degrees (minimum)	+/- 80 degrees (minimum)
Vertical view angle	+/- 80 degrees (minimum)	+/- 80 degrees (minimum)	+/- 80 degrees (minimum)	+/- 88 degrees (minimum)	+/- 88 degrees (minimum)	+/- 80 degrees (minimum)	+/- 80 degrees (minimum)	+/- 80 degrees (minimum)
Pixel pitch	0.157 mm	0.157 mm	0.157 mm	0.157 mm	0.157 mm	0.157 mm	0.157 mm	0.157 mm

**Table 23. Display specifications (continued)**

Description	Option one	Option two	Option three	Option four	Option five	Option six	Option seven	Option eight
Power consumption (maximum)	3.68 W	4.40 W	<ul style="list-style-type: none"> <li>4.63 W (for panels with 90 Hz refresh rate)</li> <li>4.80 W (for panels with 120 Hz refresh rate)</li> </ul>	2.50 W	3.10 W	<ul style="list-style-type: none"> <li>Sharing mode: 7.14 W</li> <li>Privacy mode: 7.18 W</li> </ul>	4.64 W	5.50 W
 <b>NOTE:</b> The refresh rate for QHD+ display panel varies depending on the configuration ordered.								

## Fingerprint reader (optional)

The following table lists the specifications of the optional fingerprint-reader of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 24. Fingerprint reader specifications**

Description	Values
Sensor technology	Trans-capacitive
Sensor resolution	500 dpi
Sensor pixel size	<ul style="list-style-type: none"> <li>X: 108 mm</li> <li>Y: 88 mm</li> </ul>

## GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 25. GPU—Integrated**

Controller	Memory size	Processor
Intel Graphics	Shared system memory	<ul style="list-style-type: none"> <li>Intel Core Ultra 200U series</li> <li>Intel Core 100U and 200U series</li> </ul>

# Multiple display support matrix

The following table lists the multiple display support matrix for your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 26. Multiple display support matrix**

Graphics Card	Direct Graphics Controller Direct Output Mode	Supported external displays with computer internal display on	Supported external displays with computer internal display off
Intel Graphics	Integrated	3	4

# Hardware security

The following table lists the hardware security of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 27. Hardware security**

Hardware security
Noble Lock
Trusted Platform Module (TPM) 2.0 discrete
FIPS 140-2 certification for TPM
TCG Certification for TPM (Trusted Computing Group)
Touch fingerprint reader in the power button available with ControlVault 3+
Contacted Smart Card with ControlVault 3+
Contactless Smart Card and NFC with ControlVault 3+
SED SSD NVMe, SSD and HDD (Opal and non-Opal) per SDL
Chassis Intrusion Detection
BIOS - TPM clear and/or system boot lock after chassis intrusion detection

# Smart-card reader

## Contactless smart card reader


This section lists the contactless smart card reader specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1. This module is only available in computers shipped with smart card readers.

**Table 28. Contactless smart card reader specifications**

Title	Description	Dell ControlVault 3 Plus Contactless smart card reader with NFC
FeliCa Card Support	Reader and software capable of supporting FeliCa contactless cards	Yes
Prox (Proximity) (125 KHz) Card support	Reader and software capable of supporting Prox /Proximity/125 KHz contactless cards	No
ISO 14443 Type A Card Support	Reader and software capable of supporting ISO 14443 Type A contactless cards	Yes

**Table 28. Contactless smart card reader specifications (continued)**

<b>Title</b>	<b>Description</b>	<b>Dell ControlVault 3 Plus Contactless smart card reader with NFC</b>
ISO 14443 Type B Card Support	Reader and software capable of supporting ISO 14443 Type B contactless cards	Yes
ISO/IEC 21481	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO/IEC 18092	Reader and software capable of supporting ISO/IEC 18092 compliant contactless cards and tokens	Yes
ISO 15693 Card Support	Reader and software capable of supporting ISO15693 contactless cards	Yes
NFC Tag Support	Supports reading and processing of NFC compliant tag information	Yes
NFC Reader Mode	Support for NFC Forum Defined Reader mode	Yes
NFC Writer Mode	Support for NFC Forum Defined Writer mode	Yes
NFC Peer-to-Peer Mode	Support for NFC Forum Defined Peer to Peer mode	Yes
NFC Proximity OS Interface	Enumerates NFP (Near Field Proximity) device for operating system to utilize	Yes
PC/SC operating system interface	Personal Computer/Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for operating system level drivers	Yes
Dell ControlVault support	The device connects to Dell ControlVault for usage and processing	Yes

 **NOTE:** 125 KHz proximity cards are not supported.

**Table 29. Contactless card types supported**

<b>Interface</b>	<b>Card type</b>	<b>Supported functionality</b>
NFC Forum (Microsoft Proximity Device)	Type 1 tag	Read/Write NDEF
	Type 2 tag	Read/Write NDEF
	Type 3 tag	Read/Write NDEF
	Type 4 tag	Read/Write NDEF
	Type 5 tag	Read/Write NDEF
	P2P	Exchange NDEF
RFID (Microsoft Smartcard Device)	ISO14443A	Read UUID and APDU Exchange (ISO7816)
	ISO14443B	Read UUID and APDU Exchange (ISO7816)
	Sony FeliCa	Read UUID only

**Table 29. Contactless card types supported (continued)**

Interface	Card type	Supported functionality
	Legacy iClass (ISO15693)	Read UUID only
	MIFARE Classic	Read UUID only
	Low Frequency (125 KHz )	Not supported

**Table 30. Supported cards**

Manufacturer	Card
HID	JCOP readertest3 A card (14443a)
	1430 1L
	MIFARE DESFire D8H
	DESFIRE 4K Standard - 1450NGGNN
	iClass 16K/16 - 2002PGGMN
	iClass SR 16K/16 - 2002HPGGMN
	iCLASS 2K tag
	iCLASS GP - 2003 PGGMN
	iClass Clamshell - 2080PMSMV
	iClass Prox 16K/16 - 2022BGGMNN
	MIFARE M1P 1430 NGGNN
	iclass Prox 2020BGGMNM
	DesFire D8P 1456CSGMN
	iCLASS MIFARE Px GM49Y 2623BNPGGBNAB
	iCLASS MIFARE Px 8M1L
	iClass SEOS JW 5006PGGMN
	Crescendo iCLASS Px G8H
	iCLASS Seos IY
	SEOS JMC4 J1Y 5806VNG1NNN4
	SEOS Key FOB 5266PNNA
	SEOS Clamshell 5656PMSAV
	SEOS + Prox 5106RGGMNN
	SEOS + DESFire 5906PNG1ANN7
	SEOS iClass 5006PGGMN7
	Seos Essential + Prox 551PPGGANN
	iCLASS 2K 2000PGGMN
	iCLASS 2K 3000PGGMN
	MIFARE DESFire 3700CPGGAN
	iCLASS DP
	DESFire 1Y
NXP/MIFARE	MIFARE DESFire 8K White PVC card
	MIFARE Classic 1K White PVC card

**Table 30. Supported cards (continued)**

<b>Manufacturer</b>	<b>Card</b>
	NXP MIFARE Classic S50 ISO card
	MIFARE DESFire 2K
	MIFARE Plus S 2K/4K
	MIFARE Plus X 4K
G&D	idOnDemand - SCE3.2 144K
	SCE6.0 FIPS 80K Dual + 1K MIFARE
	SCE6.0 nonFIPS 80K Dual + 1K MIFARE
	SCE6.0 FIPS 144K Dual + 1K MIFARE
	SCE6.0 nonFIPS 144K Dual + 1K MIFARE
	SCE7.0 FIPS 144K
Oberthur	idOnDemand - OCS5.2 80K
	ID-One Cosmo 64 RSA D V5.4 T = 0 card
	ID-One Cosmo 128K V5.5 card
Gemalto	TOP DL GX4 144K card
Sony	FeliCa RC-S962
	FeliCa RC-S965
	FeliCa RC-S966
PIVKey	C910 PKI
NIST	PIV1
IDENTIV	PIV programmed cards
	uTrust
Transport cards	Oyster (London) MIFARE DESFire
	T-Money (Korea)
	Octopus Card (Hong Kong)
	SUICA (Japan)

**Table 31. Qualified NFC tags**

<b>NFC tag</b>	<b>Supported</b>
Tap and do - NFC Forum Type 1 Tag - Topaz 512 (BCM920203)	Yes
Tap and do - NFC Forum Type 1 Tag - Topaz 512 (BCM20203T512)	Yes
Tap and do - NFC Forum Type 1 Tag - Topaz (BCM20203T96)	Yes
Tap and do - NFC Forum Type 2 Tag - MIFARE UltraLight	Yes
Tap and do - NFC Forum Type 2 Tag - MIFARE UltraLight C	Yes
Tap and do - NFC Forum Type 2 Tag - NTAG203	Yes
Tap and do - NFC Forum Type 3 Tag - FeliCa Lite RC-S965	Yes
Tap and do - NFC Forum Type 3 Tag - FeliCa RC-S962	Yes

**Table 31. Qualified NFC tags (continued)**

<b>NFC tag</b>	<b>Supported</b>
Tap and do - NFC Forum Type 4 Tag - MIFARE DESFire EV1Card 2K	Yes
Tap and do - NFC Forum Type 4 Tag - MIFARE DESFire EV1Card 4K	Yes
Tap and do - NFC Forum Type 4 Tag - MIFARE DESFire EV1Card 8K	Yes
Tap and do - ISO 15693 - Tag-it Plus	Yes
HID I-code ISO card	Yes

## Contacted smart card reader

The following table lists the contacted smart card reader specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Table 32. Contacted smart card reader specifications**

<b>Title</b>	<b>Description</b>	<b>Dell ControlVault 3 Plus Contacted smart card reader</b>
ISO 7816-3 Class A Card Support	Reader capable of reading 5 V powered smart card	Yes
ISO 7816-3 Class B Card Support	Reader capable of reading 3 V powered smart card	Yes
ISO 7816-3 Class C Card support	Reader capable of reading 1.8 V powered smart card	Yes
T = 0 support	Cards support character level transmission	Yes
T = 1 support	Cards support block level transmission	Yes
EMVCo Certified	Formally certified based on EMVCo smart card standards	Yes
PC/SC operating system interface	Personal Computer/Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for operating system level drivers	Yes
Windows Certified	Certified by the Windows Hardware Certification program	Yes
FIPS 201 (PIV/HSPD-12) Compliant	Device compliant with FIPS 201/PIV/HSPD-12 requirements	Yes
ISO 7816-1 Compliant	Specification for the physical characteristics of integrated circuit cards with contacts	Yes
ISO 7816-2 Compliant	Specification for the dimensions and location of the contacts	Yes
ISO 7816-3 Compliant	Specification for electrical interface and transmission protocols	Yes
ISO 7816-4 Compliant	Specification for organization, security and commands for interchange	Yes

**Table 32. Contacted smart card reader specifications (continued)**


Title	Description	Dell ControlVault 3 Plus Contacted smart card reader
Dell ControlVault support	Device connects to Dell ControlVault for usage and processing	Yes

## Operating and storage environment

This table lists the operating and storage specifications of your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

**Airborne contaminant level:** G1 as defined by ISA-S71.04-1985

**Table 33. Computer environment**

Description	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G†
Altitude range	-15.2 m to 3048 m (4.64 ft to 5518.4 ft)	-15.2 m to 10668 m (4.64 ft to 19234.4 ft)
 <b>CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</b>		










\* Measured using a random vibration spectrum that simulates the user environment.

† Measured using a 2 ms half-sine pulse.

# Working inside your computer


## Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your computer.



-  **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see [Dell Regulatory Compliance Home Page](#).
-  **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.
-  **WARNING:** For laptops, discharge the battery completely before removing it. Disconnect the AC power adapter from the computer and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty.
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.
-  **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the connector on the cable is correctly oriented and aligned with the port.
-  **CAUTION:** Press and eject any installed card from the media-card reader.

## Before working inside your computer

### About this task

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

### Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. For Windows operating system, click **Start** >  **Power** > **Shut down**.  
 **NOTE:** If you are using a different operating system, see the documentation of your operating system for instructions.
3. Turn off all the attached peripherals.
4. Disconnect your computer from the electrical outlet.

5. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
6. Remove any media card and optical drive from your computer, if applicable.
7. To clean the air vents, use a soft brush and move vertically.

**NOTE:** Do not remove the base cover or use any blower to clean the vents.

8. Enter the Service Mode.

### Service Mode

Service Mode is used to cut off power without disconnecting the battery cable from the system board before conducting repairs in the computer.

**CAUTION:** If you are unable to turn on the computer to put it into Service Mode, disconnect the battery cable. To disconnect the battery cable, follow the steps in [Removing the battery](#).

**NOTE:** Ensure that your computer is shut down and the power adapter is disconnected.

- a. Press and hold the B key and the power button for 3 seconds, or until the Dell logo appears on the screen.
- b. If the **Owner Tag** is set, it is displayed on the screen. Press any key to continue.

**NOTE:** If the **Owner Tag** information is not already set, the computer automatically skips this step and proceeds to enter Service Mode.

- c. If the power adapter is still connected, a message appears on the screen prompting you to disconnect it. Disconnect the power adapter, then press any key to continue.
- d. When the **System Ready For Service** message appears on the screen, press any key to proceed. The computer emits three short beeps and shuts down immediately. The computer shuts down and enters the Service Mode.

## Service mode

Service Mode allows users to immediately cut off power from the computer and conduct repairs without disconnecting the battery cable from the system board:


1. Shut down the computer and disconnect the AC adapter.
2. Press and hold the **<B>** key on the keyboard and then press the power button. The computer boots up.



**Figure 15. Logo screen**


3. When the Owner Tag information appears on the screen for models that are configured with owner tag, press any key to proceed.

**NOTE:** The Service Mode procedure will automatically skip this step if the Owner Tag of the computer is not set up in advance by the manufacturer.

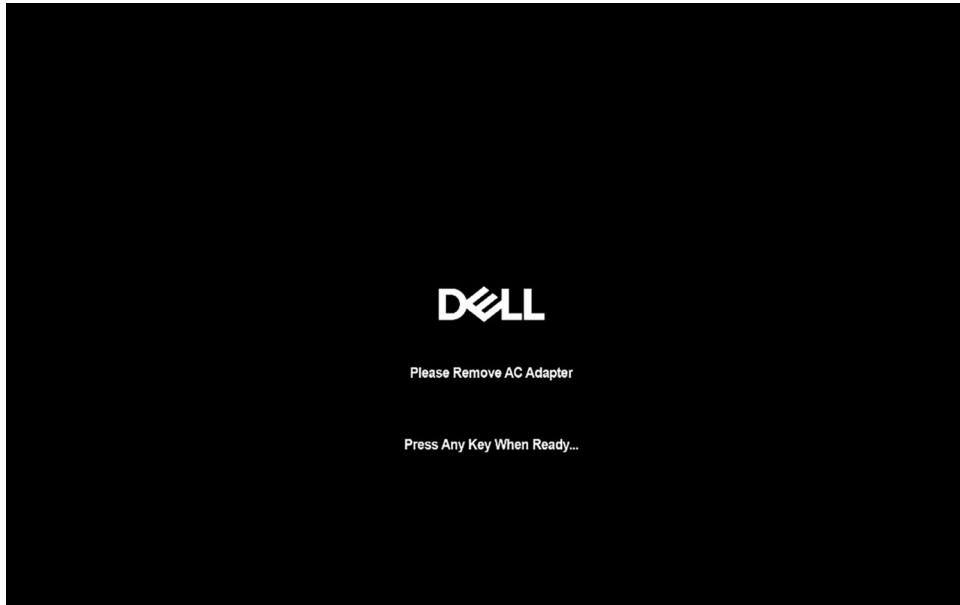


**Figure 16. Booting screen**

4. Ensure that the AC adapter has been disconnected and press any key to proceed.

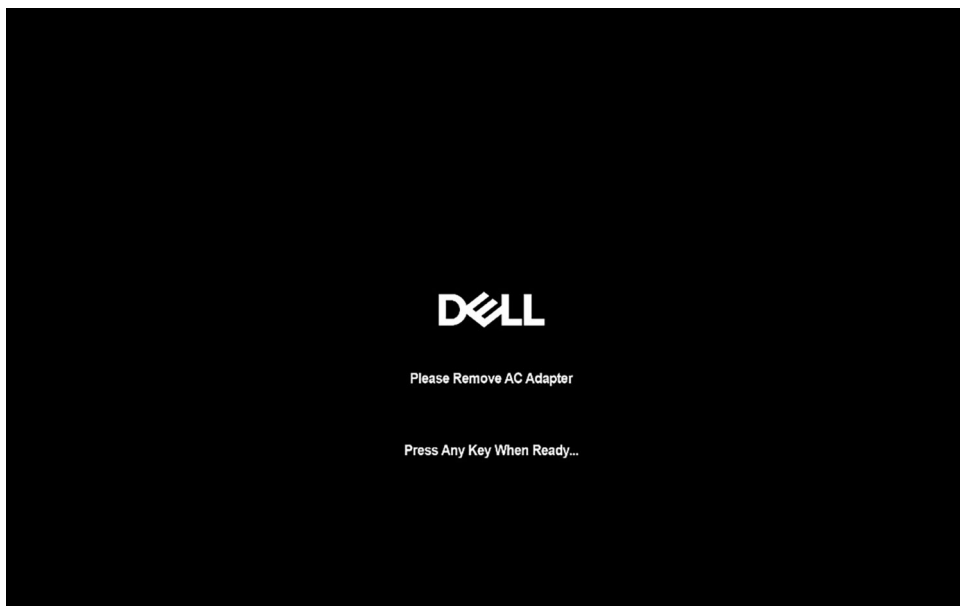

**Figure 17. Booting screen**

5. When the ready-to-proceed message appears on the screen, press any key to proceed. The computer emits three short beeps and shuts down immediately.

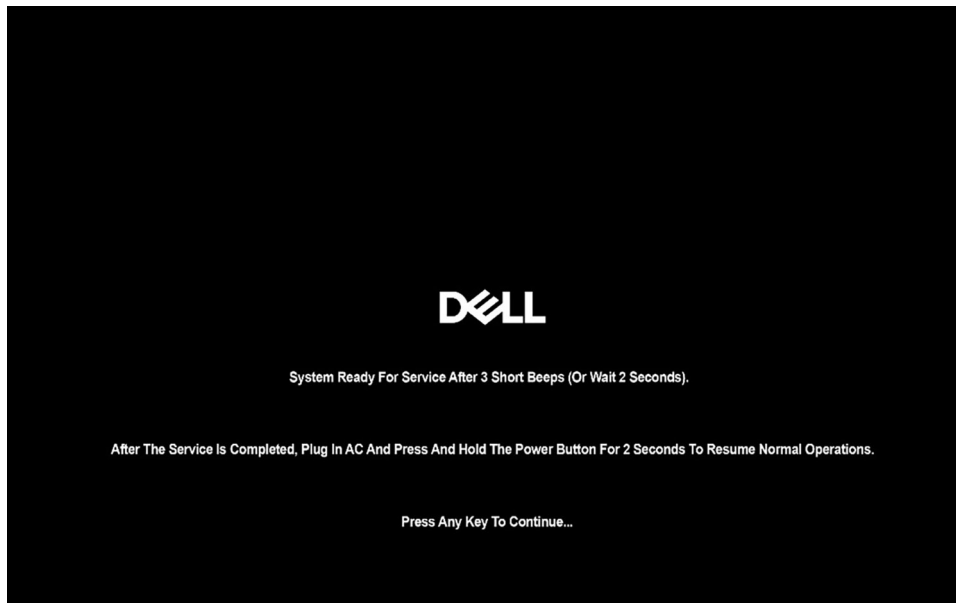

**Figure 18. Booting screen**

Once the computer shuts down, you can perform replacement procedures.

To exit **Service Mode**, connect the AC adapter and press the power button to power on the computer. The computer boots up and returns to normal functioning mode.

## Safety precautions

This section details the primary steps to be followed before disassembling any device or component.

Observe the following safety precautions before any installation or break-fix procedures involving disassembly or reassembly:

- Turn off the computer and all attached peripherals.
- Disconnect the computer from AC power.
- Disconnect all network cables and peripherals from the computer.
- Use an ESD field service kit when working inside your computer to avoid electrostatic discharge (ESD) damage.
- Place the removed component on an anti-static mat after removing it from the computer.
- Press and hold the power button for 15 seconds to discharge the residual power in the system board.

## Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. Ensure that the wrist strap is secure and in full contact with your skin. Remove all jewelry, watches, bracelets, or rings before grounding yourself and the equipment.

## Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory modules, and system boards. A slight charge can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory module that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code that is emitted for missing or nonfunctional memory.

- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The memory module receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms that are related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, and so on.

Intermittent failures that are also called latent or "walking wounded" are difficult to detect and troubleshoot.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. Wireless anti-static straps do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, use the anti-static wrist strap to discharge the static electricity from your body.

**i NOTE:** You can protect against ESD and discharge static electricity from your body by touching a metal-grounded object before you interact with anything electronic, for example, an unpainted metal surface on your computer's I/O panel. When connecting a peripheral (including handheld digital assistants) to your computer, you should always ground both yourself and the peripheral before connecting it to the computer. In addition, as you work inside the computer, periodically touch a metal-grounded object to remove any static charge that your body may have accumulated.

For more information about the wrist strap and ESD wrist strap tester, see [Components of an ESD Field Service Kit](#).

- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

## ESD Field Service kit

The unmonitored field service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

**⚠ CAUTION:** It is critical to keep ESD-sensitive devices away from internal parts that are insulated and often highly charged, such as plastic heat sink casings.

## Working environment

Before the ESD Field Service kit is deployed, conduct an evaluation of the site to ensure proper setup and readiness. For example, deploying the kit for a server environment is different than for a desktop or laptop environment. Servers are typically installed in a rack within a data center; desktops or laptops are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of computer that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.

## ESD packaging

All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged component using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the anti-static mat, in the computer, or inside an ESD bag.

## Components of an ESD Field Service kit

The components of an ESD Field Service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the anti-static mat and to any bare metal on the computer being worked on. Once deployed properly, service parts can be removed from the ESD bag and

placed directly on the anti-static mat. ESD-sensitive items are safe in your hand, on the anti-static mat, in the computer, or inside an ESD bag.

- **Wrist Strap and Bonding Wire** – If an anti-static mat is not being used, the wrist strap and bonding wire should be connected directly between your wrist and an exposed metal part of the hardware. If you are using an anti-static mat, connect the wrist strap and bonding wire to the anti-static mat to ensure protection for any hardware placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the anti-static mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, anti-static mat, and bonding wire. Never use wireless wrist straps. Always be cautious that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside an ESD strap are prone to damage over time. When using an unmonitored ESD kit, it is recommended to test the wrist strap regularly—ideally before each service session, and at a minimum, once per week. The most reliable method for testing is with a wrist strap tester. To perform the test, connect the bonding wire of the wrist strap to the tester while wearing the strap. Press the test button to initiate the check. A green LED indicates a successful test, while a red LED and audible alarm signal a failure.

**NOTE:** It is recommended to always use the traditional wired ESD grounding wrist strap and protective anti-static mat when servicing Dell products. In addition, it is critical to keep sensitive parts separate from all insulator parts while servicing the computer.

## Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

## After working inside your computer

### About this task

**CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.

### Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, disks, or any other parts that you removed before working on your computer.
4. Connect your computer to their electrical outlets.

**NOTE:** To exit service mode, ensure to connect the AC adapter to the power-adapter port on your computer.

5. Press the power button to turn on the computer.

## BitLocker

When updating the BIOS on a computer with BitLocker enabled, consider the following precautions.

**CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key will not be recognized the next time that you reboot the computer. You are prompted to enter the recovery key to progress, and the computer displays a prompt for the recovery key on each reboot. If the recovery key is not known, this can result in data loss or an operating system reinstall. For more information, see Knowledge Article: [updating the BIOS on Dell computers with BitLocker enabled](#).

The installation of the following components triggers BitLocker:

- Hard disk drive or solid state drive
- System board

## Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #0
- Phillips screwdriver #1
- Flat head slotted screwdriver (maximum width: 4 mm)
- Plastic scribe













## Screw list

**NOTE:** When removing screws from a component, it is recommended to note the screw type and the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.


















**NOTE:** Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.

**NOTE:** Screw color may vary depending on the configuration ordered.

**Table 34. Screw list**


Component	Screw type	Quantity	Screw image
Base cover	M2x8.5 captive screws	6	
	M2x6 captive screws	2	
Battery	M2x5 captive screws	4	
WWAN-card shielding cover	M2x4	3	
SSD-shielding cover	M2x3	3	
M.2 2230 solid state drive	M2x4	1	
WLAN-card bracket	M2x3	1	
Speakers	M1.6x1.5	6	
Fan and heat-sink assembly	M2x4	2	
	M2x3 captive screws	4	
USH board	M1.6x1.5	2	
Smart card reader	M2x2	4	

**Table 34. Screw list (continued)**

Component	Screw type	Quantity	Screw image
System board	M2x3	4	
	M2x4	<ul style="list-style-type: none"> <li>• For models without WWAN card: 2</li> <li>• For models with WWAN card: 3</li> </ul>	
Fingerprint-reader bracket	M2x3	1	
WLAN-antenna module	M1.6x2.5	4	
USB Type-C connector module	M2x5	3	
I/O board	M2x3	3	
Power button with optional fingerprint reader	M1.6x1.7	2	
Display-cable bracket	M2x3	2	
Display assembly	M2.5x4	4	
Display panel	M1.6x1.4	4	
Display hinge cap	M2x3	2	
	M2.5x3.5	4	
MIPI camera	M1.6x1.4	2	
Display cable for MIPI camera	M1.6x1.4	2	
Middle-board cable	M1.6x1.4	2	
Keyboard	M1.6x1.7	18	
Keyboard bracket	M2x2	2	

## Major components of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1


The following image shows the major components of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1.

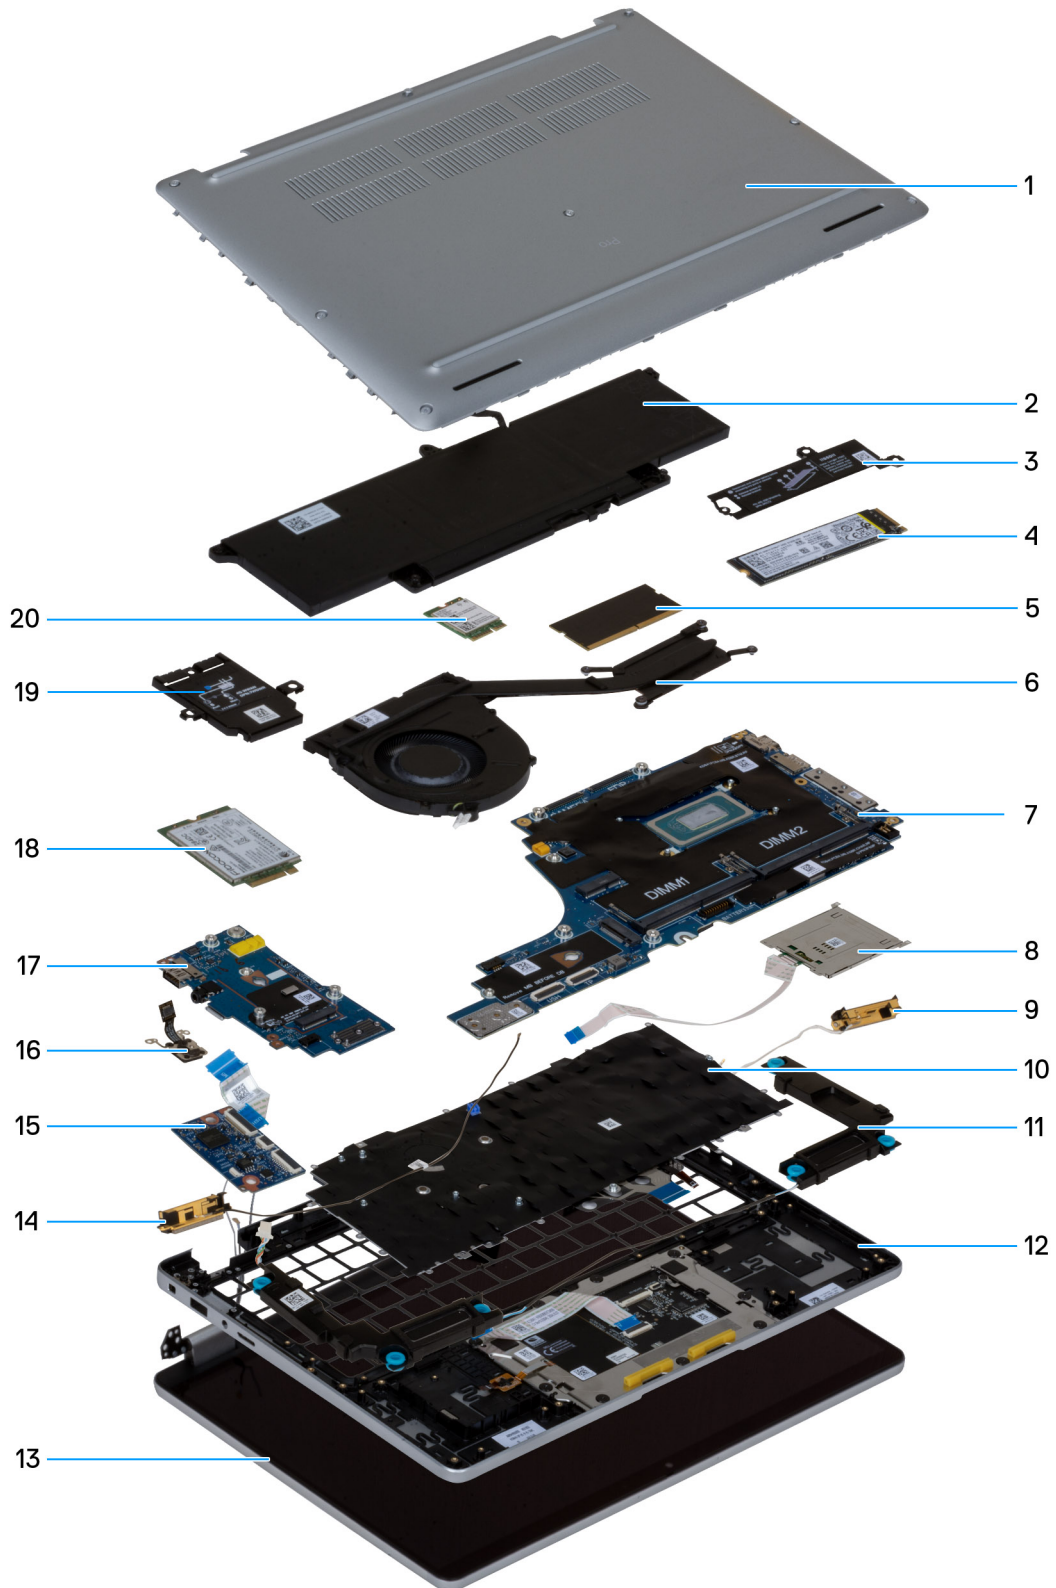

**Figure 19. Major components of Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1**

1. Base cover
2. Battery


3. SSD shielding cover
4. Solid state drive (SSD)
5. Memory module
6. Fan and heat-sink assembly
7. System board
8. Smart card reader
9. WLAN-antenna module
10. Keyboard
11. Speakers
12. Palm-rest assembly
13. Display assembly
14. WLAN-antenna module
15. USB board
16. Power button with optional fingerprint reader
17. I/O board
18. WWAN card
19. WWAN-card shielding cover
20. WLAN card

 **NOTE:** Dell provides a list of components and their part numbers for the original computer configuration purchased. These parts are available according to warranty coverage purchased by the customer. Contact your Dell sales representative for purchase options.

# Removing and installing Customer Replaceable Units (CRUs)

The replaceable components in this chapter are Customer Replaceable Units (CRUs).


 **CAUTION:** Customers can replace only the Customer Replaceable Units (CRUs) following the safety precautions and replacement procedures.

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## SIM-card tray

### Removing the SIM-card tray


#### Prerequisites

 **CAUTION:** Removing the SIM card when the computer is turned on can cause data loss or damage to the card. Ensure that your computer is turned off or the network connections are disabled.

1. Follow the procedure in [Before working inside your computer](#).

#### About this task

The following images indicate the location of the SIM-card tray and provide a visual representation of the removal procedure.

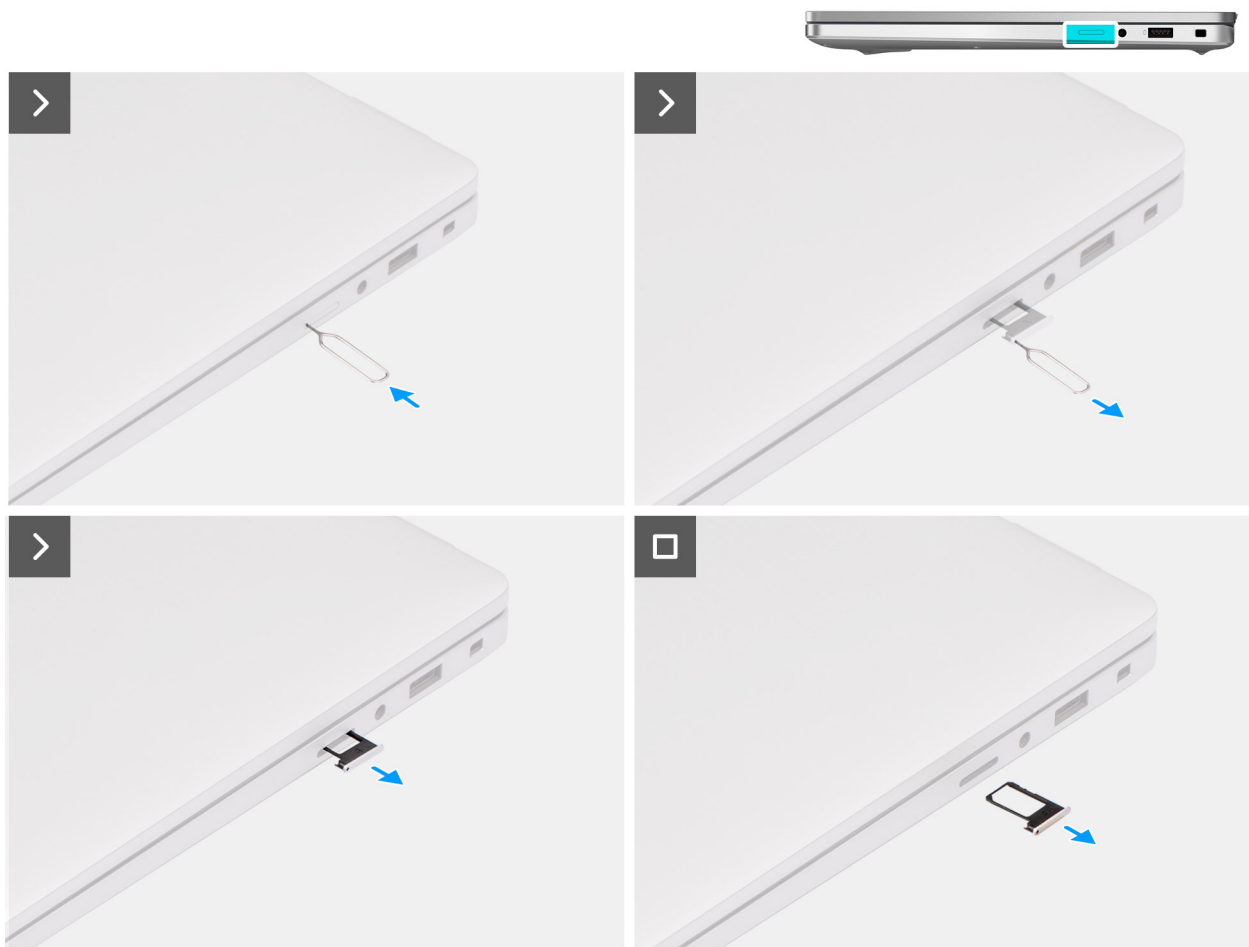

**Figure 20. Removing the SIM-card tray**

**Steps**

1. Insert a SIM-ejector pin into the release hole to release the SIM-card tray.
2. Push the pin to disengage the lock, and eject the SIM-card tray.
3. Slide the SIM-card tray out of the slot on the computer.

**NOTE:** Remove the SIM card from the SIM-card tray, if applicable.


## Installing the SIM-card tray

**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the SIM-card tray and provide a visual representation of the installation procedure.

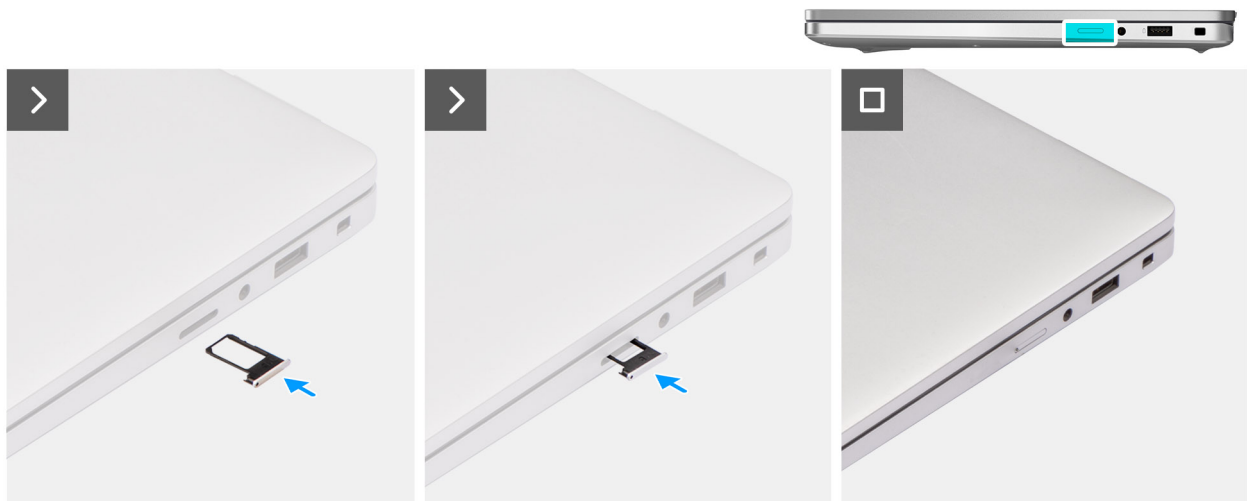

**Figure 21. Installing the SIM-card tray**

#### **Steps**

1. Align the SIM-card tray with the slot on the computer and carefully slide it in.
2. Slide the SIM-card tray into the slot, until it clicks into place.

#### **Next steps**

1. Follow the procedure in [After working inside your computer](#).

## **Base cover**

### **Removing the base cover**

#### **Prerequisites**

1. Follow the procedure in [Before working inside your computer](#).

**NOTE:** Ensure that your computer is in Service Mode. If the computer does not turn on, does not enter Service Mode, or does not support Service mode, disconnect the battery cable.

2. Remove the [SIM-card tray](#), if applicable.

#### **About this task**

The following images indicate the location of the base cover and provide a visual representation of the removal procedure.


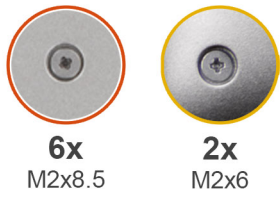


Figure 22. Removing the base cover

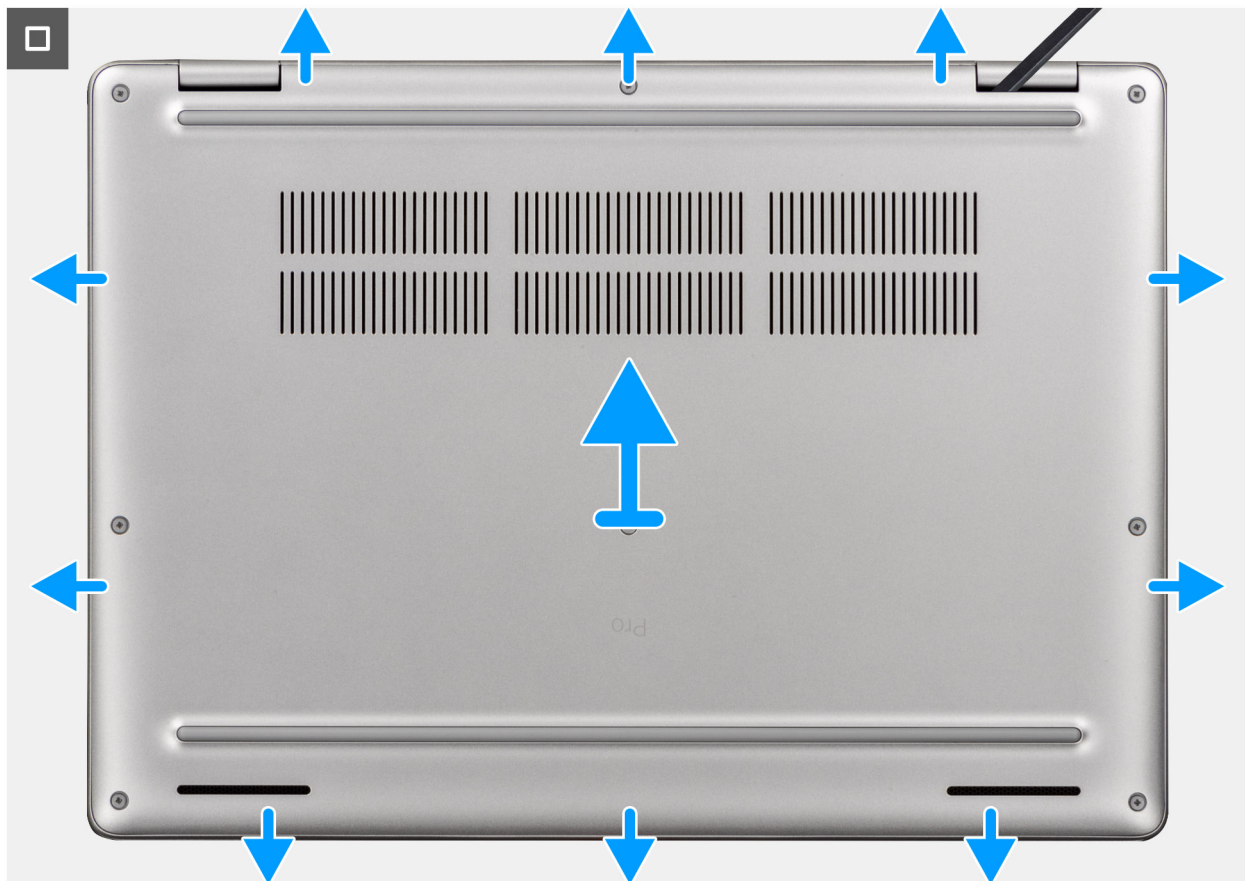

**Figure 23. Removing the base cover**

#### Steps

1. Loosen the six captive screws (M2x8.5) and two captive screws (M2x6) that secure the base cover to the palm-rest assembly.
2. Using a plastic scribe, pry open the base cover from the recesses that are located in the U-shaped indents at the top edge of the base cover near the hinges.

**i** **NOTE:** To remove the base cover, pry it open from the U-shaped indents at its top edge near the display hinges.

3. Lift the base cover off the palm-rest assembly.

**i** **NOTE:** Ensure that your computer is in Service Mode. If your computer is unable to enter Service Mode, disconnect the battery cable from the system board. To disconnect the battery cable, follow the below steps.

4. Using the pull tab, disconnect the battery cable from the connector on the system board.
5. Press and hold the power button for five seconds to ground the computer and drain the flea power.



Figure 24. Disconnecting the battery cable

## Installing the base cover

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the base cover and provide a visual representation of the installation procedure.



Figure 25. Connecting the battery cable


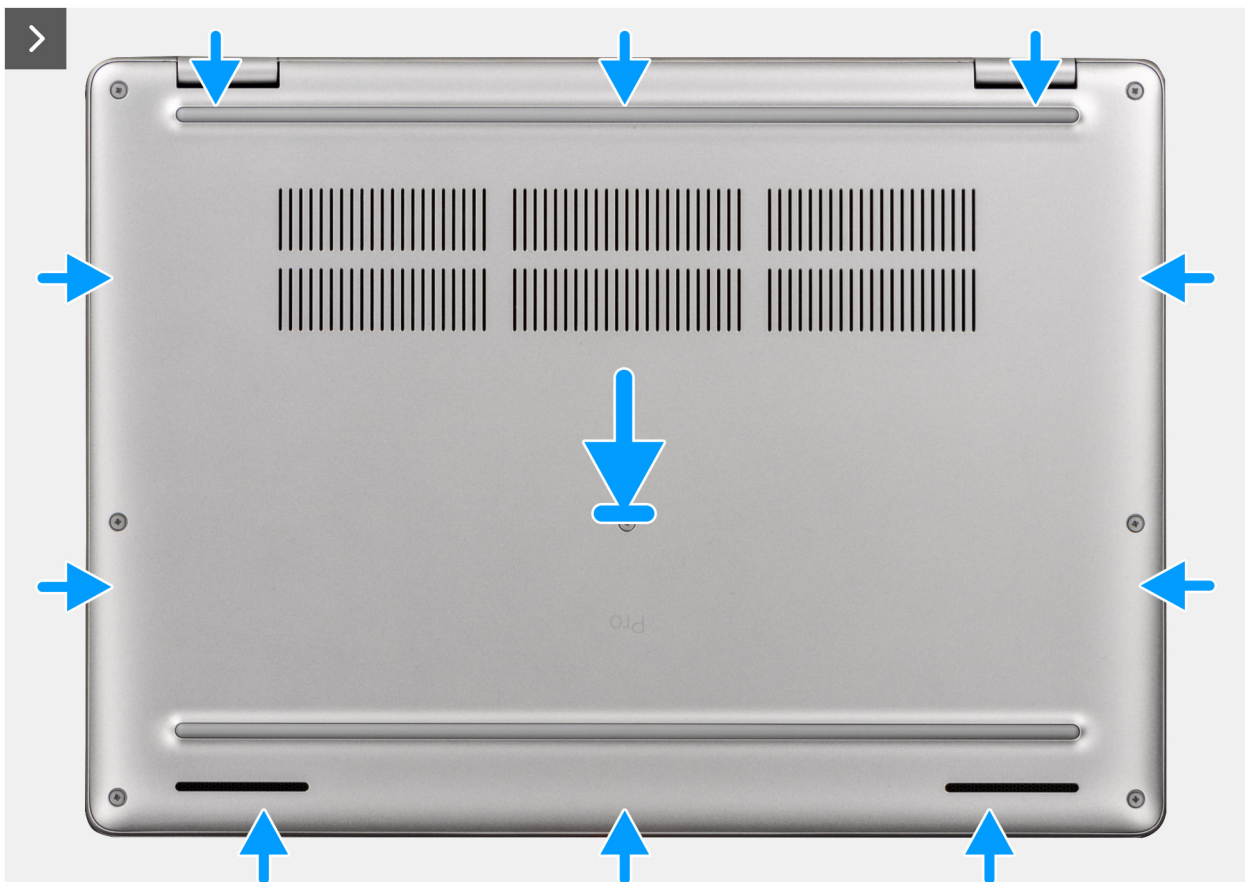


Figure 26. Installing the base cover

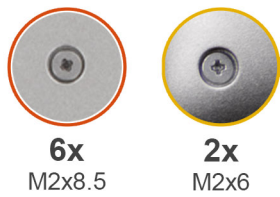

**Figure 27. Installing the base cover**

**NOTE:** If you have disconnected the battery cable, ensure to connect the battery cable. To connect the battery cable, follow step 1 in the procedure.

### Steps

1. Connect the battery cable to the battery-cable connector (BATT1) on the system board if the computer is not in service mode.
2. Align the screw holes on the base cover with the screw holes on the palm-rest assembly, and then snap the base cover into place.
3. Tighten the six captive screws (M2x8.5) and two captive screws (M2x6) to secure the base cover to the palm-rest assembly.

### Next steps

1. Install the [SIM-card tray](#), if applicable.
2. Follow the procedure in [After working inside your computer](#).

# Battery

## Rechargeable Li-ion battery precautions

### **WARNING:**

- Exercise caution when handling rechargeable Li-ion batteries.
- Discharge the battery completely before removing it. Disconnect the AC power adapter from the computer and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any kind to pry on or against the battery.
- To prevent accidental puncture or damage to the battery and other components, ensure that no screws are lost or misplaced during the servicing of the computer.
- Always purchase genuine batteries from [Dell Site](#) or authorized Dell partners and resellers.
- Swollen batteries should not be used and should be replaced and disposed properly. For guidelines on how to handle and replace swollen rechargeable Li-ion batteries, see [Handling swollen rechargeable Li-ion batteries](#).

## Removing the battery

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).




### About this task

 **CAUTION:** Removing the battery resets the BIOS setup settings to default. It is recommended that you note the BIOS setup settings before removing the battery.

The following images indicate the location of the battery and provide a visual representation of the removal procedure.



4x  
M2x5

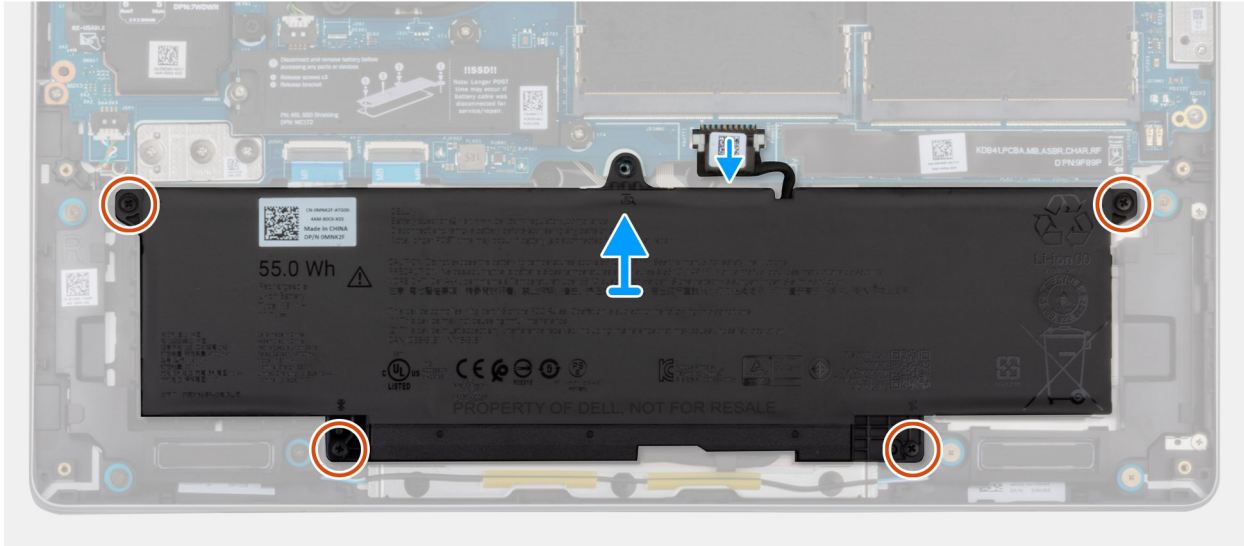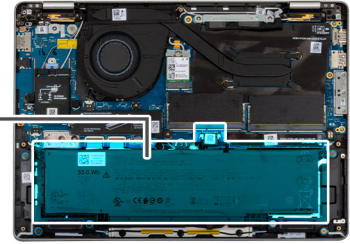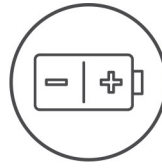

**Figure 28. Removing the battery**

### Steps

1. Disconnect the battery cable from the connector on the system board.
2. Loosen the four captive screws (M2x5) that secure the battery to the palm-rest assembly.
3. Lift the battery off the palm-rest assembly.
4. If you are replacing the battery, remove the battery cable to transfer it to the replacement battery. For more information, see [Removing the battery cable](#).

## Installing the battery

### Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following image indicates the location of the battery and provides a visual representation of the installation procedure.



4x  
M2x5

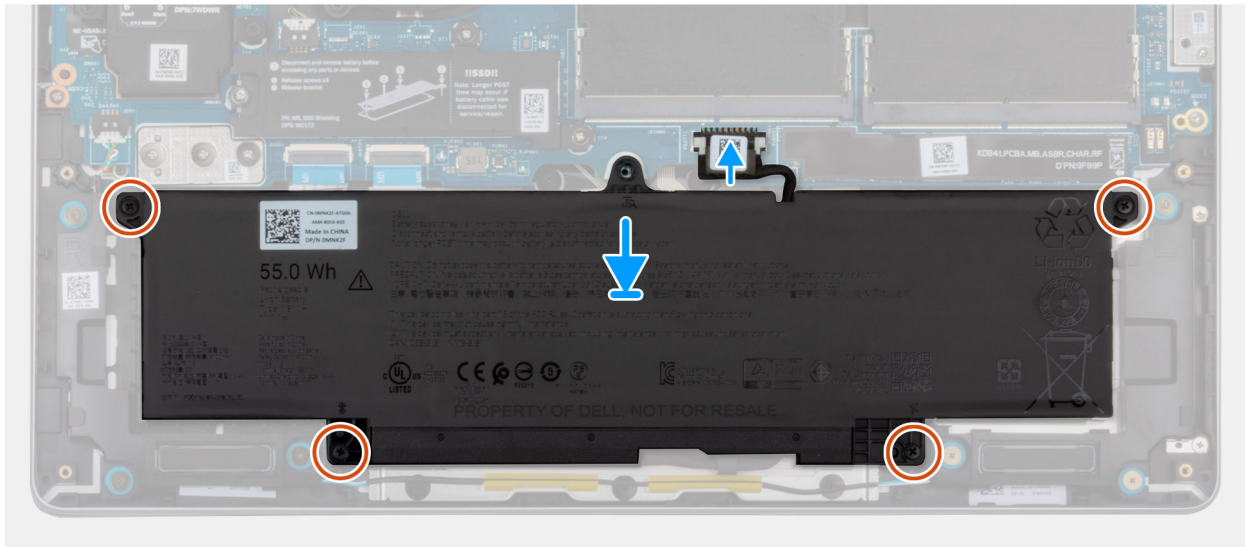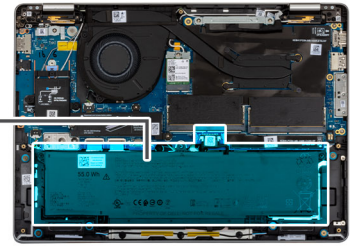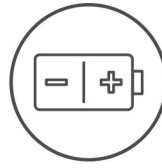

**Figure 29. Installing the battery**

### Steps

1. If the battery cable was removed for replacing the battery, you must transfer the battery cable from the old battery to the replacement battery. For more information, see [Installing the battery cable](#).
2. Place the battery in the slot on the palm-rest assembly.
3. Align the screw holes on the battery with the screw holes on the palm-rest assembly.
4. Tighten the four captive screws (M2x5) to secure the battery to the palm-rest assembly.
5. Connect the battery cable to the connector on the system board.

### Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#), if applicable.
3. Follow the procedure in [After working inside your computer](#).

## Battery cable


### Removing the battery cable

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).

#### About this task

The following images indicate the location of the battery cable and provide a visual representation of the removal procedure.

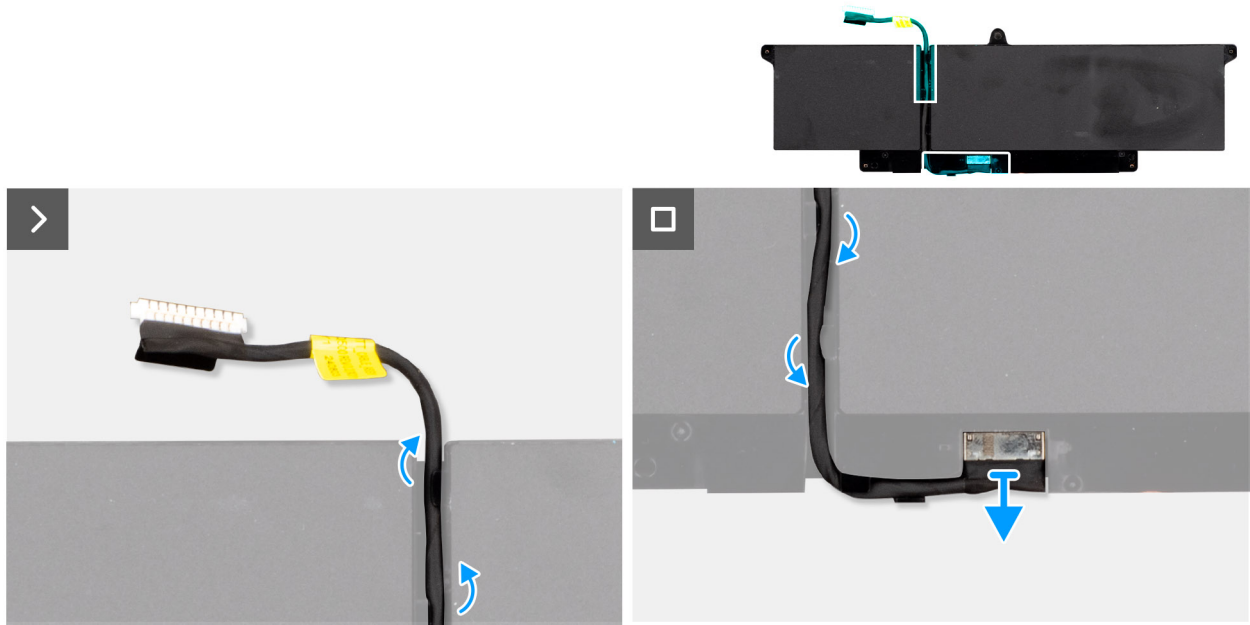

**Figure 30. Removing the battery cable**

**Steps**

1. Unthread the battery cable from the routing guides on the battery.
2. Disconnect the battery cable from the connector and remove it from the battery.


## Installing the battery cable

**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the battery cable and provide a visual representation of the installation procedure.

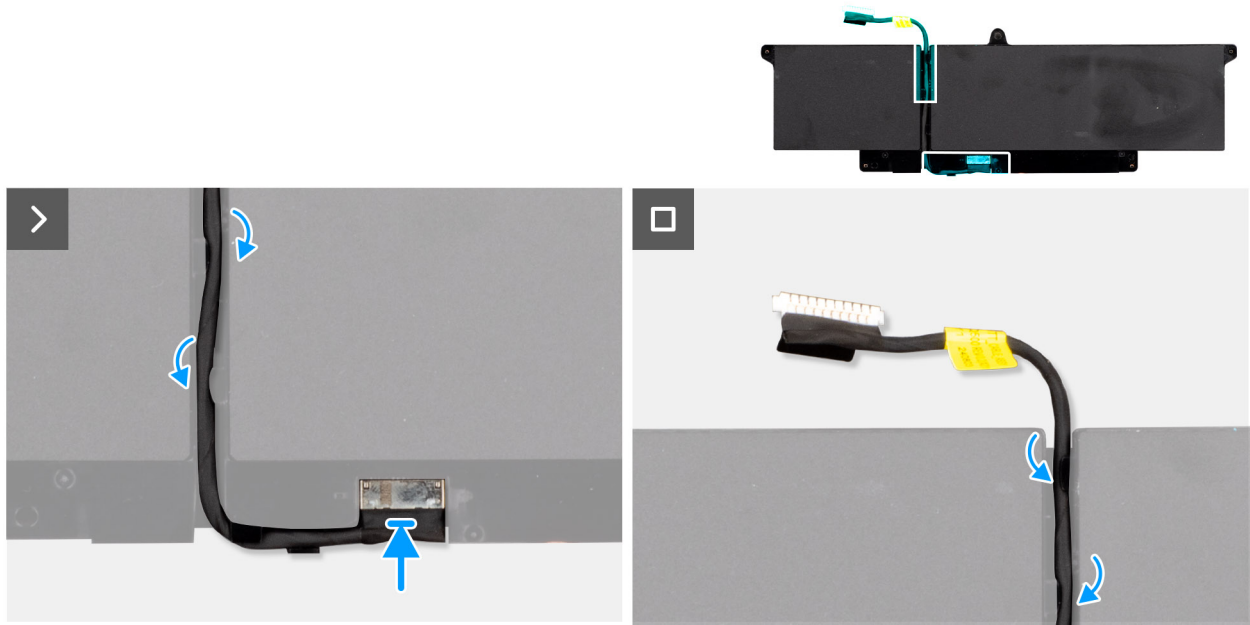

**Figure 31. Installing the battery cable**

#### Steps

1. Connect the battery cable to the connector on the battery.
2. Route the battery cable through the routing guides on the battery.

**(i) NOTE:** When installing the battery cable, ensure that the cable is properly routed under the routing guides.

#### Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Install the [SIM-card tray](#), if applicable.
4. Follow the procedure in [After working inside your computer](#).

## Memory module


### Removing the memory module

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).

#### About this task

The following images indicate the location of the memory module and provide a visual representation of the removal procedure.

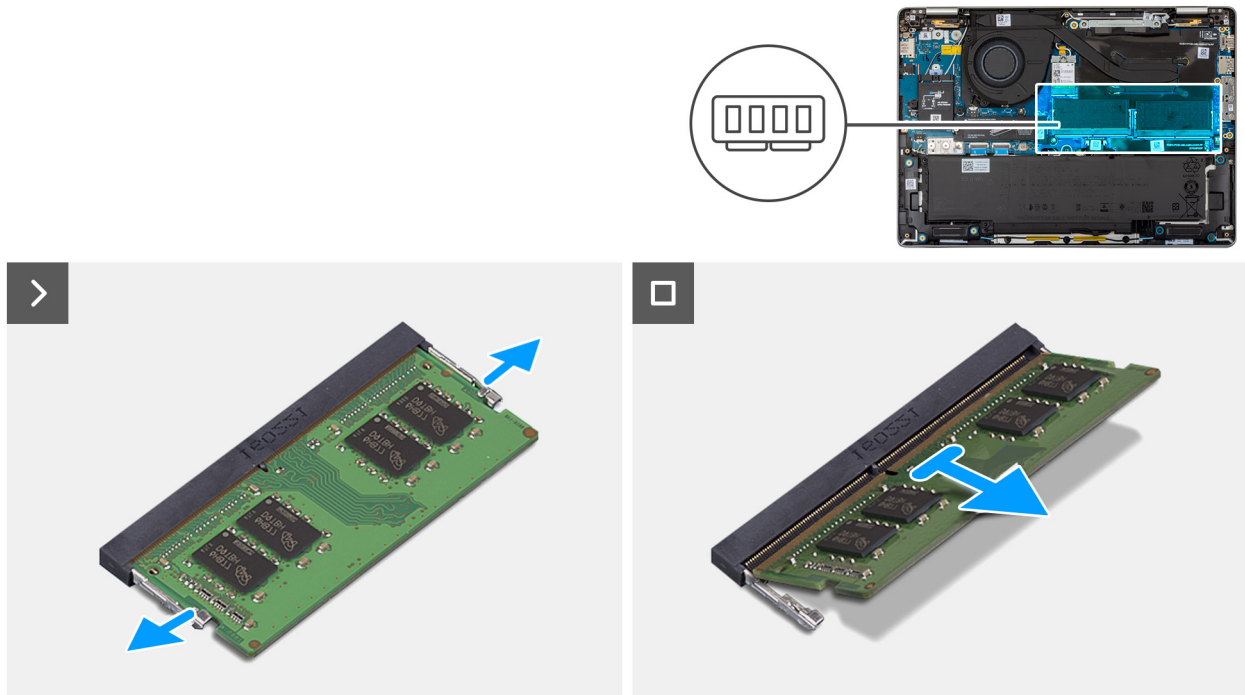

**Figure 32. Removing the memory module**

### Steps

1. Using your fingertips, spread apart the securing clips on the memory-module slot until the memory module pops up.
2. Slide and remove the memory module from the memory-module slot on the system board.

**CAUTION:** To prevent damage to the memory module, hold the memory module by the edges. Do not touch the components or metallic contacts on the memory module as electrostatic discharge (ESD) can inflict severe damage on the components. To read more about ESD protection, see [ESD protection](#).

**NOTE:** Repeat step 1 and step 2 if there is more than one memory module installed on your computer.


## Installing the memory module

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the memory module and provide a visual representation of the installation procedure.

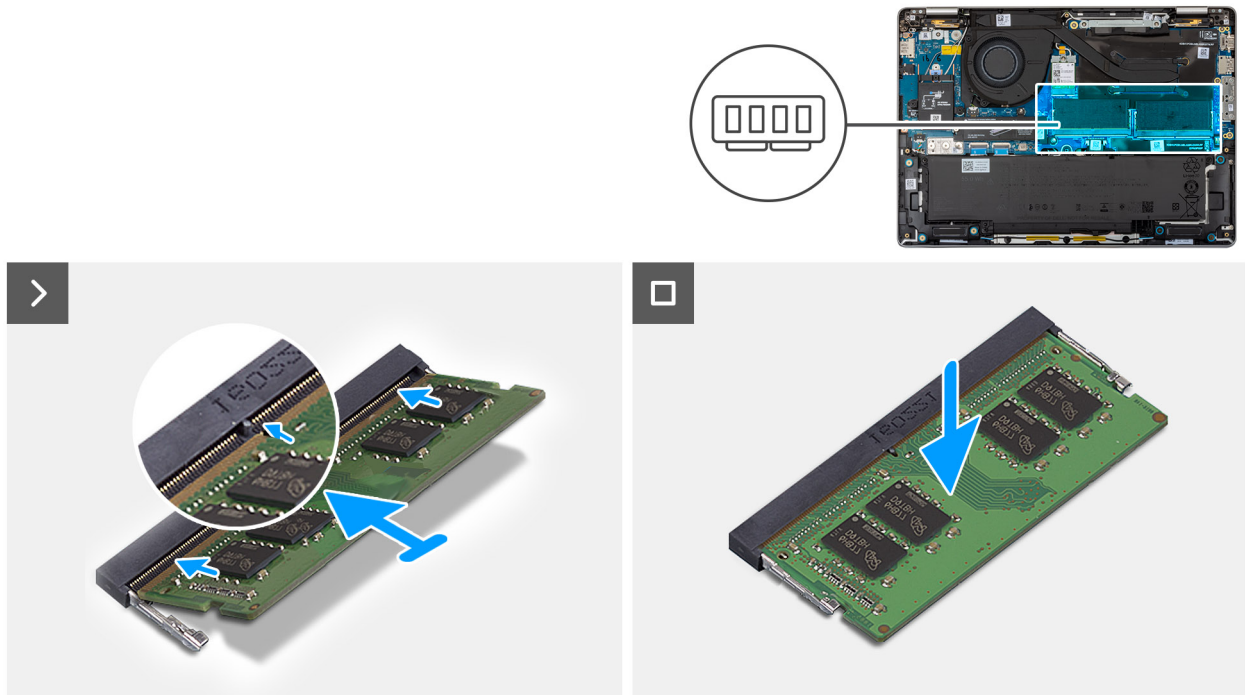

**Figure 33. Installing the memory module**

**Steps**

1. Align the notch on the memory module with the tab on the memory-module slot.
2. Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.

**CAUTION:** To prevent damage to the memory module, hold the memory module by the edges. Do not touch the components or metallic contacts on the memory module as electrostatic discharge (ESD) can inflict severe damage on the components. To read more about ESD protection, see [ESD protection](#).

**NOTE:** If you do not hear the click, remove the memory module and reinstall it.

**NOTE:** Repeat step 1 and step 2 if there is more than one memory module to be installed on your computer.

**Next steps**

1. Install the [base cover](#).
2. Install the [SIM-card tray](#), if applicable.
3. Follow the procedure in [After working inside your computer](#).

## Wireless Wide Area Network (WWAN) card

### Removing the WWAN card

**NOTE:** The 5G WWAN card is available only on certain configurations. It is connected to the computer with four antenna cables.

**Prerequisites**

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).

## About this task

The following images indicate the location of the WWAN card and provide a visual representation of the removal procedure.

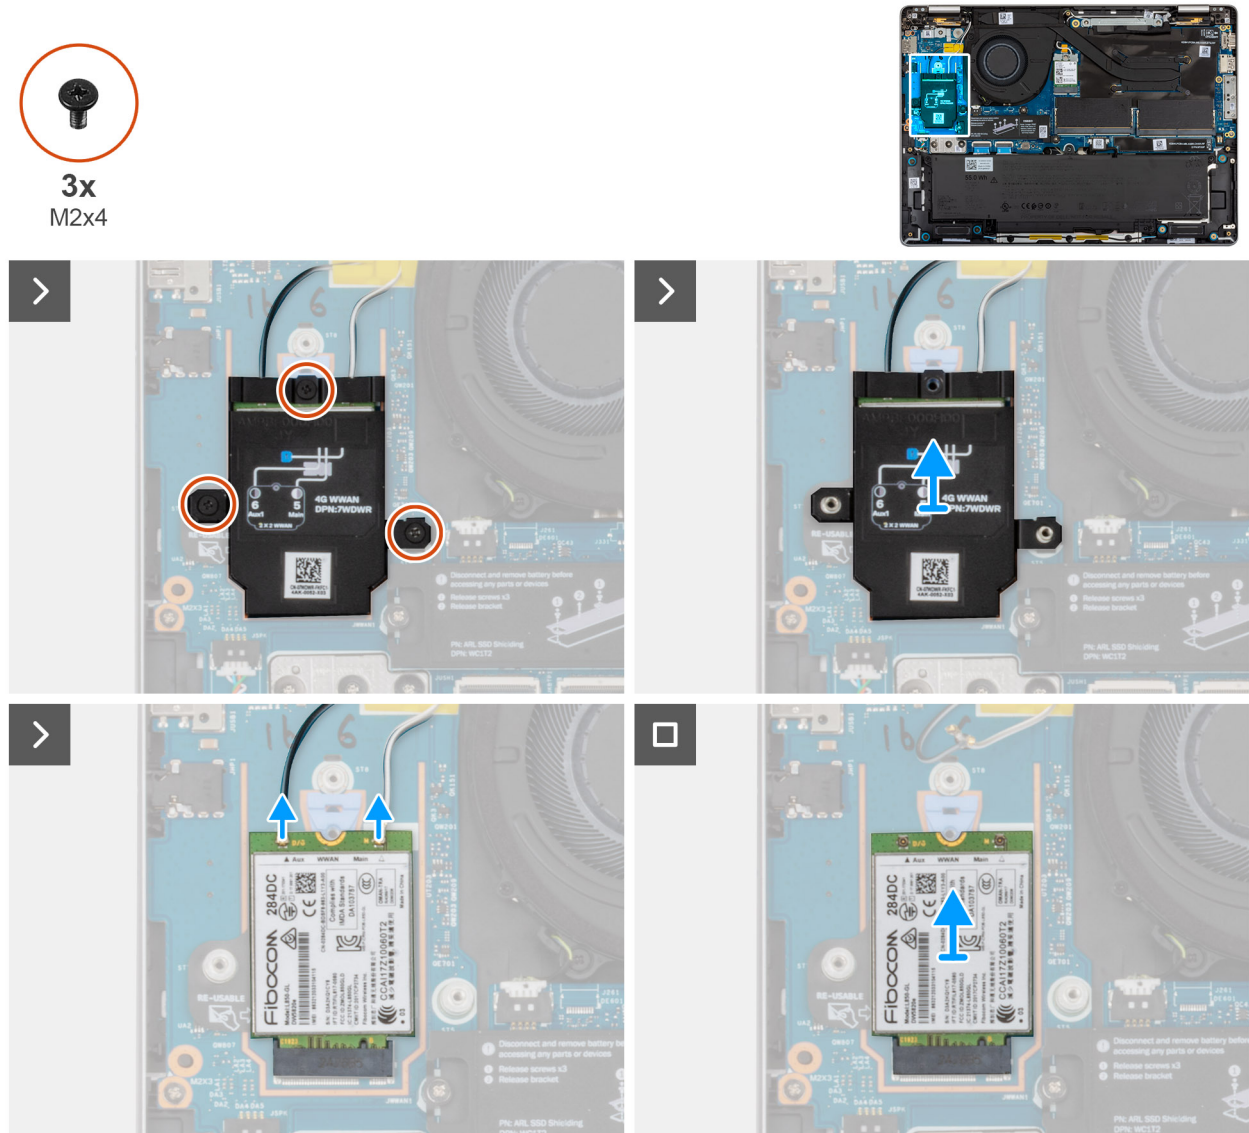


Figure 34. Removing the WWAN card

### Steps

1. Remove the three screws (M2x4) that secures the WWAN-card shield to the WWAN card and palm-rest assembly.
2. Lift the WWAN-card shield off the WWAN card.
3. Disconnect the antenna cables from the WWAN card.
4. Remove the WWAN card off the WWAN-card slot on the I/O board.

**NOTE:** If you are replacing the WWAN card, ensure that the thermal pad is in place.

**NOTE:** If you are replacing the I/O board, ensure to peel the thermal pad from the old I/O board to the new I/O board.

## Installing the WWAN card

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The following images indicate the location of the WWAN card and provide a visual representation of the installation procedure.

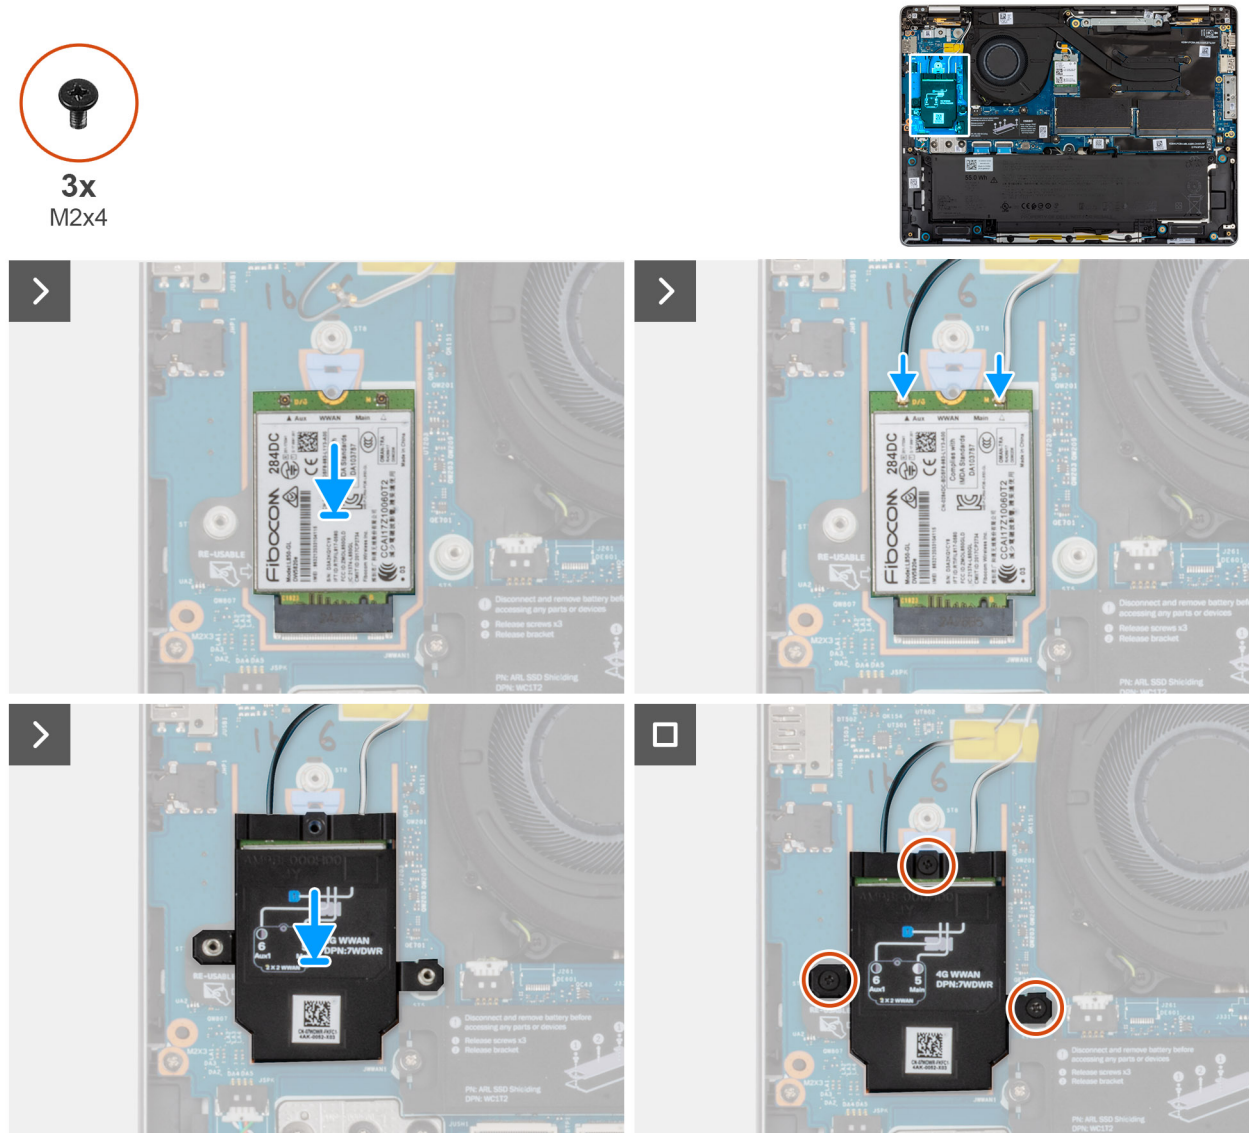


Figure 35. Installing the WWAN card

## Steps

1. Insert the WWAN card at an angle into the WWAN-card slot on the I/O board.
  - NOTE:** If you are replacing the WWAN card, ensure that the thermal pad is in place.
  - NOTE:** If you are replacing the I/O board, ensure to peel the thermal pad from the old I/O board to the new I/O board.
  - NOTE:** If the thermal pad is damaged, peel the thermal pad from the I/O board and replace it with a new thermal pad. The thermal pad must be purchased separately.
2. Connect the antenna cables to the WWAN card.
3. Align and place the WWAN-card shield on the WWAN card.
4. Replace the three screws (M2x4) that secure the WWAN-card shield to the WWAN and the palm-rest assembly.

## Next steps

1. Install the [base cover](#).

2. Install the [SIM-card tray](#), if applicable.
3. Follow the procedure in [After working inside your computer](#).

## Solid State Drive (SSD)


### Removing the M.2 2230 solid state drive (SSD)

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).

#### About this task

The following images indicate the location of the M.2 2230 solid state drive (SSD) and provide a visual representation of the removal procedure.

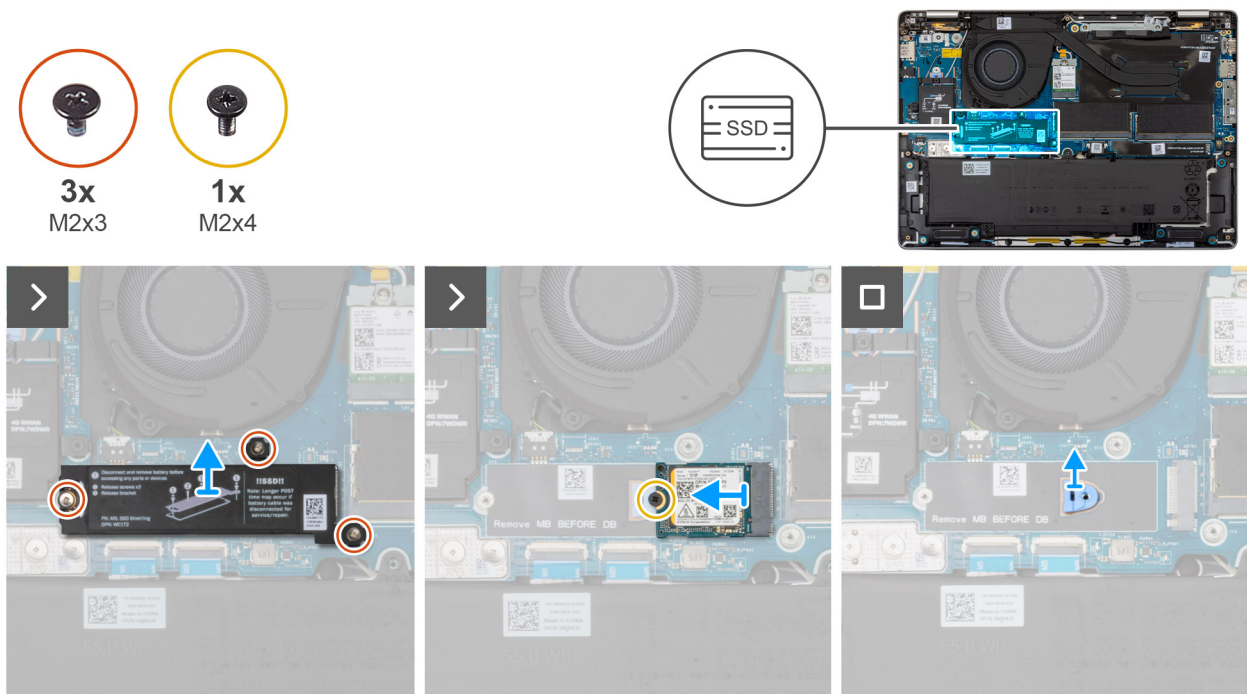

**Figure 36. Removing the M.2 2230 SSD**

#### Steps

1. Remove the three screws (M2x3) that secure the SSD-shielding cover to the palm-rest assembly.
2. Remove the SSD-shielding cover off the SSD.
  - NOTE:** If the thermal pads get separated from the shielding cover or gets adhered to the SSD while replacing the SSD, the technicians must adhere it back to the SSD cover before reinstalling the SSD.
3. Remove the screw (M2x4) that secures the M.2230 SSD to the system board.
4. Slide and remove the M.2 2230 SSD from the SSD slot.
5. Lift the SSD screw holder from the system board.
  - NOTE:** For models shipped with M.2 2230 SSD, if the system board is replaced, ensure to transfer the M.2 2230 SSD screw holder to the replacement system board.

# Installing the M.2 2230 solid state drive (SSD)

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The following images indicate the location of the M.2 2230 solid state drive (SSD) and provide a visual representation of the installation procedure.

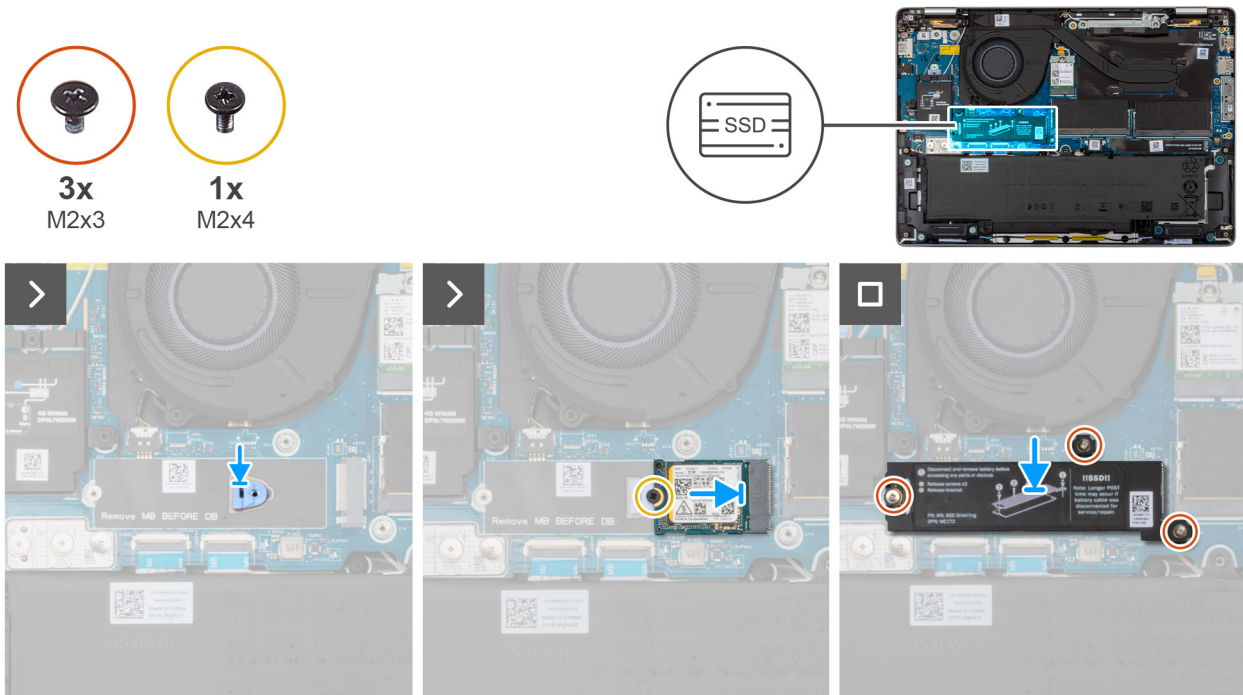


Figure 37. Installing the M.2 2230 SSD

## Steps

1. Align and place the SSD screw holder on the system board.  
**NOTE:** For models shipped with M.2 2230 SSD, if the system board is replaced, ensure to transfer the M.2 2230 SSD screw holder to the replacement system board.
2. Align the notch on the M.2 2230 SSD with the tab on the M.2 2230 SSD slot.
3. Replace the screw (M2x4) that secures the M.2 2230 SSD to the system board.
4. Align and place the SSD-shielding cover on the SSD.
5. Replace the three screws (M2x3) to secure the SSD-shielding cover to the SSD and the system board.

## Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#), if applicable.
3. Follow the procedure in [After working inside your computer](#).

# Removing the M.2 2280 solid state drive (SSD)


## Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.

3. Remove the [base cover](#).

### About this task

The following images indicate the location of the M.2 2280 solid state drive (SSD) and provide a visual representation of the removal procedure.

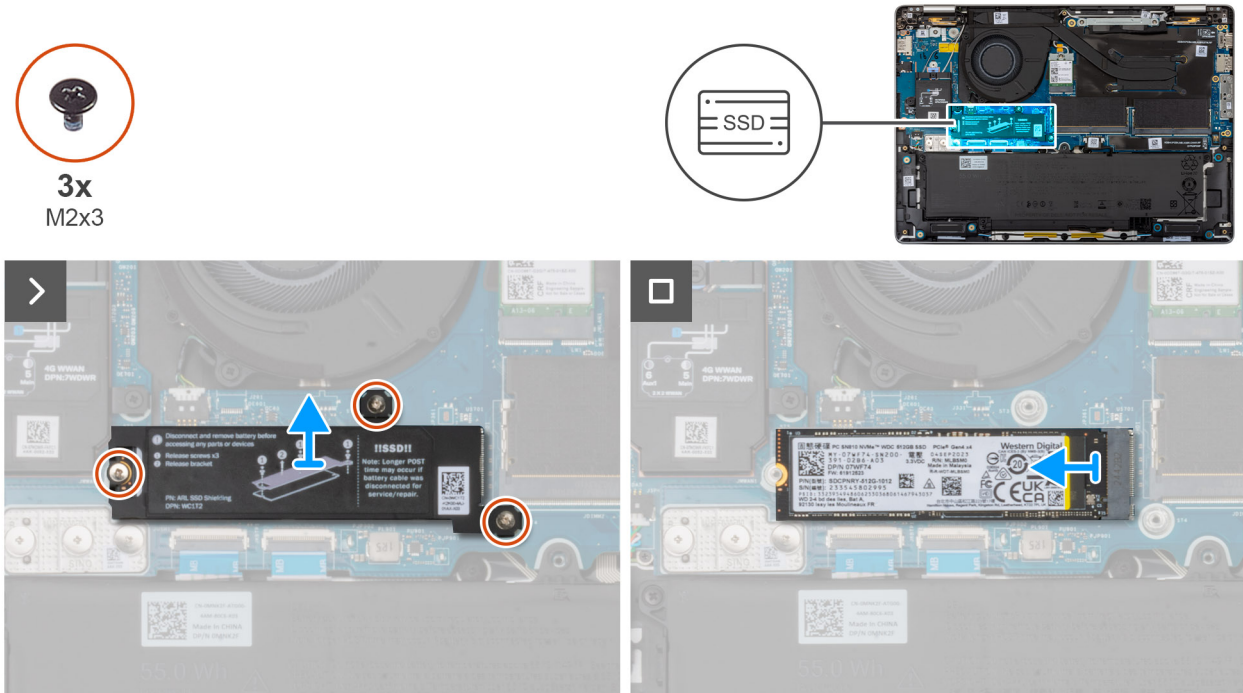

**Figure 38. Removing the M.2 2280 SSD**

### Steps

1. Remove the three screws (M2x3) that secure the SSD-shielding cover to the system board.
2. Lift the SSD-shielding cover off the palm-rest assembly.

**NOTE:** If the thermal pads get separated from the SSD thermal shield or gets adhered to the SSD while replacing the SSD, the technicians must adhere the thermal pad to the SSD-shielding cover before reinstalling it to the computer.

3. Slide and remove the M.2 2280 SSD from the SSD slot.

## Installing the M.2 2280 solid state drive (SSD)

### Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the M.2 2280 solid state drive (SSD) and provide a visual representation of the installation procedure.



3x  
M2x3

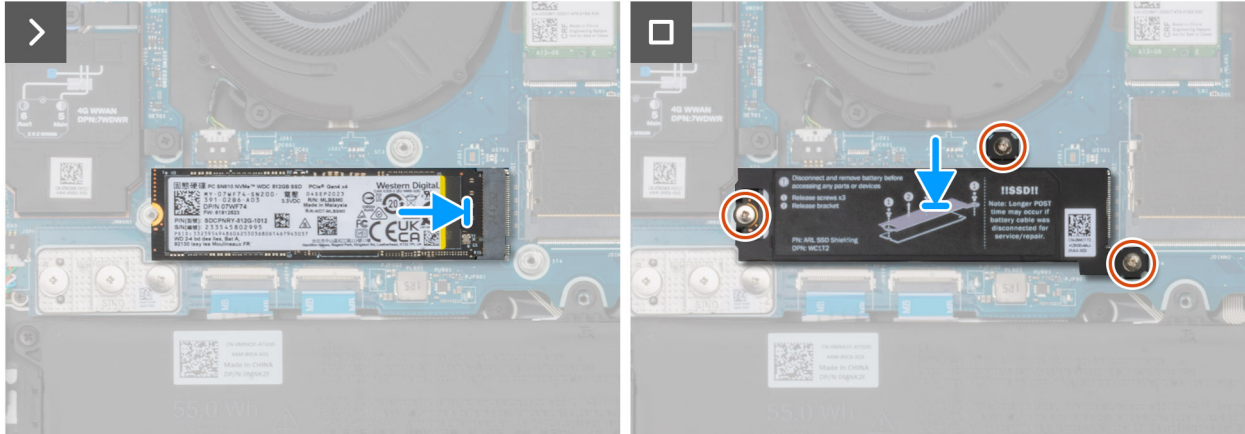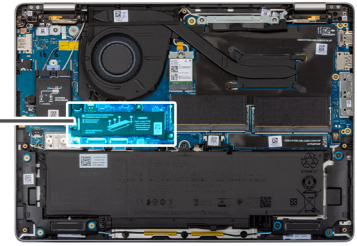

**Figure 39. Installing the M.2 2280 SSD**

### Steps

1. Align the notch on the M.2 2280 SSD with the tab on the M.2 2280 SSD slot.
2. Slide the M.2 2280 SSD into the M.2 2280 SSD slot.
3. Align and place the SSD-shielding cover on the SSD.
4. Replace the three screws (M2x3) to secure the SSD-shielding cover to the system board.

### Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#), if applicable.
3. Follow the procedure in [After working inside your computer](#).

## Wireless Local Area Network (WLAN) card

### Removing the WLAN card

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).

#### About this task

The following images indicate the location of the WLAN card and provide a visual representation of the removal procedure.



1x  
M2x3



Figure 40. Removing the WLAN card

### Steps

1. Remove the screw (M2x3) that secures the WLAN-card bracket to the system board.
2. Lift the WLAN-card bracket off the WLAN card.
3. Disconnect the WLAN-antenna cables from the connectors on the WLAN card.
4. Slide and remove the WLAN card from the WLAN-card slot.

## Installing the WLAN card

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the WLAN card and provide a visual representation of the removal procedure.



1x  
M2x3



**Figure 41. Installing the WLAN card**

### Steps

1. Align the notch on the WLAN card with the tab on the WLAN-card slot.
2. At an angle, slide and place the WLAN card into the WLAN-card slot.
3. Connect the WLAN-antenna cables to the respective connectors on the WLAN card.

**Table 35. WLAN-antenna cable color scheme**

Connectors on the WLAN card	Antenna-cable color
Main - White triangle (△)	White cable
Auxiliary - Solid triangle (▲)	Black cable

4. Place the WLAN-card bracket on the WLAN card.
5. Replace the screw (M2x3) to secure the WLAN-card bracket and the WLAN card to the system board.

### Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#), if applicable.
3. Follow the procedure in [After working inside your computer](#).

## Speakers

### Removing the speakers

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).

### About this task

The following image indicates the location of the speakers and provides a visual representation of the removal procedure.

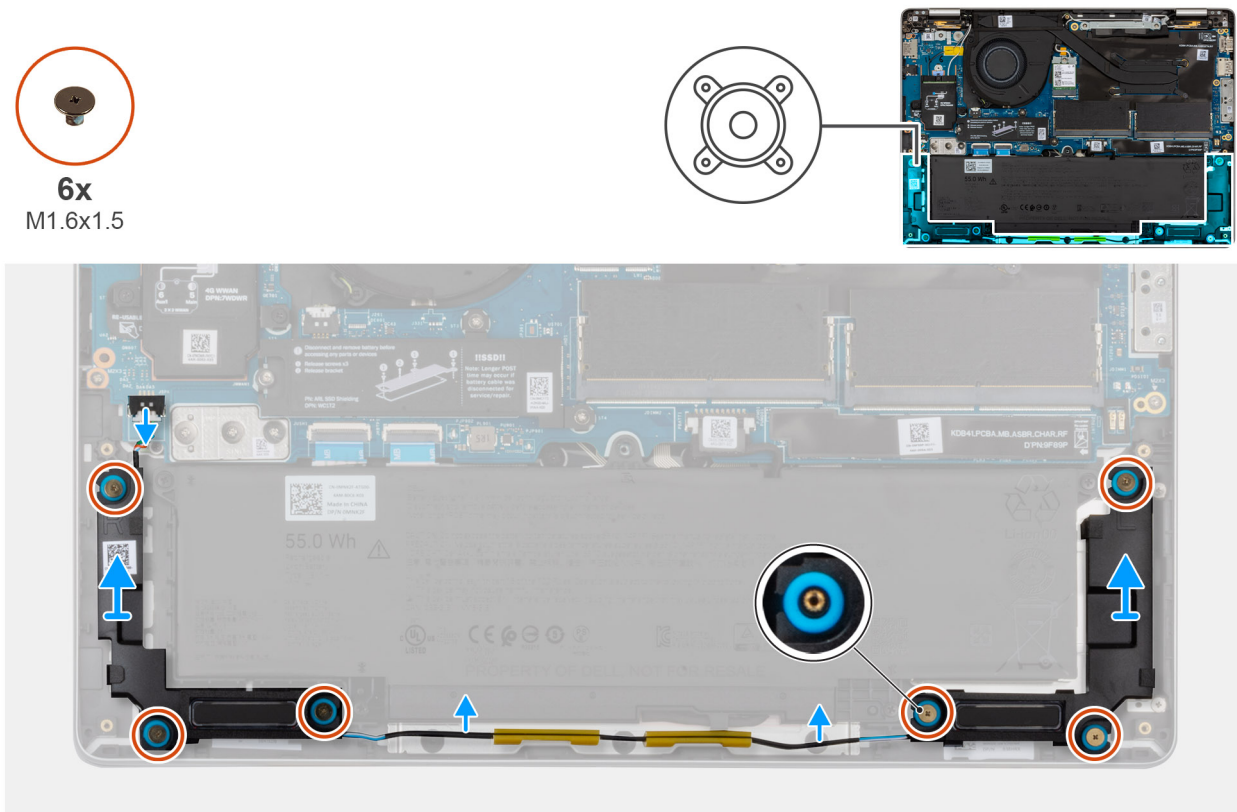


Figure 42. Removing the speakers

### Steps

1. Disconnect the speaker cable from the connector on the I/O board.
2. Remove the speaker cable from the routing guides on the palm-rest assembly.
3. Remove the six screws (M1.6x1.5) that secure the speakers to the palm-rest assembly.
4. Release the right and left speakers from the rubber grommets and lift the speakers along with the cable, off the palm-rest assembly.

## Installing the speakers




### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

**NOTE:** If the rubber grommets are pushed out when removing the speakers, push them back in before replacing the speakers.

The following image indicates the location of the speakers and provides a visual representation of the installation procedure.

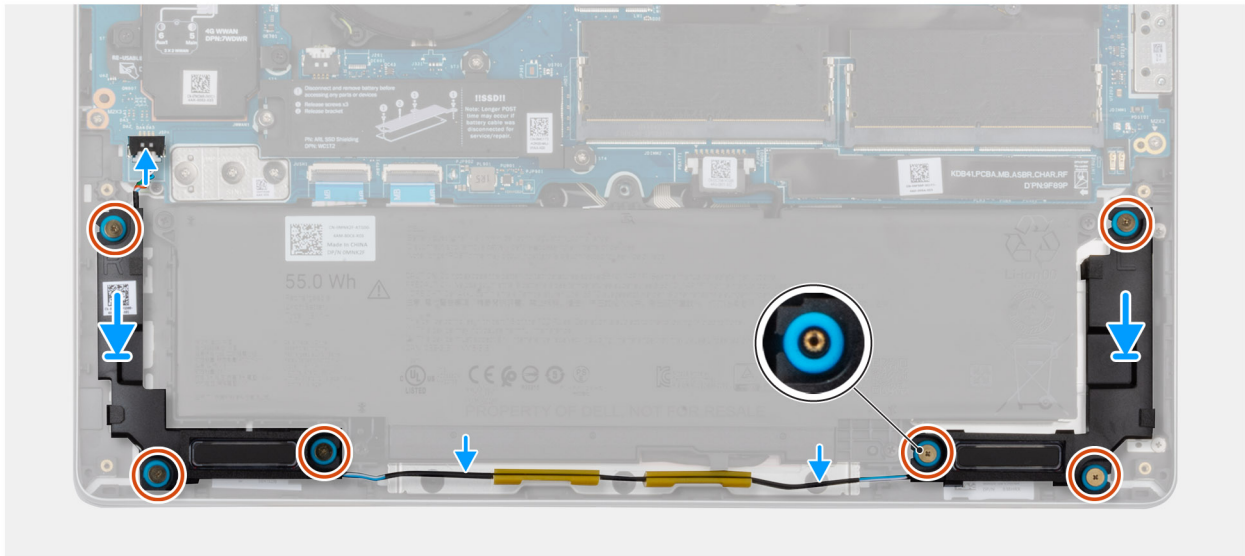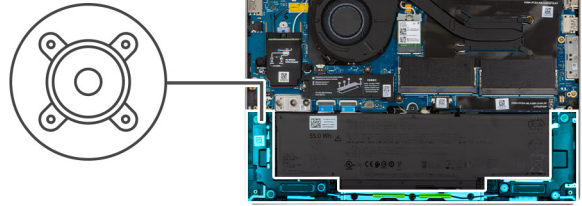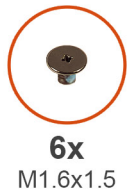

**Figure 43. Installing the speakers**

### Steps

1. Using the alignment posts and rubber grommets, place the speakers into the slots on the palm-rest assembly.
  - NOTE:** To properly position the speakers, secure the rubber grommets into the hooks.
  - NOTE:** Ensure that the rubber grommets on the speakers are threaded through the alignment posts. Ensure that the four rubber grommets are seated into the slot and installed on the speakers properly.
2. Route the speaker cable through the routing guides on the palm-rest assembly.
3. Replace the six screws (M1.6x1.5) to secure the speakers to the palm-rest assembly.
4. Connect the speaker cable to the speaker-cable connector on the I/O board.

### Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#), if applicable.
3. Follow the procedure in [After working inside your computer](#).

# Removing and installing Field Replaceable Units (FRUs)

The replaceable components in this chapter are Field Replaceable Units (FRUs).

**CAUTION:** The information in this section is intended for authorized service technicians only.

**CAUTION:** To avoid any potential damage to the component or loss of data, ensure that an authorized service technician replaces the Field Replaceable Units (FRUs).

**CAUTION:** Dell Technologies recommends that these procedures be performed by trained technical repair specialists.

**CAUTION:** Your warranty does not cover damages that may occur during FRU repairs that are not authorized by Dell Technologies.

**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## Fan and heat-sink assembly

### Removing the fan and heat-sink assembly

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).

#### About this task

The following images indicate the location of the fan and heat-sink assembly and provide a visual representation of the removal procedure.

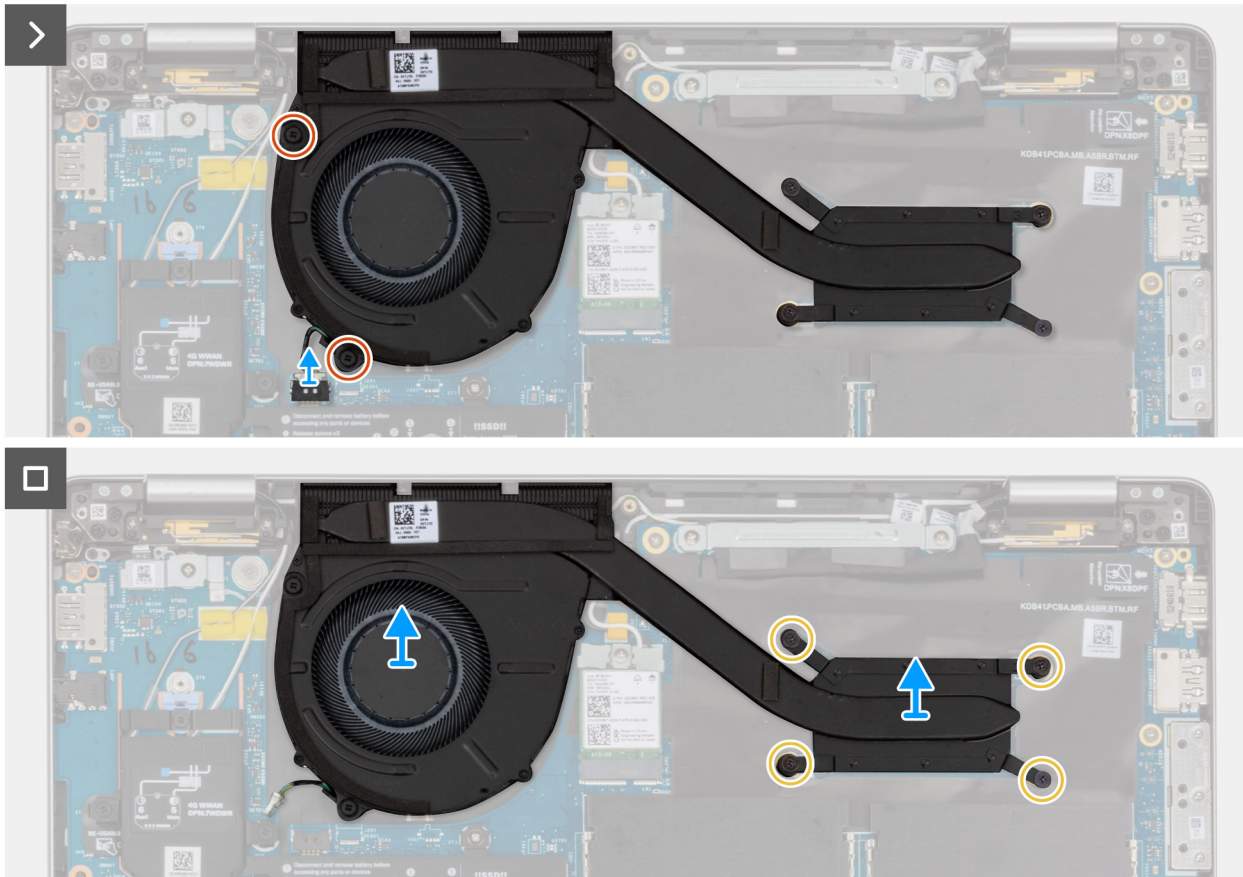
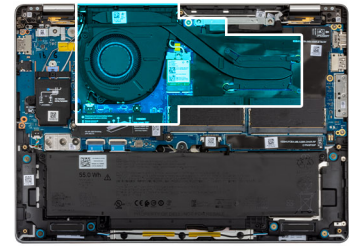
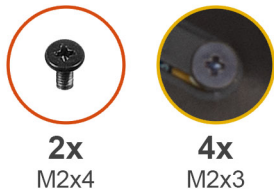


Figure 44. Removing the fan and heat-sink assembly

### Steps

1. Disconnect the fan cable from the connector on the system board.
2. Remove the two screws (M2x4) that secure the fan to the palm-rest assembly.
3. Loosen the four captive screws (M2x3) that secure the fan and heat-sink assembly to the system board.  
**i** NOTE: Loosen the captive screws in the reverse sequential order mentioned on the heat sink [4 > 3 > 2 > 1].
4. Lift and remove the fan and heat-sink assembly from the computer.

## Installing the fan and heat-sink assembly

**⚠ CAUTION:** The information in this installation section is intended for authorized service technicians only.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the fan and heat-sink assembly and provide a visual representation of the installation procedure.



2x  
M2x4



4x  
M2x3

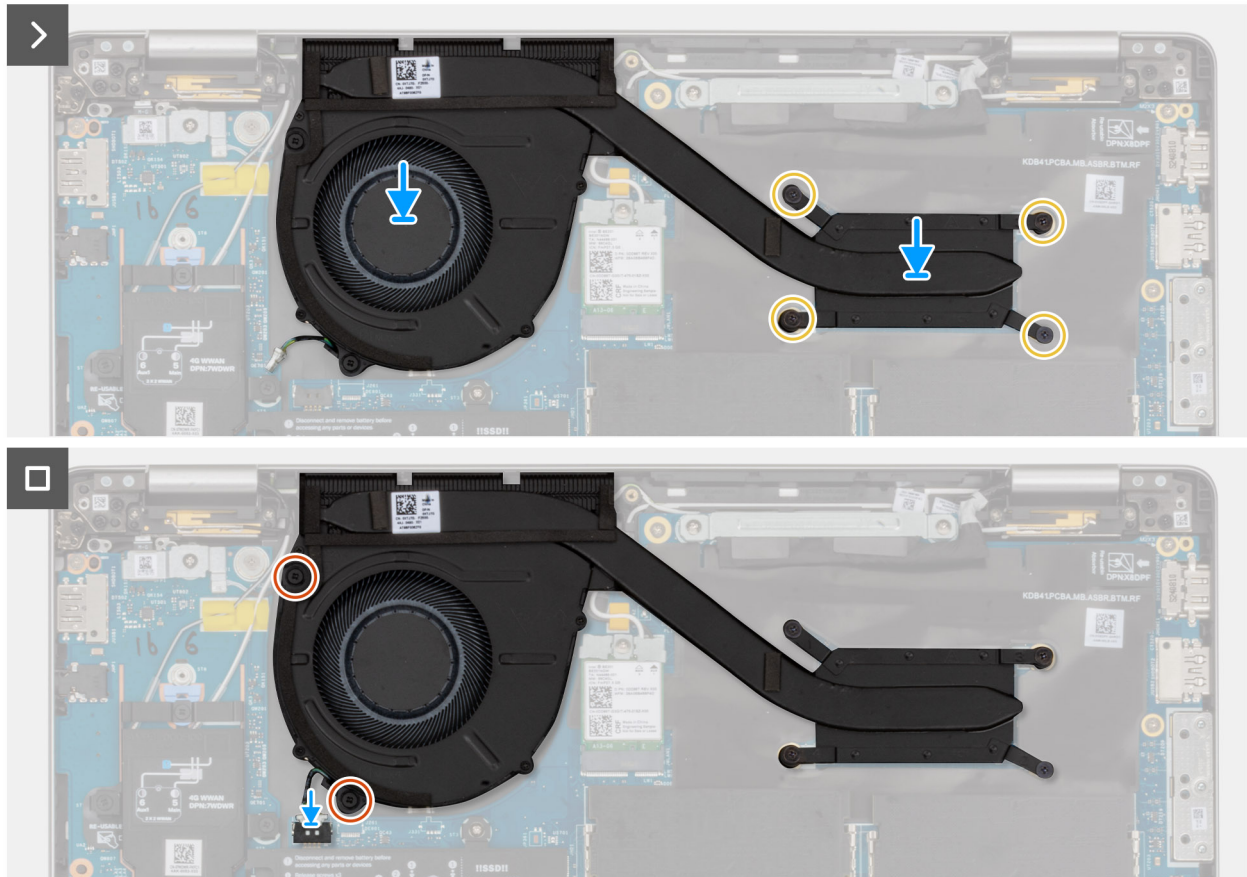
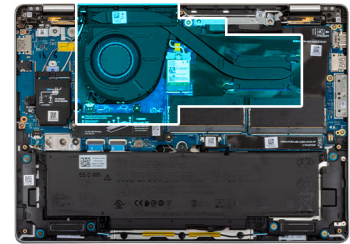


Figure 45. Installing the fan and heat-sink assembly

### Steps

1. Align and place the fan and heat-sink assembly on the system board.
2. Replace the two screws (M2x4) to secure the fan to the palm-rest assembly.
3. Tighten the four captive screws (M2x3) to secure the fan and heat-sink assembly to the system board.

**NOTE:** Tighten the captive screws in the sequential order mentioned on the heat sink [1 > 2 > 3 > 4].

4. Connect the fan cable to the connector on the system board.

### Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#), if applicable.
3. Follow the procedure in [After working inside your computer](#).

# USH board

## Removing the USH board


**CAUTION:** The information in this removal section is intended for authorized service technicians only.

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).

### About this task

The following images indicate the location of the USH board and provide a visual representation of the removal procedure.

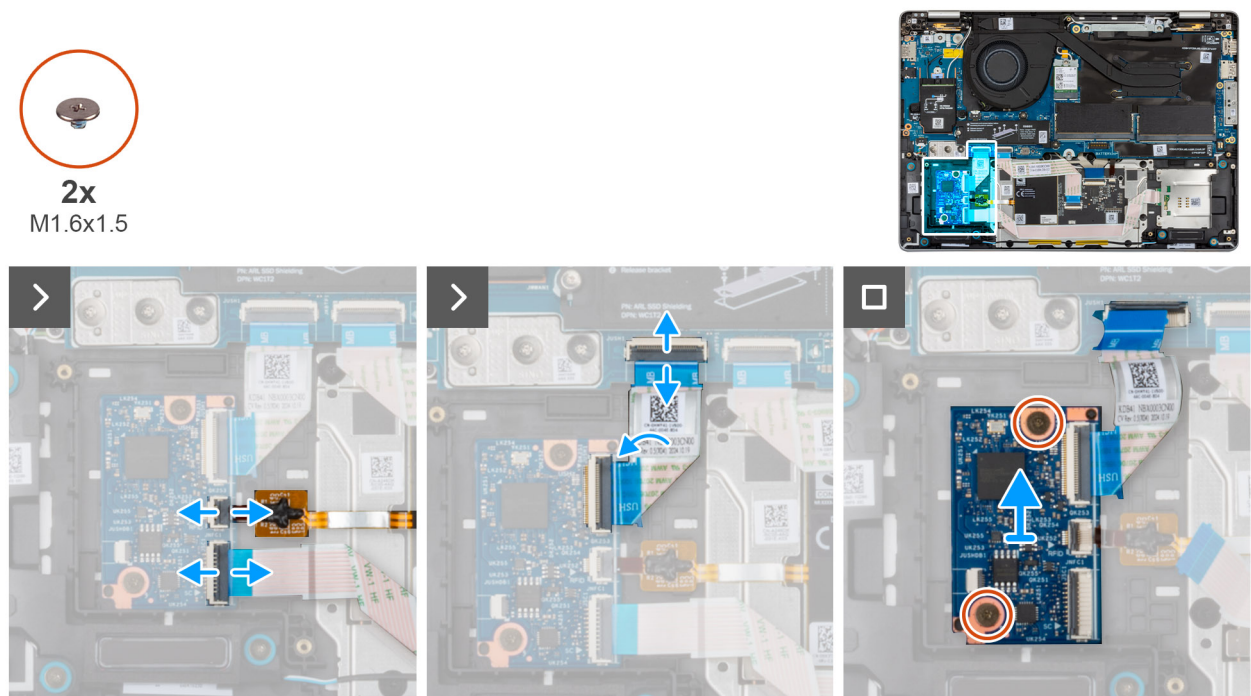

**Figure 46. Removing the USH board**

### Steps

1. Lift the latch and disconnect the smart card reader cable from the connector on the USH board.  
**NOTE:** This step applies only to computers shipped with smart card reader installed.
2. Lift the latch and disconnect the NFC-sensor cable from the connector on the USH board.  
**NOTE:** This step applies only to computers shipped with NFC-sensor installed.
3. Lift the latch and disconnect the USH-board cable from the system board.
4. Remove the two screws (M1.6x1.5) that secure the USH board to the palm-rest assembly.
5. Lift the USH board off the palm-rest assembly.

## Installing the USH board

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the USH board and provide a visual representation of the installation procedure.

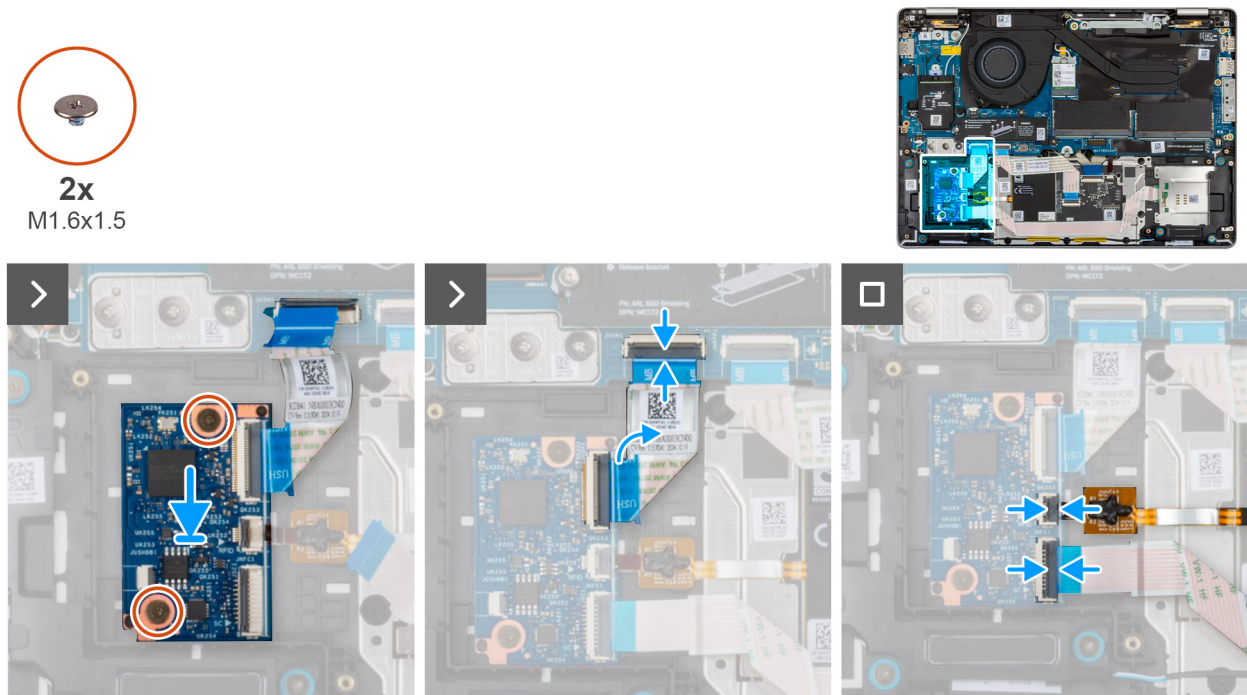


Figure 47. Installing the USH board

### Steps

1. Align and place the USH board in its slot on the palm-rest assembly.
2. Replace the two screws (M1.6x1.5) to secure the USH board to the palm-rest assembly.
3. Connect the USH-board cable to the connector on the system board.
4. Connect the NFC-sensor cable to the connector on the USH board.

**NOTE:** This step applies only to computers shipped with NFC-sensor installed.

5. Connect the smart card reader cable to the connector on the USH board.

**NOTE:** This step applies only to computers shipped with smart card reader installed.

### Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Install the [SIM-card tray](#), if applicable.
4. Follow the procedure in [After working inside your computer](#).

# Smart card reader


## Removing the smart card reader

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.





### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).

### About this task

 **NOTE:** This procedure applies only to computers shipped with a smart card reader installed.

The following images indicate the location of the smart card reader and provide a visual representation of the removal procedure.

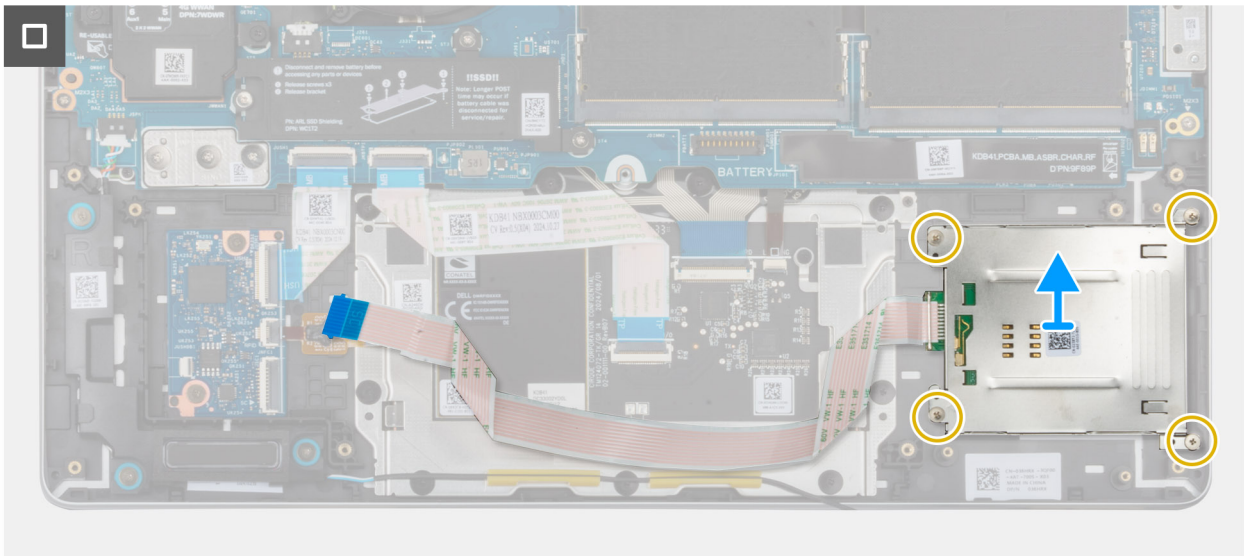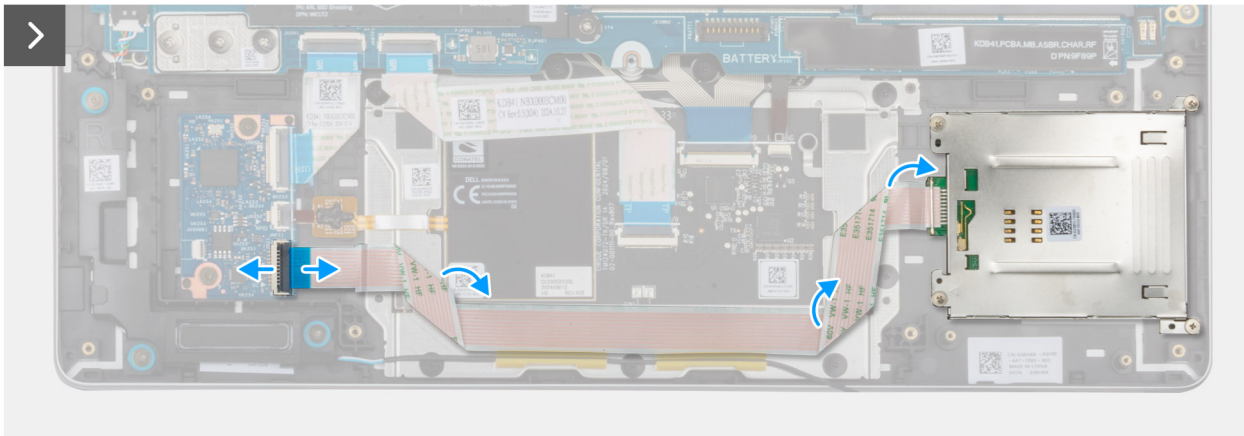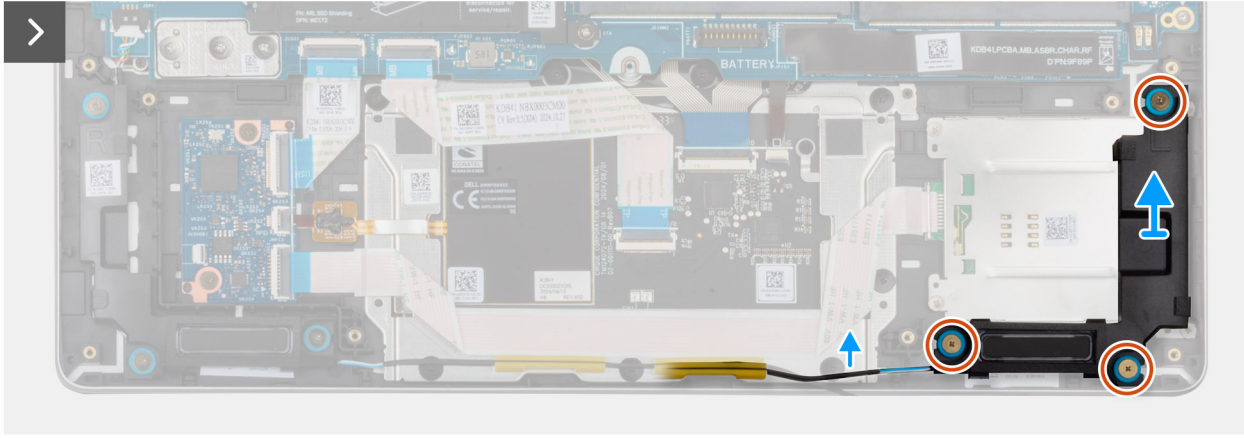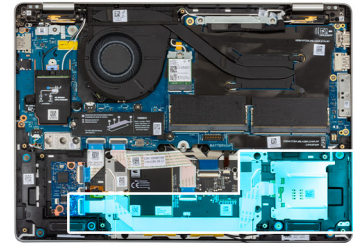

**Figure 48. Removing the smart card reader**

### Steps

1. Remove the three screws (M1.6x1.5) that secure the speaker to the palm-rest assembly.
2. Release the speaker from the rubber grommets. Carefully remove the speaker and place it away from the palm-rest assembly.
3. Open the latch and disconnect the smart card reader cable from the USH board.
4. Peel the smart card reader cable from the palm-rest assembly.
5. Remove the four screws (M2x2) that secure the smart card reader to the palm-rest assembly.
6. Lift the smart card reader, along with its cable, off the palm-rest assembly.

## Installing the smart card reader

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the smart card reader and provide a visual representation of the installation procedure.

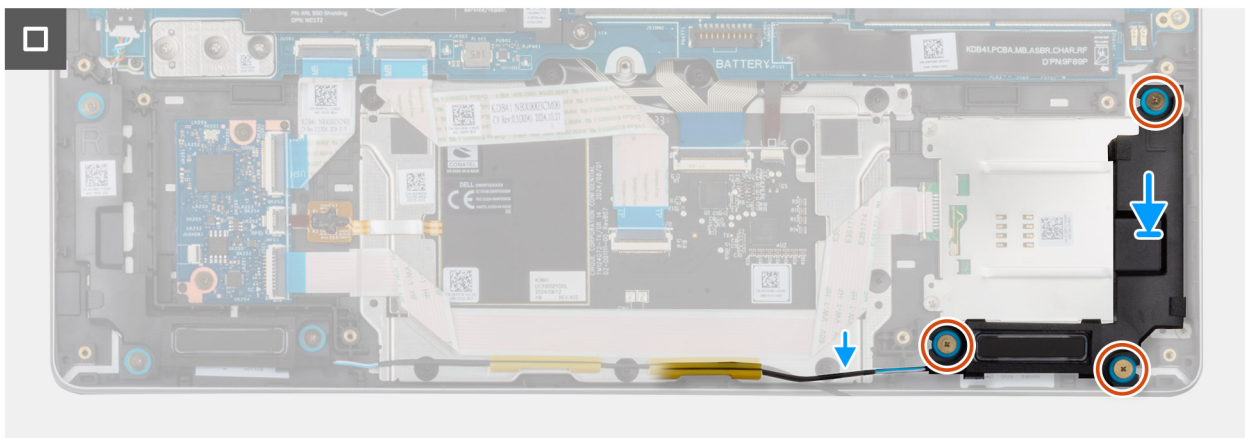
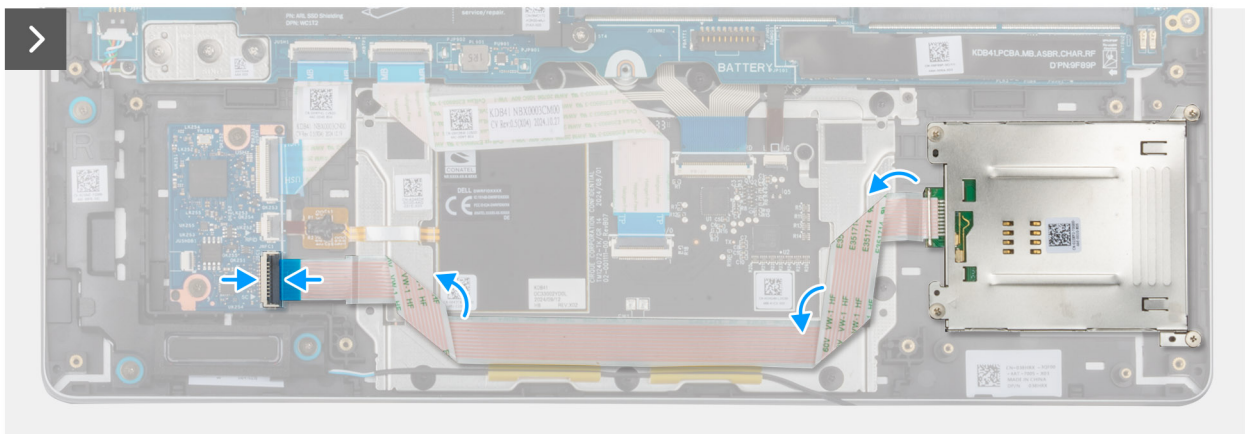
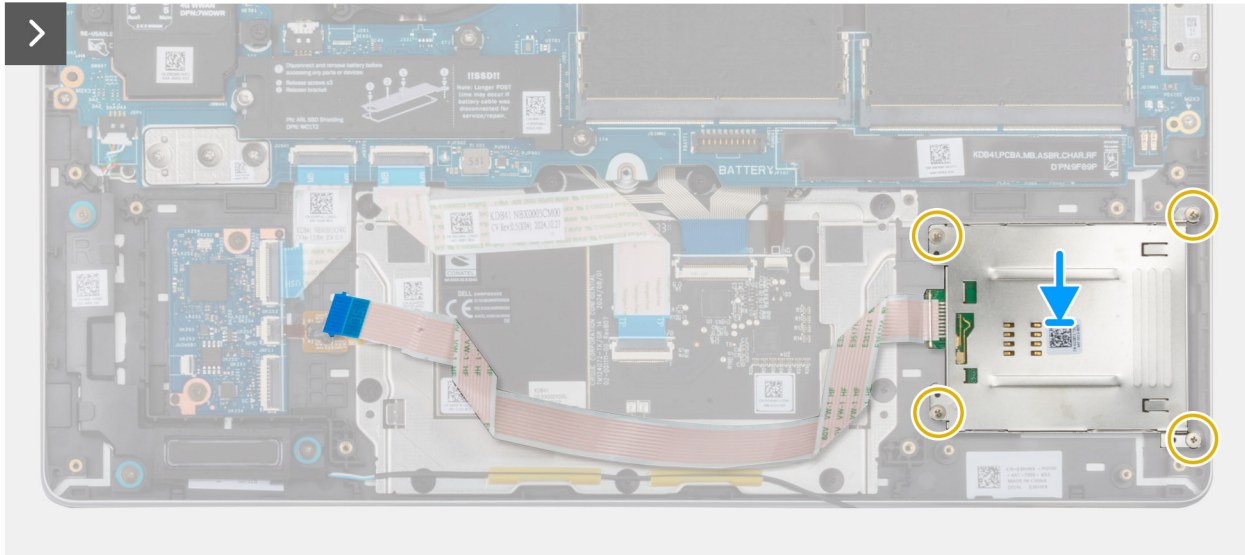
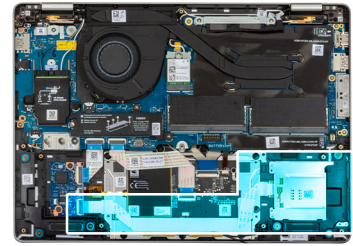
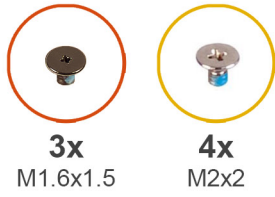


Figure 49. Installing the smart card reader

## Steps

1. Align and place the smart card reader on its slot on the palm-rest assembly.
2. Replace the four screws (M2x2) to secure the smart card reader to the palm-rest assembly.
3. Connect the smart card reader cable to the connector on the USH board and close the latch to secure the cable.
4. Using the alignment posts and rubber grommets, place the speaker into the slot on the palm-rest assembly.  
**NOTE:** Ensure that the rubber grommets on the speaker are threaded through the alignment posts. Ensure that the rubber grommets are seated into the slot and installed on the speaker properly.
5. Route the speaker cable through the routing guides on the palm-rest assembly.
6. Replace the three screws (M1.6x1.5) to secure the speaker to the palm-rest assembly.


## Next steps

1. Install the [speakers](#).
2. Install the [battery](#).
3. Install the [base cover](#).
4. Install the [SIM-card tray](#), if applicable.
5. Follow the procedure in [After working inside your computer](#).

# System board

## Removing the system board

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

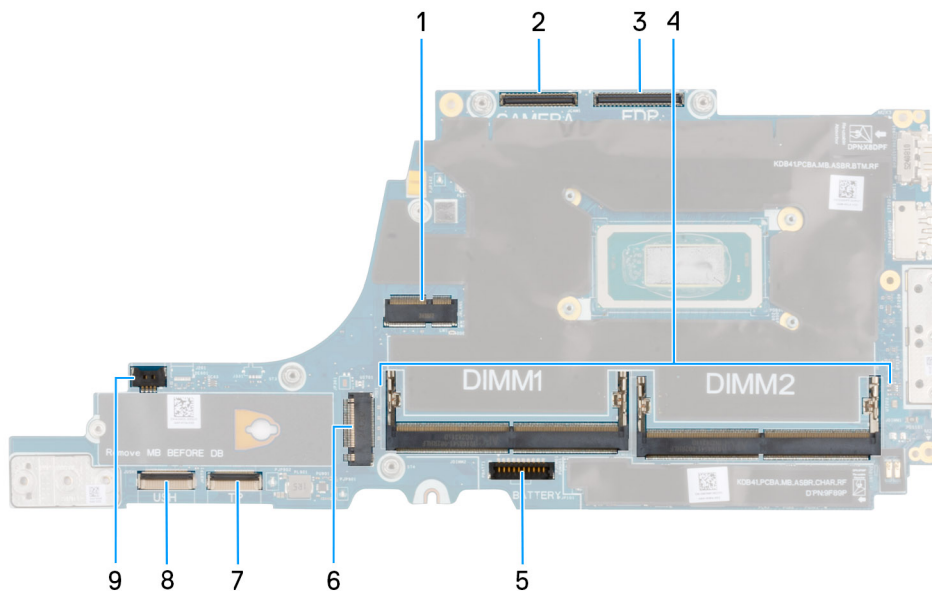

**Figure 50. System board connectors**

1. WLAN-card connector
2. Camera-cable connector
3. Display-cable connector
4. Memory module slot
5. Battery-cable connector


6. Solid state drive connector
7. Touchpad-cable connector
8. USH board-cable connector
9. Fan-cable connector

**Prerequisites**

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [memory module](#).
6. Remove the [WWAN card](#), if applicable.
7. Remove the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
8. Remove the [fan and heat-sink assembly](#).

**About this task**

The following images indicate the location of the system board and provide a visual representation of the removal procedure.

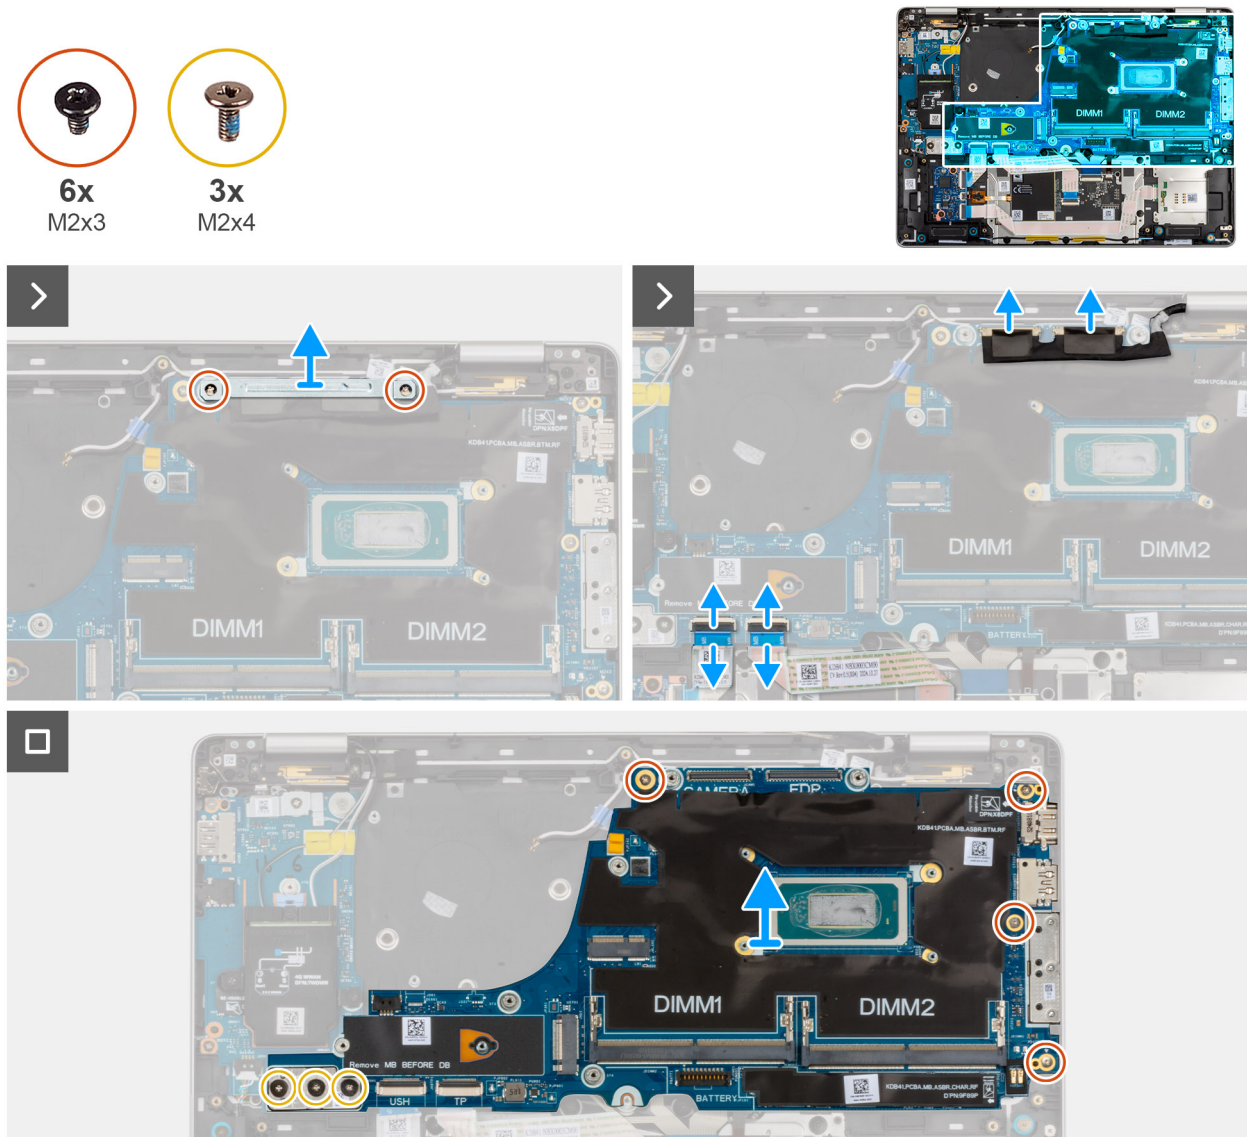

**Figure 51. Removing the system board**


## Steps

1. Remove the two screws (M2x3) that secure the display-cable bracket to the system board.
2. Lift the display-cable bracket off the system board.
3. Disconnect the following cables from the system board:
  - a. Display cable
  - b. Camera cable
  - c. Touchpad cable
  - d. USH-board cable (for models shipped with a USH board)
4. For computers shipped without WWAN card, remove the four screws (M2x3) and the two screws (M2x4) that secure the system board to the palm-rest assembly.
5. For computers shipped with WWAN card, remove the four screws (M2x3) and the three screws (M2x4) that secure the system board to the palm-rest assembly.
6. Carefully lift the system board off the palm-rest assembly.

**NOTE:** When replacing the system board, do not remove the USB Type-C connector module or transfer it to the replacement system board. The USB Type-C connector module is pre-assembled in the replacement system board .

## Installing the system board

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

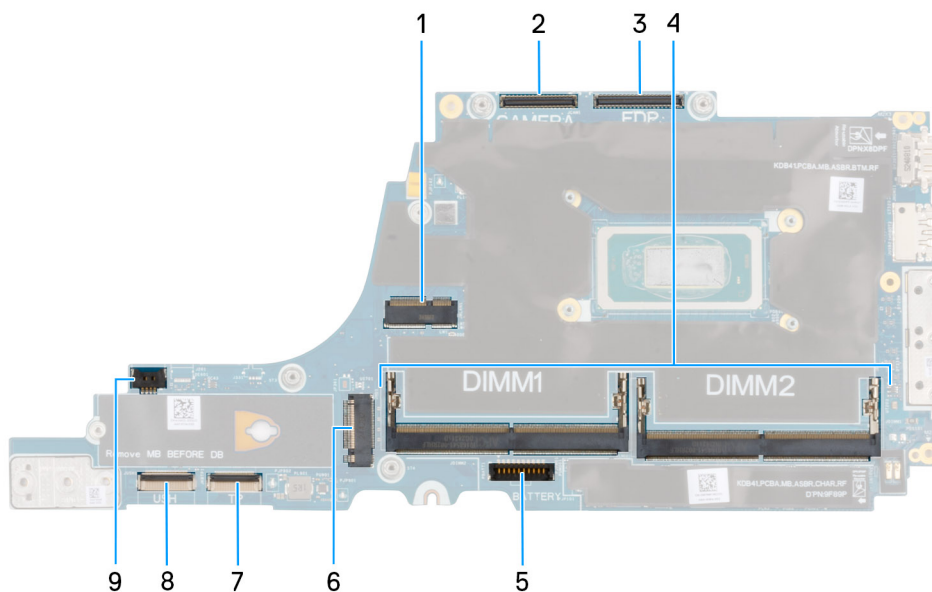

**Figure 52. System board connectors**

1. WLAN-card connector
2. Camera-cable connector
3. Display-cable connector
4. Memory module slot
5. Battery-cable connector
6. Solid state drive connector
7. Touchpad-cable connector
8. USH board-cable connector
9. Fan-cable connector

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The following images indicate the location of the system board and provide a visual representation of the installation procedure.



**Figure 53. Installing the system board**

## Steps

1. Align and place the system board in its slot on the palm-rest assembly.
2. For computers shipped without WWAN card, replace the four screws (M2x3) and the two screws (M2x4) to secure the system board to the palm-rest assembly.
3. For computers shipped with WWAN card, remove the four screws (M2x3) and the three screws (M2x4) to secure the system board to the palm-rest assembly.
4. Connect the following cables to the system board:
  - a. Display cable
  - b. Camera cable
  - c. Touchpad cable
  - d. USH-board cable (for models shipped with a USH board)

5. Align and place the display-cable bracket and replace the two screws (M2x3) to secure the display-cable bracket to the system board.

#### Next steps


1. Install the [fan and heat-sink assembly](#).
2. Install the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
3. Install the [WWAN card](#), if applicable.
4. Install the [memory module](#).
5. Install the [battery](#).
6. Install the [base cover](#).
7. Install the [SIM-card tray](#), if applicable.
8. Follow the procedure in [After working inside your computer](#).

## Wireless Local Area Network (WLAN) antenna module

### Removing the WLAN antenna module

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [memory module](#).
6. Remove the [WWAN card](#), if applicable.
7. Remove the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
8. Remove the [system board](#).

 **NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

#### About this task

The following images indicate the location of the WLAN antenna module and provide a visual representation of the removal procedure.

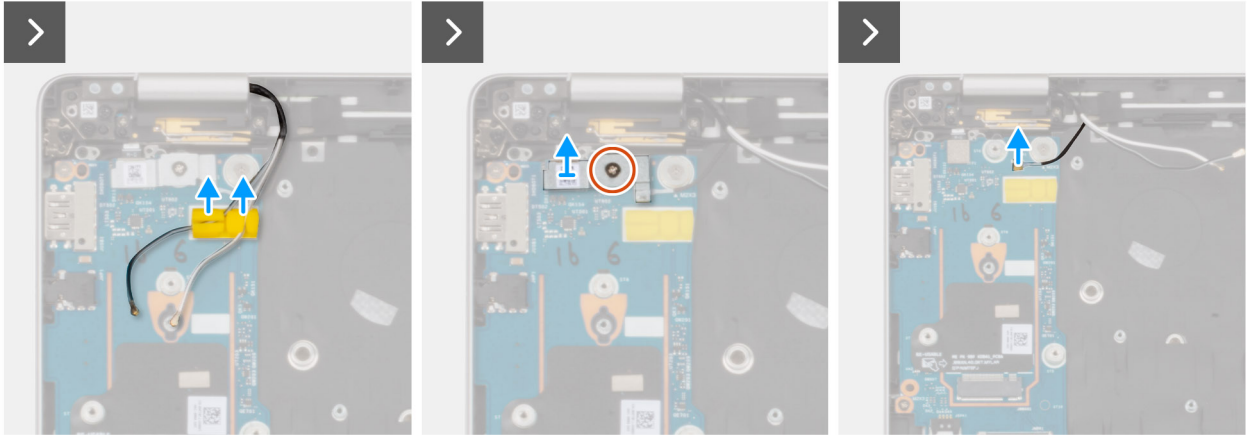
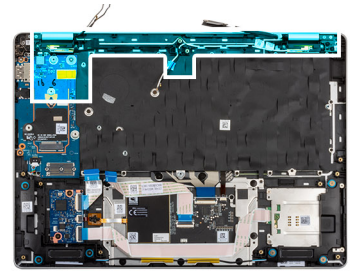


Figure 54. Removing the WLAN antenna module

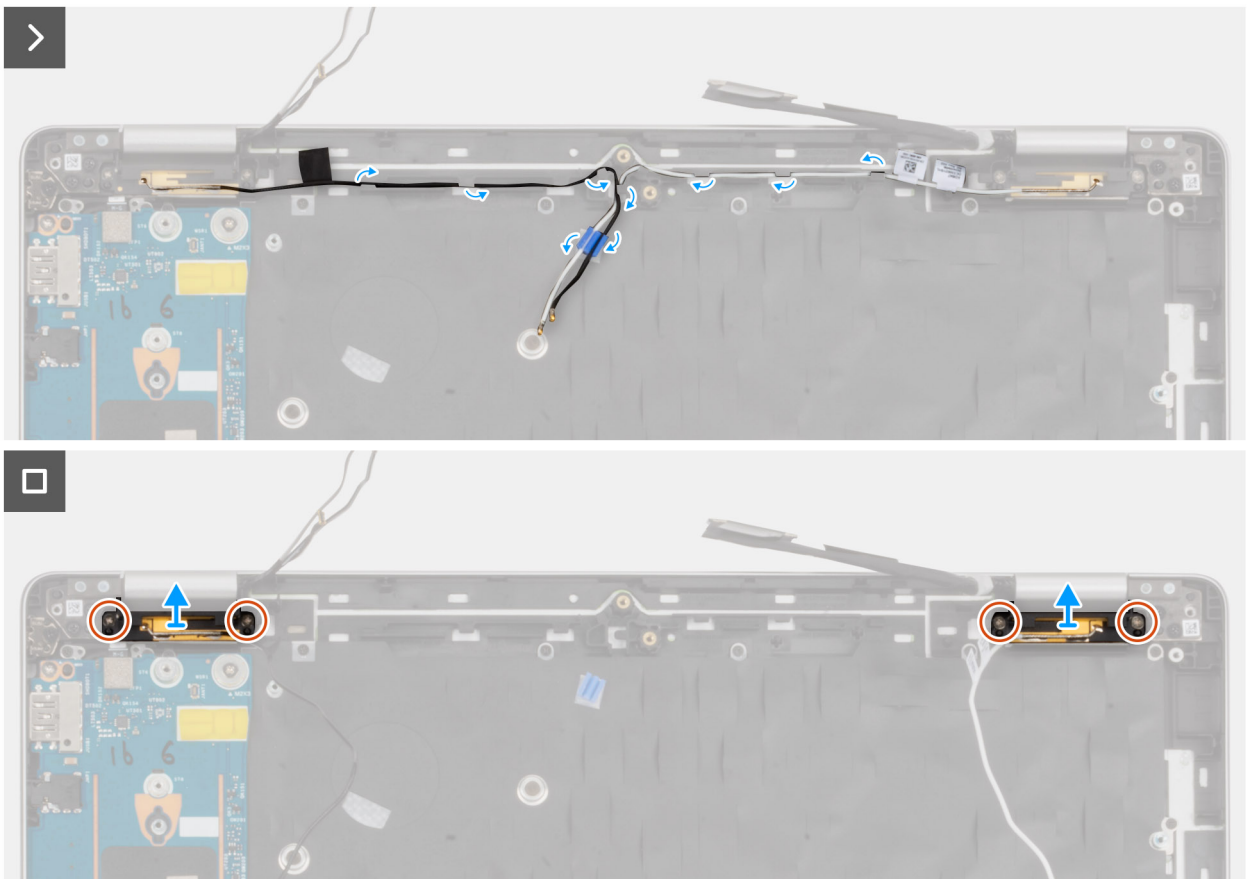


Figure 55. Removing the WLAN antenna module

**Steps**

1. Remove the WLAN-antenna cables from the routing guides on the palm-rest assembly.

2. Remove the screw (M2x3) that secures the fingerprint-reader bracket to the I/O board.
3. Lift the fingerprint-reader bracket off the I/O board.
4. Disconnect the Darwin cable from the connector on the I/O board.
5. Remove the cables from the routing guides on the palm-rest assembly.
6. Remove the four screws (M1.6x2.5) that secure the WLAN antenna module to the palm-rest assembly.
7. Remove the WLAN antenna module off the palm-rest assembly.

## Installing the WLAN antenna module

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the WLAN antenna module and provide a visual representation of the removal procedure.



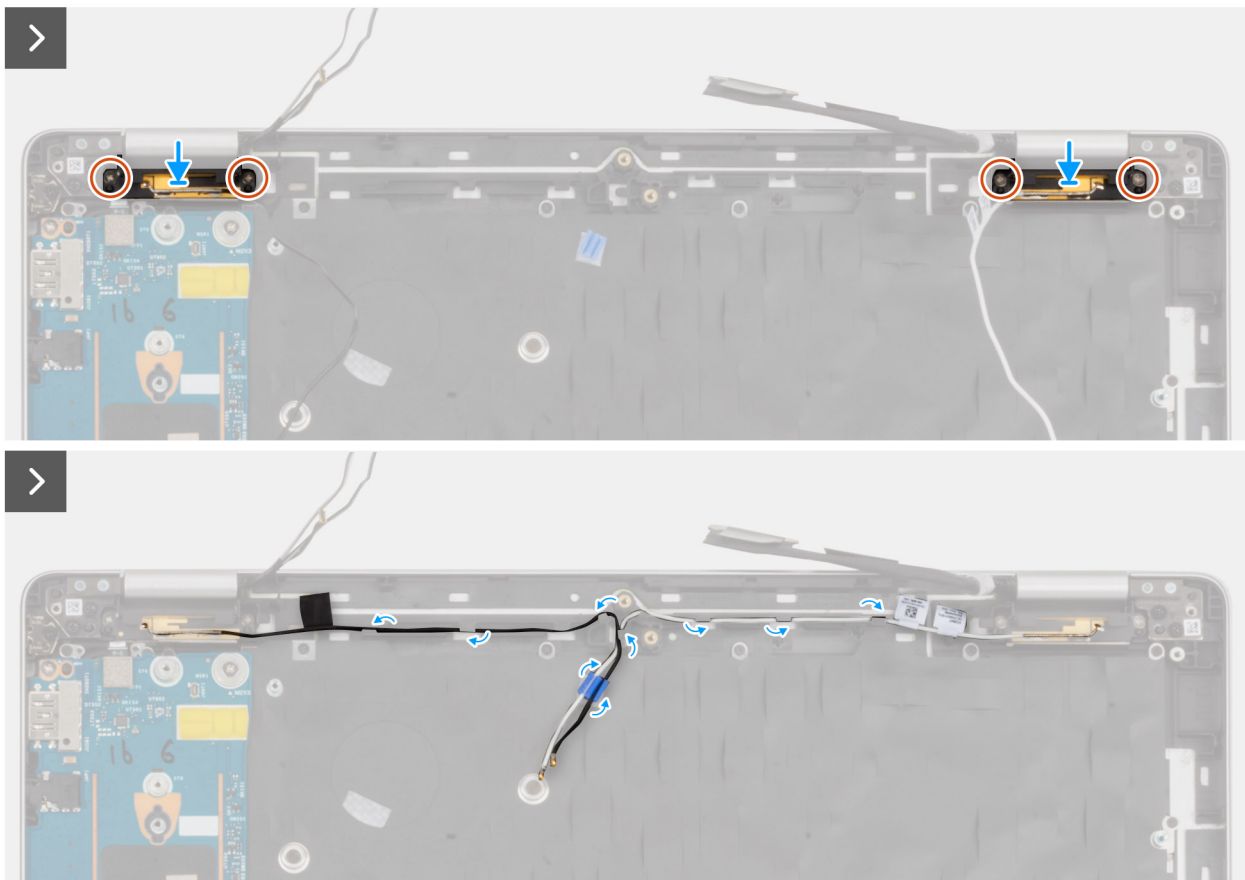


Figure 56. Installing the WLAN antenna module

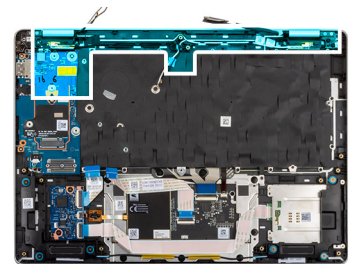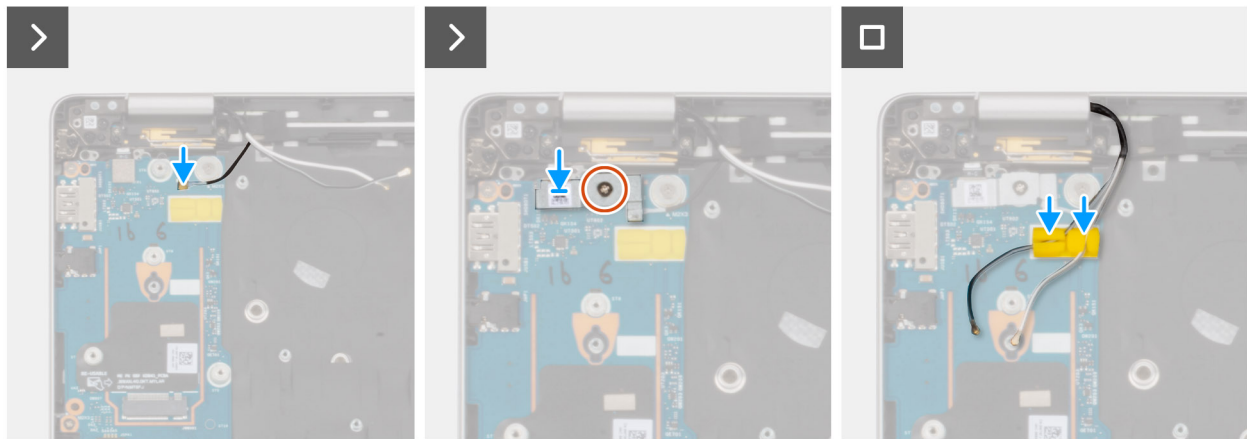

**Figure 57. Installing the WLAN antenna module**

### Steps

1. Align and place the WLAN antenna module on to its slot on the palm-rest assembly.
2. Replace the four screws (M1.6x2.5) to secure the WLAN antenna module to the palm-rest assembly.
3. Route the WLAN antenna cables through the routing guides on the palm-rest assembly.
4. Connect the Darwin cable to the connector on the I/O board.
5. Align and place the fingerprint-reader bracket on the I/O board.
6. Replace the screw (M2x3) to secure the fingerprint-reader bracket to the I/O board.
7. Thread the WWAN-antenna cables through the routing guides on the I/O board.

### Next steps

1. Install the [system board](#).

**NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

2. Install the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
3. Install the [WWAN card](#), if applicable.
4. Install the [memory module](#).
5. Install the [battery](#).
6. Install the [base cover](#).
7. Install the [SIM-card tray](#), if applicable.
8. Follow the procedure in [After working inside your computer](#).

## USB Type-C connector module

### Removing the USB Type-C connector module

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

#### Prerequisites



1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [memory module](#).
6. Remove the [WWAN card](#), if applicable.

7. Remove the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
8. Remove the [system board](#).

**NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

### About this task

The following image indicates the location of the USB Type-C connector module and provides a visual representation of the removal procedure.

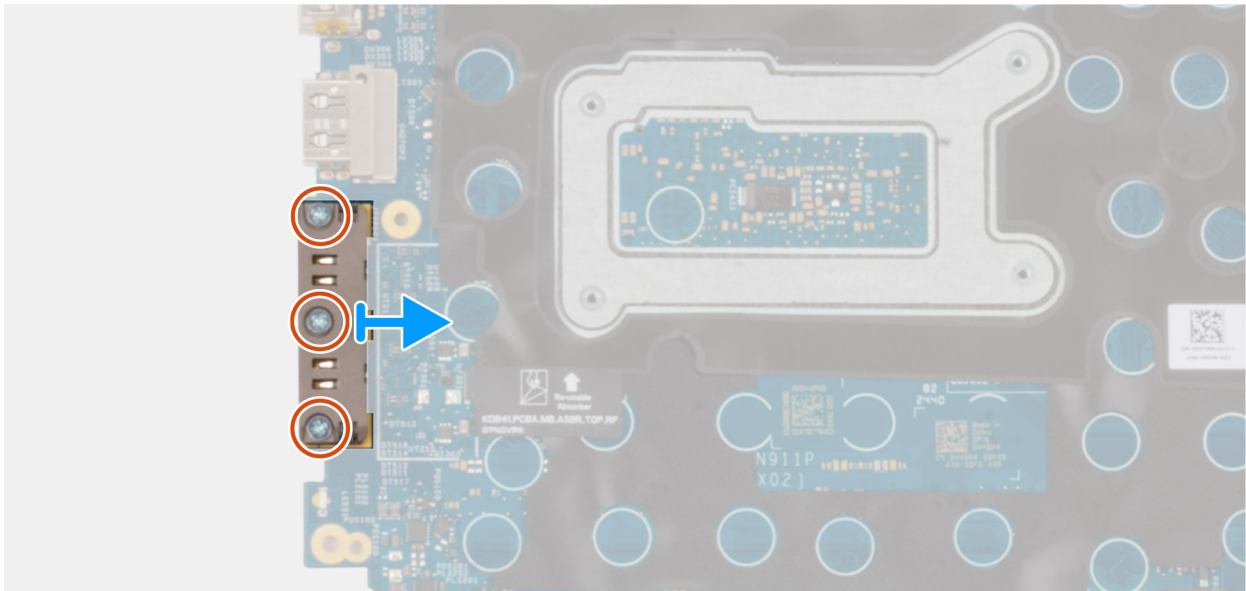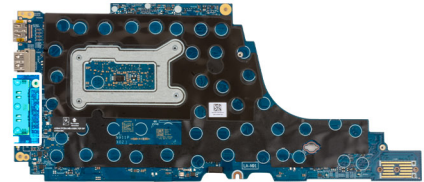

**Figure 58. Removing the USB Type-C Connector Module**

### Steps

1. Remove the three screws (M2x5) that secure the USB Type-C connector module to the system board.
2. Remove the USB Type-C connector module from the system board.

## Installing the USB Type-C connector module



**CAUTION:** The information in this installation section is intended for authorized service technicians only.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following image indicates the location of the USB Type-C connector module and provides a visual representation of the installation procedure.

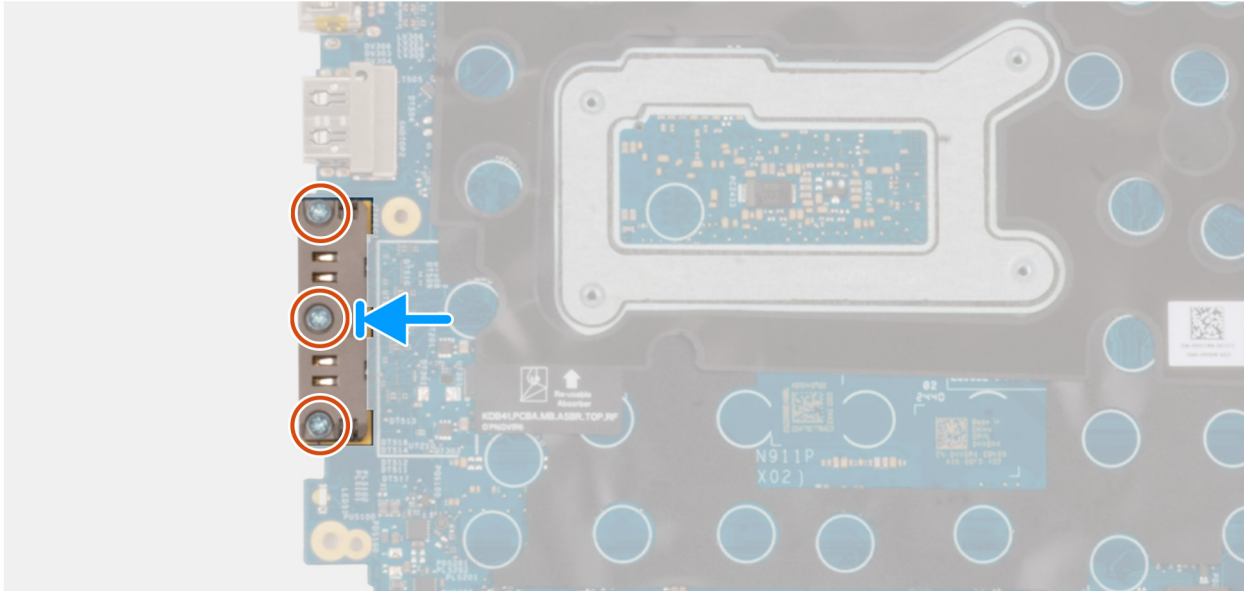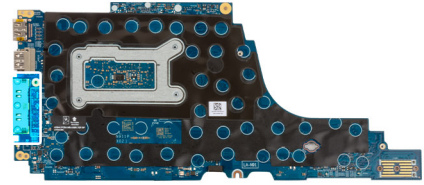

**Figure 59. Installing the USB Type-C connector module**

### Steps

1. Align and place the USB Type-C connector module over the USB Type-C ports on the system board.
2. Replace the three screws (M2x5) to secure the USB Type-C connector module to the system board.

### Next steps

1. Install the [system board](#).

**NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

2. Install the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
3. Install the [WWAN card](#), if applicable.
4. Install the [memory module](#).
5. Install the [battery](#).
6. Install the [base cover](#).
7. Install the [SIM-card tray](#), if applicable.
8. Follow the procedure in [After working inside your computer](#).

## I/O board

### Removing the I/O board

**CAUTION:** The information in this removal section is intended for authorized service technicians only.


## Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [memory module](#).
6. Remove the [WWAN card](#), if applicable.
7. Remove the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
8. Remove the [system board](#).

**NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

## About this task

The following images indicate the location of the I/O board and provide a visual representation of the removal procedure.

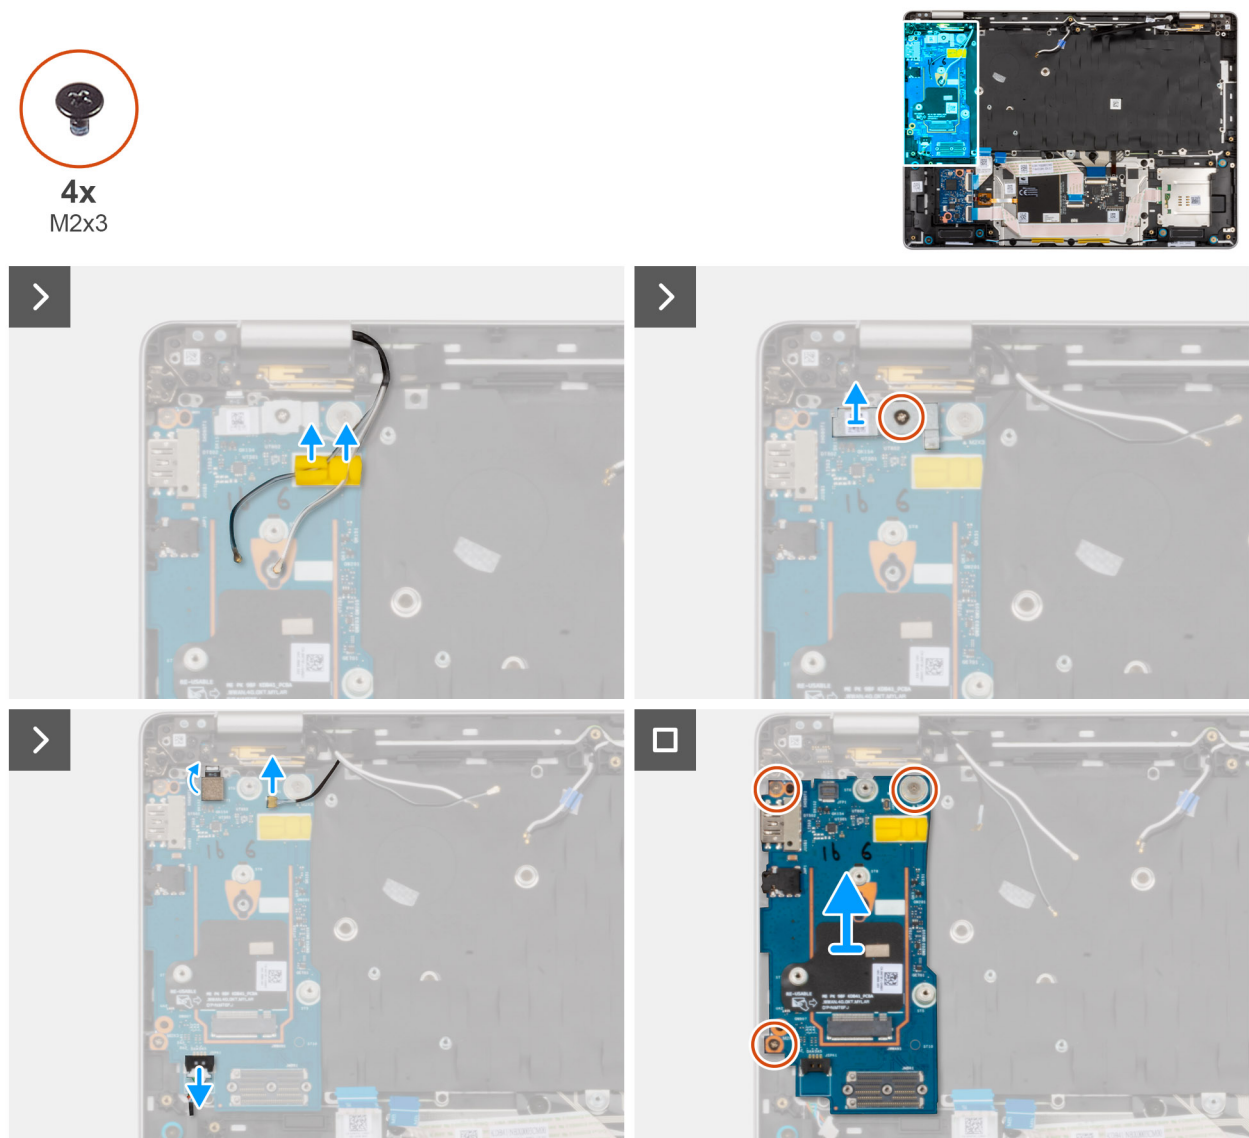


**Figure 60. Removing the I/O board**


## Steps

1. Remove the WWAN-antenna cables from the routing guides on the I/O board and move them away from the I/O board.

2. Remove the screw (M2x3) that secures the fingerprint-reader bracket to the I/O board. Lift the fingerprint-reader bracket off the I/O board.

 **NOTE:** The fingerprint-reader bracket covers both the fingerprint-reader connector and the Darwin-cable connector. Models that are shipped without fingerprint reader will still have a fingerprint-reader bracket that covers the Darwin-cable connector.

3. Disconnect the following cables from the connector on the I/O board:
  - a. Fingerprint-reader cable
  - b. Darwin cable
  - c. Speaker cable
4. Remove the three screws (M2x3) that secure the I/O board to the palm-rest assembly.
5. Carefully slide and remove the I/O board at angle from the palm-rest assembly.

 **NOTE:** When replacing the I/O board, the WWAN-card thermal pad and Mylar tape must be transferred to the replacement I/O board.

## Installing the I/O board

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the I/O board and provide a visual representation of the installation procedure.



4x  
M2x3

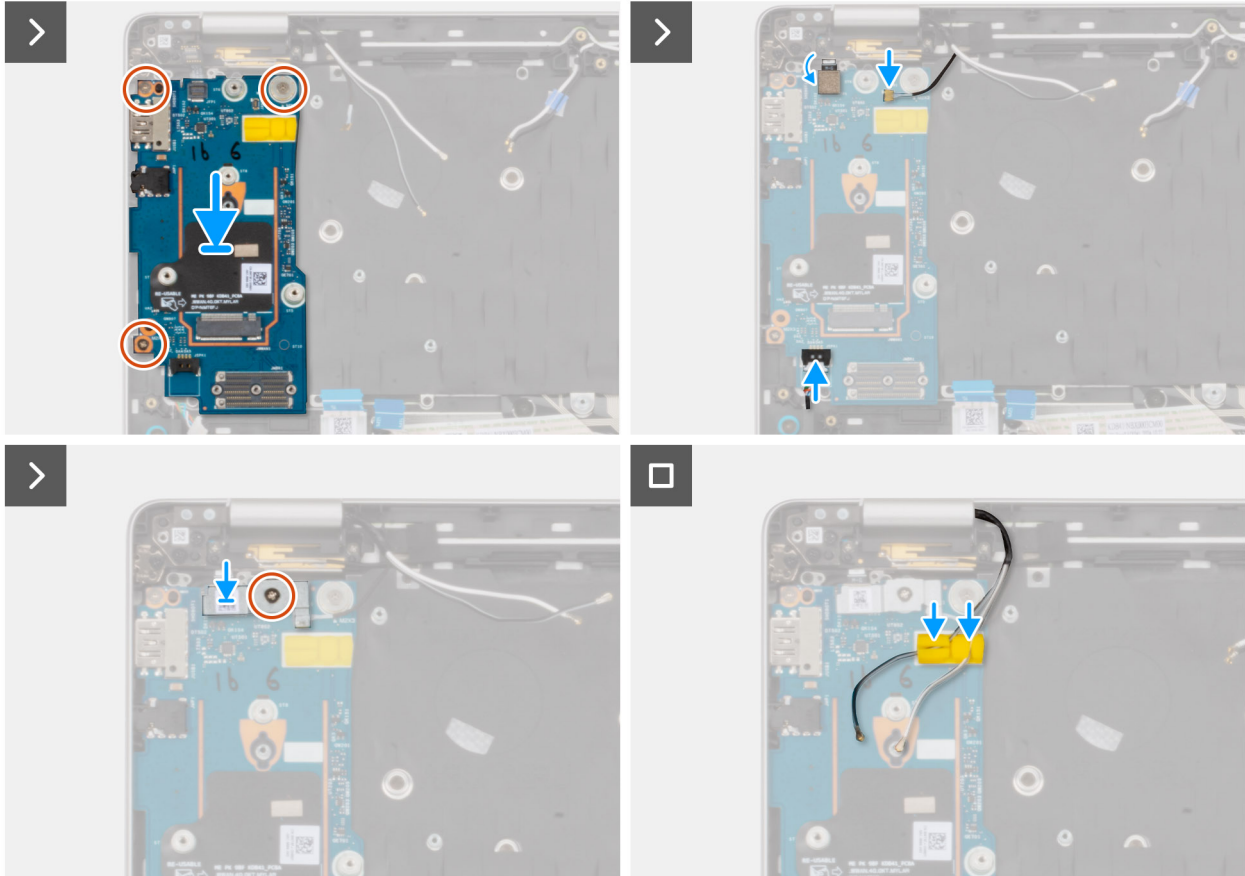
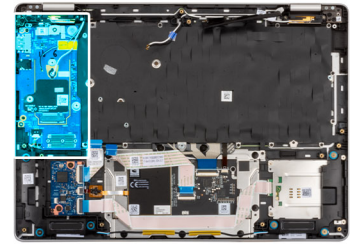


Figure 61. Installing the I/O board

### Steps

1. Align and place the I/O board in the slot on the palm-rest assembly.
2. Replace the three screws (M2x3) to secure the I/O board to the palm-rest assembly.
3. Connect the following to the I/O board:
  - a. Fingerprint-reader cable
  - b. Darwin cable
  - c. Speaker cable
4. Align and place the fingerprint-reader bracket over the fingerprint-reader cable and replace the screw (M2x3) to secure the fingerprint-reader bracket to the I/O board.

**i** **NOTE:** The fingerprint-reader bracket covers both the fingerprint-reader connector and the Darwin-cable connector. Models that are shipped without fingerprint reader will still have a fingerprint-reader bracket that covers the Darwin-cable connector.

5. Route the WWAN-antenna cables through the routing guides on the I/O board.

### Next steps

1. Install the [system board](#).

**NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

2. Install the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
3. Install the [WWAN card](#), if applicable.
4. Install the [memory module](#).
5. Install the [battery](#).
6. Install the [base cover](#).
7. Install the [SIM-card tray](#), if applicable.
8. Follow the procedure in [After working inside your computer](#).

## Power button with optional fingerprint reader

### Removing the power button with optional fingerprint reader

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

#### Prerequisites



1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [memory module](#).
6. Remove the [WWAN card](#), if applicable.
7. Remove the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
8. Remove the [system board](#).

**NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

9. Remove the [I/O board](#).

#### About this task

The following image indicates the location of the power button with optional fingerprint reader and provides a visual representation of the removal procedure.

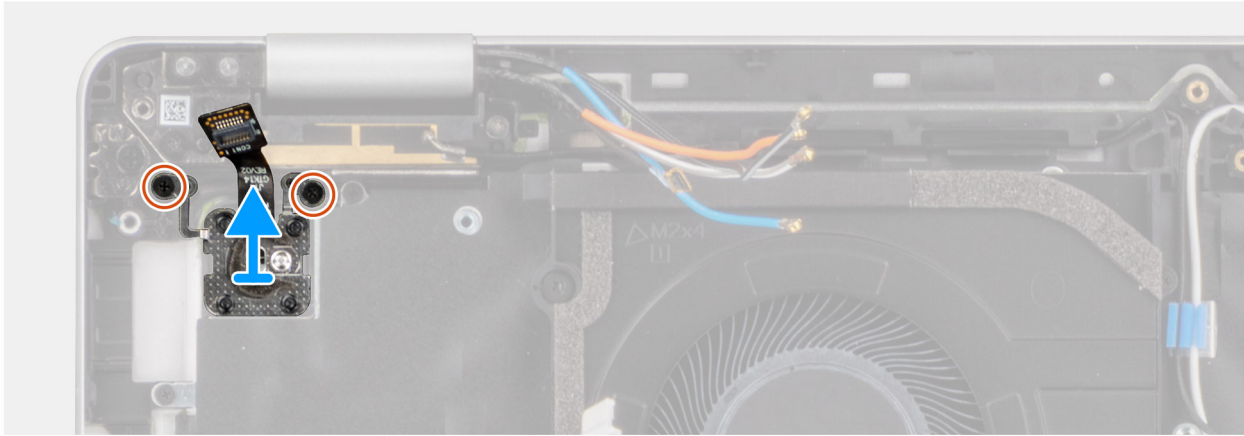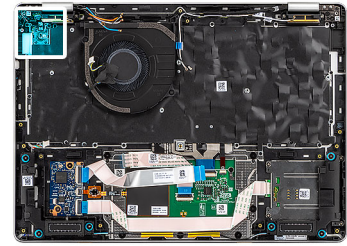

**Figure 62. Removing the power button with optional fingerprint reader**

#### Steps

1. Remove the two screws (M1.6x1.7) that secure the power button to the palm-rest assembly.
2. Lift the power button off the palm-rest assembly.

## Installing the power button with optional fingerprint reader

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

#### Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

#### About this task

The following image indicates the location of the power button with optional fingerprint reader and provides a visual representation of the installation procedure.



**2x**  
M1.6x1.7

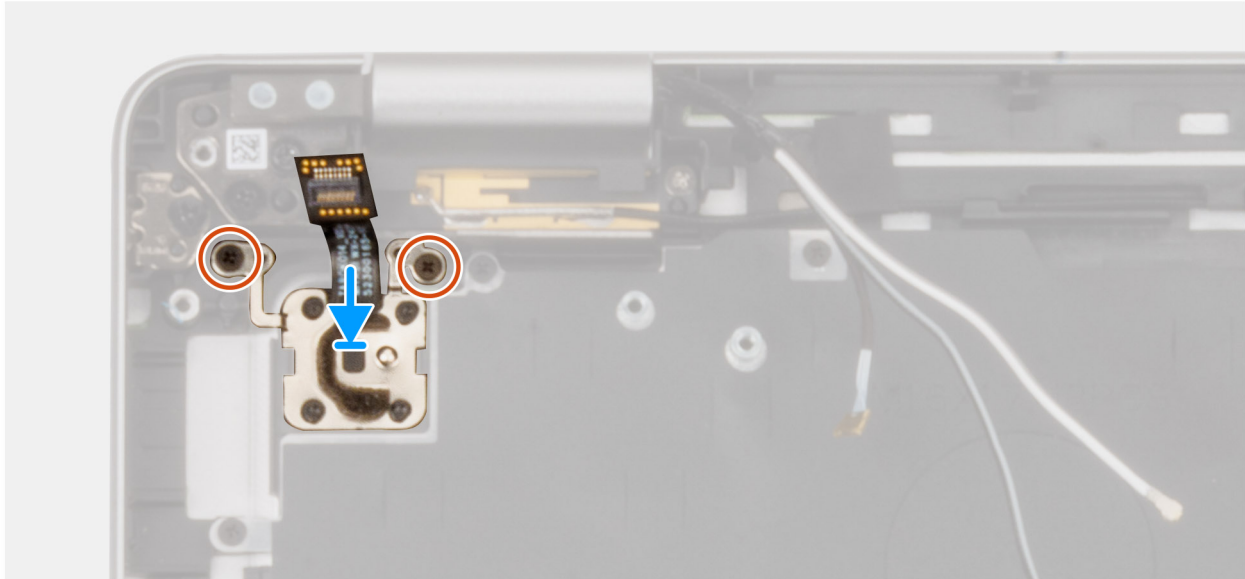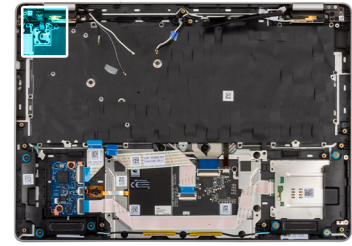

**Figure 63. Installing the power button with optional fingerprint reader**

### Steps

1. Align and place the power button in the slot on the palm-rest assembly.
2. Replace the two screws (M1.6x1.7) to secure the power button to the palm-rest assembly.

### Next steps

1. Install the [I/O board](#).
2. Install the [system board](#).

**NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

3. Install the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
4. Install the [WWAN card](#), if applicable.
5. Install the [memory module](#).
6. Install the [battery](#).
7. Install the [base cover](#).
8. Install the [SIM-card tray](#), if applicable.
9. Follow the procedure in [After working inside your computer](#).

## Display assembly

### Removing the display assembly

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.

### About this task

The following images indicate the location of the display assembly and provide a visual representation of the removal procedure.


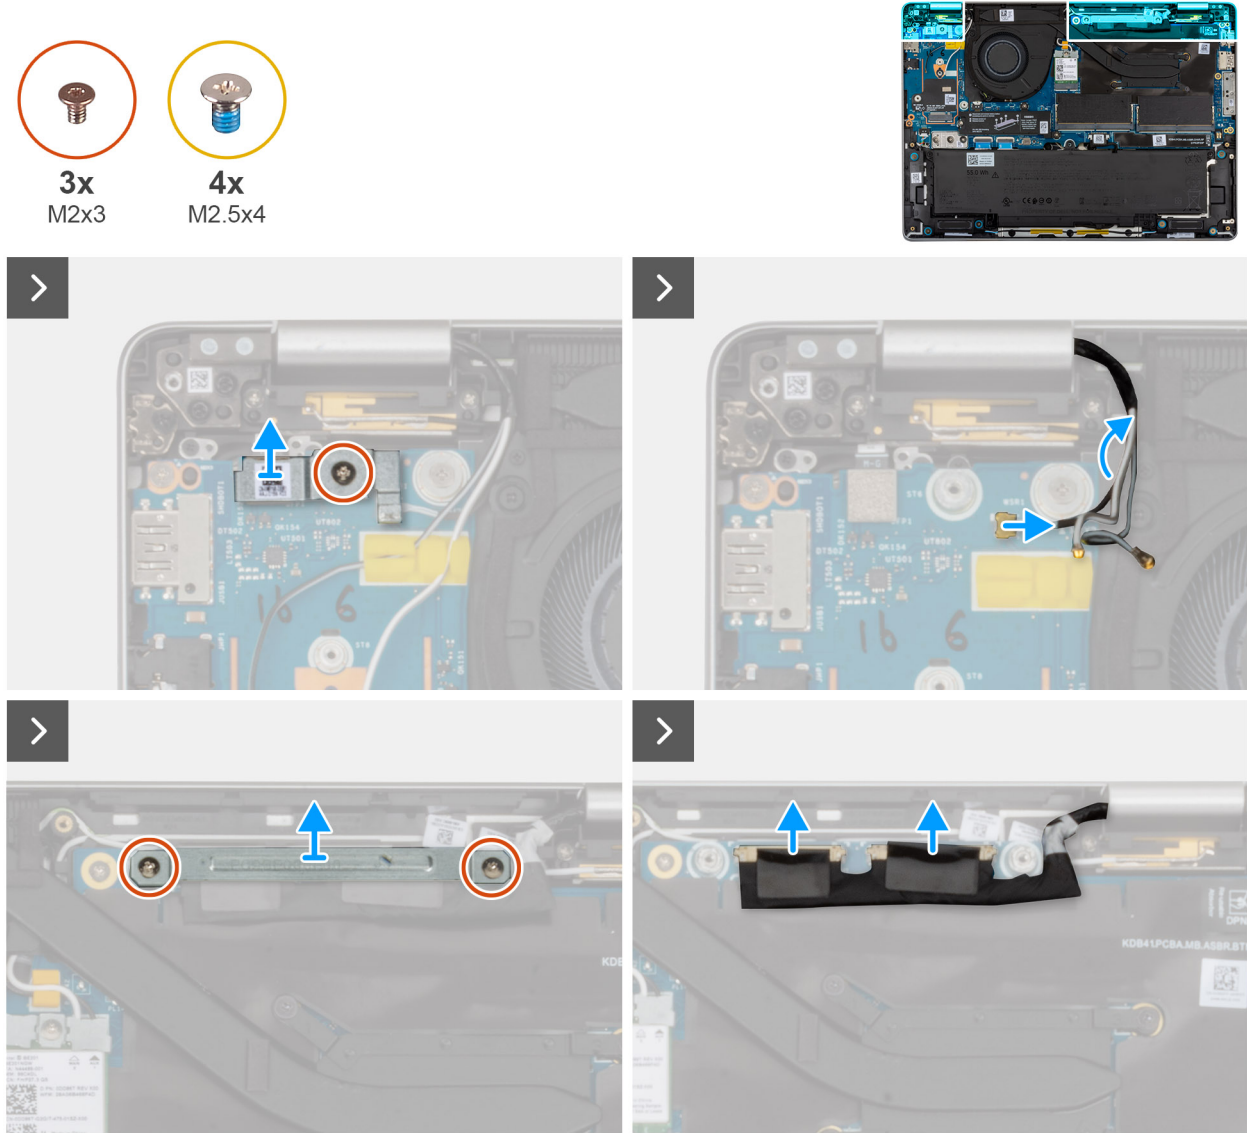


Figure 64. Removing the display assembly

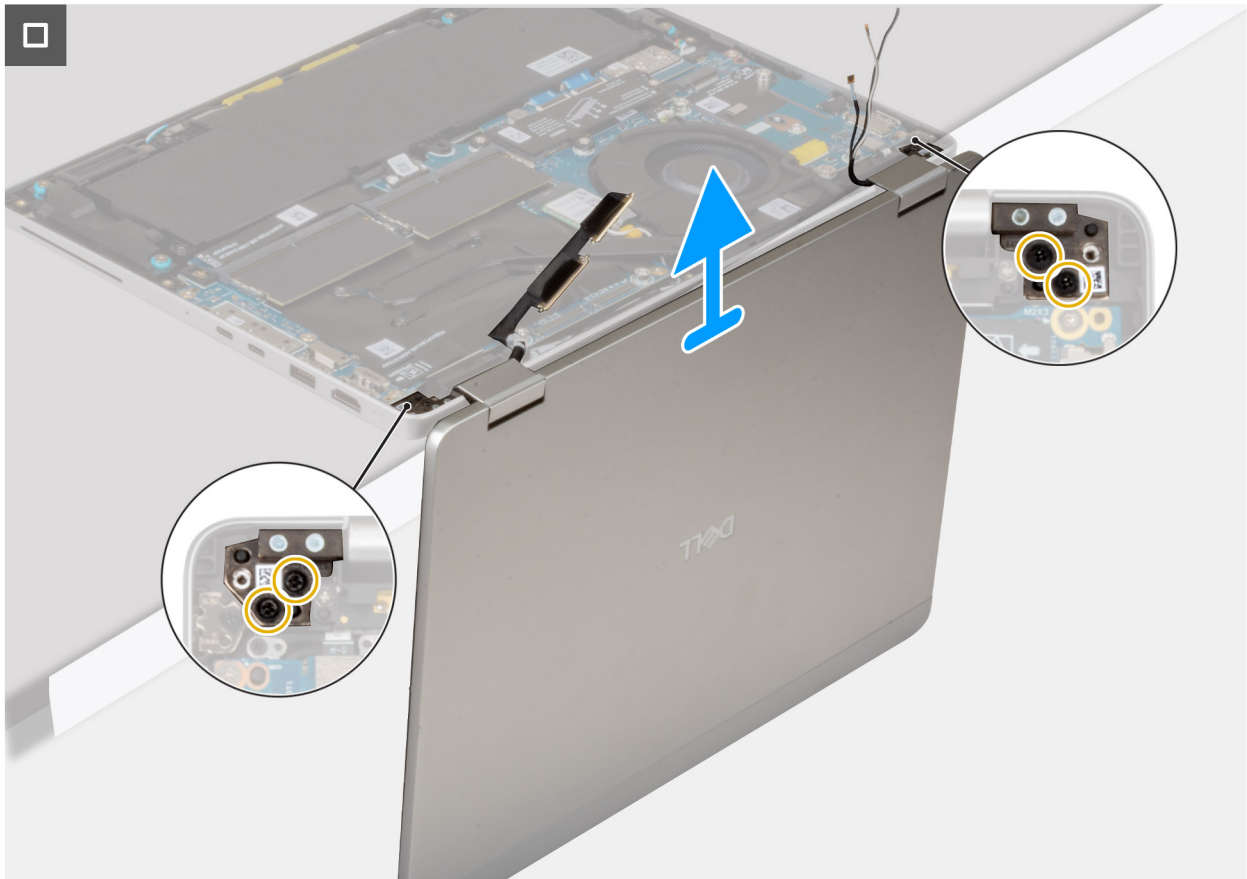

**Figure 65. Removing the display assembly**

### Steps

1. Remove the WWAN-antenna cables from the routing guides on the I/O board.
2. Remove the screw (M2x3) that secures the fingerprint-reader bracket to the I/O board.
3. Lift the fingerprint-reader bracket off the I/O board.
4. Disconnect the Darwin cable from the connector on the I/O board.
5. Disconnect the fingerprint-reader cable from the connector on the I/O board.

**i** **NOTE:** This step applies only to computers shipped with fingerprint reader installed.

6. Remove the two screws (M2x3) that secure the display-cable bracket to the system board.
7. Disconnect the camera cable, if available, and display cable from the connector on the system board.
8. Open the display assembly to an angle of 90 degrees and flip the computer. Place the computer on the edge of a clean and flat surface so the display assembly extends below the edge of the surface.
9. Remove the four screws (M2.5x4) that secure the display assembly to the palm-rest assembly.
10. Carefully remove the display assembly from the palm-rest assembly.

**i** **NOTE:** For Dell Pro 14 Plus 2-in-1, the display assembly is a Hinge-Up Design (HUD) and cannot be further disassembled once it has been removed from the computer. If any component within the display assembly is faulty, replace the entire display assembly.

## Installing the display assembly

**⚠ CAUTION:** The information in this installation section is intended for authorized service technicians only.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the display assembly and provide a visual representation of the installation procedure.




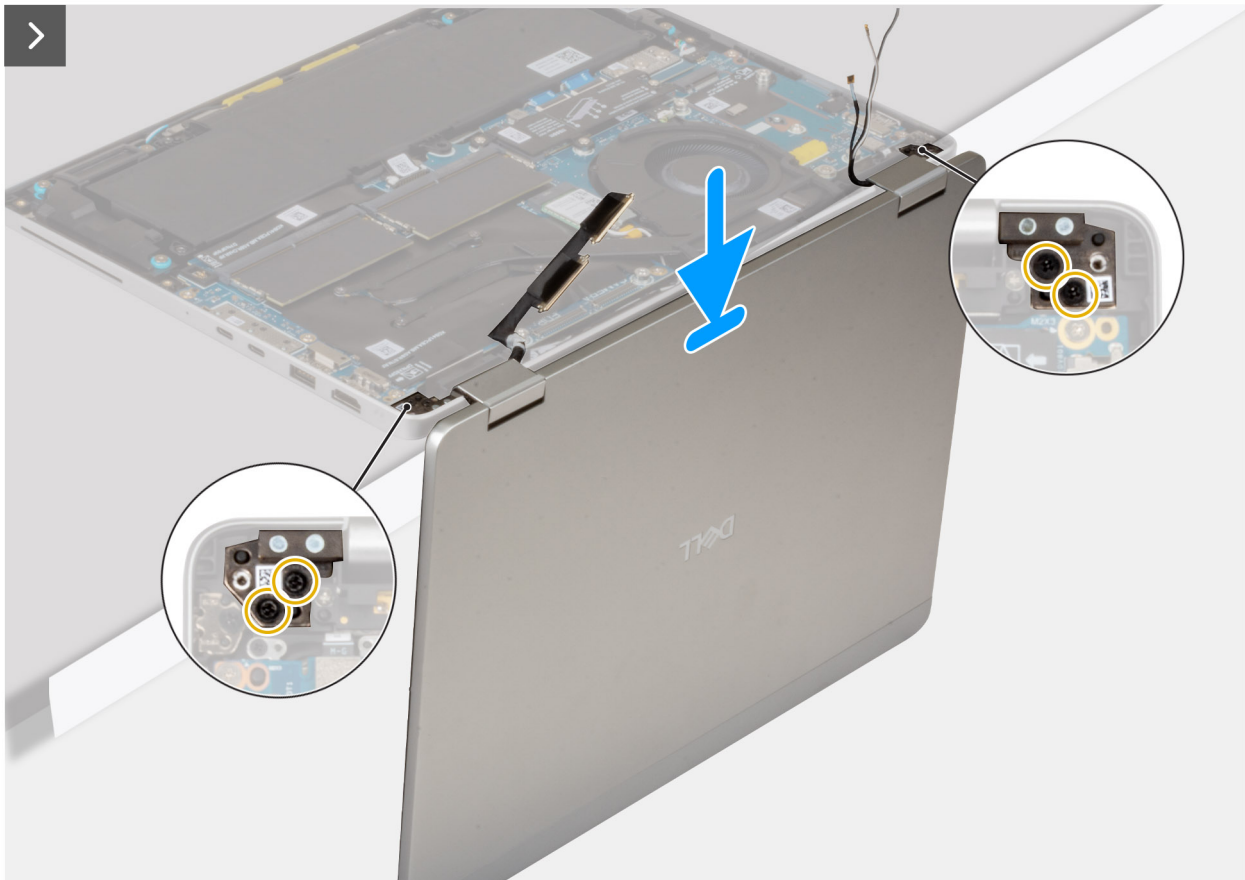


Figure 66. Installing the display assembly

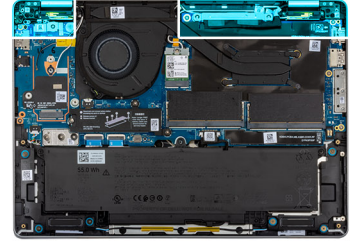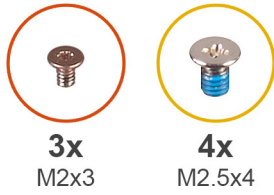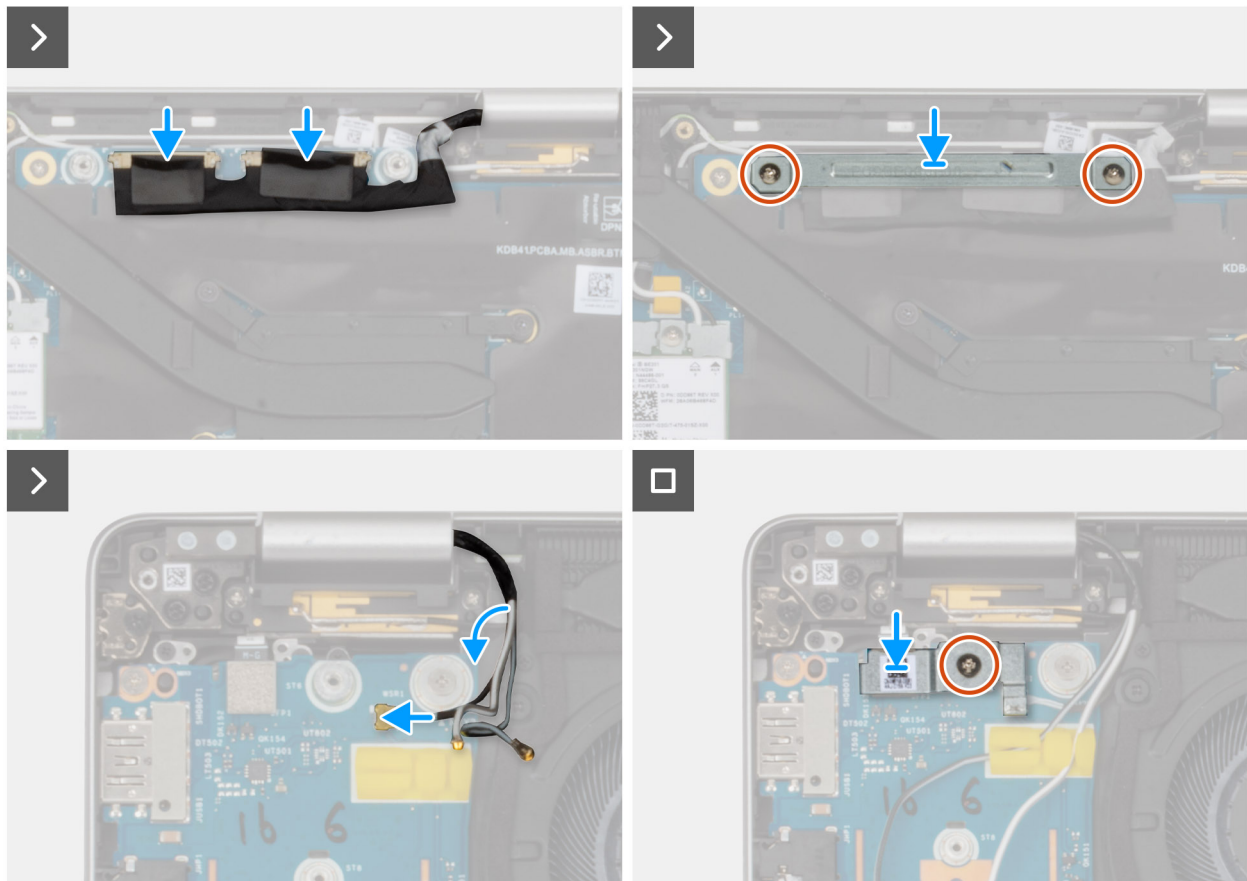

**Figure 67. Installing the display assembly**

### Steps

1. Place the palm-rest assembly on a clean, flat surface.
2. Align and place the display assembly over the palm-rest assembly at an angle of 90 degrees.
3. Replace the four screws (M2.5x4) to secure the display hinges to the palm-rest assembly.
4. Connect the camera cable, if available, and the display cable to the connector on the system board.
5. Align and place the display-cable bracket over the cables on the system board.
6. Replace the two screws (M2x3) to secure the display-cable bracket to the system board.
7. Route the antenna cables through the routing guides, near the display hinges, on the palm-rest assembly.
8. Connect the fingerprint-reader cable to the connector on the I/O board.

**NOTE:** This step applies only to computers shipped with fingerprint reader installed.

9. Connect the Darwin cable to the connector on the I/O board.
10. Align and place the fingerprint-reader bracket on the I/O board.
11. Replace the screw (M2x3) to secure the fingerprint-reader bracket to the I/O board.
12. Route the WWAN-antenna cables through the routing guides on the I/O board.

### Next steps

1. Install the [WWAN card](#), if applicable.
2. Install the [base cover](#).
3. Install the [SIM-card tray](#), if applicable.
4. Follow the procedure in [After working inside your computer](#).

# Display bezel

## Removing the display bezel

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

 **NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.
5. Remove the [display assembly](#).

### About this task

The following images indicate the location of the display bezel and provide a visual representation of the removal procedure.



Figure 68. Removing the display bezel

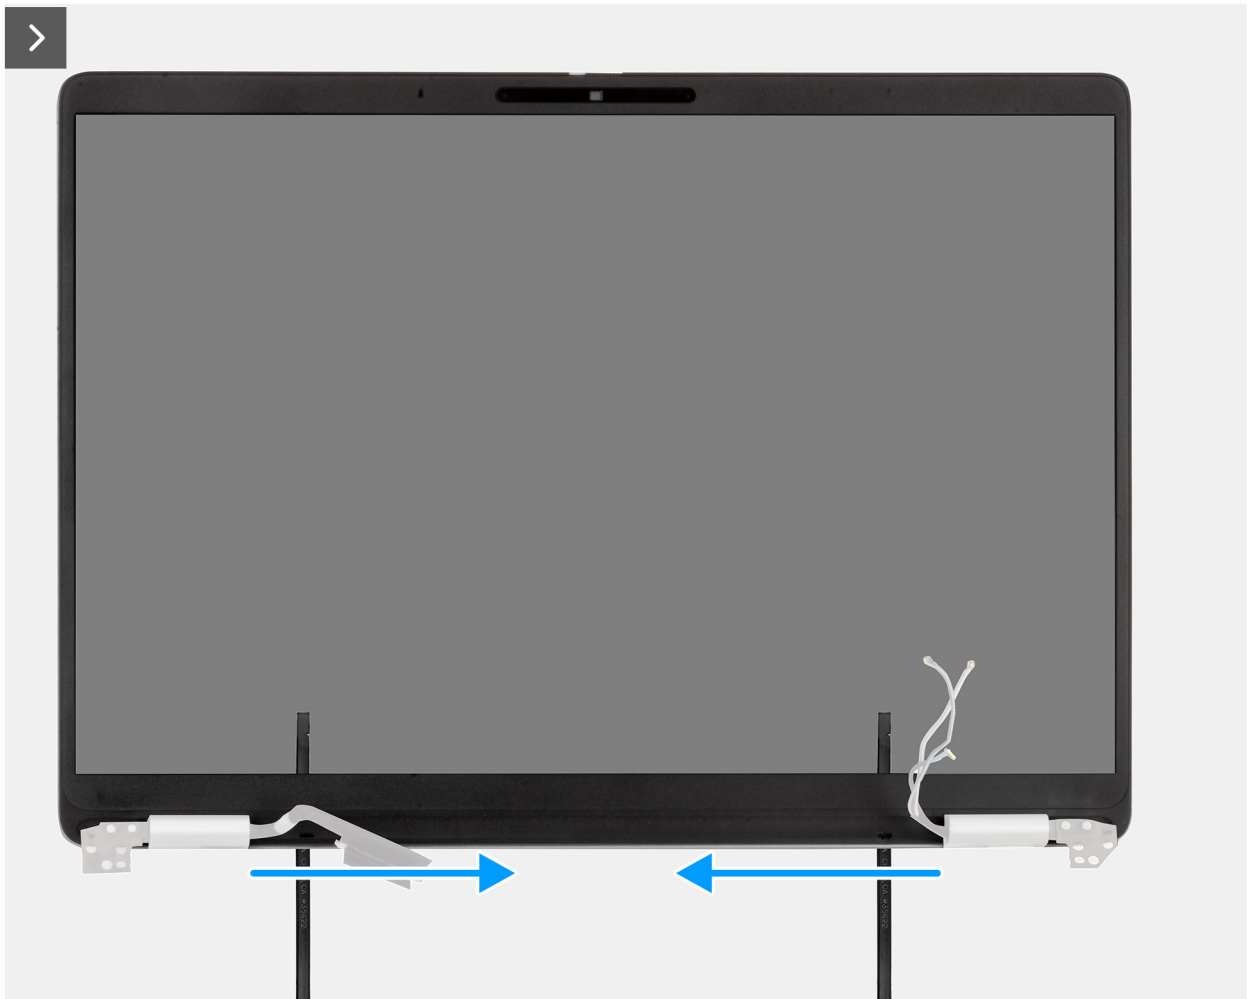


Figure 69. Removing the display bezel

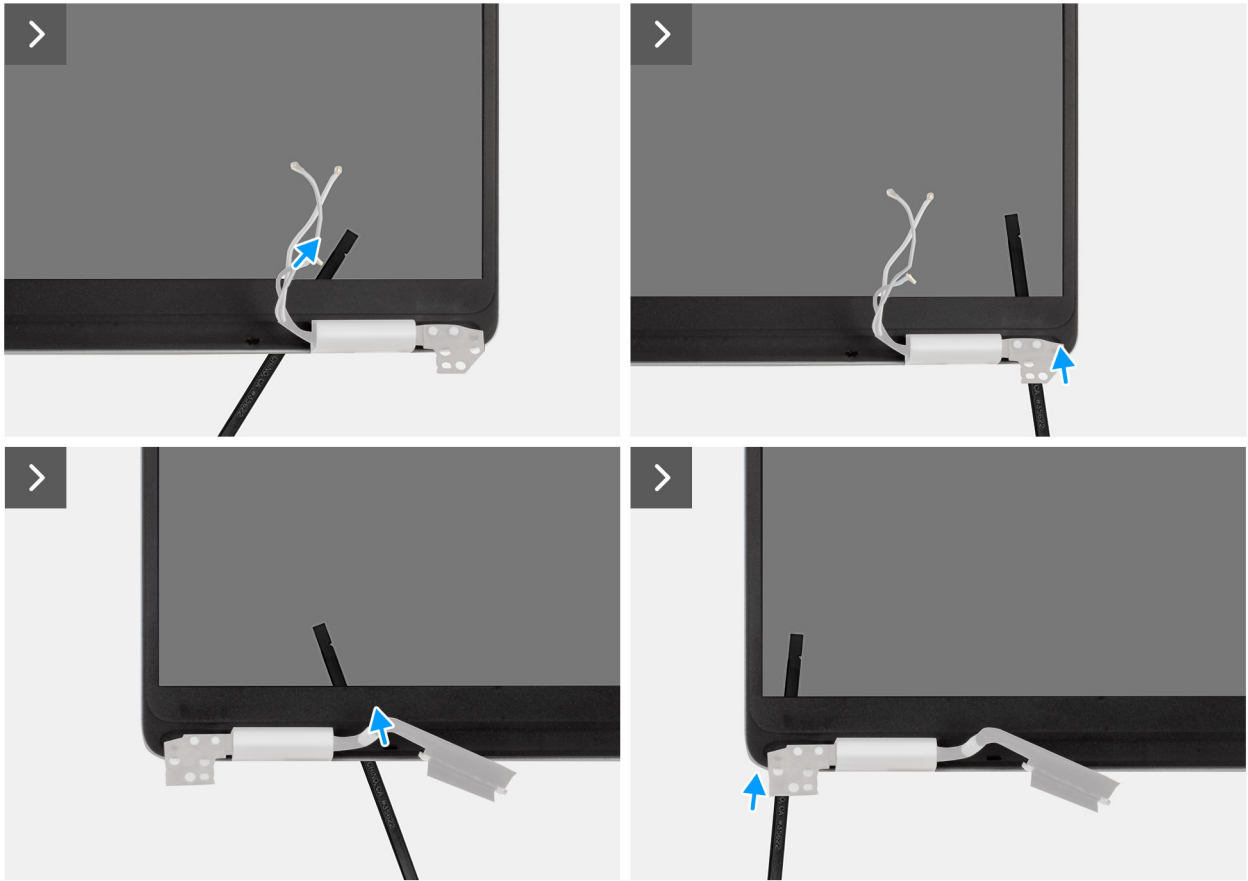


Figure 70. Removing the display bezel

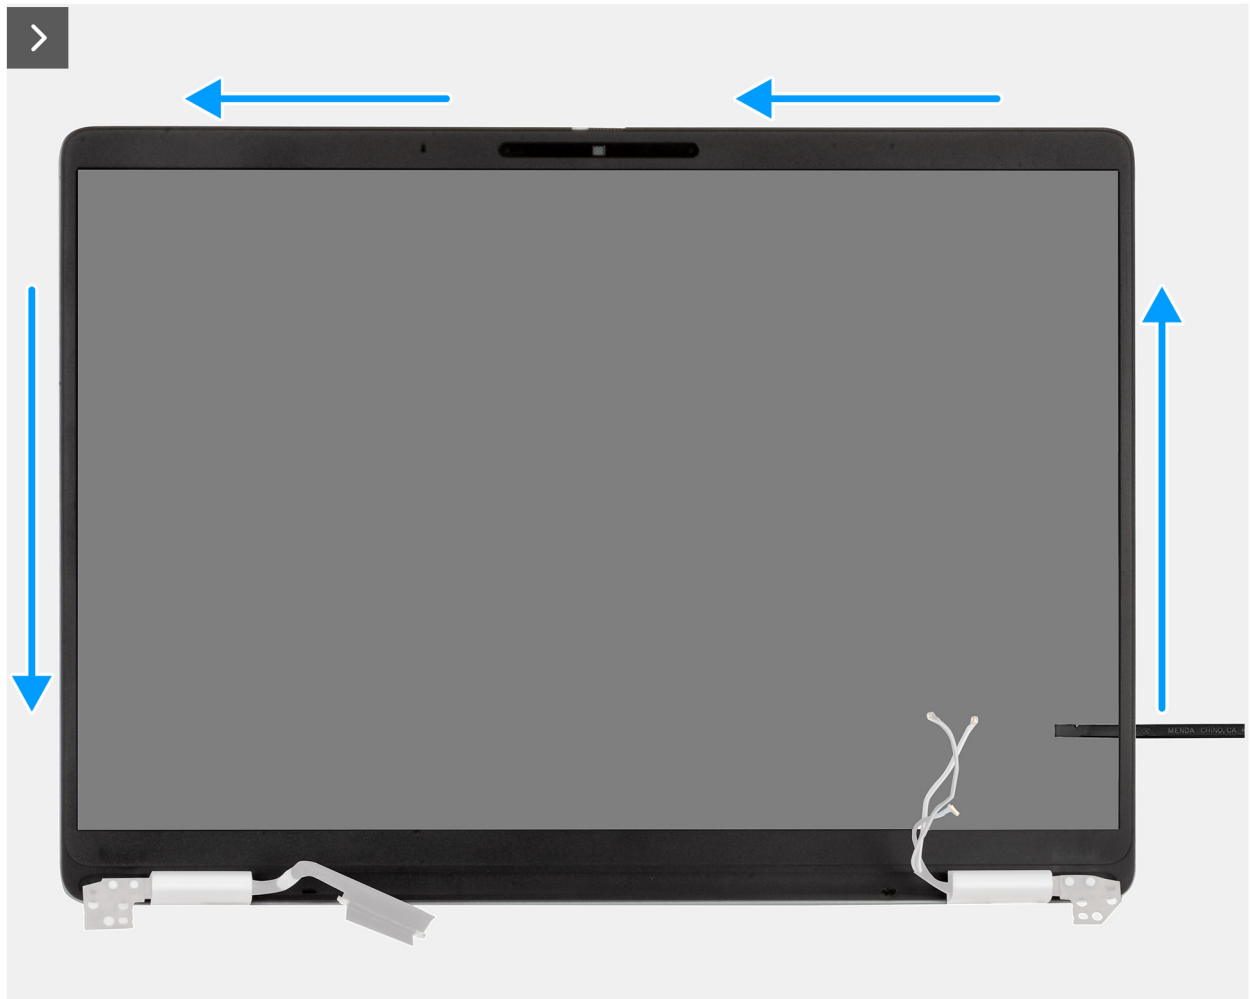


Figure 71. Removing the display bezel

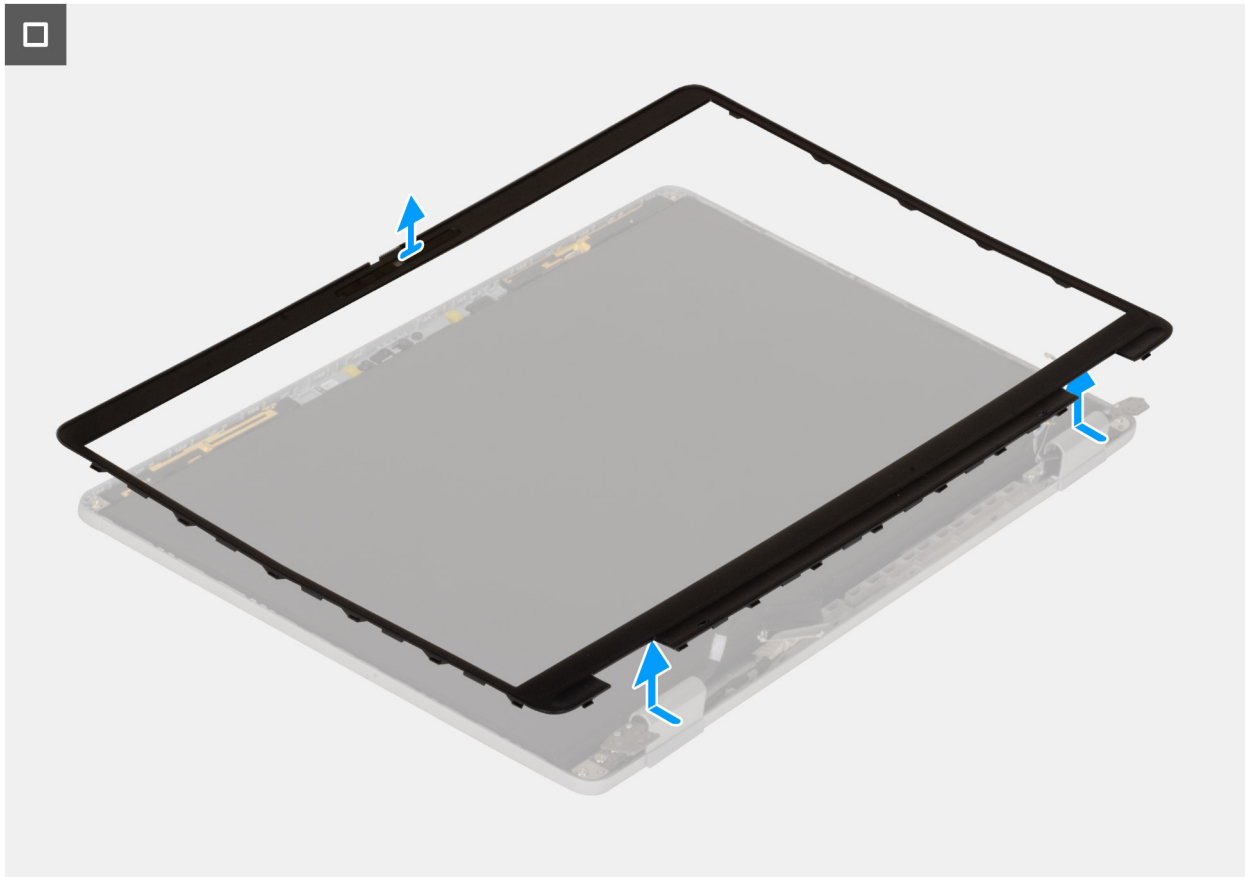


Figure 72. Removing the display bezel

### Steps

1. Insert a flat-head slotted screwdriver (maximum width: 4 mm) into the slots on the display bezel near the hinges, and gently apply pressure to release the bezel at both ends, creating a gap.
2. Insert the flat end of the scribe into the gap created under the display bezel.
  - ⚠ **CAUTION:** When inserting the scribe into the bezel, keep it parallel to the display. Pressing it downward can damage the display. Do not use the flat head (slotted) screwdriver to release up the rest of the bezel. Switch to the plastic scribe to continue prying along the bezel.
3. Keeping the scribe parallel to the display, carefully slide it along the bottom edge of the bezel to release the latches on the lower side.
4. Insert the scribe diagonally into the hinge section to carefully release the portion of the bezel above the hinge.
  - ⚠ **CAUTION:** Do not lift the scribe vertically as it damages the screen. Slide the scribe horizontally to disengage the adhesive and release the bezel upwards.
5. Insert the scribe into the corner of the display bezel near the hinge. Keeping the scribe parallel to the display, carefully slide the scribe along the edges from one corner to the other (right to left or left to right).
6. Lift the display bezel off the display assembly.

## Installing the display bezel

⚠ **CAUTION:** The information in this installation section is intended for authorized service technicians only.

ℹ **NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the display bezel and provide a visual representation of the installation procedure.


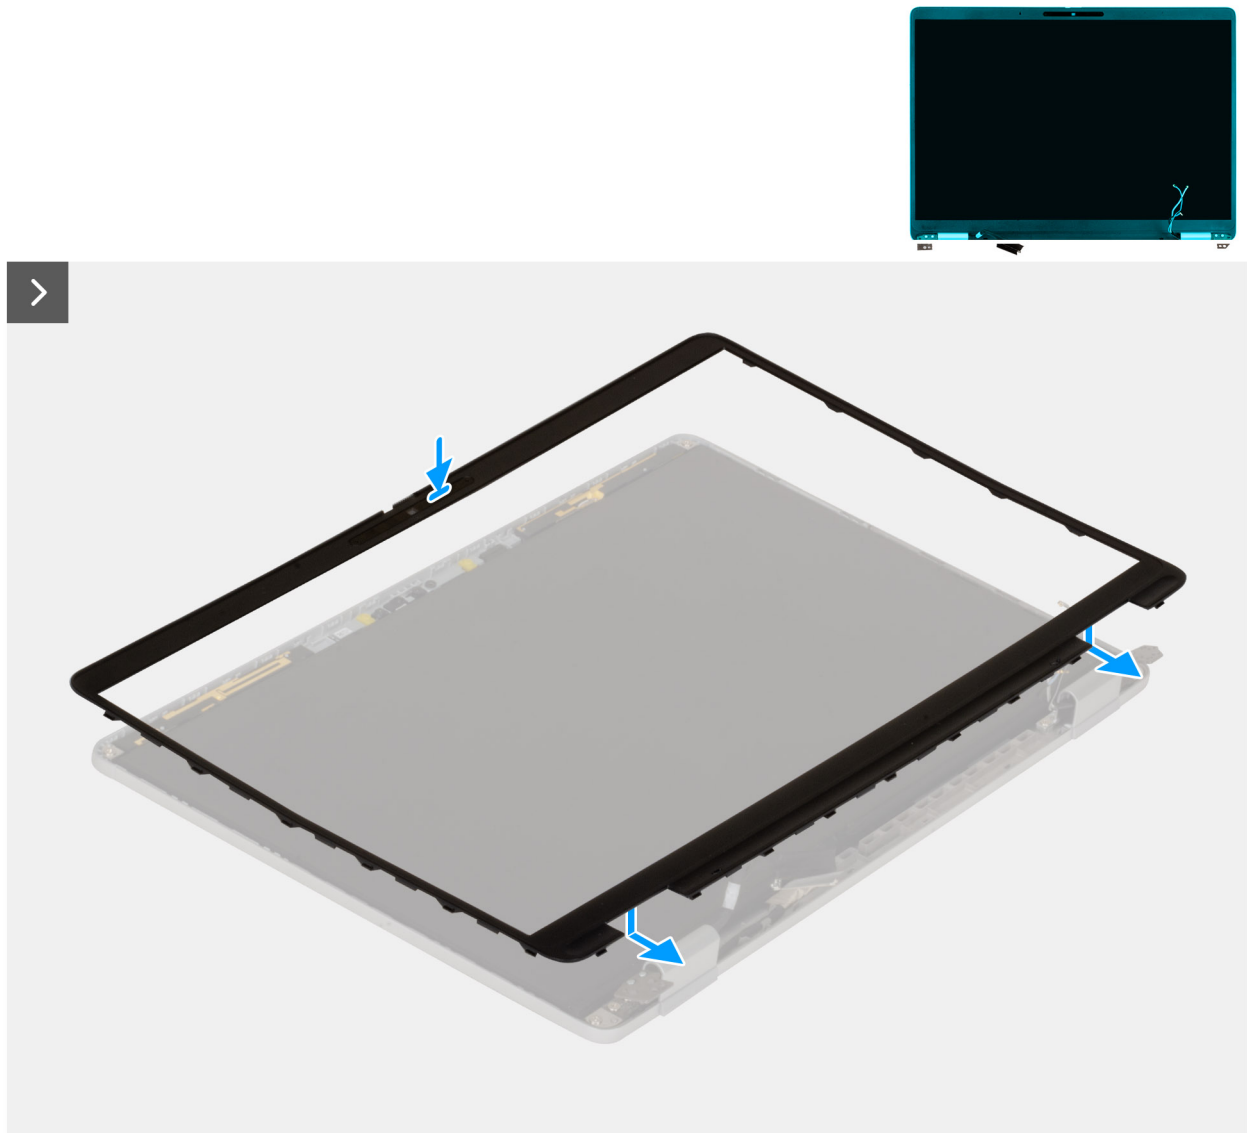


Figure 73. Installing the display bezel

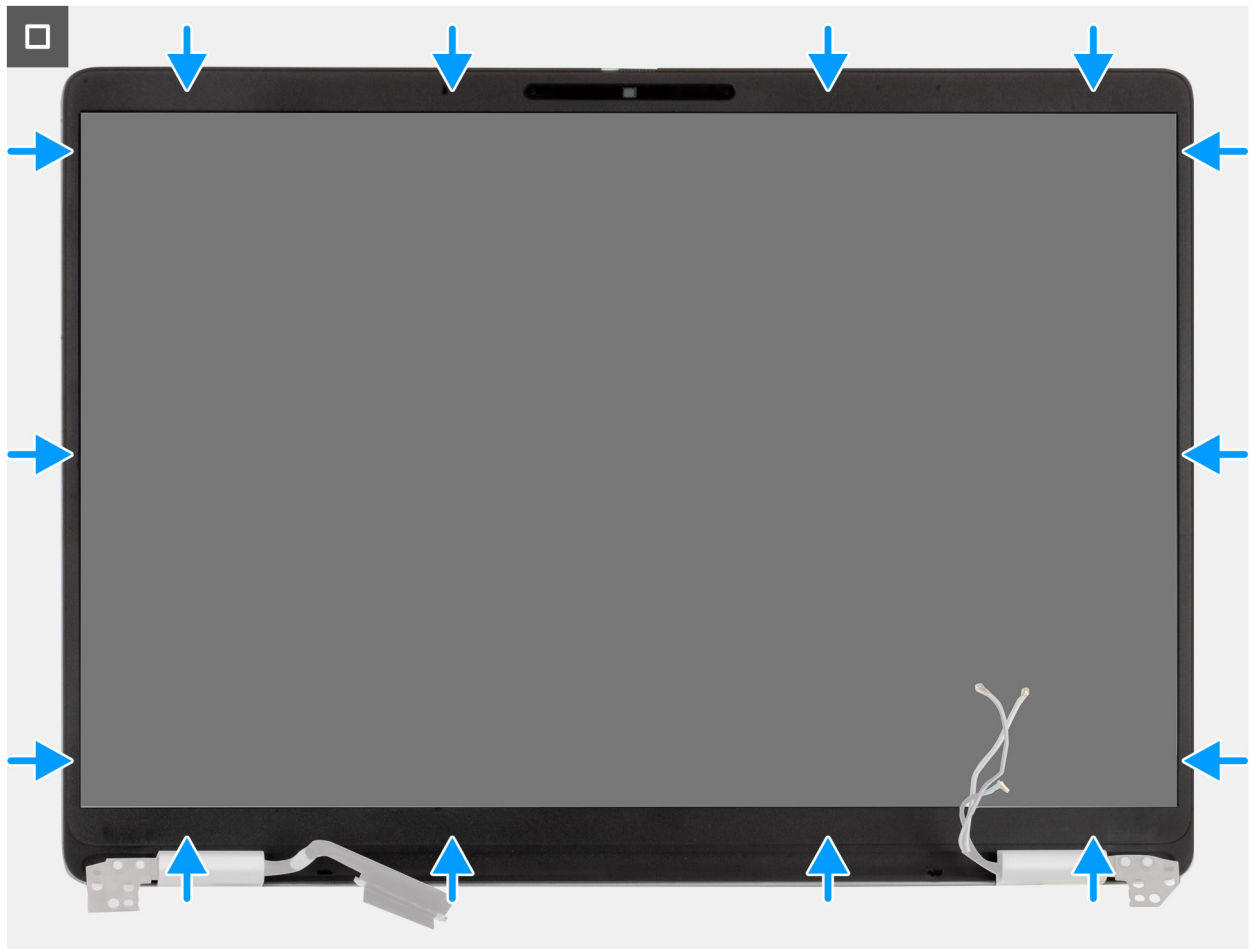

**Figure 74. Installing the display bezel**

#### Steps

1. Place the display assembly on a clean and flat surface.
2. Align and place the display bezel on the display assembly.
3. Starting from the bottom corner, press the display bezel and work around the entire bezel until it snaps onto the display assembly.

#### Next steps

1. Install the [display assembly](#).
2. Install the [WWAN card](#), if applicable.
3. Install the [base cover](#).
4. Install the [SIM-card tray](#), if applicable.
5. Follow the procedure in [After working inside your computer](#).

## Display panel

### Removing the display panel

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).

### About this task

The following images indicate the location of the display panel and provide a visual representation of the removal procedure.


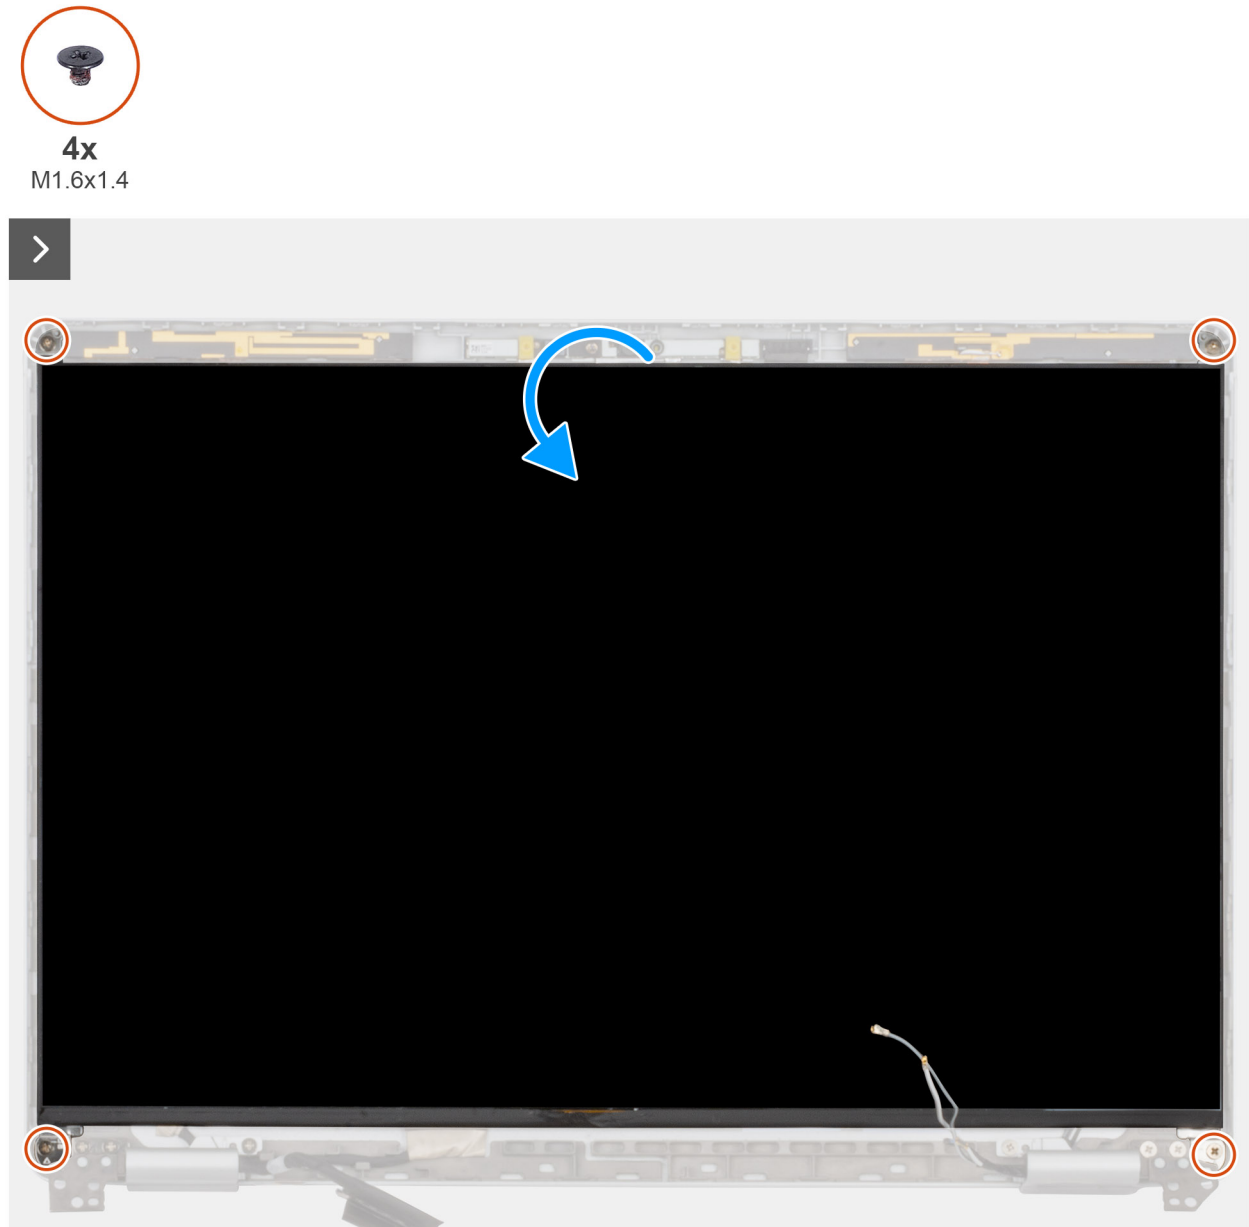


Figure 75. Removing the display panel

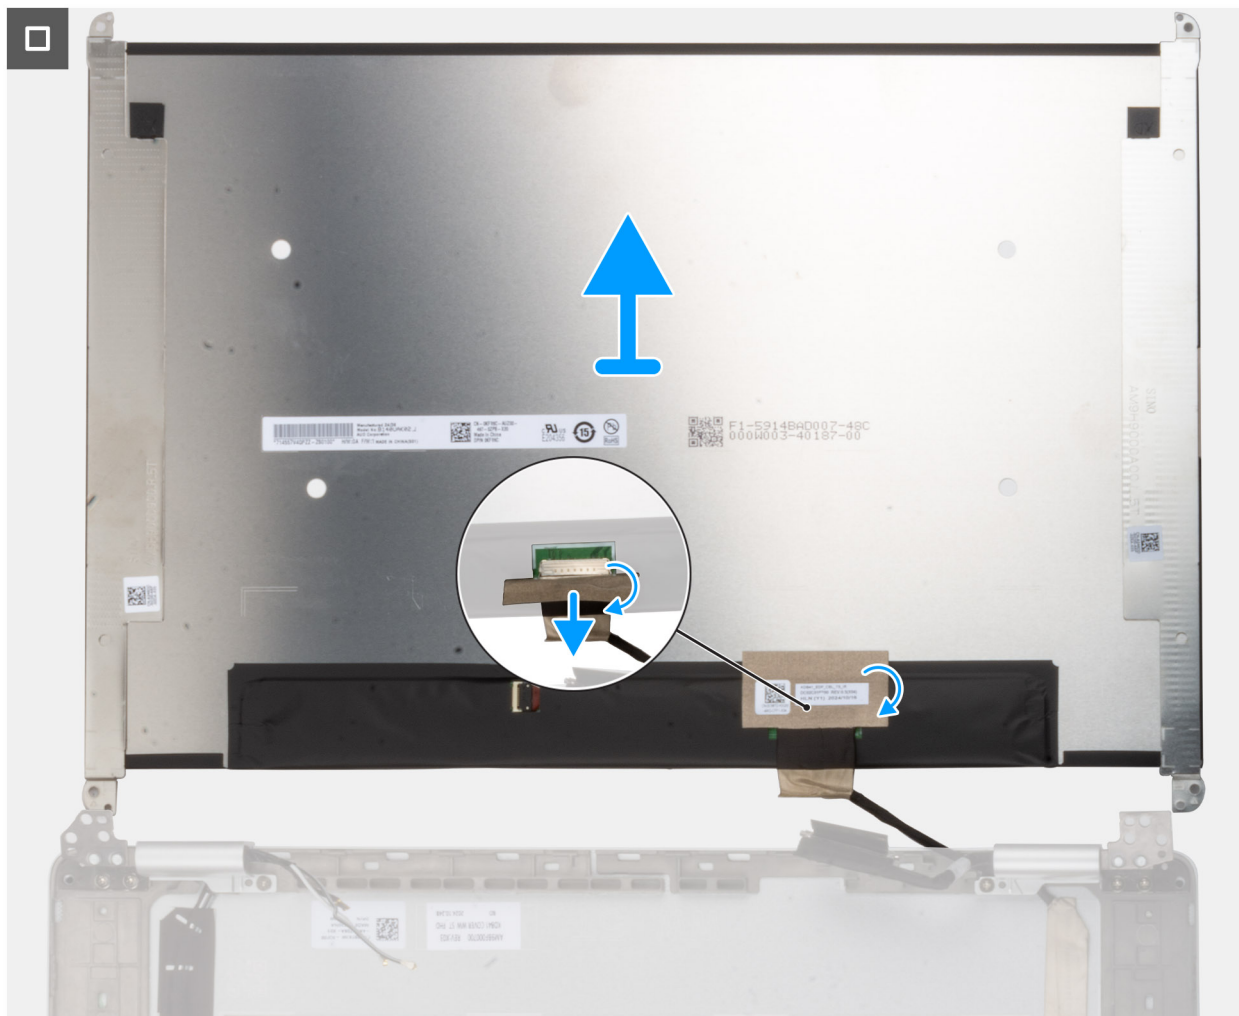

**Figure 76. Removing the display panel**

#### **Steps**

1. Remove the four screws (M1.6x1.4) that secure the display panel to the display back cover.
2. Gently flip the display panel and peel the tape that secures the display cable to the display panel.
3. Open the latch and disconnect the cable from the connector on the display panel.
4. Lift the display panel off the display back cover.

**CAUTION:** The display panel is assembled with the display-panel brackets as a single service part. Do not pull the two pieces of elastic tape and separate the brackets from the panel.



Figure 77. Display panel with brackets

## Installing the display panel

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### About this task


The following images indicate the location of the display panel and provide a visual representation of the installation procedure.



Figure 78. Installing the display panel



**4x**  
M1.6x1.4

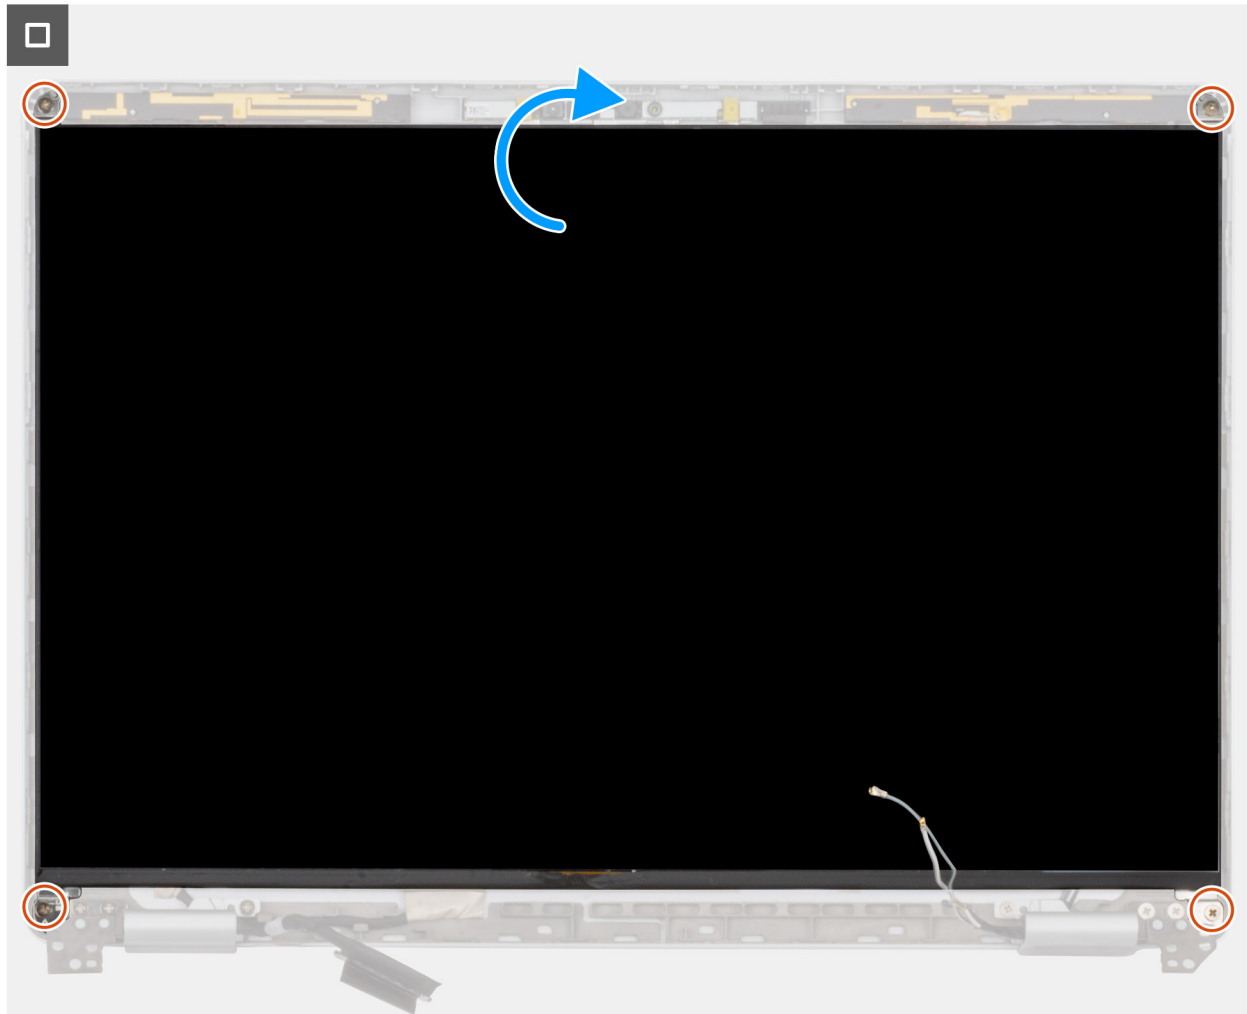

**Figure 79. Installing the display panel**

#### Steps

1. Place the display panel and display assembly on a clean and flat surface.
2. Connect the display cable to the connector on the display panel.
3. Adhere the tape to secure the display cable to the connector on the display panel.
4. Gently turn the display panel over and place the display panel in the slot on the display back cover.
5. Replace the four screws (M1.6x1.4) to secure the display-panel brackets to the display back-cover and antenna assembly.


#### Next steps

1. Install the [display bezel](#).
2. Install the [display assembly](#).
3. Install the [WWAN card](#), if applicable.
4. Install the [base cover](#).
5. Install the [SIM-card tray](#), if applicable.
6. Follow the procedure in [After working inside your computer](#).

# Display hinge caps

## Removing the display hinge caps


 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

 **NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.



### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display panel](#).

### About this task

 **NOTE:** The display hinges are a part of the display hinge caps.

The following images indicate the location of the display hinge caps and provide a visual representation of the removal procedure.

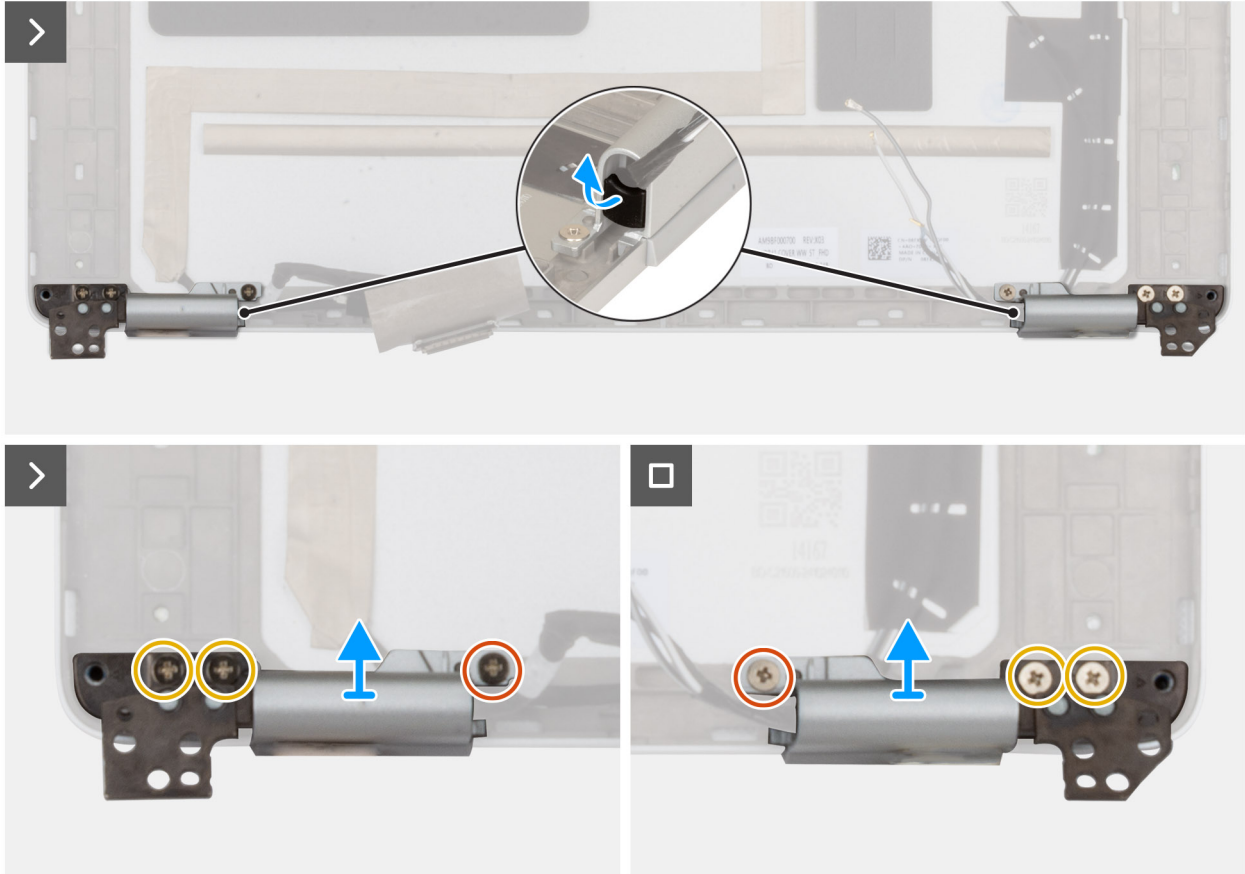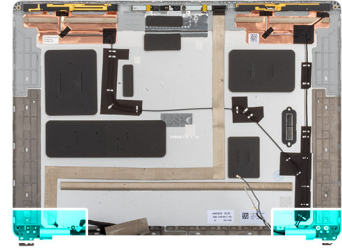

**Figure 80. Removing the display hinge caps**

### Steps

1. Using a plastic scribe, pry the hinge rubber stopper out of the left and right hinge caps.  
**NOTE:** Do not directly pull the display cable, Darwin cable, or the WWAN-antenna cables out of the hinge caps.
2. Remove the two screws (M2x3) and four screws (M2.5x3.5) that secure the display hinge caps to the display back cover.
3. Pinch and lift the left and right display hinge cap off the display back cover.

## Installing the display hinge caps

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.


### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

**NOTE:** The display hinges are a part of the display hinge caps.

The following images indicate the location of the display hinge caps and provide a visual representation of the installation procedure.

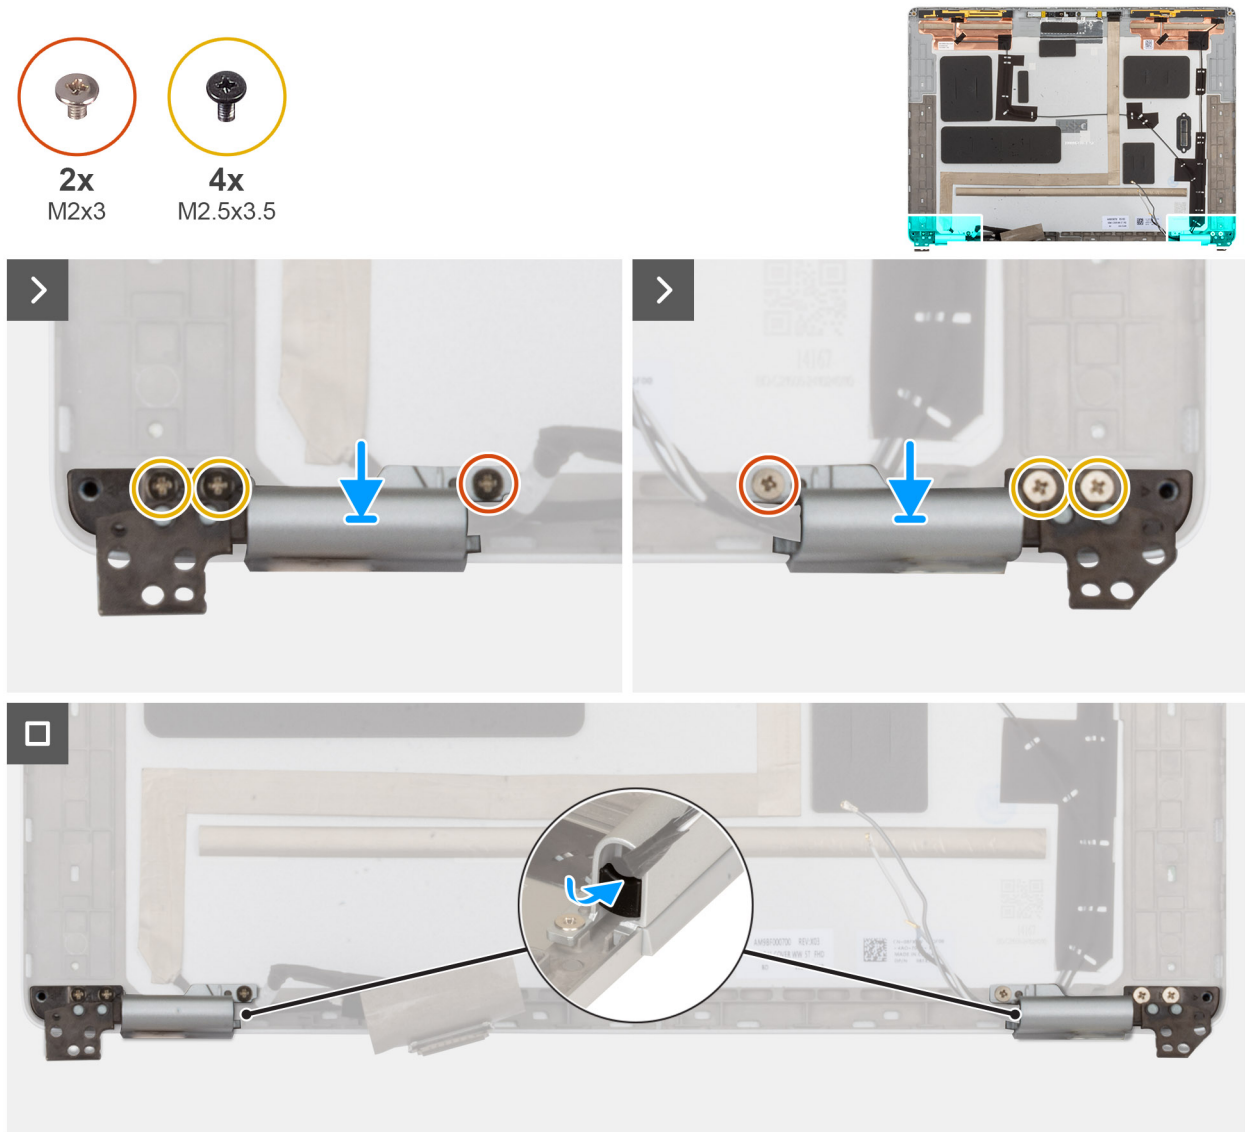

**Figure 81. Installing the display hinge caps**

### Steps

1. Route the display/camera cable and WWAN antenna/Darwin cable through the respective hinge caps.
2. Align and place the display hinge caps on the display back cover.
3. Replace the two screws (M2x3) and four screws (M2.5x3.5) that secure the display hinge caps to the display back cover.
4. Replace the hinge rubber stopper into the left and right hinge caps.

### Next steps

1. Install the [display panel](#).
2. Install the [display bezel](#).
3. Install the [display assembly](#).
4. Install the [WWAN card](#), if applicable.
5. Install the [base cover](#).

6. Install the [SIM-card tray](#), if applicable.
7. Follow the procedure in [After working inside your computer](#).

## RGB/IR camera

### Removing the RGB/IR camera

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.


#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display panel](#).

#### About this task

**NOTE:** This procedure applies only to models that are shipped with RGB or IR camera.

The following images indicate the location of the RGB/IR camera and provide a visual representation of the removal procedure.

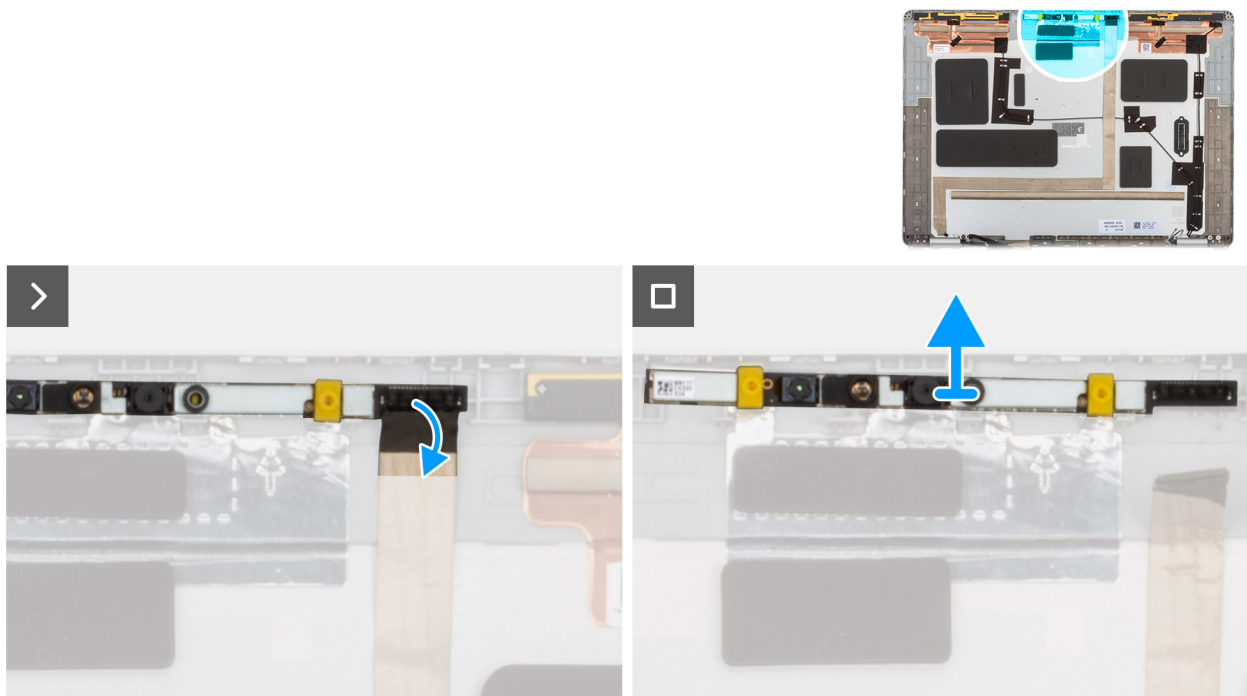

**Figure 82. Removing the RGB/IR camera**

#### Steps

1. Disconnect the display cable from the connector on the camera module.
2. Using a plastic scribe, pry the camera starting from the prying point at the bottom edge of the camera module.

**NOTE:** While removing the RGB/IR camera module, pry the module starting from the recess at its bottom edge indicated by an arrow. Then slide along the bottom edge to release it from the display back cover.

## Installing the RGB/IR camera


**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### About this task

**NOTE:** This procedure applies only to models that are shipped with RGB or IR camera.

The following images indicate the location of the RGB/IR camera and provide a visual representation of the installation procedure.

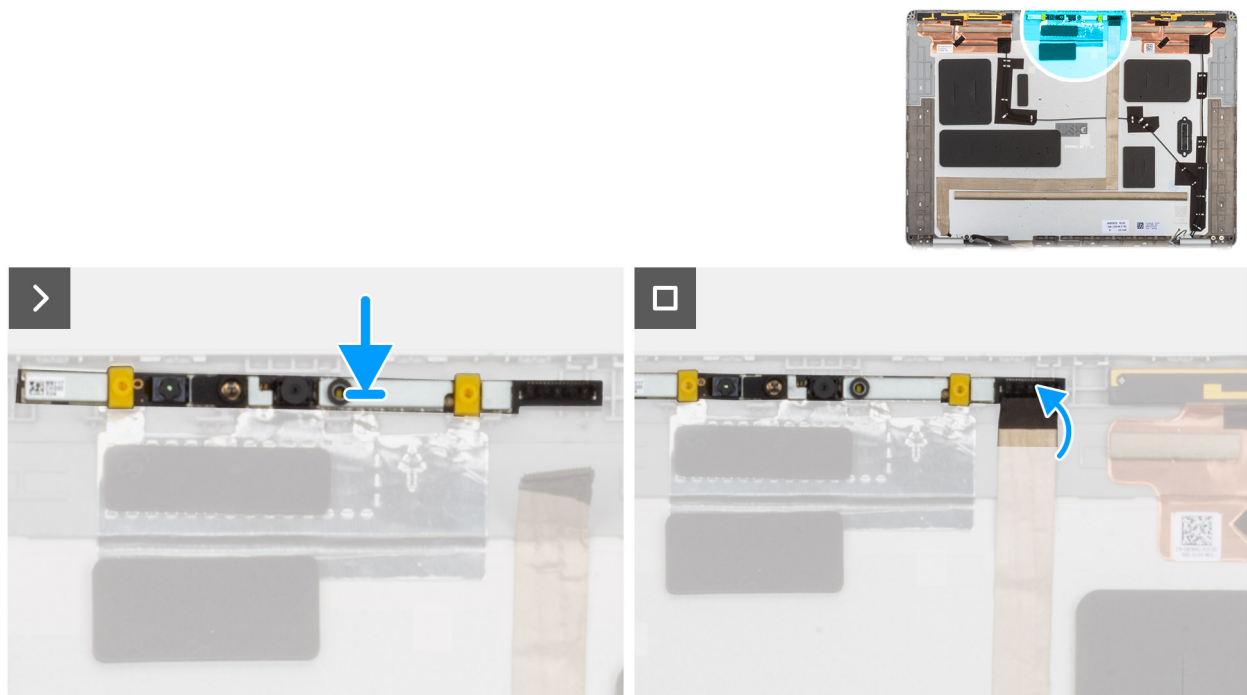

**Figure 83. Installing the RGB/IR camera**

### Steps

1. Align and place the camera module in the alignment post on the display back-cover and antenna assembly.
2. Connect the display cable to the connector on the camera module.

### Next steps

1. Install the [display panel](#) .
2. Install the [display bezel](#).
3. Install the [display assembly](#).
4. Install the [WWAN card](#), if applicable.
5. Install the [base cover](#).
6. Install the [SIM-card tray](#), if applicable.
7. Follow the procedure in [After working inside your computer](#).

# Display cable for RGB/IR camera

## Removing the display cable for RGB/IR camera

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display panel](#).

### About this task

**NOTE:** This procedure applies only to models that are shipped with RGB or IR camera.

The following images indicate the location of the camera and display cable and provide a visual representation of the removal procedure.


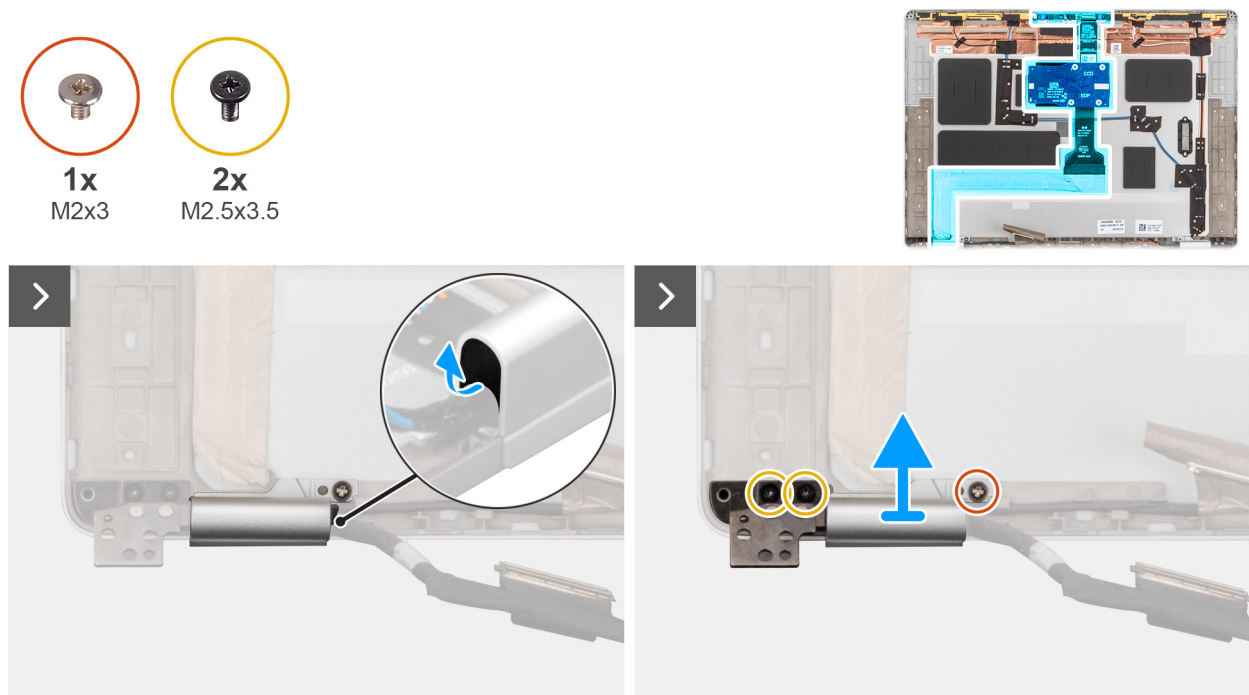


Figure 84. Removing the display cable

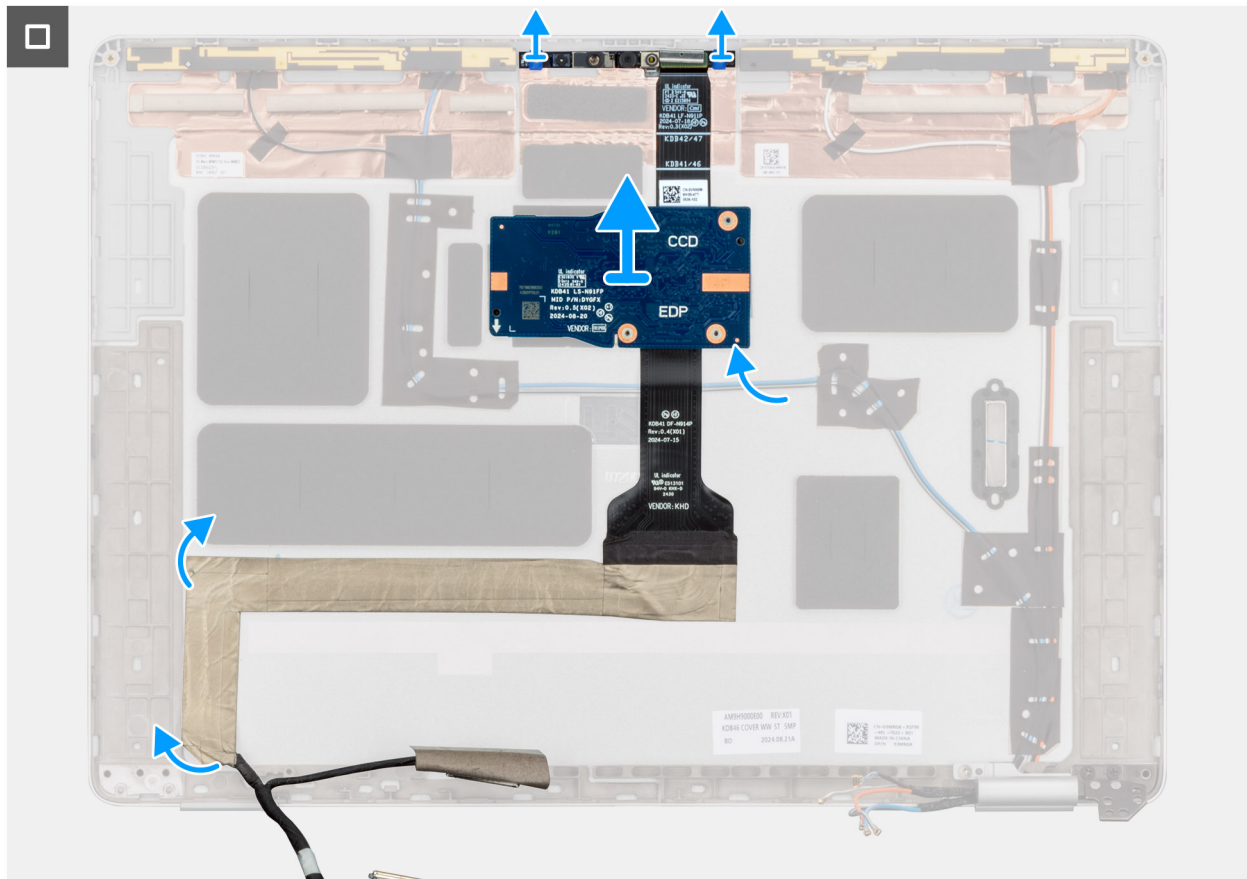

**Figure 85. Removing the display cable**

### Steps

1. Using a plastic scribe, pry the hinge rubber stopper out of the left hinge cap.
2. Remove the screw (M2x3) and the two screws (M2.5x3.5) that secure the left display-hinge cap to the display back cover.
3. Pinch the left-hinge cap and remove it from the display back cover.
4. Disconnect the display cable from the connector on the camera module.
5. Carefully peel back and remove the display cable from the display back-cover and antenna assembly.

## Installing the display cable for RGB/IR camera

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

**NOTE:** This procedure applies only to models that are shipped with RGB or IR camera.

The following images indicate the location of the display cable and provide a visual representation of the installation procedure.

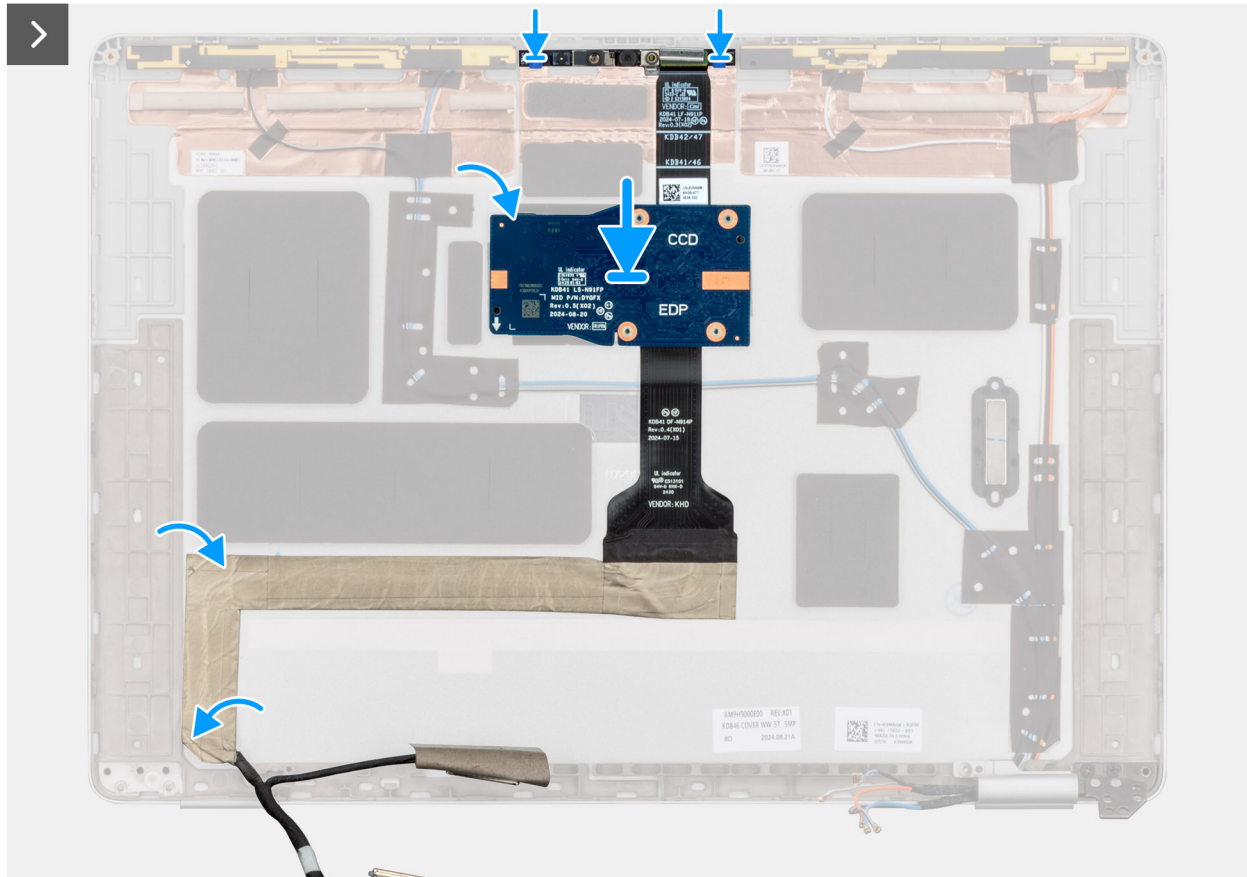
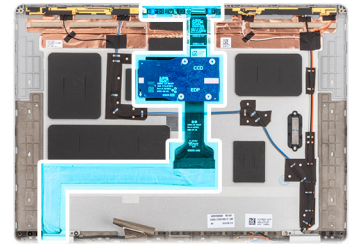


Figure 86. Installing the display cable



Figure 87. Installing the display cable

**Steps**

1. Adhere the display cable to the display back-cover and antenna assembly.

2. Connect the display cable to the connector on the camera module.
3. Carefully route the display cable through the display-hinge cap.
4. Align and place the left-hinge cap on the display back cover.
5. Gently press the left-hinge cap to secure it to the display back cover.
6. Replace the screw (M2x3) and the two screws (M2.5x3.5) to secure the left-display hinge cap to the display back cover.
7. Align and insert the hinge rubber into the left hinge cap to secure the display cable.

#### Next steps

1. Install the [display panel](#).
2. Install the [display bezel](#).
3. Install the [display assembly](#).
4. Install the [WWAN card](#), if applicable.
5. Install the [base cover](#).
6. Install the [SIM-card tray](#), if applicable.
7. Follow the procedure in [After working inside your computer](#).

## MIPI camera

### Removing the MIPI camera


 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

 **NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.


#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display panel](#).
8. Remove the [display hinge caps](#).

#### About this task

 **NOTE:** This procedure applies only to models shipped with MIPI camera.

The following images indicate the location of the MIPI camera and provide a visual representation of the removal procedure.

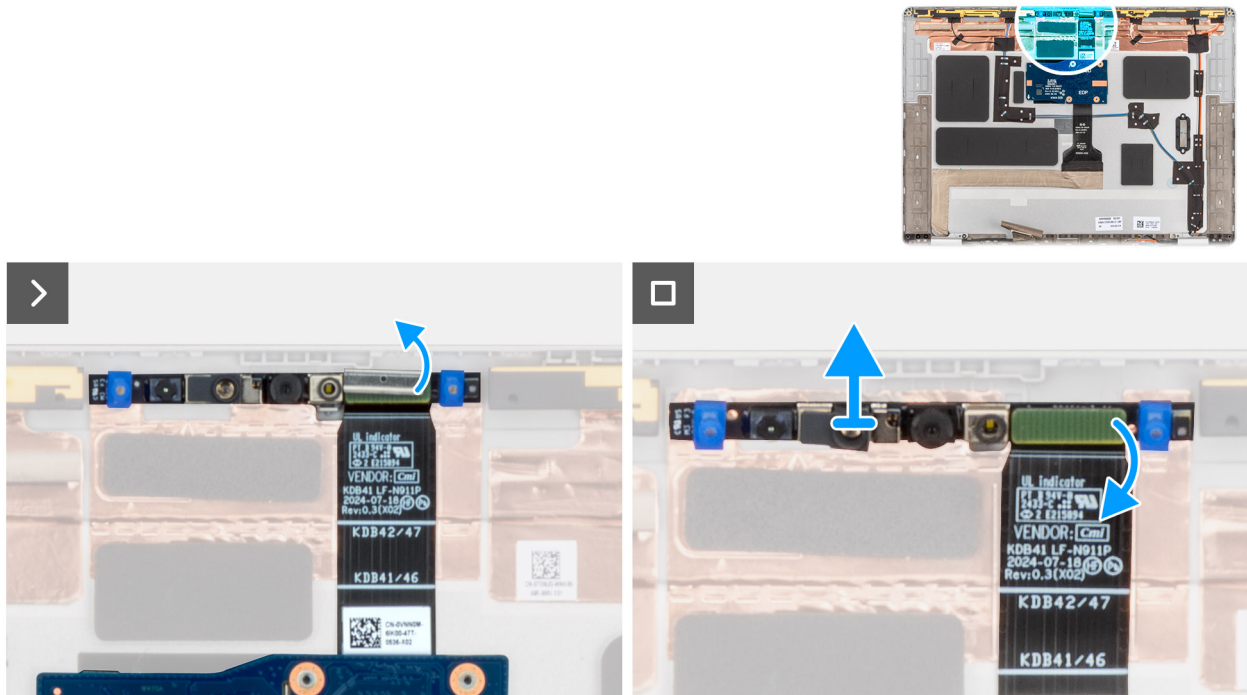

**Figure 88. Removing the MIPI camera**

### Steps

1. Remove the clip that secures the MIPI camera and the camera cable to the connector on the display back cover.
2. Using a plastic scribe, pry the camera module off the display back cover.
3. Carefully lift the MIPI camera module, along with the middle-board cable, middle board and display cable, off the display back cover.

## Installing the MIPI camera

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

**NOTE:** This procedure applies only to models shipped with MIPI camera.

The following images indicate the location of the MIPI camera and provide a visual representation of the installation procedure.



**Figure 89. Installing the MIPI camera**

### Steps

1. Align and place the MIPI camera module, along with the middle-board cable, middle board, and display cable, in the slot on the display back cover.
2. Replace the clip to secure the MIPI camera and the camera cable to the display back cover.

**NOTE:** When installing the clip to secure the MIPI camera connector to the middle-board cable, ensure that the top side (with **TOP** etched on it) is facing up.

### Next steps

1. Install the [display hinge caps](#).
2. Install the [display panel](#).
3. Install the [display bezel](#).
4. Install the [display assembly](#).
5. Install the [WWAN card](#), if applicable.
6. Install the [base cover](#).
7. Install the [SIM-card tray](#), if applicable.
8. Follow the procedure in [After working inside your computer](#).

## Display cable for MIPI camera

### Removing the display cable for MIPI camera

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.

3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display panel](#).
8. Remove the [display hinge caps](#).
9. Remove the [MIPI camera](#).

**About this task**

**NOTE:** This procedure applies only to models shipped with MIPI camera.

The following image indicates the location of the display cable for MIPI camera and provides a visual representation of the removal procedure.

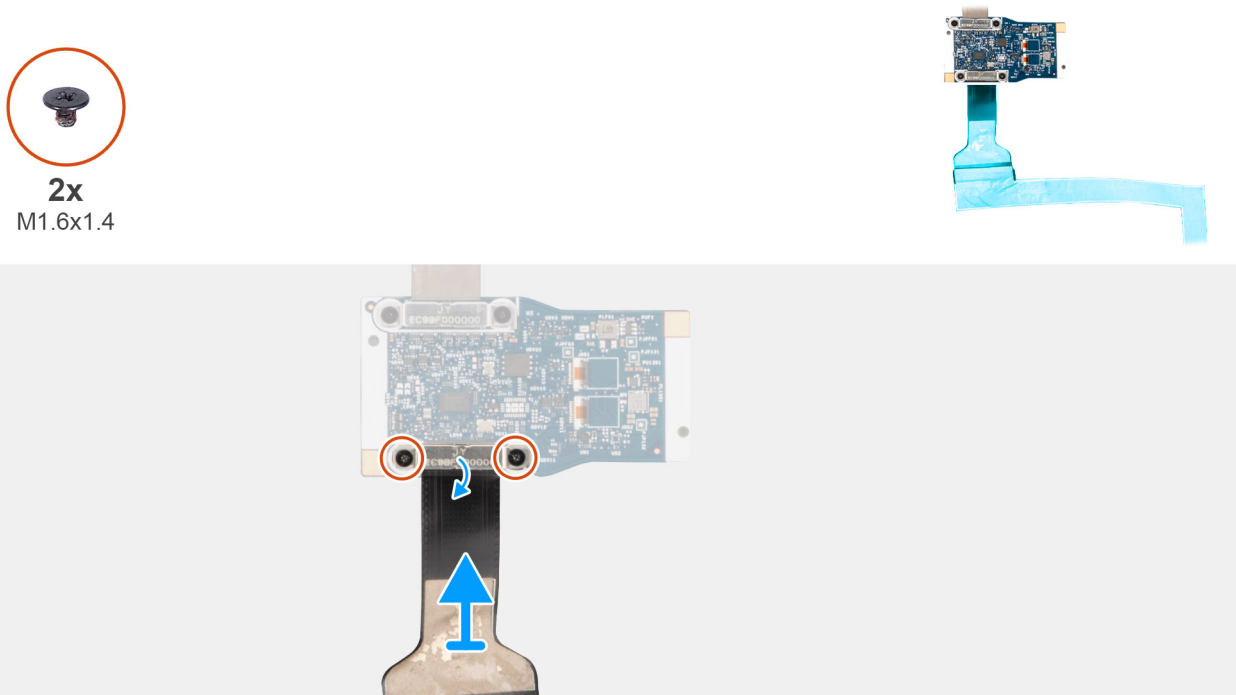

**Figure 90. Removing the display cable for MIPI camera**

**Steps**

1. Place the MIPI camera module on a clean, flat surface.
2. Turn the middle board over.
3. Remove the two screws (M1.6x1.4) that secure the display cable to the middle board.
4. Disconnect and remove the display cable from the connector on the middle board.

## Installing the display cable for MIPI camera

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.


**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

**NOTE:** This procedure applies only to models shipped with MIPI camera.

The following image indicates the location of the display cable for MIPI camera and provides a visual representation of the installation procedure.

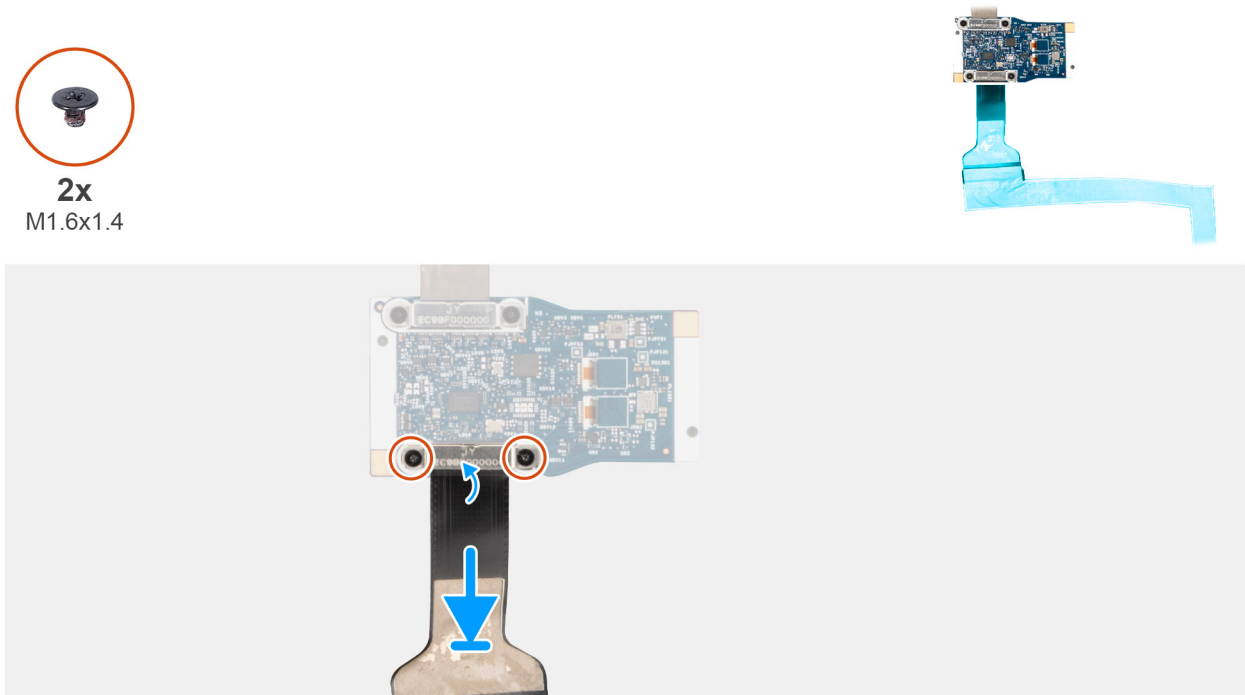

**Figure 91. Installing the display cable for MIPI camera**

### Steps

1. Place the MIPI camera module on a clean, flat surface.
2. Turn the middle board over.
3. Connect the display cable to the connector on the middle board.
4. Replace the two screws (M1.6x1.4) to secure the display cable to the middle board.

### Next steps

1. Install the [MIPI camera](#).
2. Install the [display hinge caps](#).
3. Install the [display panel](#).
4. Install the [display bezel](#).
5. Install the [display assembly](#).
6. Install the [WWAN card](#), if applicable.
7. Install the [base cover](#).
8. Install the [SIM-card tray](#), if applicable.
9. Follow the procedure in [After working inside your computer](#).

## Middle-board cable

### Removing the middle-board cable

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.


### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#).
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display panel](#).
8. Remove the [display hinge caps](#).
9. Remove the [MIPI camera](#).

### About this task

**NOTE:** This procedure applies only to models shipped with MIPI camera.

The following image indicates the location of the middle-board cable and provides a visual representation of the removal procedure.

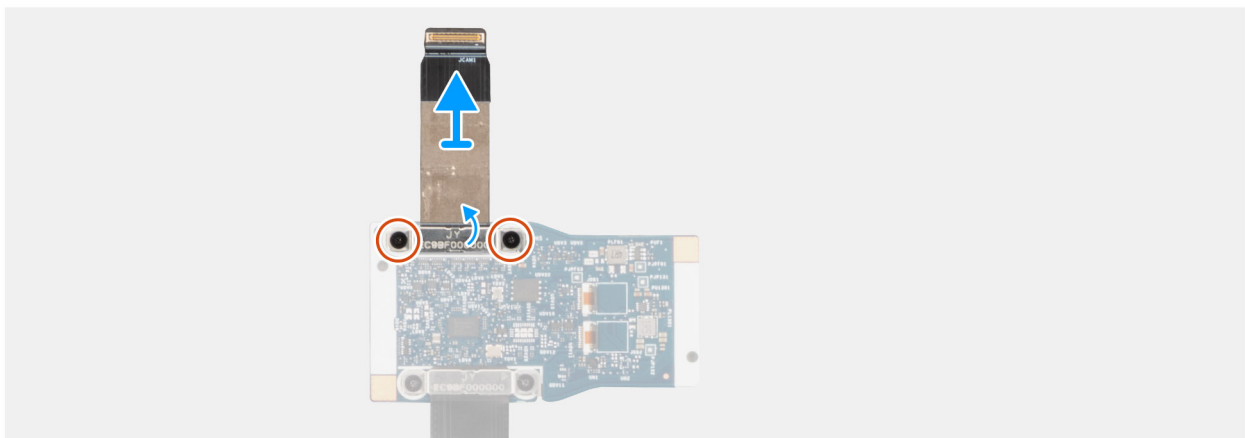

**Figure 92. Removing the middle-board cable**

### Steps

1. Place the MIPI camera module on a clean, flat surface.
2. Turn the middle board over.
3. Remove the two screws (M1.6x1.4) that secure the middle-board cable to the middle board.
4. Disconnect and remove the middle-board cable from connector on the middle board.

## Installing the middle-board cable

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.


## About this task

**NOTE:** This procedure applies only to models shipped with MIPI camera.

The following image indicates the location of the middle-board cable and provides a visual representation of the installation procedure.



**2x**  
M1.6x1.4

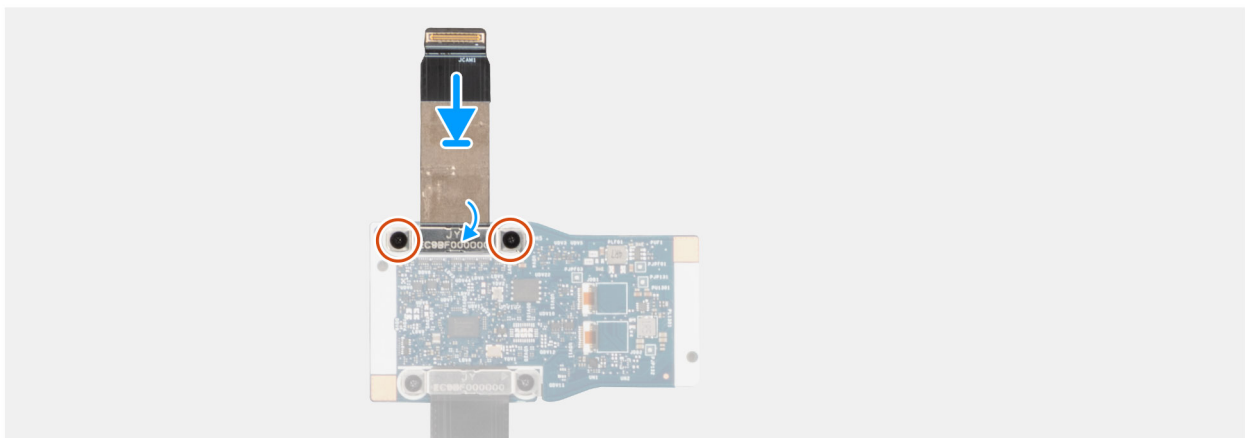

**Figure 93. Installing the middle-board cable**

## Steps

1. Place the MIPI camera module on a clean, flat surface.
2. Turn the middle board over.
3. Connect the middle-board cable to the connector on the middle board.
4. Replace the two screws (M1.6x1.4) to secure the middle-board cable to the middle board.

## Next steps

1. Install the [MIPI camera](#).
2. Install the [display hinge caps](#).
3. Install the [display panel](#).
4. Install the [display bezel](#).
5. Install the [display assembly](#).
6. Install the [WWAN card](#), if applicable.
7. Install the [base cover](#).
8. Install the [SIM-card tray](#), if applicable.
9. Follow the procedure in [After working inside your computer](#).

# Middle board

## Removing the middle board

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display panel](#).
8. Remove the [display hinge caps](#).
9. Remove the [MIPI camera](#).
10. Remove the [display cable for MIPI camera](#).
11. Remove the [middle-board cable](#).

### About this task

**NOTE:** This procedure applies only to models shipped with MIPI camera.

The image below shows the middle board after the **Prerequisites** have been performed for any middle-board replacement.

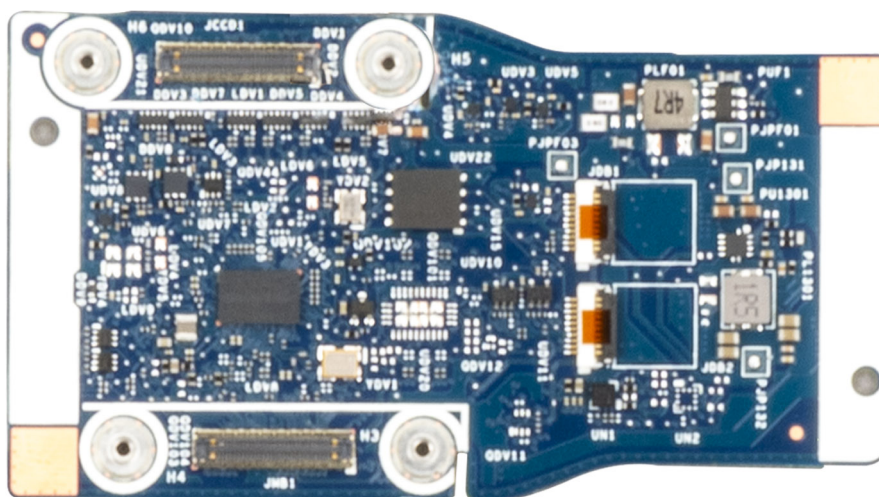


Figure 94. Middle board

### Steps

After performing the **Prerequisites**, you are left with the middle board.

## Installing the middle board

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.


### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

**NOTE:** This procedure applies only to models shipped with MIPI camera.

The image below shows the middle board.

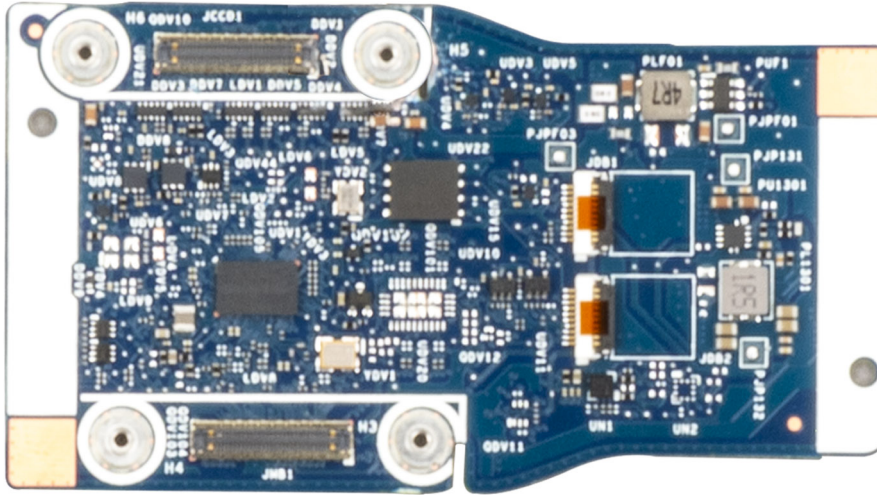

**Figure 95. Middle board**

### Steps

Place the middle board on a flat surface and perform the **Next steps** to install the middle board.

### Next steps

1. Install the [middle-board cable](#).
2. Install the [display cable for MIPI camera](#).
3. Install the [MIPI camera](#).
4. Install the [display hinge caps](#).
5. Install the [display panel](#).
6. Install the [display bezel](#).
7. Install the [display assembly](#).
8. Install the [WWAN card](#), if applicable.
9. Install the [base cover](#).
10. Install the [SIM-card tray](#), if applicable.
11. Follow the procedure in [After working inside your computer](#).

## Display back-cover and antenna assembly

### Removing the display back-cover and antenna assembly

**CAUTION:** The information in this removal section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.


### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [WWAN card](#), if applicable.
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display panel](#).
8. Remove the [display hinge cap](#).
9. Remove the [RGB/IR camera](#) or the [MIPI camera](#), as applicable.
10. Remove the [display cable for RGB/IR camera](#) or the [display cable for MIPI camera](#), as applicable.

### About this task

**NOTE:** The display back-cover and antenna assembly cannot be further disassembled once all the **Prerequisites** are completed. If the wireless antennas are malfunctioning and are required to be replaced, replace the entire display back-cover and antenna assembly.

The image below shows the display back-cover and antenna assembly after the **Prerequisites** have been performed.

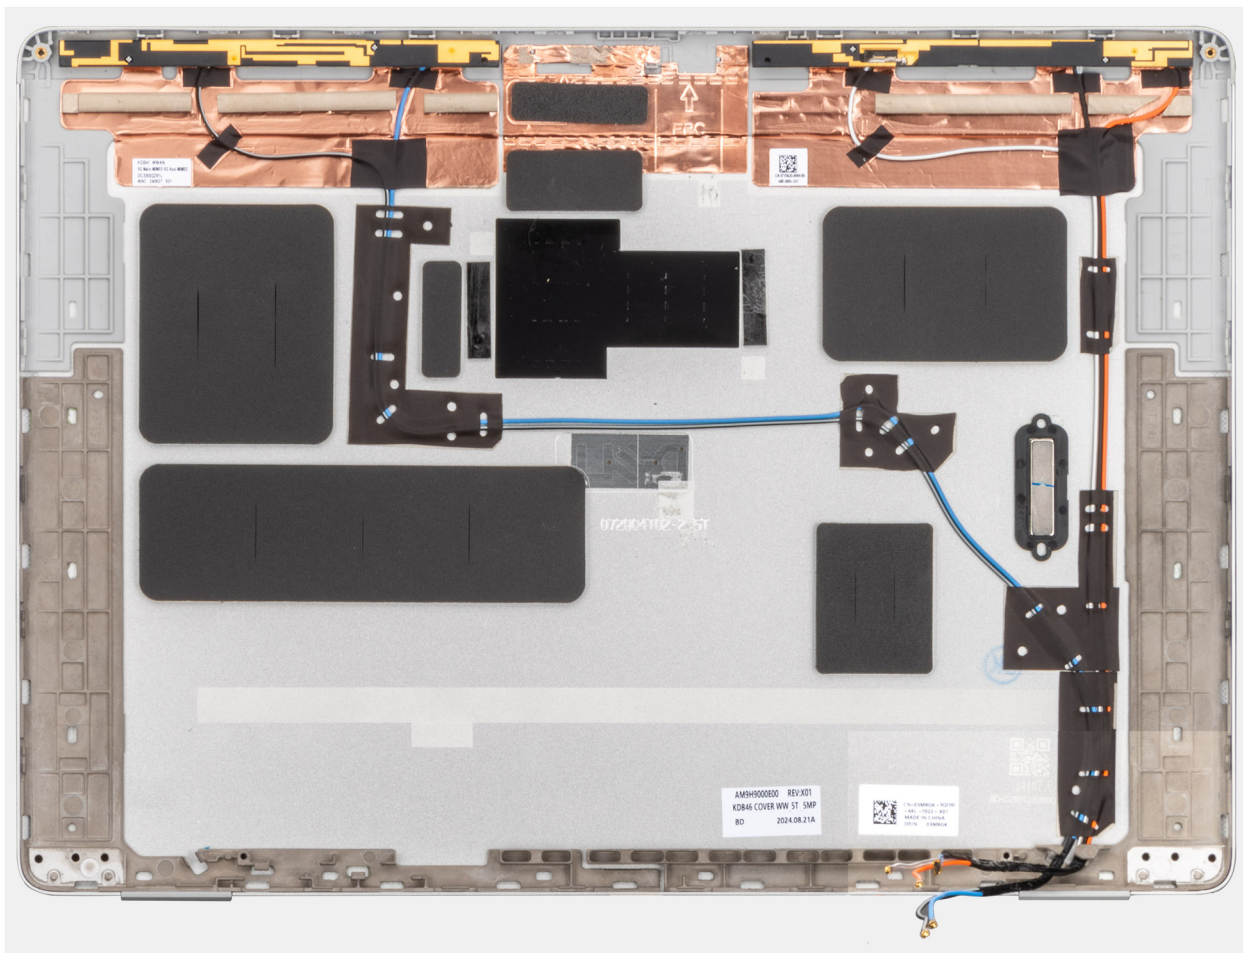

**Figure 96. Display back-cover and antenna assembly**

### Steps

After performing the **Prerequisites**, you are left with the display back-cover and antenna assembly.

## Installing the display back-cover and antenna assembly

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

**NOTE:** This procedure applies only to Dell Pro 14 Plus laptops.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The image below shows the display back-cover and antenna assembly.

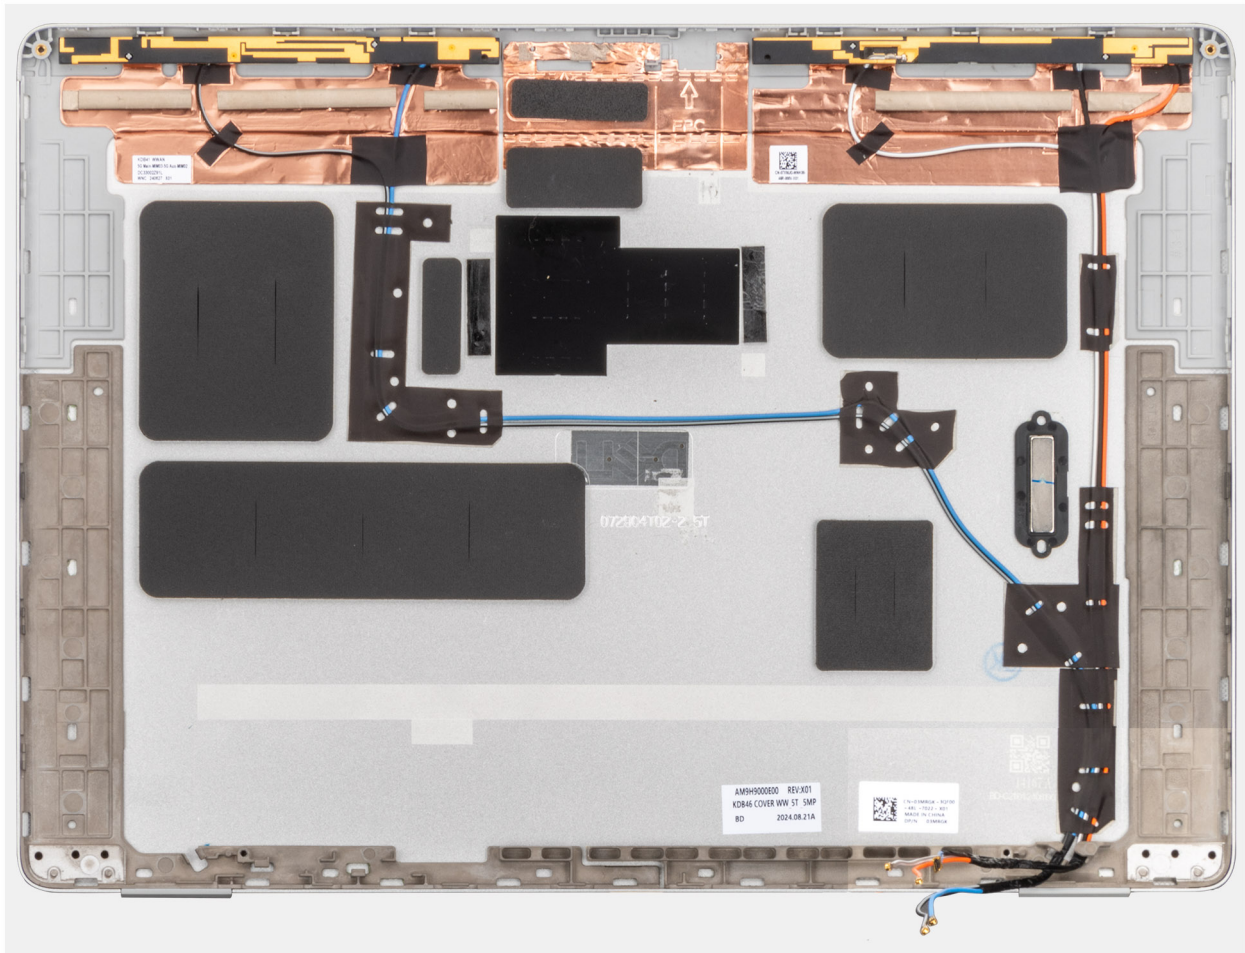


Figure 97. Display back-cover and antenna assembly

### Steps

Place the display back-cover and antenna assembly on a flat surface and perform the **Next steps** to install the display back-cover and antenna assembly.

### Next steps

1. Install the [display cable for RGB/IR camera](#) or the [display cable for MIPI camera](#), as applicable.
2. Install the [RGB/IR camera](#) or the [MIPI camera](#), as applicable.
3. Install the [display hinge cap](#).
4. Install the [display panel](#).
5. Install the [display bezel](#).
6. Install the [display assembly](#).

7. Install the [WWAN card](#), if applicable.
8. Install the [base cover](#).
9. Install the [SIM-card tray](#), if applicable.
10. Follow the procedure in [After working inside your computer](#) .


# Keyboard

## Removing the keyboard

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [memory module](#).
6. Remove the [WWAN card](#), if applicable.
7. Remove the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
8. Remove the [WLAN card](#).
9. Remove the [system board](#).

 **NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

10. Remove the [I/O board](#).
11. Remove the [power button with optional fingerprint reader](#).

### About this task

The following images indicate the location of the keyboard and provide a visual representation of the removal procedure.




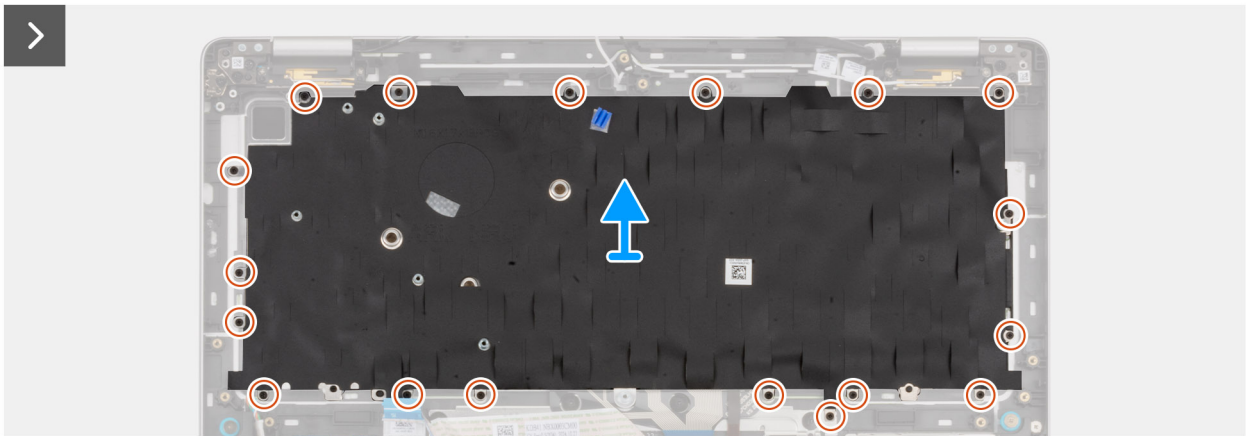


Figure 98. Removing the keyboard

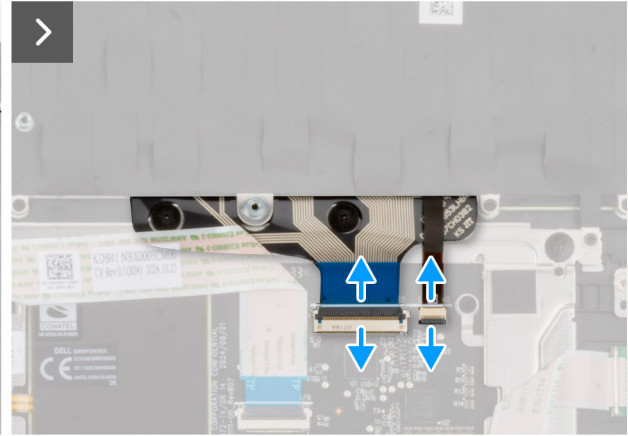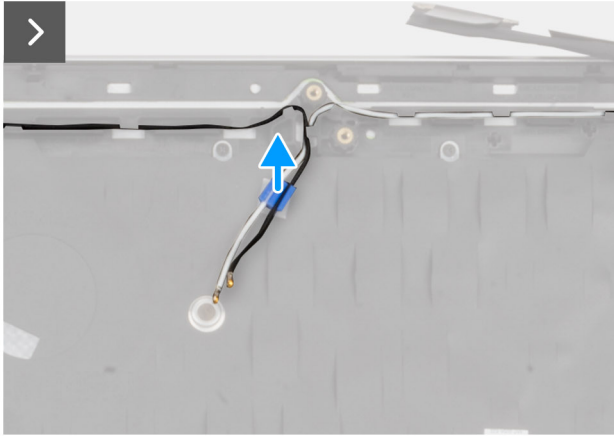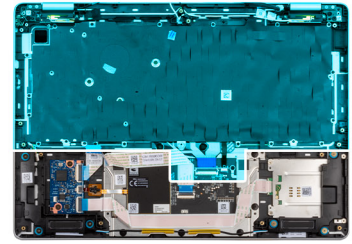

**Figure 99. Removing the keyboard**

### Steps

1. Remove the WLAN-antenna cables from the routing guides on the keyboard bracket.
2. Disconnect the keyboard cable and keyboard backlight cable (for models that are shipped with keyboard backlight) from the connectors on the touchpad.
3. Remove the 18 screws (M1.6x1.7) that secure the keyboard bracket to the palm-rest assembly.
4. Lift the keyboard bracket off the palm-rest assembly.
5. Turn the keyboard over.
6. Remove the two screws (M2x2) that secure the keyboard to the keyboard bracket.
7. Lift the keyboard off the keyboard bracket.

## Installing the keyboard

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the keyboard and provide a visual representation of the installation procedure.



18x  
M1.6x1.7



2x  
M2x2


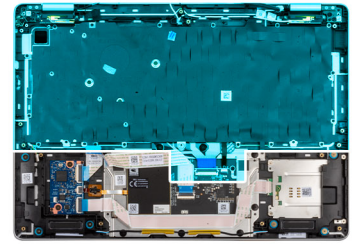


Figure 100. Installing the keyboard

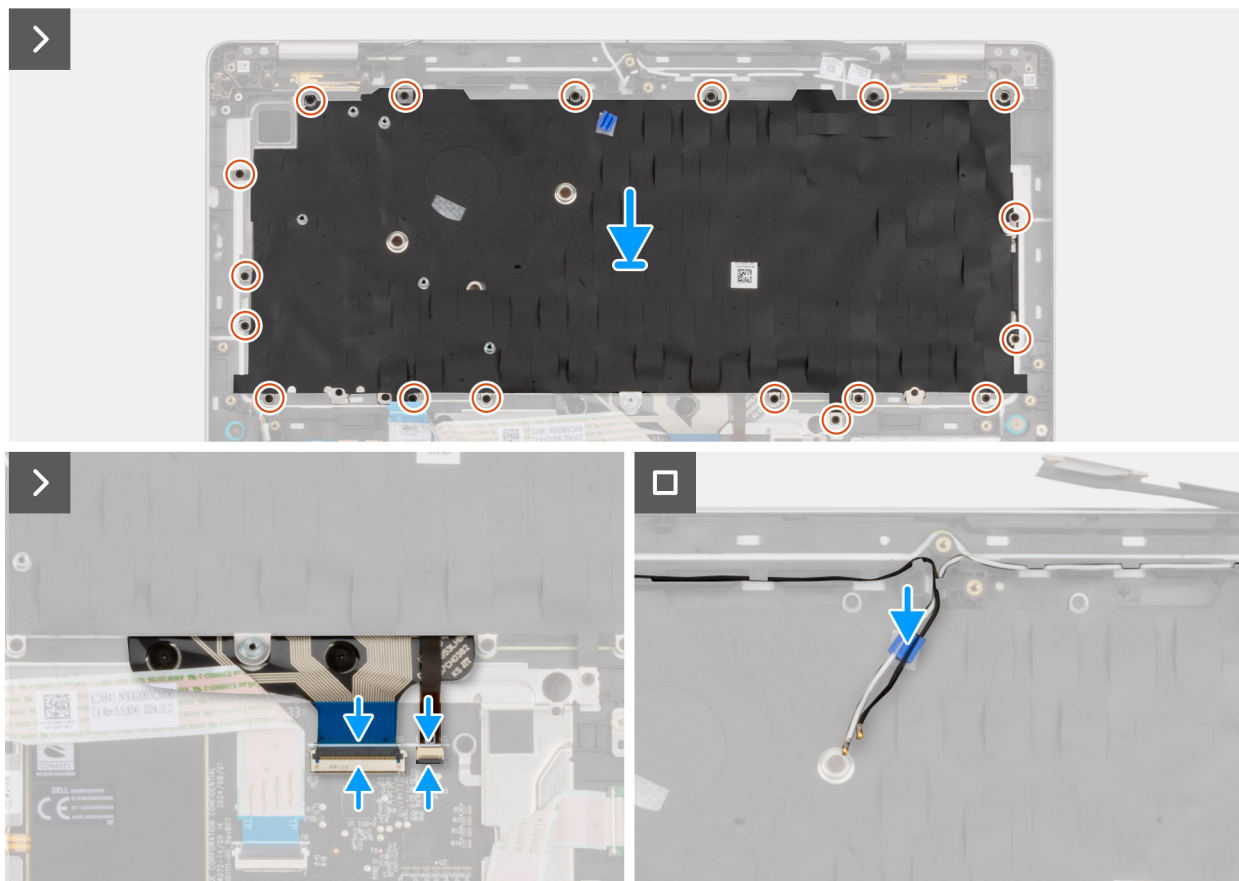

**Figure 101. Installing the keyboard**

### Steps

1. Align and place the keyboard on the keyboard bracket.
2. Replace the two screws (M2x2) to secure the keyboard to the keyboard bracket.
3. Turn the keyboard over.
4. Align and place the keyboard on the palm-rest assembly.
5. Replace the 18 screws (M1.6x1.7) to secure the keyboard bracket to the palm-rest assembly.
6. Connect the keyboard cable and keyboard backlight cable (for models that are shipped with the keyboard backlight) to the connector on the touchpad.
7. Route the WLAN-antenna cables through the routing guides on the keyboard bracket.

### Next steps

1. Install the [power button with optional fingerprint reader](#).
2. Install the [I/O board](#).
3. Install the [system board](#).

**NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

4. Install the [WLAN card](#).
5. Install the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
6. Install the [WWAN card](#), if applicable.
7. Install the [memory module](#).
8. Install the [battery](#).
9. Install the [base cover](#).
10. Install the [SIM-card tray](#), if applicable.
11. Follow the procedure in [After working inside your computer](#).


# Palm-rest assembly

## Removing the palm-rest assembly

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.


### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#), if applicable.
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [memory module](#).
6. Remove the [WWAN card](#), if applicable.
7. Remove the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
8. Remove the [WLAN card](#).
9. Remove the [speakers](#).
10. Remove the [USH board](#).
11. Remove the [smart card reader](#).
12. Remove the [system board](#).


 **NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

13. Remove the [WLAN-antenna module](#).
14. Remove the [I/O board](#).
15. Remove the [power button with optional fingerprint reader](#).
16. Remove the [display assembly](#).
17. Remove the [keyboard](#).

### About this task

 **NOTE:** The palm-rest assembly cannot be further disassembled once all prerequisites are completed. If the touchpad is malfunctioning and is required to be replaced, replace the entire palm-rest assembly.

The image below shows the palm-rest assembly after the prerequisites have been performed for any palm-rest replacement.

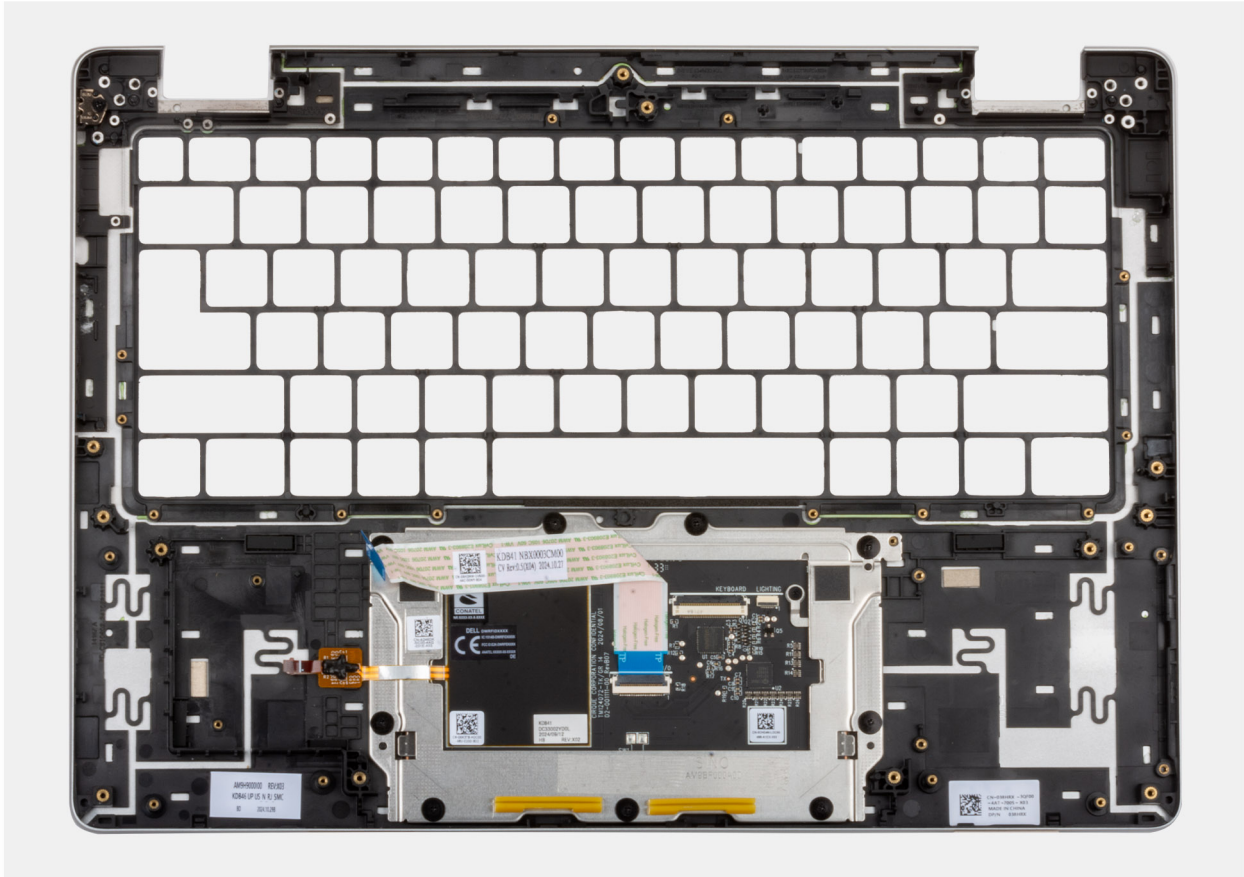

**Figure 102. Palm-rest assembly**

### Steps

1. After performing the prerequisites, you are left with the palm-rest assembly.
2. For models shipped without WWAN card installed, use a plastic scribe to pry off the SIM-card slot filler from the palm-rest assembly and transfer it over to the replacement palm-rest assembly.

## Installing the palm-rest assembly


**CAUTION:** The information in this installation section is intended for authorized service technicians only.

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The image below shows the palm-rest assembly.

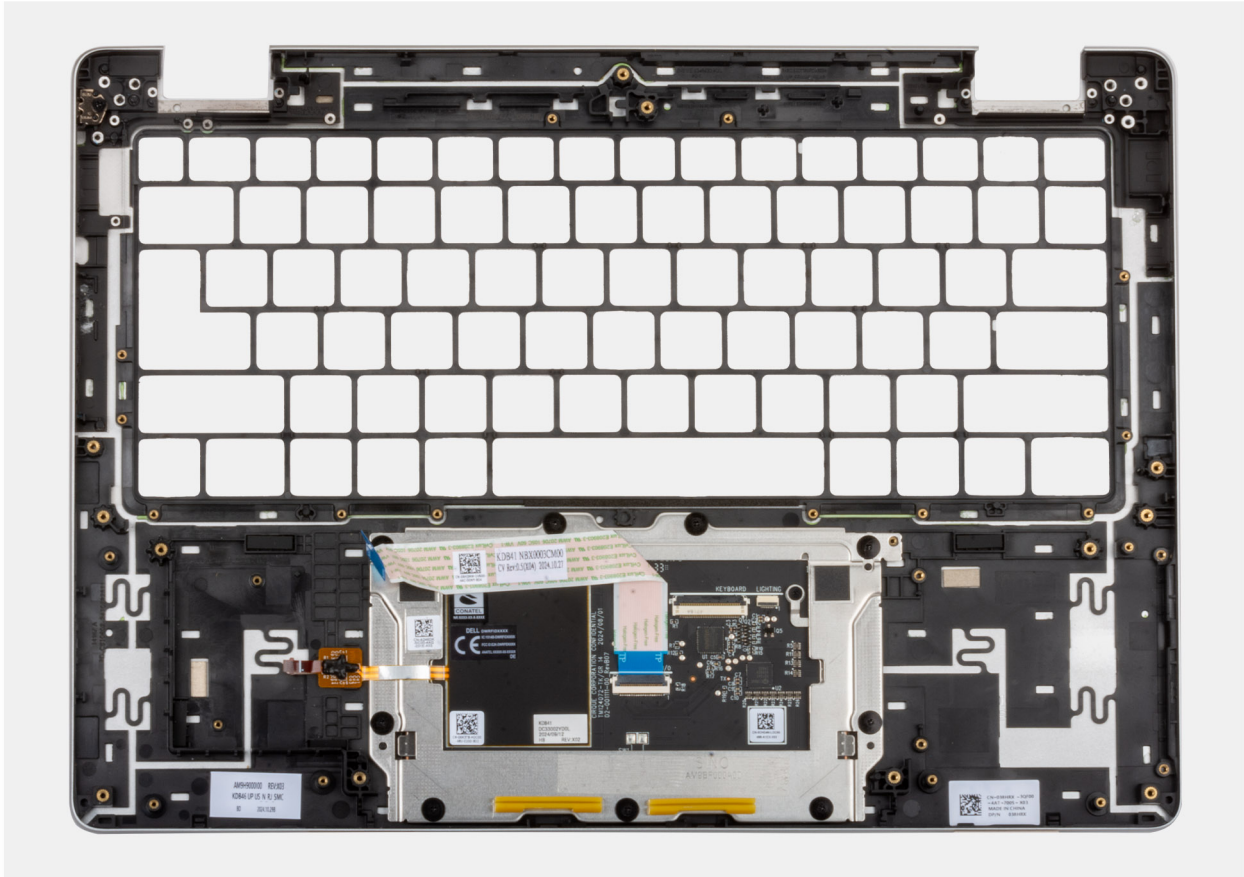

**Figure 103. Palm-rest assembly**

### Steps

Place the palm-rest assembly on a clean, flat surface and perform the next steps to install the palm-rest assembly.

**i** **NOTE:** The touchpad is pre-assembled with the palm-rest assembly.

**i** **NOTE:** For models shipped without WWAN card installed, use a plastic scribe to pry off the SIM-card slot filler from the palm-rest assembly and transfer it over to the replacement palm-rest assembly.

### Next steps

1. Install the [keyboard](#).
2. Install the [display assembly](#).
3. Install the [power button with optional fingerprint reader](#).
4. Install the [I/O board](#).
5. Install the [WLAN-antenna module](#).
6. Install the [system board](#).

**i** **NOTE:** The system board can be removed and installed with the fan and heat-sink assembly attached in order to simplify the procedure and preserve the thermal bond between the system board and fan and heat-sink assembly.

7. Install the [smart card reader](#).
8. Install the [USH board](#).
9. Install the [speakers](#).
10. Install the [WLAN card](#).
11. Install the [M.2 2230 solid state drive](#) or the [M.2 2280 solid state drive](#), as applicable.
12. Install the [WWAN card](#), if applicable.
13. Install the [memory module](#).
14. Install the [battery](#).

15. Install the [base cover](#).
16. Install the [SIM-card tray](#), if applicable.
17. Follow the procedure in [After working inside your computer](#).


# Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

## Operating system

Your Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1 supports the following operating systems:

- Windows 11 Pro
- Windows 11 Home
- Ubuntu Linux 24.04

 **NOTE:** If you downgrade your computer from Windows 11 to Windows 10 22H2, Dell Technologies support will follow the Microsoft Windows 10 End of Support plan.

## Drivers and downloads

When troubleshooting, downloading, or installing drivers, it is recommended that you read the [Dell Knowledge Base article Drivers and Downloads FAQs](#).

# BIOS Setup

**CAUTION:** Certain changes can make your computer work incorrectly. Before you change the settings in BIOS Setup, it is recommended that you note down the original settings for future reference.

**NOTE:** Depending on the computer and the installed devices, the options that are listed in this section may differ.

Use BIOS Setup for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the capacity of the storage device.
- Change the system configuration information.
- Set or change user-selectable options such as the user password, enabling or disabling base devices, and configuring hard drive settings.

## Entering BIOS Setup program

Turn on or restart your computer and press F2 immediately.

## Navigation keys

**NOTE:** For most of the BIOS Setup options, changes that you make are recorded but do not take effect until you restart the computer.

**Table 36. Navigation keys**

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follows the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restart the computer.

## F12 One Time Boot menu

To enter the One Time Boot menu, turn on or restart your computer, and then press F12 immediately.

**NOTE:** If you are unable to enter the One Time Boot menu, repeat the above action.

The One Time Boot menu displays the devices that you can boot from and also display the options to start diagnostics. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)

**NOTE:** XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The One Time Boot menu screen also displays the option to access BIOS Setup.

## View Advanced Setup options

### About this task

Some BIOS Setup options are only visible by enabling **Advanced Setup** mode, which is disabled by default.

**NOTE:** BIOS Setup options, including **Advanced Setup** options, are described in [BIOS setup options](#).

### To enable Advanced Setup:

#### Steps

1. Enter BIOS Setup.  
The Overview menu appears.
2. Click the **Advanced Setup** option to move it to the **ON** mode.  
Advanced BIOS Setup options are displayed.

## View Service options

### About this task

Service options are hidden by default and only visible by entering a hotkey command.

**NOTE:** Service options are described in [BIOS Setup options](#).

### To view Service options:

#### Steps

1. Enter BIOS Setup.  
The Overview menu appears.
2. Enter the hotkey combination **Ctrl + Alt + s** to view the **Service** options.  
**Service** options are displayed.

## System setup options

**NOTE:** Depending on your computer and its installed devices, the items that are listed in this section may or may not be displayed.

**Table 37. BIOS Setup options—Overview menu**

Overview	
<b>Dell Pro 14 Plus/Dell Pro 14 Plus 2-in-1</b>	
BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.
Manufacture Date	Displays the manufacture date of the computer.

**Table 37. BIOS Setup options—Overview menu (continued)**

<b>Overview</b>	
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the Express Service Code of the computer.
Ownership Tag	Displays the Ownership Tag of the computer.
<b>Battery Information</b>	
Primary	Displays the primary battery of the computer.
Battery Level	Displays the battery level of the computer.
Battery State	Displays the battery state of the computer.
Health	Displays the battery health of the computer.
AC Adapter	Displays whether an AC adapter is connected. If connected, displays the type of AC adapter that is connected.
<b>Processor Information</b>	
Processor Type	Displays the processor type.
Maximum Clock Speed	Displays the maximum processor clock speed.
Core Count	Displays the number of cores on the processor.
Processor ID	Displays the processor identification code.
Microcode Version	Displays the microcode version.
Intel Hyper-Threading Capable	Displays whether the processor is Hyper-Threading (HT) capable.
Intel vPro Technology	Displays the Intel vPro Technology.
Processor L2 Cache	Displays the L2 Cache.
Processor L3 Cache	Displays the L3 Cache.
<b>Memory Information</b>	
Memory Installed	Displays the total memory that is installed on the computer.
Memory Available	Displays the total memory available on the computer.
Memory Speed	Displays the memory speed.
Memory Channel Mode	Displays single or dual channel mode.
Memory Technology	Displays the technology that is used for the memory.
<b>Devices Information</b>	
Panel Type	Displays the type of display panel available on the computer.
Panel Revision	Displays the panel revision of the computer.
Video Controller	Displays the type of video controller available on the computer.
Video Memory	Displays the video memory information of the computer.
Wi-Fi Device	Displays the wireless device information of the computer.
Native Resolution	Displays the native resolution of the computer.
Video BIOS Version	Displays the video BIOS version of the computer.
Audio Controller	Displays the audio controller information of the computer.
Bluetooth Device	Displays the Bluetooth device information of the computer.
Pass Through MAC Address	Displays the MAC address of the video pass-through.
Cellular Device	Displays the Cellular device information of the computer.

**Table 38. BIOS Setup options—Boot Configuration menu**

<b>Boot Configuration</b>	
<b>Boot Sequence</b>	
Boot Mode: UEFI only	Displays the boot mode of the computer.
Boot Sequence	Displays the boot sequence.
<b>Secure Boot</b>	
	Secure Boot is a method of guaranteeing the integrity of the boot path by performing additional validation of the operating system and PCI add-in cards. The computer stops booting to the operating system when a component is not authenticated during the boot process. Secure Boot can be enabled in BIOS setup or using management interfaces like Dell Command Configure, but can only be disabled from BIOS setup.
Enable Secure Boot	<p>Enables the computer to boot using only validated boot software.</p> <p>By default, the <b>Enable Secure Boot</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Secure Boot</b> option enabled to ensure that the UEFI firmware validates the operating system during the boot process.</p> <p><b>i</b> <b>NOTE:</b> For Secure Boot to be enabled, the computer is required to be in UEFI boot mode and the Enable Legacy Option ROMs option is required to be turned off.</p>
Enable Microsoft UEFI CA	<p>When disabled, the UEFI CA is removed from the BIOS UEFI Secure Boot database.</p> <p>By default, the <b>Enable Microsoft UEFI CA</b> option is disabled.</p>
Secure Boot Mode	<p>Enables or disables the Secure Boot operation mode.</p> <p>By default, the <b>Deployed Mode</b> is selected.</p> <p><b>i</b> <b>NOTE:</b> <b>Deployed Mode</b> should be selected for normal operation of Secure Boot.</p>
<b>Expert Key Management</b>	
Enable Custom Mode	<p>Enables or disables the ability to modify the keys in the PK, KEK, db, and dbx security key databases to be modified.</p> <p>By default, the <b>Enable Custom Mode</b> option is disabled.</p>
Custom Mode Key Management	<p>Selects the custom values for expert key management.</p> <p>By default, the <b>PK</b> option is selected.</p>

**Table 39. BIOS Setup options—Integrated Devices menu**

<b>Integrated Devices</b>	
<b>Date/Time</b>	
Date	Sets the computer date in MM/DD/YYYY format. Changes to the date format take effect immediately.
Time	Sets the computer time in HH/MM/SS 24-hour format. You can switch between a 12-hour and 24-hour clock. Changes to the time format take effect immediately.
<b>Camera</b>	
Enable Camera	<p>Enables the camera.</p> <p>By default, the <b>Enable Camera</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> Depending on the configuration ordered, the camera setup option may not be available.</p>
<b>Audio</b>	

**Table 39. BIOS Setup options—Integrated Devices menu (continued)**

<b>Integrated Devices</b>	
Enable Audio	Enables all integrated audio controller. By default, all the options are enabled.
Enable Microphone	Enables the microphone. By default, the <b>Enable Microphone</b> option is enabled. <b>i</b> <b>NOTE:</b> Depending on the configuration ordered, the microphone setup option may not be available.
Enable Internal Speaker	Enables the internal speaker. By default, the <b>Enable Internal Speaker</b> option is enabled.
<b>USB/Thunderbolt Configuration</b>	
Enable USB Boot Support	Enables booting from USB mass storage devices that are connected to external USB ports. By default, the <b>Enable USB Boot Support</b> option is enabled.
Enable External USB Ports	Enables the external USB ports. By default, the <b>Enable External USB Ports</b> option is enabled.
<b>Enable Thunderbolt Technology Support</b>	
Enable Thunderbolt Technology Support	Enables the associated ports and adapters for Thunderbolt Technology support. By default, the <b>Enable Thunderbolt Technology Support</b> option is enabled.
<b>Enable Thunderbolt Boot Support</b>	
Enable Thunderbolt Boot Support	Enables the Thunderbolt adapter-peripheral device and USB devices that are connected to the Thunderbolt adapter to be used during BIOS Preboot. By default, the <b>Enable Thunderbolt Boot Support</b> option is disabled.
<b>Enable Thunderbolt (and PCIe behind TBT) pre-boot modules</b>	Enables the PCIe devices that are connected through a Thunderbolt adapter to run the PCIe devices UEFI Option ROM (if present) during preboot. By default, the <b>Enable Thunderbolt (and PCIe behind TBT) pre-boot modules</b> option is disabled.
<b>Disable USB4 PCIE Tunneling</b>	Disables the USB4 PCIE Tunneling option. By default, the <b>Disable USB4 PCIE Tunneling</b> option is disabled.
<b>Video/Power only on Type-C Ports</b>	Enables or disables the Type-C port functionality to video or only power. By default, the <b>Video/Power only on Type-C Ports</b> option is disabled.
<b>Type-C Dock</b>	
Type-C Dock Override	Enables or disables to use connected Type-C Dell Dock to provide data stream with external USB ports disabled. When Type-C Dock override is enabled, the Video/Audio/LAN submenu is activated. By default, the <b>Type-C Dock Override</b> option is enabled.
Type-C Dock Audio	Enables or disables the usage of audio inputs and outputs from the connected Type-C Dell docking station. By default, the <b>Type-C Dock Audio</b> option is enabled.
Type-C Dock LAN	Enables or disables the usage of LAN on the external ports of the connected Type-C Dell docking station. By default, the <b>Type-C Dock LAN</b> option is enabled.

**Table 39. BIOS Setup options—Integrated Devices menu (continued)**

<b>Integrated Devices</b>	
<b>Miscellaneous Devices</b>	
Enable Fingerprint Reader Device	Enables the Fingerprint Reader Device option. By default, the <b>Enable Fingerprint Reader Device</b> option is enabled.
Unobtrusive mode	Enables or disables the unobtrusive mode. When enabled, all system LEDs, LCD panel backlight and audio devices of the computer are turned off. By default, the <b>Unobtrusive Mode</b> option is disabled. <b>i</b> <b>NOTE:</b> On computers with collaboration touchpad, the Collaboration Touchpad is disabled when the <b>Unobtrusive Mode</b> option is enabled. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .

**Table 40. BIOS Setup options—Storage menu**

<b>Storage</b>	
<b>SATA/NVMe Operation</b>	
SATA/NVMe Operation	Sets the operating mode of the integrated SATA hard drive controller. By default, the <b>RAID ON</b> option is selected. The storage device is configured for RAID mode.
<b>Storage Interface</b>	
Port Enablement	Enables or disables the M.2 PCIe SSD option. By default, the <b>M.2 PCIe SSD</b> option is enabled.
Smart Reporting	Enables or disables the Smart reporting option. By default, the <b>Smart Reporting</b> option is disabled. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
<b>Drive Information</b>	Displays the information of onboard drives.

**Table 41. BIOS Setup options—Display menu**

<b>Display</b>	
<b>Display Brightness</b>	
Brightness on battery power	Enables to set the screen brightness when the computer is running on battery power. By default, the screen brightness is set to 50 when the computer is running on battery power.
Brightness on AC power	Enables to set the screen brightness when the computer is running on AC power. By default, the screen brightness is set to 100 when the computer is running on AC power.
<b>Touchscreen</b>	Enables or disables the touch screen option. By default, the <b>Touchscreen</b> option is enabled.
<b>Full Screen Logo</b>	Enables or disables the computer to display a full-screen logo, if the image matches screen resolution. By default, the <b>Full Screen Logo</b> option is disabled.

**Table 42. BIOS Setup options—Connection menu**

<b>Connection</b>	
<b>Wireless Device Enable</b>	
WLAN	Enables or disables the internal WLAN device. By default, the <b>WLAN</b> option enabled.
WWAN/GPS	Enables or disables the internal WWAN device. By default, the <b>WWAN/GPS</b> option is enabled.
Bluetooth	Enables or disables the internal Bluetooth device. By default, the <b>Bluetooth</b> option enabled.
Contactless Smartcard/NFC	Enables or disables the smartcard device. By default, the <b>Contactless Smartcard/NFC</b> option is enabled. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
<b>Enable UEFI Network Stack</b>	Enables or disables the UEFI Network Stack and controls the onboard LAN Controller. By default, the <b>Enable UEFI Network Stack</b> option is enabled.
<b>Wireless Radio Control</b>	
Control WLAN Radio	Enables to sense the connection of the computer to a wired network and then disables the selected wireless radios (WLAN and/or WWAN). Upon disconnection from the wired network, the selected wireless radios are reenabled. By default, the <b>Control WLAN Radio</b> option is disabled.
Enable UEFI Bluetooth Stack	Enables or disables the UEFI Bluetooth Stack and controls the onboard LAN Controller. By default, the <b>Enable UEFI Bluetooth Stack</b> option is enabled. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .
<b>HTTP(s) Boot Feature</b>	
HTTP(s) Boot	When enabled, supports HTTP(s) boot on the client BIOS, which offers wired or wireless and HTTP/HTTPS connection options. <b>i</b> <b>NOTE:</b> To view this option, enable <b>HTTP(s) Boot</b> as described in <a href="#">View Advanced Setup options</a> .
HTTP(s) Boot Modes	In Auto Mode, the boot URL is obtained from the DHCP response; the boot URL specifies the HTTP Boot Server and location of the Network Boot Program (NBP) file. In Manual mode, the user enters the URL in the text box, which must start with <code>http://</code> or <code>https://</code> and end with the NBP file name. By default, the <b>Control WWAN Radio</b> option is disabled. By default, <b>Auto Mode</b> is selected. <b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .

**Table 43. BIOS Setup options—Power menu**

<b>Power</b>	
<b>Battery Configuration</b>	Enables or disables the computer to run on battery during peak power usage hours. Use the table <b>Custom Charge Start</b> and <b>Custom Charge Stop</b> , to prevent AC power usage between certain times of each day.

**Table 43. BIOS Setup options—Power menu (continued)**

<b>Power</b>	
	By default, the <b>Adaptive</b> option is selected. Battery settings are adaptively optimized based on your typical battery usage pattern.
<b>Advanced Configuration</b>	
Enable Advanced Battery Charge Configuration	Enables Advanced Battery Charge Configuration from the beginning of the day to a specified work period. When enabled, Advanced Battery Charged maximizes battery health while still supporting heavy use during the work day.  By default, the <b>Enable Advanced Battery Charge Configuration</b> option is disabled.
<b>Peak Shift</b>	
Enable Peak Shift	Enables the computer to run on battery during peak power usage hours.  By default, the <b>Enable Peak Shift</b> option is disabled.
Type-C Connector Power USB PowerShare	Enables or disables the USB PowerShare on the computer.  By default, the <b>USB Powershare</b> option is disabled.
<b>Thermal Management</b>	Enables or disables cooling of fan and manages processor heat to adjust the computer performance, noise, and temperature.  By default, the <b>Optimized</b> option is selected. Standard setting for balanced performance, noise, and temperature.
<b>USB Wake Support</b>	
Wake on Dell USB-C Dock	When enabled, connecting a Dell USB-C Dock wakes the computer from Standby, Hibernate, and Power Off.  By default, the <b>Wake on Dell USB-C Dock</b> option is enabled.
<b>Block Sleep</b>	Enables or disables the computer from entering Sleep (S3) mode in the operating system.  By default, the <b>Block Sleep</b> option is disabled.  <b>i NOTE:</b> When enabled, the computer does not go to Sleep, Intel Rapid Start is disabled automatically, and the operating system power option is blank if it was set to Sleep.
<b>Lid Switch</b>	
Enable Lid Switch	Enables or disables the Lid Switch.  By default, the <b>Enable Lid Switch</b> option is enabled.





**Table 44. BIOS Setup options—Security menu**

<b>Security</b>	
<b>Trusted Platform Module (TPM)</b>	The Trusted Platform Module (TPM) provides various cryptographic services which serve as the cornerstone for many platform security technologies. Trusted Platform Module (TPM) is a security device that stores computer-generated keys for encryption and features such as BitLocker, Virtual Secure Mode, remote Attestation.  By default, the <b>Trusted Platform Module (TPM)</b> option is enabled.  For additional security, Dell Technologies recommends keeping <b>Trusted Platform Module (TPM)</b> enabled to allow these security technologies to fully function.


**Table 44. BIOS Setup options—Security menu (continued)**

<b>Security</b>	
	<p><b>i</b> <b>NOTE:</b> The options that are listed apply to computers with a discrete <b>Trusted Platform Module (TPM)</b> chip.</p>
TPM On	<p>Allows you to enable or disable TPM.</p> <p>By default, the <b>TPM On</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping <b>TPM On</b> enabled to allow these security technologies to fully function.</p>
Physical Presence Interface (PPI) Bypass for Enable Commands	<p>The Physical Presence Interface (PPI) Bypass options can be used to allow the operating system to manage certain aspects of the TPM. If these options are enabled, you are not prompted to confirm certain changes to the TPM configuration.</p> <p>By default, the <b>PPI Bypass for Enable Commands</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>PPI Bypass for Enable Commands</b> option enabled.</p>
Physical Presence Interface (PPI) Bypass for Disable Commands	<p>By default, the <b>PPI Bypass for Disable Commands</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>PPI Bypass for Disable Commands</b> option disabled.</p>
Physical Presence Interface (PPI) Bypass for Clear Commands	<p>By default, the <b>PPI Bypass for Clear Commands</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>PPI Bypass for Clear Commands</b> option disabled.</p>
Attestation Enable	<p>The <b>Attestation Enable</b> option controls the endorsement hierarchy of TPM. Disabling the <b>Attestation Enable</b> option prevents TPM from being used to digitally sign certificates.</p> <p>By default, the <b>Attestation Enable</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Attestation Enable</b> option enabled.</p> <p><b>i</b> <b>NOTE:</b> When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p>
Key Storage Enable	<p>The <b>Key Storage Enable</b> option controls the storage hierarchy of TPM, which is used to store digital keys. Disabling the <b>Key Storage Enable</b> option restricts the ability of TPM to store owner's data.</p> <p>By default, the <b>Key Storage Enable</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Key Storage Enable</b> option enabled.</p> <p><b>i</b> <b>NOTE:</b> When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p>
Intel Total Memory Encryption	<p>Enables or disables the processor's memory encryption feature.</p> <p>By default, the <b>Intel Total Memory Encryption</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Chassis intrusion</b>	
Chassis Intrusion	<p>The chassis intrusion detection enables a physical switch that triggers an event when the computer cover is opened.</p> <p>When set to <b>Enabled</b>, a notification is displayed on the next boot and the event is logged in the BIOS Events log.</p>

**Table 44. BIOS Setup options—Security menu (continued)**

<b>Security</b>	
	<p>When set to <b>On-Silent</b>, the event is logged in the BIOS Events log, but no notification is displayed.</p> <p>When set to <b>Disabled</b>, no notification is displayed and no event is logged in the BIOS Events log.</p> <p>By default, the <b>Chassis Intrusion Detection</b> option is set to <b>On-Silent</b>.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Chassis Intrusion Detection</b> option enabled.</p>
Block Boot Until Cleared	<p>Enables or disables the Block Boot Until Cleared option.</p> <p>By default, the <b>Block Boot Until Cleared</b> option is disabled.</p> <p> <b>NOTE:</b> When enabled, the computer does not boot until the chassis intrusion is cleared. If the administrator password is set, Setup has to be unlocked before the warning can be cleared.</p>
<b>SMM Security Mitigation</b>	<p>Enables or disables additional UEFI SMM Security Mitigation protections. This option uses the Windows SMM Security Mitigations Table (WSMT) to confirm to the operating system that security best practices have been implemented by the UEFI firmware.</p> <p>By default, the <b>SMM Security Mitigation</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>SMM Security Mitigation</b> option enabled unless you have a specific application which is not compatible.</p> <p> <b>NOTE:</b> This feature may cause compatibility issues or loss of functionality with some legacy tools and applications.</p>
<b>Data Wipe on Next Boot</b>	
Start Data Wipe	<p>Data Wipe is a secure wipe operation that deletes information from a storage device.</p> <p> <b>CAUTION: The secure Data Wipe operation deletes information in a way that it cannot be reconstructed.</b></p> <p>Commands such as delete and format in the operating system may remove files from showing up in the file system. However, they can be reconstructed through forensic means as they are still represented on the physical media. Data Wipe prevents this reconstruction and the data can no longer be recovered.</p> <p>When enabled, the data wipe option provides prompts to wipe any storage devices that are connected to the computer on the next boot.</p> <p>By default, the <b>Start Data Wipe</b> option is disabled.</p>
<b>Absolute</b>	<p>Absolute Software provides various cyber security solutions, some requiring software preloaded on Dell computers and integrated into the BIOS. To use these features, you must enable the Absolute BIOS setting and contact Absolute for configuration and activation.</p> <p>By default, the <b>Absolute</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Absolute</b> option enabled.</p> <p> <b>NOTE:</b> When the Absolute features are activated, the Absolute integration cannot be disabled from the BIOS setup screen.</p>
<b>UEFI Boot Path Security</b>	<p>Enables or disables the computer to prompt the user to enter the Administrator password (if set) when booting to a UEFI boot path device from the F12 boot menu.</p> <p>By default, the <b>Always Except Internal HDD</b> option is enabled.</p>

**Table 44. BIOS Setup options—Security menu (continued)**

<b>Security</b>	
<b>Authenticated BIOS Interface</b>	
Enable Authenticated BIOS Interface	<p>Allows the administrator to control access to BIOS configuration through an authenticated interface. When enabled, this option ensures that BIOS configuration changes are secured by authentication.</p> <p>By default, the <b>Enable Authenticated BIOS Interface</b> option is disabled.</p>
Clear Certificate Store	<p>Allows the administrator to delete all certificates stored in the Key Management System (KMS). When enabled, this option will remove all certificates, which may be necessary for security purposes or if the certificates have expired or are no longer valid.</p> <p>By default, the <b>Clear Certificate Store</b> option is disabled.</p>
Legacy Manageability Interface Access	<p>Allows the administrator to control the access to BIOS configuration through the Legacy Manageability Interface option. When enabled, this prevents the BIOS Administrator password-based manageability tools from running, prevents some Dell software applications from reading configuration settings, and/or prevents changes to the BIOS configuration settings.</p> <p>When enabled, this option only supports the Authenticated BIOS Manageability Interface (ABI) for managing the BIOS configuration changes. To support this feature, ABI must be enabled and provisioned.</p> <p>When set to <b>Enabled</b> , the Legacy Manageability Interface can be used to read and change BIOS configuration settings.</p> <p>When set to <b>Read-Only</b> , BIOS configuration settings can be read, but cannot be changed through the Legacy Manageability Interface.</p> <p>When set to <b>Disabled</b> , the Legacy Manageability Interface is disabled. BIOS configuration reads and writes are blocked.</p>
<b>Firmware Device Tamper Detection</b>	
	<p>Allows you to control the firmware device tamper detection feature. This feature notifies the user when the firmware device is tampered. When enabled, a screen warning messages are displayed on the computer and a tamper detection event is logged in the BIOS Events log. The computer fails to reboot until the event is cleared.</p> <p>By default, the <b>Firmware Device Tamper Detection</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Firmware Device Tamper Detection</b> option enabled.</p>
Clear Firmware Device Tamper Detection	<p>Allows you to clear the events that are logged when tampering of firmware device is detected.</p> <p>By default, the <b>Clear Firmware Device Tamper Detection</b> option is disabled.</p> <p> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Pluton Security Processor</b>	
	<p>Pluton Security Processor is used by the operating system to provide security services such as Key Storage Provider functionality. When enabled, the Pluton Security Processor services are available to the operating system. Disabling the <b>Pluton Security Processor</b> might limit some operating system security services and impact functionality. .</p> <p>By default, the <b>Pluton Security Processor</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Pluton Security Processor</b> option enabled.</p>

**Table 45. BIOS Setup options—Passwords menu**

<b>Passwords</b>	
<b>Administrator Password</b>	<p>The Administrator Password prevents unauthorized access to the BIOS Setup options. Once the administrator password is set, the BIOS setup options can only be modified after providing the correct password.</p> <p>The following rules and dependencies apply to the Administrator Password -</p> <ul style="list-style-type: none"> <li>● The administrator password cannot be set if computer and/or internal storage passwords are previously set.</li> <li>● The administrator password can be used in place of the computer and/or internal storage passwords.</li> <li>● When set, the administrator password must be provided during a firmware update.</li> <li>● Clearing the administrator password also clears the computer password (if set).</li> </ul> <p>Dell Technologies recommends using an administrator password to prevent unauthorized changes to BIOS setup options.</p>
<b>System Password</b>	<p>The System Password prevents the computer from booting to an operating system without entering the correct password.</p> <p>The following rules and dependencies apply when the System Password is used -</p> <ul style="list-style-type: none"> <li>● The computer shuts down when idle for approximately 10 minutes at the computer password prompt.</li> <li>● The computer shuts down after three incorrect attempts to enter the computer password.</li> <li>● The computer shuts down when the <b>Esc</b> key is pressed at the System Password prompt.</li> <li>● The computer password is not prompted when the computer resumes from standby mode.</li> </ul> <p>Dell Technologies recommends using the computer password in situations where it is likely that a computer may be lost or stolen.</p>
M.2 PCIe SSD-0	<p>The hard drive password can be set to prevent unauthorized access of the data stored on the solid-state drive. The computer prompts for the hard drive password during boot in order to unlock the drive. A password-secured hard drive stays locked even when removed from the computer or placed into another computer. It prevents an attacker from accessing data on the drive without authorization.</p> <p>The following rules and dependencies apply when the <b>Hard Drive Password</b> or <b>M.2 PCIe SSD-0 Password</b> option is used.</p> <ul style="list-style-type: none"> <li>● The hard drive password option cannot be accessed when the hard drive is disabled in the BIOS Setup.</li> <li>● The computer shuts down when idle for approximately 10 minutes at the hard drive password prompt.</li> <li>● The computer shuts down after three incorrect attempts to enter the hard drive password and treats the hard drive as not available.</li> <li>● The hard drive does not accept password unlock attempts after five incorrect attempts to enter the hard drive password from the BIOS Setup. The hard drive password must be reset for the new password unlock attempts.</li> <li>● The computer treats the hard drive as not available when the <b>Esc</b> key is pressed at the hard drive password prompt.</li> <li>● The hard drive password is not prompted when the computer resumes from standby mode. When the hard drive is unlocked by the user before the computer goes into standby mode, it remains unlocked after the computer resumes from standby mode.</li> <li>● If the system and hard drive passwords are set to the same value, the hard drive unlocks after the correct system password is entered.</li> </ul> <p>Dell Technologies recommends using a hard drive password to protect unauthorized data access.</p>

**Table 45. BIOS Setup options—Passwords menu (continued)**

<b>Passwords</b>	
<b>Password Configuration</b>	<p>The Password configuration page includes several options for changing the requirements of BIOS passwords. You can modify the minimum and maximum length of the passwords and require passwords to contain certain character classes (upper case, lower case, digit, special character).</p> <p>Dell Technologies recommends setting the minimum password length to at least eight characters.</p>
<b>Password Bypass</b>	<p>The <b>Password Bypass</b> option allows the computer to reboot from the operating system without entering the computer or hard drive password. If the computer has already booted to the operating system, it is presumed that the user has already entered the correct computer or hard drive password.</p> <p><b>NOTE:</b> This option does not remove the requirement to enter the password after shutting down.</p> <p>By default, the <b>Password Bypass</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Password Bypass</b> option enabled.</p>
<b>Password Changes</b>	
Admin Setup Lockout	<p>The <b>Admin Setup Lockout</b> option prevents an end user from even viewing the BIOS setup configuration without first entering the administrator password (if set).</p> <p>By default, the <b>Admin Setup Lockout</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Admin Setup Lockout</b> option disabled.</p>
<b>Master Password Lockout</b>	
Enable Master Password Lockout	<p>The Master Password Lockout setting allows you to disable the Recovery Password feature. If the computer, administrator, or hard drive password is forgotten, the computer becomes unusable.</p> <p><b>NOTE:</b> When the owner password is set, the Master Password Lockout option is not available.</p> <p><b>NOTE:</b> When an internal hard drive password is set, it must first be cleared before Master Password Lockout can be changed.</p> <p>By default, the <b>Enable Master Password Lockout</b> option is disabled.</p> <p>Dell does not recommend enabling the <b>Master Password Lockout</b> unless you have implemented your own password recovery computer.</p>
Allow Non-Admin PSID Revert	<p>The <b>Allow Non-Admin PSID Revert</b> option allows a user to clear the hard drive password without entering the BIOS Admin Password. When an Admin Password is set, the ability to enter the PSID is protected by requiring authentication with the Admin Password. If this option is enabled, any user can clear the drive without entering the Admin Password.</p> <p>By default, the <b>Enable Allow Non-Admin PSID Revert</b> option is disabled.</p> <p><b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 46. BIOS Setup options—Update, Recovery menu**

<b>Update, Recovery</b>	
<b>UEFI Capsule Firmware Updates</b>	
Enable UEFI Capsule Firmware Updates	Enables or disables BIOS updates through UEFI capsule update packages.

**Table 46. BIOS Setup options—Update, Recovery menu (continued)**

Update, Recovery	
	<p><b>i</b> <b>NOTE:</b> Disabling this option blocks the BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS).</p> <p>By default, the <b>Enable UEFI Capsule Firmware Updates</b> option is enabled.</p>
<b>BIOS Recovery from Hard Drive</b>	<p>Enables or disables the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key.</p> <p>By default, the <b>BIOS Recovery from Hard Drive</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> BIOS Recovery from Hard Drive is not available for self-encrypting drives (SED).</p> <p><b>i</b> <b>NOTE:</b> BIOS recovery is designed to fix the main BIOS block and cannot work if the Boot Block is damaged. In addition, this feature cannot work in the event of EC corruption, ME corruption, or a hardware issue. The recovery image must exist on an unencrypted partition on the drive.</p>
BIOS Downgrade	
Allow BIOS Downgrade	<p>Controls flashing of the computer firmware to previous revisions.</p> <p>By default, the <b>Allow BIOS Downgrade</b> option is enabled.</p>
<b>SupportAssist OS Recovery</b>	<p>Enables or disables the boot flow for SupportAssist OS Recovery tool in the event of certain computer errors.</p> <p>By default, the <b>SupportAssist OS Recovery</b> option is enabled.</p>
<b>BIOSConnect</b>	<p>Enables or disables cloud Service operating system recovery if the main operating system fails to boot with the number of failures equal to or greater than the value specified by the Auto OS Recovery Threshold setup option and local Service operating system does not boot or is not installed.</p> <p>By default, the <b>BIOSConnect</b> option is enabled.</p>
<b>Dell Auto OS Recovery Threshold</b>	<p>Allows you to control the automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery Tool.</p> <p>By default, the <b>Dell Auto OS Recovery Threshold</b> value is set to 2.</p>

**Table 47. BIOS Setup options—System Management menu**

System Management	
<b>Service Tag</b>	Displays the Service Tag of the computer.
<b>Asset Tag</b>	<p>Creates a computer Asset Tag that can be used by an IT administrator to uniquely identify a particular computer.</p> <p><b>i</b> <b>NOTE:</b> Once set in BIOS, the Asset Tag cannot be changed.</p>
AC Behavior	
Wake on AC	<p>Enables or disables the computer to turn on and go to boot when AC power is supplied to the computer.</p> <p>By default, the <b>Wake on AC</b> option is disabled.</p>
<b>Wake on LAN</b>	<p>Enables or disables the computer to turn on by a special LAN signal.</p> <p>By default, the <b>Wake on LAN</b> option is disabled.</p>
<b>Auto On Time</b>	<p>Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays, or Selected Days.</p> <p>By default, the <b>Auto On Time</b> option is disabled.</p>

**Table 47. BIOS Setup options—System Management menu (continued)**

<b>System Management</b>	
Intel AMT Capability	<p>Configure Intel Active Management Technology (AMT) options, which can be enabled, disabled, or restricted.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
First Power On Date	
Diagnostics	<p>Enable or disable the option for applications running in the operating system to run with preboot diagnostics on subsequent boots.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
Power-on-Self-Test Automatic Recovery	<p>Enable or disable the automatic recovery of the computer from no power or no-POST failure by applying mitigation steps.</p> <p>By default, the <b>Power-On-Self-Test Automatic Recovery</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 48. BIOS Setup options—Keyboard menu**

<b>Keyboard</b>	
<b>Fn Lock Options</b>	<p>Enables or disables the Fn Lock option.</p> <p>By default, the <b>Fn Lock</b> option is enabled.</p>
<b>Lock Mode</b>	<p>By default, the <b>Lock Mode Secondary</b> option is enabled. With this option, the F1-F12 keys scan the code for their secondary functions.</p>
<b>Keyboard Illumination</b>	<p>Configures the operating mode of the keyboard illumination feature.</p> <p>By default, the <b>Dim</b> option is selected. Enables the keyboard illumination feature at 100% brightness level.</p>
<b>Keyboard Backlight Timeout on AC</b>	<p>Sets the timeout value for the keyboard backlight when an AC adapter is connected to the computer.</p> <p>By default, the <b>10 seconds</b> option is selected.</p>
<b>Keyboard Backlight Timeout on Battery</b>	<p>Sets the timeout value for the keyboard backlight when the computer is running only on the battery power. The keyboard backlight timeout value is only effective when the backlight is enabled.</p> <p>By default, the <b>10 seconds</b> option is selected.</p>
<b>Device Configuration HotKey Access</b>	<p>Allows you to control whether you can access device configuration screens through hotkeys during computer startup.</p> <p>By default, the <b>Device Configuration HotKey Access</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> This setting controls only the Intel RAID (CTRL+I), MEBX (CTRL+P), and LSI RAID (CTRL+C) Option ROMs. Other preboot Option ROMs, which support entry using a key sequence, are not affected by this setting.</p>

**Table 49. BIOS Setup options—Pre-boot Behavior menu**

<b>Preboot Behavior</b>	
<b>Adapter Warnings</b>	
Enable Dock Warning Messages	<p>Enables the warning messages during boot when the adapters with less power capacity are detected.</p> <p>By default, the <b>Enable Dock Warning Messages</b> option is enabled.</p>

**Table 49. BIOS Setup options—Pre-boot Behavior menu (continued)**

<b>Preboot Behavior</b>	
<b>Warnings and Errors</b>	<p>Enables or disables the action to be taken when a warning or error is encountered.</p> <p>By default, the <b>Prompt on Warnings and Errors</b> option is selected.</p> <p><b>i</b> <b>NOTE:</b> Errors deemed critical to the operation of the computer hardware stop the functioning of the computer.</p>
<b>Extend BIOS POST Time</b>	<p>Sets the BIOS POST (Power-On Self-Test) load time.</p> <p>By default, the <b>0 seconds</b> option is selected.</p>
<b>MAC Address Pass-Through</b>	<p>Replaces the external NIC MAC address (in a supported dock or dongle) with the selected MAC address from the computer.</p> <p>By default, the <b>System Unique MAC Address</b> option is selected.</p>
<b>Sign of Life</b>	
Ownership tag with Logo	<p>Display Ownership tag with Logo.</p> <p>By default, the <b>Ownership tag with Logo</b> option is enabled.</p>
Early Keyboard Backlight	<p>Keyboard Backlight Sign of Life.</p> <p>By default, the <b>Early Keyboard Backlight</b> option is enabled.</p>

**Table 50. BIOS Setup options—Virtualization menu**

<b>Virtualization Support</b>	
<b>Intel Virtualization Technology</b>	
Enable Intel Virtualization Technology (VT)	<p>When enabled, the computer can run a Virtual Machine Monitor (VMM).</p> <p>By default, the <b>Enable Intel Virtualization Technology (VT)</b> option is enabled.</p>
<b>VT for Direct I/O</b>	
Enable Intel VT for Direct I/O	<p>When enabled, the computer can perform Virtualization Technology for Direct I/O (VT-d). VT-d is an Intel method that provides virtualization for memory map I/O.</p> <p>By default, the <b>Enable Intel VT for Direct I/O</b> option is enabled.</p>
<b>Intel Trusted Execution Technology (TXT)</b>	
	<p>Intel Trusted Execution Technology (TXT) is a set of hardware extensions to Intel processors and chipsets. It provides a hardware-based root of trust to ensure that a platform boots with a known good configuration of firmware, BIOS, virtual machine monitor, and operating system. The following must be enabled in order to enable Intel TXT -</p> <ul style="list-style-type: none"> <li>• Intel Virtualization Technology - X</li> <li>• Intel Virtualization Technology - Direct</li> </ul> <p>By default, the <b>Intel Trusted Execution Technology (TXT)</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Intel Trusted Execution Technology (TXT)</b> option enabled.</p>
<b>DMA Protection</b>	
Enable Pre-Boot DMA Support	<p>Allows you to control the Pre-Boot DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system.</p> <p><b>i</b> <b>NOTE:</b> This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the <b>Enable Pre-Boot DMA Support</b> option is enabled.</p>


**Table 50. BIOS Setup options—Virtualization menu (continued)**

<b>Virtualization Support</b>	
	<p>For additional security, Dell Technologies recommends keeping the <b>Enable Pre-Boot DMA Support</b> option enabled.</p> <p><b>i</b> <b>NOTE:</b> This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p>
Enable OS Kernel DMA Support	<p>Allows you to control the Kernel DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system. For operating systems that support DMA protection, this setting indicates to the operating system that the BIOS supports the feature.</p> <p><b>i</b> <b>NOTE:</b> This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the <b>Enable OS Kernel DMA Support</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p>
Internal Port DMA Compatibility Mode	<p>Allows you to control the Internal Port DMA Compatibility for both internal and external ports.</p> <p>By default, the <b>Internal Port DMA Compatibility Mode</b> option is disabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>

**Table 51. BIOS Setup options—Performance menu**

<b>Performance</b>	
<b>Multi-Core Support</b>	
Active Multiple Performance Cores (P-Cores) Select	<p>Allows to change the number of Atom cores available to the operating system. The default value is set to the maximum number of cores.</p> <p>By default, the <b>All Cores</b> option is selected.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Intel SpeedStep</b>	
Enable Intel SpeedStep Technology	<p>Enables the computer to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production.</p> <p>By default, the <b>Enable Intel SpeedStep Technology</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Service</b> options as described in <a href="#">View Service options</a>.</p>
<b>C-State Control</b>	
Enable C-State Control	<p>Enables or disables the ability of the CPU to enter and exit low-power state. When disabled, it disables all C-states. When enabled, it enables all C-states that the chipset or platform allows.</p> <p>By default, the <b>Enable C-State Control</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a>.</p>
<b>Intel Turbo Boost Technology</b>	
Enable Intel Turbo Boost Technology	<p>Enables or disables the Intel TurboBoost mode of the processor. When enabled, the Intel TurboBoost driver increases the performance of the CPU or graphics processor.</p> <p>By default, the <b>Enable Intel Turbo Boost Technology</b> option is enabled.</p>

**Table 51. BIOS Setup options—Performance menu (continued)**

<b>Performance</b>	
 <b>NOTE:</b> To view this option, enable <b>Advanced Setup</b> mode as described in <a href="#">View Advanced Setup options</a> .	


**Table 52. BIOS Setup options—System Logs menu**

<b>System Logs</b>	
<b>BIOS Event Log</b>	
Clear BIOS Event Log	Allows you to select option to keep or clear BIOS events logs. By default, the <b>Keep Log</b> option is selected.
<b>Thermal Event Log</b>	
Clear Thermal Event Log	Allows you to select option to keep or clear thermal events logs. By default, the <b>Keep Log</b> option is selected.
<b>Power Event Log</b>	
Clear Power Event Log	Allows you to select option to keep or clear power events logs. By default, the <b>Keep Log</b> option is selected.

## Updating the BIOS

### Updating the BIOS in Windows


#### About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer [Updating the BIOS on Dell systems with BitLocker enabled](#).

 **CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

#### Steps

1. Go to [Dell Support Site](#).
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.

 **NOTE:** If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.


3. Click **Drivers & Downloads**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, navigate to the folder where the BIOS update file has been saved.
8. Double-click the BIOS update file and follow the on-screen instructions.  
For more information, search [Dell Support Site](#).

## Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see [How to Update the Dell BIOS in the Ubuntu or Linux Environment](#) at [Dell Support Site](#).


## Updating the BIOS using the USB drive in Windows

### About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer [Updating the BIOS on Dell systems with BitLocker enabled](#).

 **CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

### Steps

1. Go to [Dell Support Site](#).
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.  
 **NOTE:** If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. Create a bootable USB drive. For more information, search [Dell Support Site](#).
8. Copy the BIOS setup program file to the bootable USB drive.
9. Connect the bootable USB drive to the computer that needs the BIOS update.
10. Restart the computer and press **F12**.
11. Select the USB drive from the **One Time Boot Menu**.
12. Type the BIOS setup program filename and press **Enter**.  
The **BIOS Update Utility** appears.
13. Follow the on-screen instructions to complete the BIOS update.

## Updating the BIOS from the One-Time boot menu

To update the BIOS from the One-Time boot menu, see [Updating the BIOS from the One Time Boot Menu](#) at [Dell Support Site](#).

## System and setup password


 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Ensure that your computer is locked when it is not in use. Anyone can access the data that is stored on your computer, when left unattended.

**Table 53. System and setup password**

Password type	Description
System password	Password that you must enter to boot to your operating system.
Setup password	Password that you must enter to access and change the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **NOTE:** The System and setup password feature is disabled by default.

## Assigning a System Setup password

### Prerequisites

You can assign a new System or Admin Password only when the status is set to **Not Set**. To enter BIOS System Setup, press F2 immediately after a power-on or reboot.

### Steps

1. To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
2. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter. The **Security** screen is displayed.
3. Select **System/Admin Password** and create a password in the **Enter the new password** field. Use the following guidelines to create the system password:
  - Password can be up to 32 characters.
  - Password must contain at least one special character: "( ! " # \$ % & ' \* + , - . / : ; < = > ? @ [ \ ] ^ \_ ` { | } )"
  - The password can contain numbers from 0 to 9.
  - The password can contain alphabets A to Z and a to z.
4. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
5. Press Y to save the changes. The computer restarts.


## Deleting or changing an existing system password or setup password

### Prerequisites

Ensure that the **Password Status** is Unlocked in the System Setup before attempting to delete or change the existing system password and/or setup password. You cannot delete or change an existing system password or setup password if the **Password Status** is Locked. To enter the System Setup, press F2 immediately after a power-on or reboot.

### Steps

1. To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
2. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter. The **System Security** screen is displayed.
3. In the **System Security** screen, verify that the **Password Status** is Unlocked.
4. Select **System Password**. Update or delete the existing system password, and press Enter or Tab.
5. Select **Setup Password**. Update or delete the existing setup password, and press Enter or Tab.

 **NOTE:** If you change the system password and/or setup password, reenter the new password when prompted. If you delete the system password and/or setup password, confirm the deletion when prompted.


6. Press Esc. A message prompts you to save the changes.
7. Press Y to save the changes and exit from **System Setup**.

The computer restarts.

## Clearing system and setup passwords

### About this task

To clear the system or setup passwords, contact Dell technical support as described at [Contact Support](#).

 **NOTE:** For information about how to reset Windows or application passwords, see the documentation accompanying Windows or your application.

# Troubleshooting

## Handling swollen rechargeable Li-ion batteries

Like most laptops, Dell laptops use Lithium-ion batteries. One type of Lithium-ion battery is the rechargeable Li-ion battery. Rechargeable Li-ion batteries have increased in popularity in recent years and have become a standard in the electronics industry due to customer preferences for a slim form factor (especially with newer ultra-thin laptops) and long battery life. Inherent to rechargeable Li-ion battery technology is the potential for swelling of the battery cells.

A swollen battery may impact the performance of the laptop. To prevent possible further damage to the device enclosure or internal components leading to malfunction, discontinue the use of the laptop and discharge it by disconnecting the AC adapter and letting the battery drain.

Swollen batteries should not be used and must be replaced and disposed of properly. We recommend contacting Dell Support for options to replace a swollen battery under the terms of the applicable warranty or service contract, including options for replacement by a Dell authorized service technician.

The guidelines for handling and replacing rechargeable Li-ion batteries are as follows:

- Exercise caution when handling rechargeable Li-ion batteries.
- Discharge the battery before removing it from the laptop. To discharge the battery, unplug the AC adapter from the computer and operate the computer only on battery power. The battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any type to pry on or against the battery.
- If a battery gets stuck in a device as a result of swelling, do not try to free it as puncturing, bending, or crushing a battery can be dangerous.
- Do not attempt to reassemble a damaged or swollen battery into a laptop.
- Swollen batteries that are covered under warranty should be returned to Dell in an approved shipping container (provided by Dell)—this is to comply with transportation regulations. Swollen batteries that are not covered under warranty should be disposed of at an approved recycling center. Contact Dell Support at [Dell Support Site](#) for assistance and further instructions.
- Using a non-Dell or incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell that is designed to work with your Dell computer. Do not use a battery from other computers with your computer. Always purchase genuine batteries from [Dell Site](#) or otherwise directly from Dell.

Rechargeable Li-ion batteries can swell for various reasons such as age, number of charge cycles, or exposure to high heat. For more information about how to improve the performance and lifespan of the laptop battery and to minimize the possibility of occurrence of the issue, search Dell laptop battery at [Dell Support Site](#).

## Dell SupportAssist Pre-boot System Performance Check diagnostics

### About this task

SupportAssist diagnostics (also known as system diagnostics) performs a complete check of your hardware. The Dell SupportAssist Pre-boot System Performance Check diagnostics is embedded within the BIOS and launched by the BIOS internally. The embedded system diagnostics provides options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode.
- Repeat the tests.
- Display or save test results.
- Run thorough tests to add more options and obtain details about any failed devices.

- View status messages that inform you when the tests are completed successfully.
- View error messages that inform you of problems encountered during testing.

**NOTE:** Some tests for specific devices require user interaction. Always ensure that you are present at the computer when the diagnostic tests are performed.

For more information, see [How to Run Dell Preboot Diagnostics and Hardware Tests on Your Dell Computer](#).

## Running the SupportAssist Pre-Boot System Performance Check

### Steps

1. Turn on your computer.
2. As the computer boots, press the F12 key.
3. On the boot menu screen, select **Diagnostics**.  
The diagnostic quick test begins.  
**NOTE:** For more information about running the SupportAssist Pre-Boot System Performance Check on a specific device, see [Dell Support Site](#).
4. If there are any issues, error codes are displayed.  
Note the error code and validation number and contact Dell.

## Built-in self-test (BIST)

### (Motherboard Built-In Self-Test) M-BIST

M-BIST is the system board built-in self-test diagnostics tool that improves the diagnostics accuracy of system board Embedded Controller (EC) failures.

**NOTE:** M-BIST can be manually initiated before Power On Self-Test (POST).

### How to run M-BIST

**NOTE:** Before initiating M-BIST, ensure that the computer is in a power-off state.

1. Press and hold both the **M** key and the power button to initiate M-BIST.
2. The battery indicator LED may exhibit two states:
  - Off: No fault was detected.
  - Amber and White: Indicates a problem with the system board.
3. If there is a failure with the system board, the battery status LED flashes one of the following error codes for 30 seconds:

**Table 54. LED error codes**

Blinking Pattern		Possible Problem
Amber	White	
2	1	CPU Failure
1	1	TPM Detection Failure
2	4	Memory/RAM failure

4. If there is no failure with the system board, the LCD cycles through the solid color screens (that are described in the LCD-BIST) for 30 seconds and then turn off.

## Logical Built-in Self-test (L-BIST)

L-BIST is an enhancement to the single LED error code diagnostics and is automatically initiated during POST. L-BIST will check the LCD power rail. If there is no power being supplied to the LCD (that is if the L-BIST circuit fails), the battery status LED flashes either an error code [2,7].

**NOTE:** If L-BIST fails, LCD-BIST cannot function as no power will be supplied to the LCD.

### How to invoke the L-BIST

1. Turn on your computer.
2. If the computer does not start up normally, look at the battery status LED:
  - If the battery status LED flashes an error code [2,7], the display cable may not be connected properly.
3. For cases, when a [2,7] error code is shown, check to see if the display cable is properly connected.

## LCD Built-in Self-Test (LCD-BIST)

Dell laptops have a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with the LCD (screen) of the Dell laptop or with the video card (GPU) and computer settings.

When you notice screen abnormalities like flickering, distortion, clarity issues, fuzzy or blurry image, horizontal or vertical lines, color fade, it is always a good practice to isolate the LCD (screen) by running the LCD-BIST.

### How to invoke the LCD-BIST

1. Turn off your computer.
2. Disconnect any peripherals that are connected to the computer. Connect only the AC adapter (charger) to the computer.
3. Ensure that the LCD (screen) is clean (no dust particles on the surface of the screen).
4. Press and hold the **D** key and press the power button to enter LCD-BIST mode. Continue to hold the **D** key until the computer boots up.
5. The screen displays solid colors and changes colors on the entire screen to white, black, red, green, and blue twice.
6. Then it displays the colors white, black, and red.
7. Carefully inspect the screen for abnormalities (any lines, fuzzy color, or distortion on the screen).
8. At the end of the last solid color (red), the computer shuts down.

**NOTE:** Dell SupportAssist Preboot diagnostics upon launch initiates an LCD-BIST first, expecting a user intervention to confirm functionality of the LCD.

## System-diagnostic lights

This section lists the system-diagnostic lights of your Dell Pro 14 Plus.

The following table shows different Service LED blinking patterns and associated problems. The diagnostic light codes consist of a two-digit number, and the digits are separated by a comma. The number stands for a blinking pattern; the first digit shows the number of blinks in amber color, and the second digit shows the number of blinks in white color. The Service LED blinks in the following manner:

- The Service LED blinks the number of times equal to the value of the first digit and turns off with a short pause.
- After that, the Service LED blinks the number of times equal to the value of the second digit.
- The Service LED turns off again with a longer pause.
- After the second pause, the blinking pattern will be repeated.

**Table 55. Diagnostic light codes**

Diagnostic light codes (Amber, White)	Problem description	Recommended solutions
1,1	TPM Detection Failure	Replace the system board.
1,2	Unrecoverable SPI Flash Failure	Replace the system board.

**Table 55. Diagnostic light codes (continued)**

Diagnostic light codes (Amber, White)	Problem description	Recommended solutions
1,4	Hinge Cable OCP	Replace LCM (cable and Panel)
1,5	EC unable to program i-Fuse	Replace the system board.
1,6	Generic catch-all for ungraceful EC code flow errors	Disconnect all power source (AC, coin cell) and drain flea power by pressing and holding down the power button.
1,7	Non-RPMC Flash on Boot Guard fused system	Flash latest BIOS version. If the problem persists, replace the system board.
1,8	Chipset "Catastrophic Error" signal has tripped	Replace the CPU.
2,1	CPU configuration or CPU failure	Replace the CPU.
2,2	System board: BIOS or Read-Only Memory (ROM) failure	Flash latest BIOS version. If the problem persists, replace the system board.
2,3	No memory, or Random-Access Memory (RAM) detected	Reseat and swap memory modules among the slots. If the problem persists, replace the memory module.
2,4	Memory, or Random-Access Memory (RAM) failure	Reseat and swap memory modules among the slots. If the problem persists, replace the memory module.
2,5	Invalid memory module	Reseat and swap memory modules among the slots. If the problem persists, replace the memory module.
2,6	System board/Chipset Error	Replace the system board.
2,7	LCD failure SBIOS message	Replace the display.
3,1	CMOS battery failure	Reset the CMOS battery connection. If the problem persists, replace the RTC battery.
3,2	PCI of Video card/chip failure	Replace the system board.
3,3	Recovery image not found	Replace the system board.
3,4	Recovery image found but invalid	Replace the system board.
3,5	EC power-rail error	Replace the system board.
3,6	Flash corruption detected by SBIOS	Flash corruption is detected by SBIOS. If the problem persists, replace the system board.
3,7	Timeout waiting on ME to reply to HECI message	Replace the system board.
4,1	Memory DIMM power rail failure	Replace the system board.
4,2	CPU Power cable connection issue	<ul style="list-style-type: none"> <li>Perform the <a href="#">PSU BIST Test</a>, reseat the cable.</li> <li>If this does not work, replace the system board, power supply or cabling.</li> </ul>
4,4	LCD Power Rail Failure	Replace motherboard


## Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a stand-alone tool that is preinstalled on Dell computers running the Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, and restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into the primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at [Serviceability Tools at the Dell Support Site](#). Click **SupportAssist** and then click **SupportAssist OS Recovery**.

 **NOTE:** Windows 11 IoT Enterprise LTSC 2024 and Dell ThinOS 10 do not support Dell SupportAssist. For more information about recovering ThinOS 10, see [Recovery mode using R-Key](#).

## Real-Time Clock (RTC Reset)

The Real-Time Clock (RTC) reset function enables you or the service technician to recover Dell computers from No POST/No Power/No Boot situations.

Start the RTC reset with the computer powered off and connected to AC power. Press and hold the power button for twenty-five seconds. The computer RTC Reset occurs after you release the power button.

## Backup media and recovery options


It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell provides multiple options for recovering the Windows operating system on your Dell computer. For more information, see [Dell Windows Backup Media and Recovery Options](#).

## Network power cycle

### About this task

If your computer is unable to access the Internet due to network connectivity issues, reset your network devices by performing the following steps:

### Steps

1. Turn off the computer.
2. Turn off the modem.  
 **NOTE:** Some Internet service providers (ISPs) provide a modem and router combo device.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on the computer.

## Drain flea power (perform hard reset)

### About this task

Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.


For your safety, and to protect the sensitive electronic components in your computer, you must drain residual flea power before removing or replacing any components in your computer.

Draining flea power, also known as performing a "hard reset," is also a common troubleshooting step if your computer does not turn on or boot into the operating system.


Perform the following steps to drain the flea power:

### Steps

1. Turn off the computer.
2. Disconnect the power adapter from the computer.
3. Remove the base cover.
4. Remove the battery.

 **CAUTION: The battery is a Field Replaceable Unit (FRU) and the removal and installation procedures are intended for authorized service technicians only.**

5. Press and hold the power button for 20 seconds to drain the flea power.
6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to the computer.
9. Turn on the computer.

 **NOTE:** For more information about performing a hard reset, go to [Dell Support Site](#). On the menu bar at the top of the Support page, select Support > Support Library. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

# Getting help and contacting Dell

## Self-help resources


You can get information and help on Dell products and services using these self-help resources:


**Table 56. Self-help resources**

Self-help resources	Resource location
Information about Dell products and services	<a href="#">Dell Site</a>
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	<a href="#">Windows Support Site</a> <a href="#">Linux Support Site</a>
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals, and documents.	Your Dell computer is uniquely identified using a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at <a href="#">Dell Support Site</a> .  For more information about how to find the Service Tag for your computer, see <a href="#">Locate the Service Tag on your computer</a> .
Dell knowledge base articles	<ol style="list-style-type: none"> <li>1. Go to <a href="#">Dell Support Site</a>.</li> <li>2. On the menu bar at the top of the Support page, select <b>Support &gt; Support Library</b>.</li> <li>3. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.</li> </ol>

## Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Dell Support Site](#).

 **NOTE:** Availability of the services may vary depending on the country or region, and product.

 **NOTE:** If you do not have an active Internet connection, you can find contact information in your purchase invoice, packing slip, bill, or Dell product catalog.

## Revision history

Tracks all updates that are made to the document. It typically includes the date of change, version number, and a brief description of the modification. This log helps maintain transparency, accountability, and a clear timeline of progress.

**Table 57. Revision history**

Revision	Date	Description
A00	03-27-2025	Original publish date
A03	07-21-2025	<ul style="list-style-type: none"> <li>• Updated BIOS storage section specifications as RAID ON.</li> <li>• Added e-privacy option specifications to Display specifications topic and Keyboard functions topic.</li> <li>• Battery specifications topic updated to include ECB call out in all Long Life Cycle batteries.</li> </ul>
A04	08-25-2025	<ul style="list-style-type: none"> <li>• Updated e-privacy panel specifications in the Display specifications topic and Dimensions and Weight topic.</li> <li>• Updated battery specifications topic.</li> <li>• Updated Display specifications topic.</li> <li>• Added Multiple Display Matrix specifications.</li> <li>• Updated graphics card in Processor specifications topic.</li> </ul>
A05	09-22-2025	<ul style="list-style-type: none"> <li>• Updated power adapter requirements topic.</li> <li>• Updated display specifications topic.</li> </ul>
A06	12-09-2025	<ul style="list-style-type: none"> <li>• Updated dimensions and weight topic header.</li> <li>• Updated display specifications.</li> <li>• Added Microsoft UEFI CA to system setup options.</li> <li>• Updated top view topic image to include NFC callout.</li> <li>• Updated memory specifications.</li> </ul>