



Hewlett Packard
Enterprise

HPE ProLiant DL380 Gen11 Server Maintenance and Service Guide

Part Number: 30-3673C302-017

Published: September 2025

Edition: 17

HPE ProLiant DL380 Gen11 Server Maintenance and Service Guide

Abstract

This document is for the person who installs, administers, and troubleshoots servers and storage systems. Hewlett Packard Enterprise assumes you are qualified in the servicing of computer equipment and trained in recognizing hazards in products with hazardous energy levels.

Part Number: 30-3673C302-017

Published: September 2025

Edition: 17

© Copyright –2025 Hewlett Packard Enterprise Development LP

Notices

The information provided here is subject to change without notice. Hewlett Packard Enterprise's products and services are covered only by the express warranty statements that come with them. This document does not constitute an additional warranty. Hewlett Packard Enterprise is not responsible for any technical or editorial errors or omissions in this document.

Confidential computer software. You must have a valid license from Hewlett Packard Enterprise to possess, use, or copy the software. In accordance with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under the vendor's standard commercial license.

Links to third-party websites will take you outside of the Hewlett Packard Enterprise website. Hewlett Packard Enterprise has no control over and is not responsible for the information outside the Hewlett Packard Enterprise website.

Acknowledgments

Intel®, Itanium®, Optane™, Pentium®, Xeon®, Intel Inside®, and the Intel Inside logo are trademarks of Intel Corporation or its subsidiaries.

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

VMware ESXi™ and VMware vSphere® are registered trademarks or trademarks of VMware, Inc. in the United States and/or other jurisdictions.

Red Hat® Enterprise Linux is a registered trademark of Red Hat, Inc. in the United States and other countries.

microSD® is a trademark or a registered trademark of SD-3D in the United States, other countries of both.

Kensington® is a registered trademark of ACCO Brands.

All third-party marks are property of their respective owners.

Table of contents

- [Customer self repair](#)
- [Illustrated parts catalog](#)
 - [Mechanical components](#)
 - [Chassis ears spare parts](#)
 - [Fan cage spare part](#)
 - [Air baffle spare parts](#)
 - [Access panel spare parts](#)
 - [Primary and secondary riser cage spare part](#)
 - [Tertiary riser cage spare part](#)
 - [2U bezel spare part](#)
 - [Rack mounting hardware spare parts](#)
 - [Cable management arm spare parts](#)
 - [Miscellaneous blanks spare parts](#)
 - [System components](#)
 - [System board assembly spare parts](#)
 - [DIMM guard spare parts](#)
 - [DIMM spare parts](#)
 - [Processor spare parts](#)
 - [Fourth Generation Intel Xeon Scalable Processors](#)
 - [34xx processor spare parts](#)
 - [44xx processor spare parts](#)
 - [54xx processor spare parts](#)
 - [64xx processor spare parts](#)
 - [84xx processor spare parts](#)
 - [94xx processor spare parts](#)
 - [Fifth Generation Intel Xeon Scalable Processors](#)
 - [35xx processor spare parts](#)
 - [45xx processor spare parts](#)
 - [55xx processor spare parts](#)
 - [65xx processor spare parts](#)
 - [85xx processor spare parts](#)
 - [Heatsink spare parts](#)
 - [Direct liquid cooling solution spare parts](#)
 - [PCI riser board spare parts](#)
 - [Storage controller spare parts](#)
 - [Host bus adapter spare parts](#)
 - [Infiniband adapter spare parts](#)
 - [Ethernet adapter spare parts](#)
 - [OCP 3.0 network adapters](#)

- Drive spare parts
 - EDSFF drive spare parts
 - NVMe drive spare parts
 - SAS drive spare parts
 - SATA drive spare parts
- System battery spare part
- Server options
 - Energy pack spare parts
 - HPE Smart Storage Hybrid Capacitor spare part
 - HPE Smart Storage Battery spare part
 - Backplane spare parts
 - Chassis Intrusion Detection Switch spare part
 - Power supply spare parts
 - Rear serial port interface spare part
 - Accelerator and GPU options spare parts
 - Fan spare parts
 - Systems Insight Display spare parts
 - HPE NS204i-u Boot Device spare parts
 - Cable spare parts
- Removal and replacement procedures
 - Safety considerations
 - Electrostatic discharge
 - Symbols on equipment
 - Rack warnings and cautions
 - Server warnings and cautions
 - Rail identification markers
 - Rack mounting interfaces
 - Preparation procedures
 - Server data backup
 - Accessing the Systems Insight Display
 - Power down the server
 - Releasing the cable management arm
 - Extend the server from the rack
 - Remove the server from the rack
 - Remove the access panel
 - Remove the air baffle
 - Remove the fan cage
 - Remove the riser cage
 - Power up the server
 - Removing and replacing the front bezel
 - Removing and replacing the cable management arm

- Removing and replacing the rack rails
- Removing and replacing a drive blank
- Removing and replacing a hot-plug LFF/SFF/E3.S drive
- Removing and replacing a power supply blank
- Removing and replacing a hot-plug AC power supply
- Removing and replacing the HPE 800 W Flex Slot -48 VDC hot-plug power supply
- Removing and replacing an HPE 1600 W Flex Slot -48 VDC hot-plug power supply
- Removing and replacing the primary PCIe riser cage
- Removing and replacing the secondary and tertiary PCIe riser cage
- Removing and replacing the PCIe rear wall blank
- Removing and replacing an expansion board
- Removing and replacing the PCIe riser board
- Removing and replacing an expansion slot blank
- Removing and replacing a GPU or accelerator
- Removing and replacing fan blanks
- Removing and replacing a fan
- Removing and replacing the fan cage
- Removing and replacing a rear OCP adapter blank
- Removing and replacing the rear OCP adapter
- Removing and replacing the left chassis ear
- Removing and replacing the right chassis ear power switch module
- Removing and replacing the LFF universal media bay
- Removing and replacing the SFF universal media bay
- Removing and replacing the SFF optical drive
- Removing and replacing the LFF optical drive
- Removing and replacing a front SFF drive cage
- Removing and replacing an EDSFF drive backplane
- Removing and replacing the 8 SFF drive backplane
- Removing and replacing the 2 SFF front drive cage
- Removing and replacing the 2 SFF stacked riser cage backplane
- Removing and replacing the 2 SFF rear stacked drive backplane
- Removing and replacing the 2 LFF riser cage backplane
- Removing and replacing the LFF backplane assembly
- Removing and replacing a front LFF drive backplane
- Removing and replacing the Systems Insight Display
- Removing and replacing the serial port
- Removing and replacing the chassis intrusion detection switch
- Removing and replacing a DIMM
- Removing and replacing an energy pack
- Removing and replacing a type-o storage controller
- Removing and replacing a type-p storage controller

- Removing and replacing a rear NS204i-u boot device
 - Removing and replacing a processor or heatsink
 - Removing and replacing the direct liquid cooling assembly
 - Removing and replacing the system battery
 - Removing and replacing the system board
- Troubleshooting
 - Troubleshooting resources
- Cabling
 - Cabling guidelines
 - Cabling diagrams
 - EDSFF cabling
 - 8 SFF box 1 cabling
 - 8 SFF box 2 cabling
 - 8 SFF box 3 cabling
 - Mid 8 SFF cabling
 - Front 2 SFF cabling
 - Rear 2 SFF cabling
 - LFF cabling
 - Riser enablement cabling
 - Power cabling
 - GPU cabling
 - NS204i-u boot device cabling
 - OCP bandwidth enablement
 - Systems Insight Display cabling
 - I/O cabling
 - Front power switch cabling
 - Serial port cabling
- Component identification
 - Front panel components
 - Front panel LEDs and buttons
 - UID button functionality
 - Front panel LED power fault codes
 - Systems Insight Display LEDs
 - Systems Insight Display combined LED descriptions
 - Rear panel components
 - Rear panel LEDs
 - System board components
 - System maintenance switch descriptions
 - DIMM label identification
 - DIMM slot locations
 - Heatsink and processor socket components

- HPE Basic Drive LED definitions
- EDSFF SSD LED definitions
- Drive boxes and numbering
- HPE NS204i-u Boot Device components
- HPE NS204i-u Boot Device LED definitions
- Riser board components
- Configuration resources
 - Updating firmware or system ROM
 - Configuring the server
 - Configuring storage controllers
 - Managing the HPE NS204i-u Boot Device
 - Deploying an OS
 - Configuring security
 - Server management
 - Managing Linux-based high performance compute clusters
- Safety, warranty, and regulatory information
 - Regulatory information
 - Notices for Eurasian Economic Union
 - Turkey RoHS material content declaration
 - Ukraine RoHS material content declaration
 - Warranty information
- Specifications
 - Environmental specifications
 - Mechanical specifications
 - Rack rail specifications
 - Power supply specifications
 - HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply
 - HPE 1000 W Flex Slot Titanium Hot-plug Power Supply
 - HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply
 - Hot-plug power supply calculations
- Websites
- Support and other resources
 - Accessing Hewlett Packard Enterprise Support
 - HPE product registration
 - Accessing updates
 - Remote support
 - Warranty information
 - Regulatory information
 - Documentation feedback

Customer self repair

Hewlett Packard Enterprise products are designed with many Customer Self Repair (CSR) parts to minimize repair time and allow for greater flexibility in performing defective parts replacement. If during the diagnosis period Hewlett Packard Enterprise (or Hewlett Packard Enterprise service providers or service partners) identifies that the repair can be accomplished by the use of a CSR part, Hewlett Packard Enterprise will ship that part directly to you for replacement. There are two categories of CSR parts:

- **Mandatory**—Parts for which customer self repair is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.
- **Optional**—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that Hewlett Packard Enterprise replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.



NOTE

Some Hewlett Packard Enterprise parts are not designed for customer self repair. In order to satisfy the customer warranty, Hewlett Packard Enterprise requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

Based on availability and where geography permits, CSR parts will be shipped for next business day delivery. Same day or four-hour delivery may be offered at an additional charge where geography permits. If assistance is required, you can contact the Hewlett Packard Enterprise Support Center and a technician will help you over the telephone or by electronic means. Hewlett Packard Enterprise specifies in the materials shipped with a replacement CSR part whether a defective part must be returned to Hewlett Packard Enterprise. In cases where it is required to return the defective part to Hewlett Packard Enterprise, you must ship the defective part back to Hewlett Packard Enterprise within a defined period of time, normally five (5) business days. The defective part must be returned with the associated documentation in the provided shipping material. Failure to return the defective part may result in Hewlett Packard Enterprise billing you for the replacement. With a customer self repair, Hewlett Packard Enterprise will pay all shipping and part return costs and determine the courier/carrier to be used.

For more information about the Hewlett Packard Enterprise CSR program, contact your local service provider.

Parts only warranty service

Your Hewlett Packard Enterprise Limited Warranty may include a parts only warranty service. Under the terms of parts only warranty service, Hewlett Packard Enterprise will provide replacement parts free of charge.

For parts only warranty service, CSR part replacement is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.

Réparation par le client (CSR)

Les produits Hewlett Packard Enterprise comportent de nombreuses pièces CSR (Customer Self Repair = réparation par le client) afin de minimiser les délais de réparation et faciliter le remplacement des pièces défectueuses. Si pendant la période de diagnostic, Hewlett Packard Enterprise (ou ses partenaires ou mainteneurs agréés) détermine que la réparation peut être effectuée à l'aide d'une pièce CSR, Hewlett Packard Enterprise vous l'envoie directement. Il existe deux catégories de pièces CSR :

- **Obligatoire**—Pièces pour lesquelles la réparation par le client est obligatoire. Si vous demandez à Hewlett Packard Enterprise de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.
- **Facultatif**—Pièces pour lesquelles la réparation par le client est facultative. Ces pièces sont également conçues pour permettre au client d'effectuer lui-même la réparation. Toutefois, si vous demandez à Hewlett Packard Enterprise de remplacer ces pièces, l'intervention peut ou non vous être facturée, selon le type de garantie applicable à votre produit.

REMARQUE: Certaines pièces Hewlett Packard Enterprise ne sont pas conçues pour permettre au client d'effectuer lui-même la réparation. Pour que la garantie puisse s'appliquer, Hewlett Packard Enterprise exige que le remplacement de la pièce soit effectué par un Mainteneur Agréé. Ces pièces sont identifiées par la mention "Non" dans le Catalogue illustré.

Les pièces CSR sont livrées le jour ouvré suivant, dans la limite des stocks disponibles et selon votre situation géographique. Si votre situation géographique le permet et que vous demandez une livraison le jour même ou dans les 4 heures, celle-ci vous sera facturée. Pour toute assistance, appelez le Centre d'assistance Hewlett Packard Enterprise pour qu'un technicien vous aide au téléphone. Dans les documents envoyés avec la pièce de rechange CSR, Hewlett Packard Enterprise précise s'il est nécessaire de lui retourner la pièce défectueuse. Si c'est le cas, vous devez le faire dans le délai indiqué, généralement cinq (5) jours ouvrés. La pièce et sa documentation doivent être retournées dans l'emballage fourni. Si vous ne retournez pas la pièce défectueuse, Hewlett Packard Enterprise se réserve le droit de vous facturer les coûts de remplacement. Dans le cas d'une pièce CSR, Hewlett Packard Enterprise supporte l'ensemble des frais

d'expédition et de retour, et détermine la société de courses ou le transporteur à utiliser.

Pour plus d'informations sur le programme CSR de Hewlett Packard Enterprise, contactez votre Mainteneur Agréé local.

Service de garantie "pièces seules"

Votre garantie limitée Hewlett Packard Enterprise peut inclure un service de garantie "pièces seules". Dans ce cas, les pièces de rechange fournies par Hewlett Packard Enterprise ne sont pas facturées.

Dans le cadre de ce service, la réparation des pièces CSR par le client est obligatoire. Si vous demandez à Hewlett Packard Enterprise de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

Riparazione da parte del cliente

Per abbreviare i tempi di riparazione e garantire una maggiore flessibilità nella sostituzione di parti difettose, i prodotti Hewlett Packard Enterprise sono realizzati con numerosi componenti che possono essere riparati direttamente dal cliente (CSR, Customer Self Repair). Se in fase di diagnostica Hewlett Packard Enterprise (o un centro di servizi o di assistenza Hewlett Packard Enterprise) identifica il guasto come riparabile mediante un ricambio CSR, Hewlett Packard Enterprise lo spedisce direttamente al cliente per la sostituzione. Vi sono due categorie di parti CSR:

- **Obbligatorie**—Parti che devono essere necessariamente riparate dal cliente. Se il cliente ne affida la riparazione ad Hewlett Packard Enterprise, deve sostenere le spese di spedizione e di manodopera per il servizio.
- **Opzionali**—Parti la cui riparazione da parte del cliente è facoltativa. Si tratta comunque di componenti progettati per questo scopo. Se tuttavia il cliente ne richiede la sostituzione ad Hewlett Packard Enterprise, potrebbe dover sostenere spese aggiuntive a seconda del tipo di garanzia previsto per il prodotto.

NOTA: alcuni componenti Hewlett Packard Enterprise non sono progettati per la riparazione da parte del cliente. Per rispettare la garanzia, Hewlett Packard Enterprise richiede che queste parti siano sostituite da un centro di assistenza autorizzato. Tali parti sono identificate da un "No" nel Catalogo illustrato dei componenti.

In base alla disponibilità e alla località geografica, le parti CSR vengono spedite con consegna entro il giorno lavorativo seguente. La consegna nel giorno stesso o entro quattro ore è offerta con un supplemento di costo solo in alcune zone. In caso di necessità si può richiedere l'assistenza telefonica di un addetto del centro di supporto tecnico Hewlett Packard Enterprise. Nel materiale fornito con una parte di ricambio CSR, Hewlett Packard Enterprise specifica se il cliente deve restituire dei componenti. Qualora sia richiesta la resa ad Hewlett Packard Enterprise del componente difettoso, lo si deve spedire ad Hewlett Packard Enterprise entro un determinato periodo di tempo, generalmente cinque (5) giorni lavorativi. Il componente difettoso deve essere restituito con la documentazione associata nell'imballo di spedizione fornito. La mancata restituzione del componente può comportare la fatturazione del ricambio da parte di Hewlett Packard Enterprise. Nel caso di riparazione da parte del cliente, Hewlett Packard Enterprise sostiene tutte le spese di spedizione e resa e sceglie il corriere/vettore da utilizzare.

Per ulteriori informazioni sul programma CSR di Hewlett Packard Enterprise, contattare il centro di assistenza di zona.

Servizio di garanzia per i soli componenti

La garanzia limitata Hewlett Packard Enterprise può includere un servizio di garanzia per i soli componenti. Nei termini di garanzia del servizio per i soli componenti, Hewlett Packard Enterprise fornirà gratuitamente le parti di ricambio.

Per il servizio di garanzia per i soli componenti è obbligatoria la formula CSR che prevede la riparazione da parte del cliente. Se il cliente invece richiede la sostituzione ad Hewlett Packard Enterprise dovrà sostenere le spese di spedizione e di manodopera per il servizio.

Customer Self Repair

Hewlett Packard Enterprise Produkte enthalten viele CSR-Teile (Customer Self Repair), um Reparaturzeiten zu minimieren und höhere Flexibilität beim Austausch defekter Bauteile zu ermöglichen. Wenn Hewlett Packard Enterprise (oder ein Hewlett Packard Enterprise Servicepartner) bei der Diagnose feststellt, dass das Produkt mithilfe eines CSR-Teils repariert werden kann, sendet Ihnen Hewlett Packard Enterprise dieses Bauteil zum Austausch direkt zu. CSR-Teile werden in zwei Kategorien unterteilt:

- **Zwingend**—Teile, für die das Customer Self Repair-Verfahren zwingend vorgegeben ist. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.
- **Optional**—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

HINWEIS: Einige Hewlett Packard Enterprise Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem Hewlett Packard Enterprise Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

CSR-Teile werden abhängig von der Verfügbarkeit und vom Lieferziel am folgenden Geschäftstag geliefert. Für bestimmte Standorte ist eine Lieferung am selben Tag oder innerhalb von vier Stunden gegen einen Aufpreis verfügbar. Wenn Sie Hilfe benötigen, können Sie das Hewlett Packard Enterprise Support Center anrufen und sich von einem Mitarbeiter per Telefon helfen lassen. Den Materialien von Hewlett Packard Enterprise, die mit einem CSR-Ersatzteil geliefert werden, können Sie entnehmen, ob das defekte Teil an Hewlett Packard Enterprise zurückgeschickt werden muss. Wenn es erforderlich ist, das defekte Teil an Hewlett Packard Enterprise zurückzuschicken, müssen Sie dies innerhalb eines vorgegebenen Zeitraums tun, in der Regel innerhalb von fünf (5) Geschäftstagen. Das defekte Teil muss mit der zugehörigen Dokumentation in der Verpackung zurückgeschickt werden, die im Lieferumfang enthalten ist. Wenn Sie das defekte Teil nicht zurückschicken, kann Hewlett Packard Enterprise Ihnen das Ersatzteil in Rechnung stellen. Im Falle von Customer Self Repair kommt Hewlett Packard Enterprise für alle Kosten für die Lieferung und Rücksendung auf und bestimmt den Kurier-/Frachtdienst.

Weitere Informationen über das Hewlett Packard Enterprise Customer Self Repair Programm erhalten Sie von Ihrem Servicepartner vor Ort.

Parts-only Warranty Service (Garantieservice ausschließlich für Teile)

Ihre Hewlett Packard Enterprise Garantie umfasst möglicherweise einen Parts-only Warranty Service (Garantieservice ausschließlich für Teile). Gemäß den Bestimmungen des Parts-only Warranty Service stellt Hewlett Packard Enterprise Ersatzteile kostenlos zur Verfügung.

Für den Parts-only Warranty Service ist das CSR-Verfahren zwingend vorgegeben. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

Reparaciones del propio cliente

Los productos de Hewlett Packard Enterprise incluyen muchos componentes que el propio usuario puede reemplazar (Customer Self Repair, CSR) para minimizar el tiempo de reparación y ofrecer una mayor flexibilidad a la hora de realizar sustituciones de componentes defectuosos. Si, durante la fase de diagnóstico, Hewlett Packard Enterprise (o los proveedores o socios de servicio de Hewlett Packard Enterprise) identifica que una reparación puede llevarse a cabo mediante el uso de un componente CSR, Hewlett Packard Enterprise le enviará dicho componente directamente para que realice su sustitución. Los componentes CSR se clasifican en dos categorías:

- **Obligatorio**—Componentes cuya reparación por parte del usuario es obligatoria. Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.
- **Opcional**—Componentes cuya reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que Hewlett Packard Enterprise realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

NOTA: Algunos componentes de Hewlett Packard Enterprise no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, Hewlett Packard Enterprise pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

Según la disponibilidad y la situación geográfica, los componentes CSR se enviarán para que lleguen a su destino al siguiente día laborable. Si la situación geográfica lo permite, se puede solicitar la entrega en el mismo día o en cuatro horas con un coste adicional. Si precisa asistencia técnica, puede llamar al Centro de asistencia técnica de Hewlett Packard Enterprise y recibirá ayuda telefónica por parte de un técnico. Con el envío de materiales para la sustitución de componentes CSR, Hewlett Packard Enterprise especificará si los componentes defectuosos deberán devolverse a Hewlett Packard Enterprise. En aquellos casos en los que sea necesario devolver algún componente a Hewlett Packard Enterprise, deberá hacerlo en el periodo de tiempo especificado, normalmente cinco días laborables. Los componentes defectuosos deberán devolverse con toda la documentación relacionada y con el embalaje de envío. Si no enviara el componente defectuoso requerido, Hewlett Packard Enterprise podrá cobrarle por el de sustitución. En el caso de todas sustituciones que lleve a cabo el cliente, Hewlett Packard Enterprise se hará cargo de todos los gastos de envío y devolución de componentes y escogerá la empresa de transporte que se utilice para dicho servicio.

Para obtener más información acerca del programa de Reparaciones del propio cliente de Hewlett Packard Enterprise, póngase en contacto con su proveedor de servicios local.

Servicio de garantía exclusivo de componentes

La garantía limitada de Hewlett Packard Enterprise puede que incluya un servicio de garantía exclusivo de componentes. Según las condiciones de este servicio exclusivo de componentes, Hewlett Packard Enterprise le facilitará los componentes de repuesto sin cargo adicional alguno.

Para este servicio de garantía exclusivo de componentes, es obligatoria la sustitución de componentes por parte del usuario (CSR). Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

Customer Self Repair

Veel onderdelen in Hewlett Packard Enterprise producten zijn door de klant zelf te repareren, waardoor de reparatieduur tot een minimum beperkt kan blijven en de flexibiliteit in het vervangen van defecte onderdelen groter is. Deze onderdelen worden CSR-onderdelen (Customer Self Repair) genoemd. Als Hewlett Packard Enterprise (of een Hewlett Packard Enterprise Service Partner) bij de diagnose vaststelt dat de reparatie kan worden uitgevoerd met een CSR-onderdeel, verzendt Hewlett Packard Enterprise dat onderdeel rechtstreeks

naar u, zodat u het defecte onderdeel daarmee kunt vervangen. Er zijn twee categorieën CSR-onderdelen:

- **Verplicht**—Onderdelen waarvoor reparatie door de klant verplicht is. Als u Hewlett Packard Enterprise verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht.
- **Optioneel**—Onderdelen waarvoor reparatie door de klant optioneel is. Ook deze onderdelen zijn ontworpen voor reparatie door de klant. Als u echter Hewlett Packard Enterprise verzoekt deze onderdelen voor u te vervangen, kunnen daarvoor extra kosten in rekening worden gebracht, afhankelijk van het type garanteservice voor het product.

OPMERKING: Sommige Hewlett Packard Enterprise onderdelen zijn niet ontwikkeld voor reparatie door de klant. In verband met de garantievoorzieningen moet het onderdeel door een geautoriseerde Service Partner worden vervangen. Deze onderdelen worden in de geïllustreerde onderdelencatalogus aangemerkt met "Nee".

Afhankelijk van de leverbaarheid en de locatie worden CSR-onderdelen verzonden voor levering op de eerstvolgende werkdag. Levering op dezelfde dag of binnen vier uur kan tegen meerkosten worden aangeboden, indien dit mogelijk is gezien de locatie. Indien assistentie is gewenst, belt u het Hewlett Packard Enterprise Support Center om via de telefoon ondersteuning van een technicus te ontvangen. Hewlett Packard Enterprise vermeldt in de documentatie bij het vervangende CSR-onderdeel of het defecte onderdeel aan Hewlett Packard Enterprise moet worden geretourneerd. Als het defecte onderdeel aan Hewlett Packard Enterprise moet worden teruggezonden, moet u het defecte onderdeel binnen een bepaalde periode, gewoonlijk vijf (5) werkdagen, retourneren aan Hewlett Packard Enterprise. Het defecte onderdeel moet met de bijbehorende documentatie worden geretourneerd in het meegeleverde verpakkingsmateriaal. Als u het defecte onderdeel niet terugzendt, kan Hewlett Packard Enterprise u voor het vervangende onderdeel kosten in rekening brengen. Bij reparatie door de klant betaalt Hewlett Packard Enterprise alle verzendkosten voor het vervangende en geretourneerde onderdeel en kiest Hewlett Packard Enterprise zelf welke koerier/transportonderneming hiervoor wordt gebruikt.

Neem contact op met een Service Partner voor meer informatie over het Customer Self Repair programma van Hewlett Packard Enterprise.

Garanteservice "Parts Only"

Het is mogelijk dat de Hewlett Packard Enterprise garantie alleen de garanteservice "Parts Only" omvat. Volgens de bepalingen van de Parts Only garanteservice zal Hewlett Packard Enterprise kosteloos vervangende onderdelen ter beschikking stellen.

Voor de Parts Only garanteservice is vervanging door CSR-onderdelen verplicht. Als u Hewlett Packard Enterprise verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht.

Reparo feito pelo cliente

Os produtos da Hewlett Packard Enterprise são projetados com muitas peças para reparo feito pelo cliente (CSR) de modo a minimizar o tempo de reparo e permitir maior flexibilidade na substituição de peças com defeito. Se, durante o período de diagnóstico, a Hewlett Packard Enterprise (ou fornecedores/parceiros da Hewlett Packard Enterprise) concluir que o reparo pode ser efetuado pelo uso de uma peça CSR, a Hewlett Packard Enterprise enviará a peça diretamente ao cliente. Há duas categorias de peças CSR:

- **Obrigatória**—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a Hewlett Packard Enterprise substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.
- **Opcional**—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a Hewlett Packard Enterprise as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

OBSERVAÇÃO: Algumas peças da Hewlett Packard Enterprise não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a Hewlett Packard Enterprise exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "No" (Não), no catálogo de peças ilustrado.

Conforme a disponibilidade e o local geográfico, as peças CSR serão enviadas no primeiro dia útil após o pedido. Onde as condições geográficas permitirem, a entrega no mesmo dia ou em quatro horas pode ser feita mediante uma taxa adicional. Se precisar de auxílio, entre em contato com o Centro de suporte técnico da Hewlett Packard Enterprise para que um técnico o ajude por telefone. A Hewlett Packard Enterprise especifica nos materiais fornecidos com a peça CSR de reposição se a peça com defeito deve ser devolvida à Hewlett Packard Enterprise. Nos casos em que isso for necessário, é preciso enviar a peça com defeito à Hewlett Packard Enterprise, você deverá enviar a peça com defeito de volta para a Hewlett Packard Enterprise dentro do período de tempo definido, normalmente em 5 (cinco) dias úteis. A peça com defeito deve ser enviada com a documentação correspondente no material de transporte fornecido. Caso não o faça, a Hewlett Packard Enterprise poderá cobrar a reposição. Para as peças de reparo feito pelo cliente, a Hewlett Packard Enterprise paga todas as despesas de transporte e de devolução da peça e determina a transportadora/serviço postal a ser utilizado.

Para obter mais informações sobre o programa de reparo feito pelo cliente da Hewlett Packard Enterprise, entre em contato com o fornecedor de serviços local.

Serviço de garantia apenas para peças

A garantia limitada da Hewlett Packard Enterprise pode incluir um serviço de garantia apenas para peças. Segundo os termos do serviço de garantia apenas para peças, a Hewlett Packard Enterprise fornece as peças de reposição sem cobrar nenhuma taxa.

カスタマーセルフリペア

修理時間を短縮し、故障部品の交換における高い柔軟性を確保するために、Hewlett Packard Enterprise製品には多数のカスタマーセルフリペア（CSR）部品があります。診断の際に、CSR部品を使用すれば修理ができるとHewlett Packard Enterprise（Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店）が判断した場合、Hewlett Packard Enterpriseはその部品を直接、お客様に発送し、お客様に交換していただきます。CSR部品には以下の2種類があります。

- **必須** - カスタマーセルフリペアが必須の部品。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。
- **任意** - カスタマーセルフリペアが任意である部品。この部品もカスタマーセルフリペア用です。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、別途費用を負担していただくことなく保証サービスを受けることができます。

注： Hewlett Packard Enterprise製品の一部の部品は、カスタマーセルフリペアの対象外です。製品の保証を継続するためには、Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店による交換作業が必須となります。部品カタログには、当該部品がカスタマーセルフリペア除外品である旨が記載されています。

部品供給が可能な場合、地域によっては、CSR部品を翌営業日に届くように発送します。また、地域によっては、追加費用を負担いただくことにより同日または4時間以内に届くように発送することも可能な場合があります。サポートが必要なときは、Hewlett Packard Enterpriseサポートセンターに電話していただければ、技術者が電話でアドバイスします。交換用のCSR部品または同梱物には、故障部品をHewlett Packard Enterpriseに返送する必要があるかどうかが表示されています。故障部品をHewlett Packard Enterpriseに返送する必要がある場合は、指定期限内（通常は5営業日以内）に故障部品をHewlett Packard Enterpriseに返送してください。故障部品を返送する場合は、届いた時の梱包箱に関連書類とともに入れてください。故障部品を返送しない場合、Hewlett Packard Enterpriseから部品費用が請求されます。カスタマーセルフリペアの際には、Hewlett Packard Enterpriseは送料および部品返送費を全額負担し、使用する宅配便会社や運送会社を指定します。

部品のみ保証サービス

Hewlett Packard Enterprise保証サービスには、部品のみ保証サービスが適用される場合があります。このサービスでは、交換部品は無償で提供されます。

部品のみ保証サービスにおいては、CSR部品をお客様により交換作業していただくことが必須となります。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様のご負担となります。

客户自行维修

Hewlett Packard Enterprise 产品提供许多客户自行维修 (CSR) 部件，以尽可能缩短维修时间和在更换缺陷部件方面提供更大的灵活性。如果在诊断期间 Hewlett Packard Enterprise（或 Hewlett Packard Enterprise 服务提供商或服务合作伙伴）确定可以通过使用 CSR 部件完成维修，Hewlett Packard Enterprise 将直接把该部件发送给您进行更换。有两类 CSR 部件：

- **强制性的** — 要求客户必须自行维修的部件。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。
- **可选的** — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 Hewlett Packard Enterprise 为您更换这些部件，则根据为您的产品指定的保修服务类型，Hewlett Packard Enterprise 可能收取或不再收取任何附加费用。

注：某些 Hewlett Packard Enterprise 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，Hewlett Packard Enterprise 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

CSR 部件将在下一个工作日发运（取决于备货情况和允许的地理范围）。在允许的地理范围内，可在当天或四小时内发运，但要收取额外费用。如果需要帮助，您可以致电 Hewlett Packard Enterprise 技术支持中心，将会有技术人员通过电话为您提供帮助。Hewlett Packard Enterprise 会在随更换的 CSR 部件发运的材料中指明是否必须将有缺陷的部件返还给 Hewlett Packard Enterprise。如果要求您将有缺陷的部件返还给 Hewlett Packard Enterprise，那么您必须在规定的期限内（通常是五 (5) 个工作日）将缺陷部件发给 Hewlett Packard Enterprise。有缺陷的部件必须随所提供的发运材料中的相关文件一起返还。如果未能送还有缺陷的部件，Hewlett Packard Enterprise 可能会要求您支付更换费用。客户自行维修时，Hewlett Packard Enterprise 将承担所有相关运输和部件返回费用，并指定快递商/承运商。

有关 Hewlett Packard Enterprise 客户自行维修计划的详细信息，请与您当地的服务提供商联系。

仅部件保修服务

您的 Hewlett Packard Enterprise 有限保修服务可能涉及仅部件保修服务。根据仅部件保修服务条款的规定，Hewlett Packard Enterprise 将免费提供更换的部件。

仅部件保修服务要求进行 CSR 部件更换。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。

客戶自行維修

Hewlett Packard Enterprise 產品設計了許多「客戶自行維修」(CSR) 的零件以減少維修時間，並且使得更換瑕疵零件時能有更大的彈性。如果在診斷期間，Hewlett Packard Enterprise (或 Hewlett Packard Enterprise 服務供應商或維修夥伴) 辨認出此項維修工作可以藉由使用 CSR 零件來完成，則 Hewlett Packard Enterprise 將直接寄送該零件給您作更換。CSR 零件分為兩種類別：

- **強制的** — 客戶自行維修所使用的零件是強制性的。如果您要求 Hewlett Packard Enterprise 更換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。
- **選購的** — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 Hewlett Packard Enterprise 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

備註：某些 Hewlett Packard Enterprise 零件沒有消費者可自行維修的設計。為符合客戶保固，Hewlett Packard Enterprise 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

基於材料取得及環境允許的情況下，CSR 零件將於下一個工作日以快遞寄送。在環境的允許下當天或四小時內送達，則可能需要額外的費用。若您需要協助，可致電 Hewlett Packard Enterprise 支援中心，會有一位技術人員透過電話來協助您。不論損壞的零件是否必須退回，Hewlett Packard Enterprise 皆會在與 CSR 替換零件一起運送的材料中註明。若要將損壞的零件退回 Hewlett Packard Enterprise，您必須在指定的一段時間內 (通常為五 (5) 個工作天)，將損壞的零件寄回 Hewlett Packard Enterprise。損壞的零件必須與寄送資料中隨附的相關技術文件一併退還。如果無法退還損壞的零件，Hewlett Packard Enterprise 可能要向您收取替換費用。針對客戶自行維修情形，Hewlett Packard Enterprise 將負責所有運費及零件退還費用，並指定使用何家快遞/貨運公司。

如需 Hewlett Packard Enterprise 的 CSR 方案詳細資訊，請連絡您當地的服務供應商。

僅限零件的保固服務

您的「Hewlett Packard Enterprise 有限保固」可能包含僅限零件的保固服務。在僅限零件的保固服務情況下，Hewlett Packard Enterprise 將免費提供替換零件。

針對僅限零件的保固服務，CSR 零件替換是強制性的。如果您要求 Hewlett Packard Enterprise 更換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。

고객 셀프 수리

Hewlett Packard Enterprise 제품은 수리 시간을 최소화하고 결함이 있는 부품 교체 시 더욱 융통성을 발휘할 수 있도록 하기 위해 고객 셀프 수리(CSR) 부품을 다량 사용하여 설계되었습니다. 진단 기간 동안 Hewlett Packard Enterprise(또는 Hewlett Packard Enterprise 서비스 공급업체 또는 서비스 협력업체)에서 CSR 부품을 사용하여 수리가 가능하다고 판단되면 Hewlett Packard Enterprise는 해당 부품을 바로 사용자에게 보내어 사용자가 교체할 수 있도록 합니다. CSR 부품에는 두 가지 종류가 있습니다.

- 필수 - 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.
- 선택 사항 - 고객 셀프 수리가 선택 사항인 부품. 이 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

참고: 일부 Hewlett Packard Enterprise 제품은 고객 셀프 수리가 불가능하도록 설계되었습니다. Hewlett Packard Enterprise는 만족스러운 고객 보증을 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 하고 있습니다. 이러한 부품들은 Illustrated Parts Catalog에 "No"라고 표시되어 있습니다.

CSR 부품은 재고 상태와 지리적 조건이 허용하는 경우 다음 영업일 납품이 가능하도록 배송이 이루어집니다. 지리적 조건이 허용하는 경우 추가 비용이 청구되는 조건으로 당일 또는 4시간 배송이 가능할 수도 있습니다. 도움이 필요하시면 Hewlett Packard Enterprise Support Center로 전화하십시오. 전문 기술자가 전화로 도움을 줄 것입니다. Hewlett Packard Enterprise는 결함이 발생한 부품을 Hewlett Packard Enterprise로 반환해야 하는지 여부를 CSR 교체 부품과 함께 배송된 자료에 지정합니다. 결함이 발생한 부품을 Hewlett Packard Enterprise로 반환해야 하는 경우에는 지정된 기간 내(통상 영업일 기준 5일)에 Hewlett Packard Enterprise로 반환해야 합니다. 이때 결함이 발생한 부품은 제공된 포장 재료에 넣어 관련 설명서와 함께 반환해야 합니다. 결함이 발생한 부품을 반환하지 않는 경우 Hewlett Packard Enterprise가 교체 부품에 대해 비용을 청구할 수 있습니다. 고객 셀프 수리의 경우, Hewlett Packard Enterprise는 모든 운송 및 부품 반환 비용을 부담하며 이용할 운송업체 및 택배 서비스를 결정합니다.

Hewlett Packard Enterprise CSR 프로그램에 대한 자세한 내용은 가까운 서비스 제공업체에 문의하십시오.

부품 제공 보증 서비스

Hewlett Packard Enterprise 제한 보증에는 부품 제공 보증 서비스가 포함될 수 있습니다. 이러한 경우 Hewlett Packard Enterprise는 부품 제공 보증 서비스의 조건에 따라 교체 부품만을 무료로 제공합니다.

부품 제공 보증 서비스 제공 시 CSR 부품 교체는 의무 사항입니다. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.

Illustrated parts catalog

Subtopics

[Mechanical components](#)

[System components](#)

[Server options](#)

Mechanical components

Hewlett Packard Enterprise continually improves and changes product parts. For complete and current supported parts information, see the [Hewlett Packard Enterprise PartSurfer website](#).

https://sketchfab.com/models/ae04c0d6a8df4ee38ebb17a5c29846a0/embed?ui_infos=0&ui_watermark=0&ui_help=0&ui_vr=0&ui_settings=0&ui_inspector=0&ui_hint=2&ui_animations=0&ui_color=01a982&ui_theme=d

Item Description

1	Left chassis ear spare parts
2	Fan cage spare part
3	Air baffle spare parts
4	Access panel spare parts
5	Tertiary riser spare parts
6	Primary and secondary riser spare parts
7	Chassis ear power switch spare parts
8	Rack mounting hardware spare parts*
9	Cable management arm spare parts*
10	Miscellaneous blanks spare parts*

* Not shown

For more information, see [Removal and replacement procedures](#).

Subtopics

[Chassis ears spare parts](#)

[Fan cage spare part](#)

[Air baffle spare parts](#)

[Access panel spare parts](#)

[Primary and secondary riser cage spare part](#)

[Tertiary riser cage spare part](#)

[2U bezel spare part](#)

[Rack mounting hardware spare parts](#)

[Cable management arm spare parts](#)

[Miscellaneous blanks spare parts](#)

Chassis ears spare parts

[Customer self repair: Mandatory](#)

Description	Spare part number
Left chassis ear	P58207-001
Right chassis ear, includes power switch and iLO/USB ports	P56501-001

Fan cage spare part

[Customer self repair: Mandatory](#)

Description Spare part number

Fan cage P58210-001

For more information on the removal and replacement procedures, see: [Remove the fan cage](#)

Air baffle spare parts

Customer self repair: **Mandatory**

Description	Spare part number
Max-performance air baffle	P56502-001
Standard air baffle	P38194-001

Access panel spare parts

Customer self repair: **Mandatory**

Description	Spare part number
Access panel (SFF model)	P56493-001
Access panel (LFF model)	P56491-001

For more information on the removal and replacement procedures, see: [Remove the access panel](#)

Primary and secondary riser cage spare part

Customer self repair: **Mandatory**

Description	Spare part number
Primary or secondary riser cage	P58209-001

Tertiary riser cage spare part

Customer self repair: **Optional**

Description	Spare part number
Tertiary riser cage	P58279-001

2U bezel spare part

Customer self repair: **Mandatory**

Description	Spare part number
2U bezel	P58208-001

For more information on the removal and replacement procedures, see: [Removing and replacing the front bezel](#)

Rack mounting hardware spare parts

Customer self repair: Mandatory

Description	Spare part number
Friction rail kit 3	P58528-001

For more information on the removal and replacement procedures, see: [Removing and replacing the rack rails](#)

Cable management arm spare parts

Customer self repair: Mandatory

Description	Spare part number
1U Easy Install Cable Management Arm	P38900-001
2U cable arm kit	P24100-001

Miscellaneous blanks spare parts

Customer self repair: Mandatory

Description	Spare part number
Rear blanks kit	P58220-001
• Secondary PCI rear wall blank • Tertiary PCI rear wall blank • OCP blank • serial port blank • 2SFF rear bracket	
Rear blanks kit	P24101-001
Power supply blanks	777301-001
Fan blanks	P39788-001
Hard drive blanks	875069-001

System components

Hewlett Packard Enterprise continually improves and changes product parts. For complete and current supported parts information, see the [Hewlett Packard Enterprise PartSurfer website](#).

<https://sketchfab.com/models/1edae43f1c184937bfe69facae09d4e6/embed?>

Item	Description
1	System board assembly spare parts
2	DIMM spare parts
3	Fourth Generation Intel Xeon Scalable Processors
4	Heatsink spare parts
5	PCI riser board spare parts
6	Expansion card spare parts • Storage controller spare parts • Host bus adapter spare parts • Infiniband adapter spare parts • Ethernet adapter spare parts
7	OCP 3.0 network adapters
8	System battery spare part*

* Not shown

For more information, see [Removal and replacement procedures](#).

Subtopics

- [System board assembly spare parts](#)
- [DIMM guard spare parts](#)
- [DIMM spare parts](#)
- [Processor spare parts](#)
- [Heatsink spare parts](#)
- [Direct liquid cooling solution spare parts](#)
- [PCI riser board spare parts](#)
- [Storage controller spare parts](#)
- [Host bus adapter spare parts](#)
- [Infiniband adapter spare parts](#)
- [Ethernet adapter spare parts](#)
- [OCP 3.0 network adapters](#)
- [Drive spare parts](#)
- [System battery spare part](#)

System board assembly spare parts

[Customer self repair: Optional](#)

Description	Spare part number
System board for fourth-generation Intel processors	P53214-001
System board for fifth-generation Intel processors	P53214-002

DIMM guard spare parts



Customer self repair: Mandatory

Description	Spare part number
Left and right DIMM guard spare parts	P24307-001

DIMM spare parts

Customer self repair: Mandatory

5600 MT/s DIMMs

Description	Spare part number
HPE 16GB 1Rx8 PC5-5600B-R Smart Kit	P65253-001
HPE 32GB 2Rx8 PC5-5600B-R Smart Kit	P65254-001
HPE 64GB 2RX4 PC5-5600B-R Smart Kit	P65255-001
HPE 96GB 2RX4 PC5-5600B-R Smart Kit	P65256-001
HPE 128GB 4RX4 PC5-5600B-R Smart Kit	P65257-001

4800 MT/s DIMMs

Description	Spare part number
HPE 16GB 1Rx8 PC5-4800B-R Smart Kit	P48499-001
HPE 32GB 1Rx4 PC5-4800B-R Smart Kit	P48500-001
HPE 32GB 2RX8 PC5-4800B-R Smart Kit	P48501-001
HPE 64GB 2RX4 PC5-4800B-R Smart Kit	P48502-001
HPE 128GB 4RX4 PC5-4800B-R 3DS Smart Kit	P48503-001
HPE 256GB 8RX4 PC5-4800B-R 3DS Smart Kit	P48504-001

DIMM blanks

Description	Spare part number
HPE DDR4 DIMM Blank Kit	812914-001

Processor spare parts

Subtopics

[Fourth Generation Intel Xeon Scalable Processors](#)

[Fifth Generation Intel Xeon Scalable Processors](#)

Fourth Generation Intel Xeon Scalable Processors

Subtopics

- [34xx processor spare parts](#)
- [44xx processor spare parts](#)
- [54xx processor spare parts](#)
- [64xx processor spare parts](#)
- [84xx processor spare parts](#)
- [94xx processor spare parts](#)

34xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon Scalable processor 3408U (1.8G, 8C, 125W)	P60439-001

44xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon Scalable processor 4416+ (2.0G, 20C, 165W)	P60434-001
Intel Xeon Scalable processor 4410Y (2.0G, 12C, 150W)	P60433-001

54xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon Scalable processor 5420+ (2.0G, 28C, 205W)	P60436-001
Intel Xeon Scalable processor 5418Y (2.0G, 24C, 185W)	P60435-001
Intel Xeon Scalable processor 5418N (1.8G, 24C, 165W)	P60448-001
Intel Xeon Scalable processor 5416S (2.0G, 16C, 150W)	P60452-001
Intel Xeon Scalable processor 5415+ (2.9G, 8C, 150W)	P60426-001
Intel Xeon Scalable processor 5411N (1.9G, 24C, 165W)	P60447-001

64xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon Scalable processor 6458Q (3.1 GHz, 32C, 350W)	P60438-001
Intel Xeon Scalable processor 6454S (2.2 GHz, 32C, 270W)	P53136-001
Intel Xeon Scalable processor 6448Y (2.1 GHz, 32C, 225W)	P60429-001
Intel Xeon Scalable processor 6444Y (3.6 GHz, 16C, 270W)	P60431-001
Intel Xeon Scalable processor 6442Y (2.4 GHz, 24C, 225W)	P60428-001
Intel Xeon Scalable processor 6438Y+ (2.0 GHz, 32C, 205W)	P60437-001
Intel Xeon Scalable processor 6438N (2.0 GHz, 32C, 205W)	P60446-001
Intel Xeon Scalable processor 6434 (3.7 GHz, 8C, 195W)	P60445-001
Intel Xeon Scalable processor 6430 (2.1 GHz, 32C, 270W)	P53120-001
Intel Xeon Scalable processor 6426Y (2.5 GHz, 16C, 185W)	P60427-001
Intel Xeon Scalable processor 6421N (1.8 GHz, 32C, 185W)	P60449-001
Intel Xeon Scalable processor 6414U (2.2 GHz, 32C, 250W)	P53123-001
Intel Xeon Scalable processor 6416H (2.0 GHz, 18C, 165W)	P49422-001
Intel Xeon Scalable processor 6418H (2.2 GHz, 24C, 185W)	P49423-001
Intel Xeon Scalable processor 6448H (2.0 GHz, 32C, 225W)	P49424-001
Intel Xeon Scalable processor 6434H (4.0 GHz, 8C, 205W)	P49425-001

84xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon Scalable processor 8480+ (2.0G, 56C, 350W)	P53119-001
Intel Xeon Scalable processor 8470 (2.0G, 52C, 350W)	P53118-001
Intel Xeon Scalable processor 8470Q (2.1G, 52C, 350W)	P53122-001
Intel Xeon Scalable processor 8470N (1.7G, 52C, 300W)	P53130-001
Intel Xeon Scalable processor 8468 (2.1G, 48C, 350W)	P53117-001
Intel Xeon Scalable processor 8468V (2.4G, 48C, 330W)	P53132-001
Intel Xeon Scalable processor 8462Y+ (2.8G, 32C, 300W)	P60432-001
Intel Xeon Scalable processor 8460Y+ (2.0G, 40C, 300W)	P53116-001
Intel Xeon Scalable processor 8458P (2.7G, 44C, 350W)	P53133-001
Intel Xeon Scalable processor 8452Y (2.0G, 36C, 300W)	P53121-001
Intel Xeon Scalable processor 8444H (2.9G, 16C, 270W)	P53124-001
Intel Xeon Scalable processor 8450H (2.0G, 28C, 250W)	P53125-001
Intel Xeon Scalable processor 8460H (2.2G, 40C, 330W)	P53127-001
Intel Xeon Scalable processor 8468H (2.1G, 48C, 330W)	P53128-001
Intel Xeon Scalable processor 8490H (1.9G, 60C, 350W)	P53129-001

94xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon CPU Max processor 9462 (2.7G, 32C, 350W)	P62346-001

Fifth Generation Intel Xeon Scalable Processors

Subtopics

[35xx processor spare parts](#)

[45xx processor spare parts](#)

[55xx processor spare parts](#)

[65xx processor spare parts](#)

[85xx processor spare parts](#)

35xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon 3508U, 2.10 GHz, 8C, 125W	P67660-001

45xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon 4509Y, 2.60 GHz, 8C, 125 W	P67651-001
Intel Xeon 4510, 2.40 GHz, 12C, 150 W	P67652-001
Intel Xeon 4510T, 2.00 GHz, 12C, 115 W	P67663-001
Intel Xeon 4514Y, 2.00 GHz, 16C, 150 W	P67653-001
Intel Xeon 4516Y+, 2.20 GHz, 24C, 185 W	P67654-001

55xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon 5512U, 2.10 GHz, 28C, 185 W	P67661-001
Intel Xeon 5515+, 3.20 GHz, 8C, 165 W	P67640-001
Intel Xeon 5520+, 2.20 GHz, 28C, 205 W	P67655-001

65xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon 6526Y, 2.80 GHz, 16C, 195W	P67641-001
Intel Xeon 6530, 2.10 GHz, 32C, 270W	P67656-001
Intel Xeon 6534, 3.90 GHz, 8C, 195W	P67644-001
Intel Xeon 6538N, 2.10 GHz, 32C, 205W	P67664-001
Intel Xeon 6538Y+, 2.20 GHz, 32C, 225W	P67657-001
Intel Xeon 6542Y, 2.90 GHz, 24C, 250W	P67642-001
Intel Xeon 6544Y, 3.60 GHz, 16C, 270W	P67645-001
Intel Xeon 6548N, 2.80 GHz, 32C, 250W	P67665-001
Intel Xeon 6548Y+, 2.50 GHz, 32C, 250W	P67643-001
Intel Xeon 6554S, 2.20 GHz, 36C, 270W	P67670-001
Intel Xeon 6558Q, 3.20 GHz, 32C, 350W	P67659-001

85xx processor spare parts

Customer self repair: Optional

Description	Spare part number
Intel Xeon 8558, 2.10 GHz, 48C, 330W	P67658-001
Intel Xeon 8558P, 2.70 GHz, 48C, 350W	P67668-001
Intel Xeon 8558U, 2.00 GHz, 48C, 300W	P67662-001
Intel Xeon 8562Y+, 2.80 GHz, 32C, 300W	P67646-001
Intel Xeon 8568Y+, 2.30 GHz, 48C, 350W	P67647-001
Intel Xeon 8570, 2.10 GHz, 56C, 350W	P67648-001
Intel Xeon 8571N, 2.40 GHz, 52C, 300W	P67666-001
Intel Xeon 8580, 2.00 GHz, 60C, 350W	P67649-001
Intel Xeon 8581V, 2.00 GHz, 60C, 270W	P67669-001
Intel Xeon 8592+, 1.90 GHz, 64C, 350W	P67650-001
Intel Xeon 8592V, 2.00 GHz, 64C, 330W	P67667-001
Intel Xeon 8593Q, 2.20 GHz, 64C, 385W	P68576-001

Heatsink spare parts

Customer self repair: Optional

Description	Spare part number
Standard heatsink	P49956-001
High performance heatsink	P49957-001
Max performance heatsink	P49958-001
1U high performance heatsink	P53220-001

Direct liquid cooling solution spare parts

Customer self repair: Cold plate modules are **Optional**. Hose sets are **Mandatory**.

Description	Spare part number
SPS-Cold Plate Module w/bracket (DLC) WM38	P63149-001
SPS-Cold Plate Module w/brkt (DLC) PCIe3638	P63151-001
SPS-DLC Hose Set (SVRtoMAN) 65cm QD	P63154-001
SPS-DLC Hose Set (SVRtoMAN) 55cm QD	P63155-001

PCI riser board spare parts

Customer self repair: **Optional**

Description	Spare part number
SPS-PCA,2U 3 x16 slots rsr,x8/x16/x8	P53211-001
SPS-PCA,2U 3x16 rsr,x16 cable/x16/x16	P53212-001
SPS-PCA,2U 2x16 slots ter cable rsr	P53213-001

For more information on the removal and replacement procedures, see: [Removing and replacing the PCIe riser board](#)

Storage controller spare parts

Customer self repair: **Optional**

Description	Spare part number
HPE MR416i-p Gen11 Storage Controller	P47951-001
HPE MR416i-o Gen11 Storage Controller	P47952-001
HPE MR216i-p Gen11 Storage Controller	P47953-001
HPE MR216i-o Gen11 Storage Controller	P47954-001
HPE MR408i-o Gen11 Storage Controller	P58543-001
HPE SR932i-p Gen11 Storage Controller	P47623-001

Host bus adapter spare parts

Customer self repair: **Mandatory**

Description	Spare part number
HPE SN1610E 32Gb 1-port Fibre Channel Host Bus Adapter	P14421-001
HPE SN1610E 32Gb 2-port Fibre Channel Host Bus Adapter	P14422-001
HPE SN1610Q 32Gb 1-port Fibre Channel Host Bus Adapter	P14419-001
HPE SN1610Q 32Gb 2-port Fibre Channel Host Bus Adapter	P14420-001

Infiniband adapter spare parts

Customer self repair: Mandatory

Description	Spare part number
HPE InfiniBand NDR 1-port OSFP PCIe5 x16 MCX75310AAS-NEAT Adapter	P47627-001
HPE InfiniBand HDR/Ethernet 200Gb 1-port QSFP56 PCIe4 x16 OCP3 MCX653435A-HDAI Adapter	P36069-001
HPE InfiniBand HDR/Ethernet 200Gb 2-port QSFP56 PCIe4 x16 OCP3 MCX653436A-HDAI Adapter	P36070-001
HPE 100Gb 1-port OP101 QSFP28 x16 PCIe Gen3 with Intel Omni-Path Architecture Adapter	841703-001
HPE InfiniBand HDR100/Ethernet 100Gb 1-port QSFP56 PCIe4 x16 MCX653105A-ECAT Adapter	841703-001
HPE InfiniBand HDR100/Ethernet 100Gb 2-port QSFP56 PCIe4 x16 MCX653106A-ECAT Adapter	P24752-001

Ethernet adapter spare parts

Customer self repair: Mandatory



Description	Spare part number
Broadcom BCM5719 Ethernet 1Gb 4-port BASE-T Adapter for HPE	P51304-001
Broadcom BCM57416 Ethernet 10Gb 2-port BASE-T Adapter for HPE	P26987-001
Broadcom BCM57412 Ethernet 10Gb 2-port SFP+ Adapter for HPE	P26874-001
Broadcom BCM57504 Ethernet 10/25Gb 4-port SFP28 Adapter for HPE	P42266-001
Broadcom BCM57414 Ethernet 10/25Gb 2-port SFP28 Adapter for HPE	P26871-001
Intel I350-T4 Ethernet 1Gb 4-port BASE-T Adapter for HPE	P22200-001
Intel E810-XXVDA2 Ethernet 10/25Gb 2-port SFP28 Adapter for HPE	P14483-001
Intel E810-XXVDA4 Ethernet 10/25Gb 4-port SFP28 Adapter for HPE	P10582-001
Intel E810-CQDA2 Ethernet 100Gb 2-port QSFP28 Adapter for HPE	P22201-001
Mellanox MCX631102AS-ADAT Ethernet 10/25Gb 2-port SFP28 Adapter for HPE	P42934-001
Mellanox MCX623106AS-CDAT Ethernet 100Gb 2-port QSFP56 Adapter for HPE	P26155-001
Mellanox MCX623105AS-VDAT Ethernet 200Gb 1-port QSFP56 Adapter for HPE	P14488-001
HPE Slingshot SA210S Ethernet 200Gb 1-port PCIe NIC	P40789-001
HPE Slingshot SA410S 400GbE 1p PCIe NIC	R9Y95A

OCP 3.0 network adapters

Customer self repair: Optional

Description	Spare part number
Broadcom BCM5719 Ethernet 1Gb 4-port BASE-T OCP3 Adapter for HPE	P51305-001
Broadcom BCM57416 Ethernet 10Gb 2-port BASE-T OCP3 Adapter for HPE	P13640-001
Broadcom BCM57412 Ethernet 10Gb 2-port SFP+ OCP3 Adapter for HPE	P26256-B21
Broadcom BCM57504 Ethernet 10/25Gb 4-port SFP28 OCP3 Adapter for HPE	P42265-001
Broadcom BCM57414 Ethernet 10/25Gb 2-port SFP28 OCP3 Adapter for HPE	P14484-001
Intel I350-T4 Ethernet 1Gb 4-port BASE-T OCP3 Adapter for HPE	P14487-001
Intel E810-XXVDA2 Ethernet 10/25Gb 2-port SFP28 OCP3 Adapter for HPE	P14485-001
Intel E810 100GbE 2p QSFP28 OCP3 Adptr	P24113-001
Mellanox MCX631432AS-ADAI Ethernet 10/25Gb 2-port SFP28 OCP3 Adapter for HPE	P42933-001

Drive spare parts

Subtopics

[EDSFF drive spare parts](#)

[NVMe drive spare parts](#)

[SAS drive spare parts](#)

[SATA drive spare parts](#)

EDSFF drive spare parts

Customer self repair: Mandatory

Description	Spare part number
SPS-DRV SSD 15.3TB E3S NVMe RI EC1	P58427-001
SPS-DRV SSD 7.68TB E3S NVMe RI EC1	P58426-001
SPS-DRV SSD 3.84TB E3S NVMe RI EC1	P58425-001
SPS-DRV SSD 7.68TB E3S NVMe RI EC1 CD7	P56716-001
SPS-DRV SSD 3.84TB E3S NVMe RI EC1 CD7	P56715-001
SPS-DRV SSD 1.92TB E3S NVMe RI EC1 CD7	P56714-001

NVMe drive spare parts

Customer self repair: Mandatory

Description	Spare part number
HPE 15.36TB NVMe Gen4 High Performance Read Intensive SFF BC U.3 PM1733a SSD	P50961-001
HPE 7.68TB NVMe Gen4 High Performance Read Intensive SFF BC U.3 PM1733a SSD	P50959-001
HPE 7.68TB NVMe Gen4 Mainstream Performance Read Intensive SFF BC U.3 Static Multi Vendor SSD	P48226-001
HPE 3.84TB NVMe Gen4 High Performance Read Intensive SFF BC U.3 PM1733a SSD	P50956-001
HPE 3.84TB NVMe Gen4 Mainstream Performance Read Intensive SFF BC U.3 Static Multi Vendor SSD	P48225-001
HPE 1.92TB NVMe Gen4 High Performance Read Intensive SFF BC U.3 PM1733a SSD	P50953-001
HPE 1.9TB NVMe Gen4 Mainstream Performance Read Intensive SFF BC U.3 Static Multi Vendor SSD	P48224-001
HPE 960GB NVMe Gen4 Mainstream Performance Read Intensive SFF BC U.3 Static Multi Vendor SSD	P48223-001
HPE 6.4TB NVMe Gen4 High Performance Mixed Use SFF BC U.3 PM1735a SSD	P50970-001
HPE 6.4TB NVMe Gen4 Mainstream Performance Mixed Use SFF BC U.3 Static Multi Vendor SSD	P48219-001
HPE 3.2TB NVMe Gen4 High Performance Mixed Use SFF BC U.3 PM1735a SSD	P50967-001
HPE 3.2TB NVMe Gen4 Mainstream Performance Mixed Use SFF BC U.3 Static Multi Vendor SSD	P48218-001
HPE 1.6TB NVMe Gen4 High Performance Mixed Use SFF BC U.3 PM1735a SSD	P50964-001
HPE 1.6TB NVMe Gen4 Mainstream Performance Mixed Use SFF BC U.3 Static Multi Vendor SSD	P48217-001
HPE 800GB NVMe Gen4 Mainstream Performance Mixed Use SFF BC U.3 Static Multi Vendor SSD	P48216-001

SAS drive spare parts

Customer self repair: **Mandatory**

LFF drives

Description	Spare part number
Midline - 12G SAS - LFF Drives	
HPE 20TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty Helium 512e ISE Multi-Vendor	P54677-001
HPE 18TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty Helium 512e ISE Multi Vendor HDD	P54677-001
HPE 16TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty Helium 512e ISE Multi Vendor HDD	P25245-001
HPE 14TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty Helium 512e Multi Vendor HDD	P11518-001
HPE 12TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty Helium 512e Multi Vendor HDD	882398-001
HPE 10TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty 512e ISE Multi-Vendor	P54672-001
HPE 8TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty 512e Multi Vendor HDD	834132-001
HPE 6TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty 512e Multi Vendor HDD	862136-001
HPE 4TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty Multi Vendor HDD	834134-001
HPE 2TB SAS 12G Business Critical 7.2K LFF LP 1- year Warranty Multi Vendor HDD	834133-001
Read Intensive - 12G SAS - LFF –Solid State Drives	
HPE 7.68TB SAS 24G Read Intensive LFF LPC Multi Vendor SSD	P49740-001
Mixed Use - 12G SAS - LFF –Solid State Drives	
HPE 960GB SAS 12G Mixed Use LFF LPC Value SAS Multi Vendor SSD	P37070-001

SFF drives

Description	Spare part number
Mission Critical - 12G SAS - SFF Drives	
HPE 2.4TB SAS 12G Mission Critical 10K SFF BC 3-year Warranty 512e Self-encrypting FIPS HDD	P36212-001
HPE 1.2TB SAS 12G Mission Critical 10K SFF BC 3-year Warranty Self-encrypting FIPS HDD	P36214-001
Enterprise - 12G SAS - SFF Drives	
HPE 2.4TB SAS 12G Mission Critical 10K SFF BC 3-year Warranty 512e Multi Vendor HDD	P30562-001
HPE 1.8TB SAS 12G Mission Critical 10K SFF BC 3-year Warranty 512e Multi Vendor HDD	P54682-001
HPE 1.2TB SAS 12G Mission Critical 10K SFF BC 3-year Warranty Multi Vendor HDD	P30563-001
HPE 1TB SAS 12G Business Critical 7.2K SFF BC 1-year Warranty HDD	P54683-001
HPE 900GB SAS 15K SFF BC MV HDD	P40784-001
HPE 600GB SAS 12G Mission Critical 15K SFF BC 3-year Warranty Multi Vendor HDD	P54680-001
HPE 600GB SAS 12G Mission Critical 10K SFF BC 3-year Warranty Multi Vendor HDD	P54681-001

Description	Spare part number
HPE 300GB SAS 12G Mission Critical 15K SFF BC 3-year Warranty Multi Vendor HDD	P30561-001
HPE 300GB SAS 12G Mission Critical 10K SFF BC 3-year Warranty Multi Vendor HDD	P40785-001
Midline - 12G SAS - SFF Drives	
HPE 2TB SAS 12G Business Critical 7.2K SFF BC 1-year Warranty 512e HDD	P30575-001
Read Intensive - 12G SAS - SFF - Solid State Drives	
HPE 15.36TB SAS 24G Read Intensive SFF BC Multi Vendor SSD	P49743-001
HPE 7.68TB SAS 12G Read Intensive SFF BC Value SAS Multi Vendor SSD	P41534-001
HPE 7.68TB SAS 24G Read Intensive SFF BC Multi Vendor SSD	P49741-001
HPE 3.84TB SAS 12G Read Intensive SFF BC Value SAS Multi Vendor SSD	P41533-001
HPE 3.84TB SAS 24G Read Intensive SFF BC Multi Vendor SSD	P49737-001
HPE 1.92TB SAS 12G Read Intensive SFF BC Value SAS Multi Vendor SSD	P41532-001
HPE 1.92TB SAS 24G Read Intensive SFF BC Multi Vendor SSD	P49735-001
HPE 960GB SAS 12G Read Intensive SFF BC Value SAS Multi Vendor SSD	P41531-001
HPE 960GB SAS 24G Read Intensive SFF BC Multi Vendor SSD	P49733-001
Mixed Use - 12G SAS - SFF - Solid State Drives	
HPE 6.4TB SAS 24G Mixed Use SFF BC Multi Vendor SSD	P49751-001
HPE 3.84TB SAS 12G Mixed Use SFF BC Value SAS Multi Vendor SSD	P41537-001
HPE 3.2TB SAS 24G Mixed Use SFF BC Multi Vendor SSD	P49749-001
HPE 1.92TB SAS 12G Mixed Use SFF BC Value SAS Multi Vendor SSD	P41536-001
HPE 1.6TB SAS 24G Mixed Use SFF BC Multi Vendor SSD	P49747-001
HPE 960GB SAS 12G Mixed Use SFF BC Value SAS Multi Vendor SSD	P41535-001
HPE 800GB SAS 24G Mixed Use SFF BC Multi Vendor SSD	P49745-001

SATA drive spare parts

Customer self repair: **Mandatory**

LFF drives

Description	Spare part number
Read Intensive - 6G SATA - LFF - Solid State Drives	
HPE 960GB SATA 6G Read Intensive LFF LPC Multi Vendor SSD	P48229-001
Midline - 6G SATA - LFF Drives	
HPE 18TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty Helium 512e ISE Multi Vendor HDD	P38440-001
HPE 16TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty Helium 512e ISE Multi Vendor HDD	P25244-001
HPE 14TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty Helium 512e Multi Vendor HDD	P11519-001
HPE 12TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty Helium 512e Multi Vendor HDD	882401-001
HPE 10TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty 512e Multi Vendor HDD	P54673-001
HPE 8TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty 512e Multi Vendor HDD	834131-001
HPE 6TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty 512e Multi Vendor HDD	862134-001
HPE 4TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty Multi Vendor HDD	862133-001
HPE 2TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty Multi Vendor HDD	862132-001
HPE 1TB SATA 6G Business Critical 7.2K LFF LP 1-year Warranty Multi Vendor HDD	862130-001

SFF drives

Description	Spare part number
Midline - 6G SATA - SFF Drives	
HPE 2TB SATA 6G Business Critical 7.2K SFF BC 1-year Warranty 512e HDD	P30573-001
HPE 1TB SATA 6G Business Critical 7.2K SFF BC 1-year Warranty HDD	P30574-001
Read Intensive - 6G SATA - SFF - Solid State Drives	
HPE 7.68TB SATA 6G Read Intensive SFF BC Multi Vendor SSD	P41526-001
HPE 3.84TB SATA 6G Read Intensive SFF BC Multi Vendor SSD	P41525-001
HPE 3.84TB SATA 6G Read Intensive SFF BC S4520 SSD	P47487-001
HPE 3.84TB SATA 6G Read Intensive SFF BC PM893 SSD	P46055-001
HPE 1.92TB SATA 6G Read Intensive SFF BC Multi Vendor SSD	P41524-001
HPE 1.92TB SATA 6G Read Intensive SFF BC S4520 SSD	P47485-001
HPE 1.92TB SATA 6G Read Intensive SFF BC PM893 SSD	P46054-001
HPE 480GB SATA 6G Read Intensive SFF BC Multi Vendor SSD	P41522-001
HPE 480GB SATA 6G Read Intensive SFF BC PM893 SSD	P46052-001
HPE 960GB SATA 6G Read Intensive SFF BC Multi Vendor SSD	P41523-001
HPE 960GB SATA 6G Read Intensive SFF BC PM893 SSD	P46053-001
HPE 240GB SATA 6G Read Intensive SFF BC Multi Vendor SSD	P41521-001
Mixed Use - 6G SATA - SFF - Solid State Drives	
HPE 3.84TB SATA 6G Mixed Use SFF BC Multi Vendor SSD	P41530-001
HPE 3.84TB SATA 6G Mixed Use SFF BC S4620 SSD	P47492-001
HPE 1.92TB SATA 6G Mixed Use SFF BC Multi Vendor SSD	P41529-001
HPE 1.92TB SATA 6G Mixed Use SFF BC PM897 SSD	P46051-001
HPE 960GB SATA 6G Mixed Use SFF BC Multi Vendor SSD	P41528-001
HPE 960GB SATA 6G Mixed Use SFF BC PM897 SSD	P46050-001
HPE 480GB SATA 6G Mixed Use SFF BC Multi Vendor SSD	P41527-001
HPE 480GB SATA 6G Mixed Use SFF BC S4620 SSD	P47489-001
HPE 480GB SATA 6G Mixed Use SFF BC PM897 SSD	P46049-001

System battery spare part

Customer self repair: **Mandatory**

Description	Spare part number
System battery	319603-001

For more information on the removal and replacement procedures, see: [Removing and replacing the system battery](#)

Server options

Hewlett Packard Enterprise continually improves and changes product parts. For complete and current supported parts information, see the [Hewlett Packard Enterprise PartSurfer website](#).

Item	Description
1	<u>Drive spare parts*</u> • <u>NVMe drive spare parts</u> • <u>SAS drive spare parts</u> • <u>SATA drive spare parts</u>
2	<u>Energy pack spare parts</u>
3	<u>LFF backplane spare parts</u>
4	<u>Chassis Intrusion Detection Switch spare part</u>
5	<u>Power supply unit spare parts</u>
6	<u>Rear serial port interface spare part</u>
7	<u>GPU spare parts</u>
8	<u>Fan spare parts</u>
9	<u>SFF backplane spare parts</u>
10	<u>Systems Insight Display spare parts*</u>
11	<u>HPE NS204i-u Boot Device spare parts*</u>
12	<u>Cable spare parts*</u>

* Not shown

For more information, see [Removal and replacement procedures](#).

Subtopics

- [Energy pack spare parts](#)
- [Backplane spare parts](#)
- [Chassis Intrusion Detection Switch spare part](#)
- [Power supply spare parts](#)
- [Rear serial port interface spare part](#)
- [Accelerator and GPU options spare parts](#)
- [Fan spare parts](#)
- [Systems Insight Display spare parts](#)
- [HPE NS204i-u Boot Device spare parts](#)
- [Cable spare parts](#)

Energy pack spare parts

Subtopics

- [HPE Smart Storage Hybrid Capacitor spare part](#)
- [HPE Smart Storage Battery spare part](#)

HPE Smart Storage Hybrid Capacitor spare part

Customer self repair: mandatory

Description	Spare part number
HPE Smart Storage Hybrid Capacitor, 260mm cable	P07474-001

For more information on the removal and replacement procedures, see: [Removing and replacing an energy pack.](#)

HPE Smart Storage Battery spare part

Customer self repair: **Mandatory**

Description	Spare part number
HPE Smart Storage Battery	878643-001

For more information on the removal and replacement procedures, see: [Removing and replacing an energy pack.](#)

Backplane spare parts

Customer self repair: **Optional**

Description	Spare part number
8SFF U.3 x1 basic backplane	P39781-001
2SFF U.3 x4 SAS/SATA/NVMe UBM3 backplane	P39783-001
8SFF U.3 x 4 premium backplane	P39780-001
4LFF SAS backplane	P23681-001
2SFF stacked U.3 x4 premium backplane	P39782-001
8SFF 2x4 U.3 x1 basic midplane	P39784-001
8SFF U.2 x4 UBM4 backplane	P39785-001
4LFF SAS backplane	P23681-001
12 E.3S 32G x4 UBM5 E3C 2U backplane	P53217-001
2LFF stacked/riser LP backplane	P56490-001

Chassis Intrusion Detection Switch spare part

Customer self repair: **Mandatory**

Description	Spare part number
Chassis Intrusion Detection Switch	P52442-001

For more information on the removal and replacement procedures, see: [Removing and replacing the chassis intrusion detection switch.](#)

Power supply spare parts

Customer self repair: Mandatory

Description	Spare part number
HPE 800W Flex Slot Platinum Hot-plug Low Halogen Power Supply	P39385-001
HPE 1000W Flex Slot Titanium Hot-plug Low Halogen Power Supply	P44412-001
HPE 1600W Flex Slot Platinum Hot-plug Low Halogen Power Supply	P39384-001

For more information on the removal and replacement procedures, see: [Removing and replacing a hot-plug AC power supply](#)

Rear serial port interface spare part

Customer self repair: Mandatory

Description	Spare part number
Rear serial port interface	875571-001

For more information on the removal and replacement procedures, see: [Removing and replacing the serial port](#)

Accelerator and GPU options spare parts

Customer self repair: Optional

Description	Spare part number
NVIDIA A16 64GB PCIe Non-CEC Accelerator for HPE	P48409-001
NVIDIA A100 80GB PCIe Non-CEC Accelerator for HPE	P54869-001

Fan spare parts

Customer self repair: Mandatory

Description	Spare part number
SPS-FAN MOD, STD	P49959-001
SPS-Fan, H/Per, 2U	P49960-001

For more information on the removal and replacement procedures, see: [Removing and replacing a fan](#)

Systems Insight Display spare parts

Customer self repair: Mandatory

Description	Spare part number
SPS-SID Mod	P59964-001

HPE NS204i-u Boot Device spare parts

Customer self repair: Mandatory

Description	Spare part number
Boot device cage assembly	P51341-001
M.2 SSD carrier	P59777-001
480 GB NVMe RI M.2 SV 2280 SSD	P69616-001
Boot device SlimSAS and power cables ¹	P58217-001

¹ This is a miscellaneous cable spare kit; only the cables listed in this table are used in this server.

For more information on the removal and replacement procedures, see: [Removing and replacing a rear NS204i-u boot device](#).

Cable spare parts

Customer self repair: Mandatory

Description	Spare part number
4LFF/8SFF power cables kit (50mm, 240mm, 400mm) Kit includes the following: CA, PWR,4LFF/8SFF,BKPLN-MB,AMP (869825-001) CA, PWR, 1x5 to 2x4, LFF, 240mm (P14341-001) CA, PWR, 1x5 to 2x4, LFF, 400mm (P14342-001) CA, PWR, 1x5 to 2x4 + x, LFF, 400mm (P14343-001) CA, PWR,2x3 to 2x3 50mm (P51574-001)	P58212-001
2LFF + midplane power kit 2x6 Kit includes the following: CA, PWR, 2x6 to 2LFF + MIDTRY (P51575-001) CA, PWR,EDSFF Box 1 + Box 6,AMP (P51577-001) CA, PWR,EDSFF Box 2/3,AMP (P46048-001) CA, extension cable to MLB, G11 (P45618-001)	P58213-001
Cable for ports 11/9/10 TO OCP slots 14/15 Kit includes the following: - CA, MLB OCP4, G11 (P43736-001) - CA, MLB OCP3, G11 (P43735-001) - CA, MLB x8x16 2nd OCP slot, G11 (P43734-001)	P58214-001

Description	Spare part number
FRT SFFX4 TO PRI/SEC TRI-MOD Kit includes the following:	P58215-001
CA, FRT SFFX4 P1-4 TO SEC TRI-MODX4 P1-4 (P51549-001)	
CA, FRT SFFX4 P1/2 TO SEC TRI-MODX4 P1/2 (P51550-001)	
CA, FRT SFFX4 P3/4 TO SEC TRI-MODX4 P3/4 (P51551-001)	
CA, FRT SFFX4 P1-4 TO PRI TRI-MODX4 (P51552-001)	
CA, FRT SFFX4 P1-4 TO PRI TRI-MODX4 P1-4 (P51553-001)	
CA, FRT SFF SPT X2 TO SEC TRI-MOD STR X4 (P51548-001)	
CA, FRT SFF SPTX2 TO PRI/SEC TRI-MOD X4 (P51547-001)	
CA, FRT SFF SPT X2 TO PRI TRI-MOD STR X4 (P14330-001)	
X4 MS-4LFF/PRI/TER/8SFF SAS (P22898-001 and P22899-001)	P24139-001
SATA DVD/MLB 1x13p SLIM (756914-001)	784623-001
Data cables kit: CA, LFF DP CBL (869808-001)	875095-001
CA, Display PORT + USB 2.0 (P14314-001)	
LFF BX1 S100i X6,NS204i-u pwr Kit includes the following:	P58217-001
CA, LFF BOX 1 TO S100i X6 w/ WM (P51578-001)	
CA, X2, TO FLEX1 (P51579-001)	
CA, NS204i-u power 595mm (P54089-001)	
EDSFF/FRT,EDSFF TO PORT Kit includes the following:	P58218-001
CA, BOX 1 2SFF/EDSFF TO Port 9/10 (P51556-001)	
CA, BOX1/3 2SFF/EDSFF TO Port1,8 (P51555-001)	
CA, EDSFF BOX 3 Port 2 TO PORT 11 (P51564-001)	
CA, EDSFF BOX 2 TO Port 2-7 (P53288-001)	
BOX1/3,SFF STR X4 SEC/PRI STR X4 retimer Kit includes the following:	P58219-001
CA, BOX1 SFF STR X4 TO SEC/PRI STR X4 (P51542-001)	
CA, BOX3 SFF STR X4 TO SEC/PRI STR X4 (P51544-001)	
RAR/FRT/MID Kit includes the following:	P58221-001
RAR LFF FO TO TER TRI-MOD STR X1 (P51558-001)	
RAR LFF FO TO OROC1/2 STR X1 (P51561-001)	
LFF BOX 1/4 TO S100i X6 w/ 2LFF (P46047-001)	
FRT LFF FO TO FLEX2/OROC1 STR X1 (P51559-001)	
FRT LFF FO TO PRI/SEC/TER TRI-MODX1 (P51562-001)	
FRT/MID LFF FO TO OROC1 STR X1 (P51560-001)	
FRT/MID LFF TO PRI/SEC/TER TRI-MODX1 (P51563-001)	

Description	Spare part number
FRT SFF BOX1-2-3 To CPU1/2 Kit includes the following: SFF BOX1,2 Port1-4 TO CPU1,2 PORT1-8 (P51543-001) SFF BOX2 P1-4 TO CPU1 3/4 & CPU2 5/6 (P53286-001) SFF BOX 1 Port 1-4 TO CPU1 PORT 1-4 (P53285-001) SFF BOX 3 Port 1-4 TO CPU2 PORT 5-8 (P53287-001)	P58222-001
FRT SFF,NVME B1/2,8SFF Kit includes the following: SFF BOX 3 TO FIO2 (P51545-001) SFF BOX 1/2 Port 1-4 TO OCP1/2 (P51546-001) NVME,B1/2,8SFF,BC to P/Sec PCIe,Str (P22905-001) NVME,B1/2/3,8SFF,BC to Pr/S PCIe,Str (P22904-001)	P58223-001
BOX,RAR/MID,NVME Kit includes the following: Midtray, Prem/Basic-Host Board (P14329-001) NVME,B3,8SFF,BC to Pri PCIe,Str (P22903-001) BOX 6 2SFF TO Port 9 (P51557-001) SFF BOX 7 Port 1 TO OCP1/2 (P51554-001)	P58224-001
PORT 7/8/9/10/11 X4 TER PORT Kit includes the following: PORT 7 STR X4 TO TER PORT 4 STR X4 (P46028-001) PORT 9 STR X4 TO TER PORT 3 STR X4 (P46029-001) PORT 10/11 X4 TO TER PORT 1&3 X4 (P46030-001) PORT 8/10 X4 TO TER PORT 1&3 X4 (P46026-001)	P58225-001
PRT 1/2/3/4/7/8/11 TO PRI/SEC Kit includes the following: PORT 1&2 X4 TO PRI PORT 1&2 X4 (P46031-001) PORT 7&8 X4 TO SEC PORT 1&2 X4 (P46032-001) PORT 11 STRX4 TO SEC PORT 1/2 STRX4 (P46034-001) PORT 3&4 X4 TO SEC PORT 1&2 X4 (P51571-001)	P58226-001
SID	P58227-001
GPU cables kit CBL, PWR, GPU K80 to RISER (869820-001) CBL, PWR, GPU to RISER (869821-001)	875097-001
PWR, GPU, 12P+4S 8P+4S, PCIe,Y (P58422-001)	P59963-001
VBU cable, 28 AWG, 3-pin, PCIe to Controller, power cable (877850-001)	878646-001

Removal and replacement procedures

Subtopics

Safety considerations

Preparation procedures

Removing and replacing the front bezel

Removing and replacing the cable management arm

Removing and replacing the rack rails

Removing and replacing a drive blank

Removing and replacing a hot-plug LFF/SFF/E3.S drive

Removing and replacing a power supply blank

Removing and replacing a hot-plug AC power supply

Removing and replacing the HPE 800 W Flex Slot -48 VDC hot-plug power supply

Removing and replacing an HPE 1600 W Flex Slot -48 VDC hot-plug power supply

Removing and replacing the primary PCIe riser cage

Removing and replacing the secondary and tertiary PCIe riser cage

Removing and replacing the PCIe rear wall blank

Removing and replacing an expansion board

Removing and replacing the PCIe riser board

Removing and replacing an expansion slot blank

Removing and replacing a GPU or accelerator

Removing and replacing fan blanks

Removing and replacing a fan

Removing and replacing the fan cage

Removing and replacing a rear OCP adapter blank

Removing and replacing the rear OCP adapter

Removing and replacing the left chassis ear

Removing and replacing the right chassis ear power switch module

Removing and replacing the LFF universal media bay

Removing and replacing the SFF universal media bay

Removing and replacing the SFF optical drive

Removing and replacing the LFF optical drive

Removing and replacing a front SFF drive cage

Removing and replacing an EDSFF drive backplane

Removing and replacing the 8 SFF drive backplane

Removing and replacing the 2 SFF front drive cage

Removing and replacing the 2 SFF stacked riser cage backplane

Removing and replacing the 2 SFF rear stacked drive backplane

Removing and replacing the 2 LFF riser cage backplane

Removing and replacing the LFF backplane assembly

Removing and replacing a front LFF drive backplane

Removing and replacing the Systems Insight Display

Removing and replacing the serial port

Removing and replacing the chassis intrusion detection switch

Removing and replacing a DIMM

Removing and replacing an energy pack

Removing and replacing a type-o storage controller

Removing and replacing a type-p storage controller

Removing and replacing a rear NS204i-u boot device

Removing and replacing a processor or heatsink

Removing and replacing the direct liquid cooling assembly

Removing and replacing the system battery

Removing and replacing the system board

Safety considerations

Before performing service procedures, review all the safety information.

- [Electrostatic discharge](#)
- [Symbols on equipment](#)
- [Rack warnings and cautions](#)
- [Server warnings and cautions](#)

Subtopics

[Electrostatic discharge](#)

[Symbols on equipment](#)

[Rack warnings and cautions](#)

[Server warnings and cautions](#)

[Rail identification markers](#)

[Rack mounting interfaces](#)

Electrostatic discharge

Be aware of the precautions you must follow when setting up the system or handling components. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the system or component.

To prevent electrostatic damage:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:
 - Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm ± 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
 - Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
 - Use conductive field service tools.
 - Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an authorized reseller install the part.

For more information on static electricity or assistance with product installation, contact an authorized reseller.

Symbols on equipment

The following symbols may be placed on equipment to indicate the presence of potentially hazardous conditions:



This symbol in conjunction with any of the following symbols indicates the presence of a potential hazard. The potential for injury exists if warnings are not observed. Consult your documentation for specific details.

該符號與以下任意符號組合使用，指示存在潛在的危險。如果不遵守警告，可能會造成人身傷害。詳細信息請參閱相關文檔。



This symbol indicates the presence of hazardous energy circuits or electric shock hazards. Refer all servicing to qualified personnel.



WARNING

To reduce the risk of injury from electric shock hazards, do not open this enclosure. Refer all maintenance, upgrades, and servicing to qualified personnel.

此符號表明存在危險電路或觸電的危險。所有維修工作應由具有相關資格的人員來完成。

警告：為了減少觸電造成人身傷害的危險，請不要打開此外殼。所有維護、升級和維修工作都應由具有相關資格的人員來完成。



This symbol indicates the presence of electric shock hazards. The area contains no user or field-serviceable parts. Do not open for any reason.



WARNING

To reduce risk of injury from electric shock hazards, do not open this enclosure.

此符號表明存在觸電的危險。在這一區域內沒有用戶可以現場維修的部件。一定不要打開。警告：為了減少觸電造成人身傷害的危險，請不要打開此外殼。



This symbol on an RJ-45 receptacle indicates a Network Interface Connection.



WARNING

To reduce risk of electric shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.

RJ-45 插孔上的該符號指示網絡接口連接。

警告：為了減少觸電、火災或設備損壞的危險，不要將電話或電信連接設備插入此插孔。



This symbol indicates the presence of a hot surface or hot component. If this surface is contacted, the potential for injury exists.



WARNING

To reduce the risk of injury from a hot component, allow the surface to cool before touching.

此符號表明表面或組件過熱。如果觸摸此表面，可能會造成人身傷害。警告：為了減少因組件過熱而造成人身傷害的危險，應等到表面降溫後再觸摸。




This symbol indicates the presence of a moving fan blade. If the spinning blades are contacted, the potential for injury exists.



WARNING

Hazardous moving parts. Keep away from moving fan blades. To reduce the risk of injury from a hot component, allow the surface to cool before touching.

此符號表明存在運動風扇葉片的危險。如果觸摸旋轉葉片，可能會造成人身傷害。警告：危險的運動部件。請遠離運動風扇刀片。為減少被高溫組件燙傷的危險，應在表面冷卻之後再接觸。

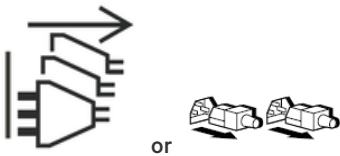

These symbols on power supplies or systems indicate that the equipment is supplied by multiple sources of power.



WARNING

To reduce the risk of injury from electric shock, remove all power cords to completely disconnect power from the system.

電源或系統上的這些符號表明設備由多個電源供電。

警告：為了減少觸電造成人身傷害的危險，應拔下所有電源線插頭，完全斷開系統的電源。



Weight in kg.

Weight in lb.

This symbol indicates that the component exceeds the recommended weight for one individual to handle safely.



WARNING

To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.

此符號表明組件的重量超出了建議值，一個人無法安全取放。

警告：為了減少人身傷害或設備損壞的危險，應遵守當地有關人工取放物品的職業保健與安全規定及準則。



A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. To prevent damage, observe antistatic precautions.

手指或其它導體所釋放的靜電可能損壞主板或其它對靜電敏感的設備。為防止發生損壞，請遵守防靜電預防措施。



These symbols appearing together indicate that the product may have high touch current and that a reliable earth ground must be in place before connecting the equipment.



WARNING

Risk of electric shock due to high touch current. Connect to earth before connecting to supply.



This symbol indicates the presence of a laser device in the product that may exceed Class 1 limits. Refer to the product documentation for more information.

此符號表明在可能會超出 1 類限制的產品中存在激光設備。有關詳細信息，請參閱產品文檔。



This symbol indicates the presence of moving parts inside the product that may present a pinch point if improperly contacted.



WARNING

Hazardous moving parts. Do not insert any tools or any part of your body into the product while it is operating or in any openings.



This symbol indicates the presence of coin cell battery.



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH** of CHILDREN.
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

Rack warnings and cautions

**WARNING**

When all components are removed, the server weighs 16.00 kg (35.27 lbs). When all components are installed, the server can weigh up to 37.00 kg (81.57 lbs).

Before configuring your rack solution, be sure to check the rack manufacturer weight limits and specifications. Failure to do so can result in physical injury or damage to the equipment and the facility.

**WARNING**

The server is heavy. To reduce the risk of personal injury or damage to the equipment, do the following:

- Observe local occupational health and safety requirements and guidelines for manual material handling.
- Get help to lift and stabilize the product during installation or removal, especially when the product is not fastened to the rails. The server weighs more than 16.00 kg (35.27 lbs), so at least two people must lift the server into the server together. An additional person may be required to help align the server if the server is installed higher than chest level.
- Use caution when installing the server in or removing the server from the server.
- Adequately stabilized the server before extending a component outside the server. Extend only one component at a time. A server may become unstable if more than one component is extended.
- Do not stack anything on top of rail-mounted component or use it as a work surface when extended from the rack.

**WARNING**

To reduce the risk of personal injury or damage to the equipment, be sure that:

- The rack has anti-tip measures in place. Such measures include floor-bolting, anti-tip feet, ballast, or a combination as specified by the rack manufacturer and applicable codes.
- The leveling jacks (feet) are extended to the floor.
- The full weight of the rack rests on the leveling jacks (feet).
- The stabilizing feet are attached to the rack if it is a single-rack installation.
- The racks are coupled together in multiple rack installations.

**WARNING**

To reduce the risk of personal injury or equipment damage when unloading a rack:

- At least two people are needed to safely unload the rack from the pallet. An empty 42U rack can weigh as much as 115 kg (253 lb), can stand more than 2.1 m (7 ft) tall, and might become unstable when being moved on its casters.
- Never stand in front of the rack when it is rolling down the ramp from the pallet. Always handle the rack from both sides.

**CAUTION**

Always plan the rack installation so that the heaviest item is on the bottom of the rack. Install the heaviest item first, and continue to populate the rack from the bottom to the top.

**CAUTION**

Before installing the server in a server, be sure to properly scope the limitations of the server. Before proceeding with the installation, consider the following:

- You must fully understand the static and dynamic load carrying capacity of the server and be sure that it can accommodate the weight of the server.
- Be sure sufficient clearance exists for cabling, installation and removal of the server, and movement of the rack doors.

Server warnings and cautions

**WARNING**

To reduce the risk of personal injury, electric shock, or damage to the equipment, disconnect the power cord to remove power from the server. Pressing the Power On/Standby button does not shut off system power completely. Portions of the power supply and some internal circuitry remain active until AC power is removed.

**WARNING**

To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

**WARNING**

To reduce the risk of fire or burns after removing the energy pack:

- Do not disassemble, crush, or puncture the energy pack.
- Do not short external contacts.
- Do not dispose of the energy pack in fire or water.
- Do not expose the energy pack to low air pressure as it might lead to explosion or leakage of flammable liquid or gas.
- Do not expose the energy pack to temperatures higher than 60°C (140°F).

After power is disconnected, battery voltage might still be present for 1s to 160s.

**CAUTION**

Protect the server from power fluctuations and temporary interruptions with a regulating UPS. This device protects the hardware from damage caused by power surges and voltage spikes and keeps the server in operation during a power failure.

**CAUTION**

To prevent damage to electrical components, properly ground the server before beginning any installation, removal, or replacement procedure. Improper grounding can cause electrostatic discharge.

**CAUTION**

To avoid data loss, Hewlett Packard Enterprise recommends that you back up all server data before installing or removing a hardware option, or performing a server maintenance or troubleshooting procedure.



CAUTION

Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.


Rail identification markers

The rack rail option support is dependent on these two factors:


- The height and weight of the chassis as determined by the front- and rear-end server configurations.
- The depth of the chassis as measured from the edge of the front panel (without the front bezel) to the edge of the rear panel.

To ensure compatibility between the rack rails and the server, verify that the rail number labels on the chassis match the ones stamped on the rails.


- Rail number labels on the chassis

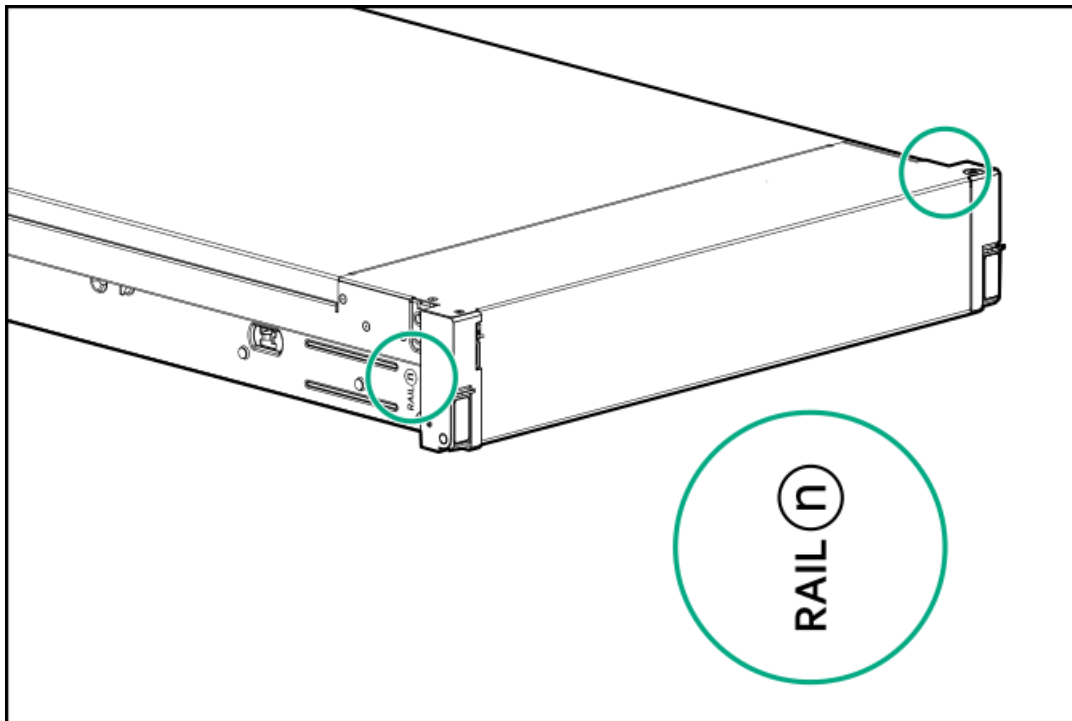

- Rail identifier stamps on the inner rail of the friction rack rail

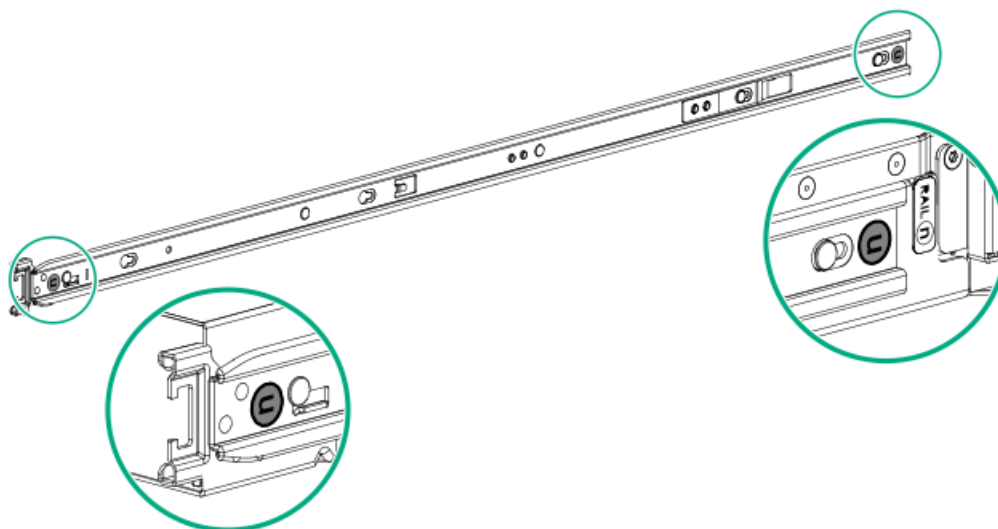


- Rail identifier stamps on the mounting rail of the friction rack rail

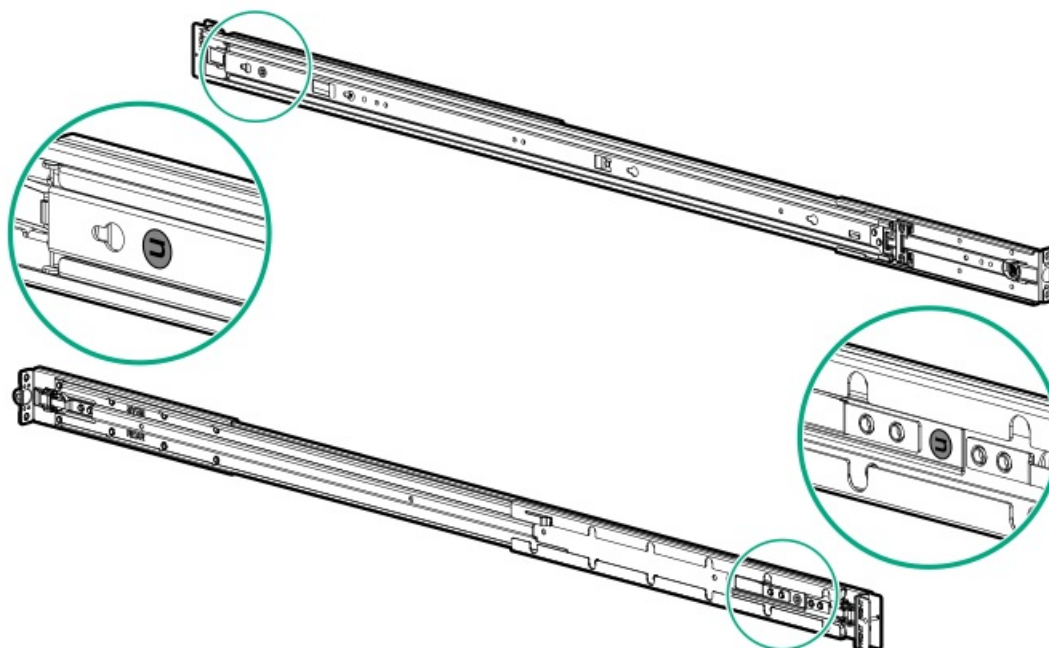

Rack mounting interfaces

The server rails can be installed in a rack that has the following mounting interfaces:

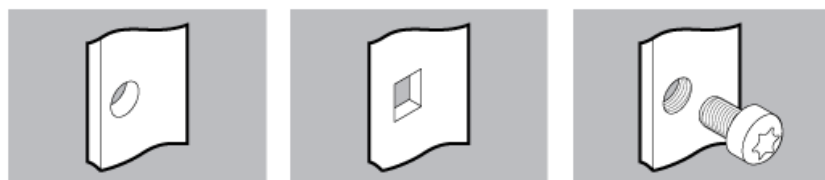

Round-hole

Square-hole

Threaded round-hole

The illustrations used in this procedure show an icon on the upper right corner of the image. This icon indicates the type of mounting interface for which the action illustrated in the image is valid.

Preparation procedures

Prerequisites

Before powering down the server for an upgrade, maintenance, or service procedure, perform a backup of critical server data.

About this task

To access components and perform certain upgrade, maintenance, or service procedure, you must perform one or more of the procedures described in this section.

Subtopics

Server data backup

Accessing the Systems Insight Display

Power down the server

Releasing the cable management arm

Extend the server from the rack

Remove the server from the rack

Remove the access panel

Remove the air baffle

Remove the fan cage

Remove the riser cage

Power up the server

Server data backup

To avoid data loss, make sure to back up all server data before installing or removing a hardware option, performing a server maintenance, or a troubleshooting procedure.

Server data in this context refers to information that may be required to return the system to a normal operating environment after completing a hardware maintenance or troubleshooting procedure. This information may include:

- User data files
- User account names and passwords
- Application settings and passwords
- Component drivers and firmware
- TPM recovery key/password
- BIOS configuration settings—Use the backup and restore function in UEFI System Utilities. For more information, see the UEFI user guide (<https://www.hpe.com/support/hpeuefisystemutilities-quicklinks>).
 - Custom default system settings
 - Security passwords including those required for power-on and BIOS admin access, persistent memory, and Server Configuration Lock (for HPE Trusted Supply Chain servers)
 - Server serial number and the product ID
- iLO-related data—Use the iLO backup and restore function. For more information, see the iLO user guide (<https://www.hpe.com/support/hpeilodocs-quicklinks>).
 - iLO license
 - Customer iLO user name, password, and DNS name

- iLO configuration settings


Accessing the Systems Insight Display

About this task


The Systems Insight Display is only supported on SFF models.

Procedure

1. Press and release the panel.

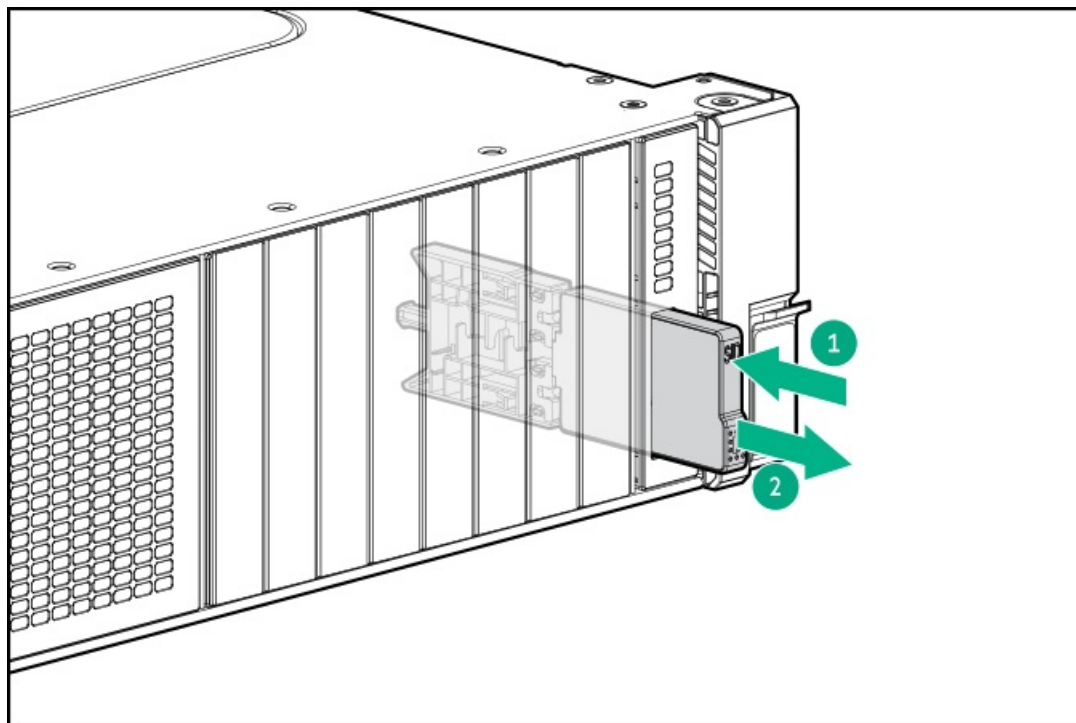

2. After the display fully ejects, rotate the display to view the LEDs.

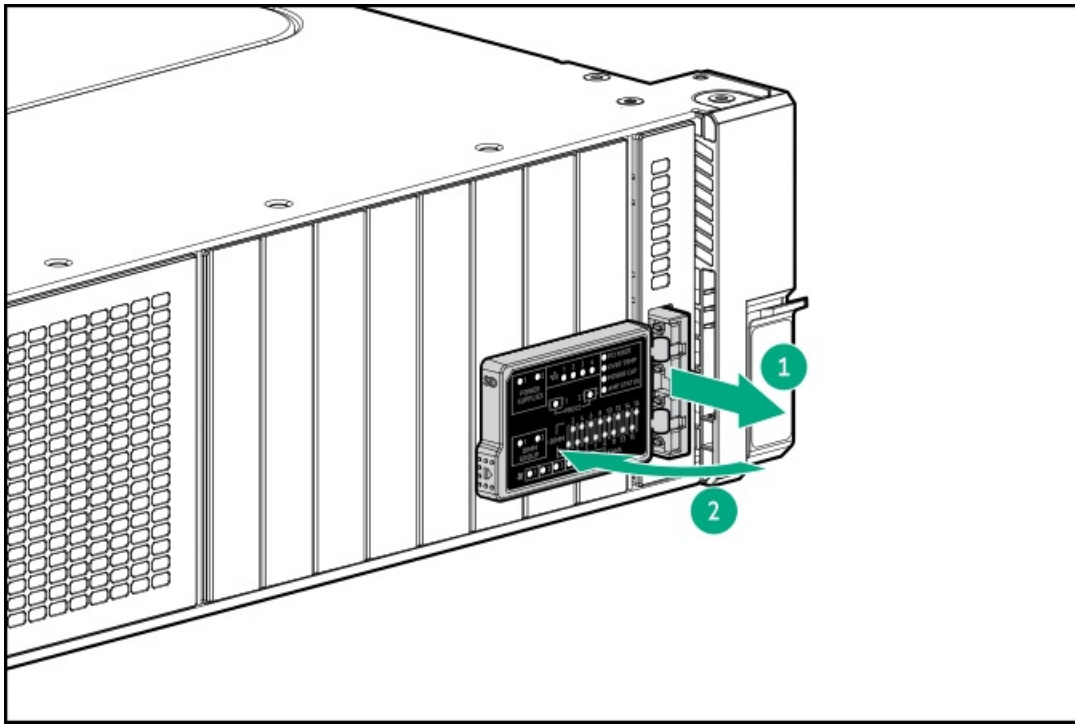

Power down the server

Before powering down the server for any upgrade or maintenance procedures, perform a backup of critical server data and programs.



IMPORTANT

When the server is in standby mode, auxiliary power is still being provided to the system.

To power down the server, use one of the following methods:


- Press and release the Power On/Standby button.
This method activates a controlled shutdown of applications and the OS before the server enters standby mode. It can also activate a shutdown behavior governed by an OS configuration or policy.
- Press and hold the Power On/Standby button for more than 4 seconds to force the server to enter standby mode.
This method forces the server to enter standby mode without properly exiting applications and the OS. If an application stops responding, you can use this method to force a shutdown.
- Use a virtual power button selection through iLO.
This method initiates a controlled remote shutdown of applications and the OS before the server enters standby mode.

Before proceeding, verify that the server is in standby mode by observing that the system power LED is amber.

Releasing the cable management arm

Results

Release the cable management arm and then swing the arm away from the rack.

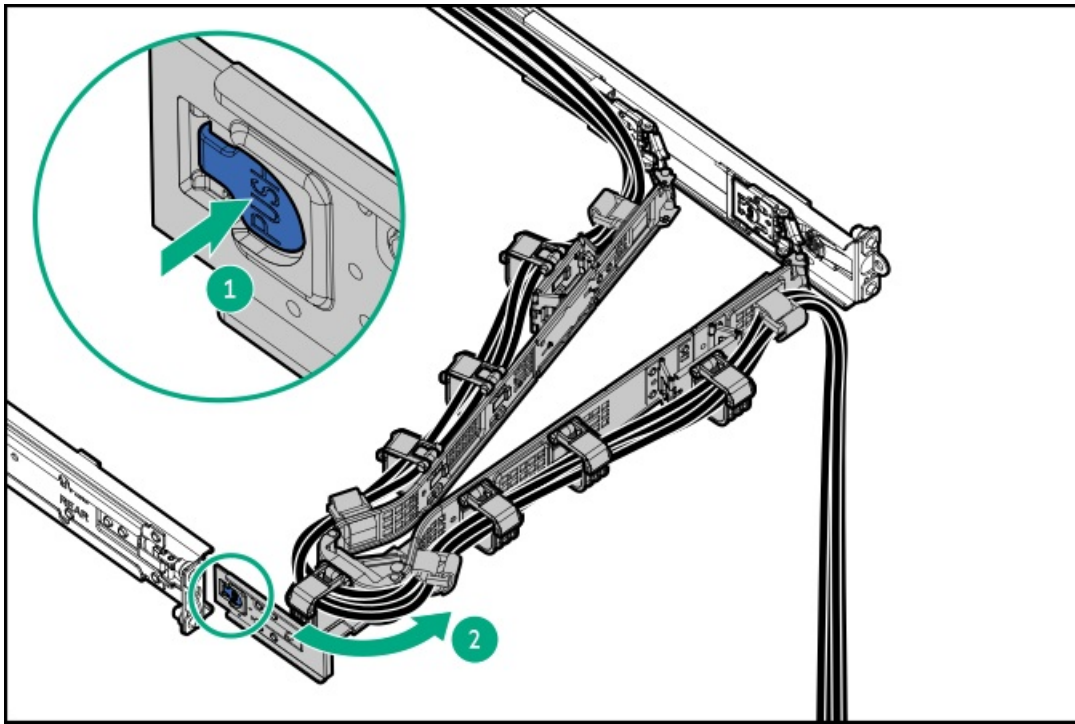

Extend the server from the rack

About this task




WARNING

To reduce the risk of personal injury or equipment damage, be sure that the rack is adequately stabilized before extending anything from the rack.

Procedure

1. Pull down the quick release levers on each side of the server.
2. If needed, use a T-25 Torx screwdriver to loosen the shipping screws.

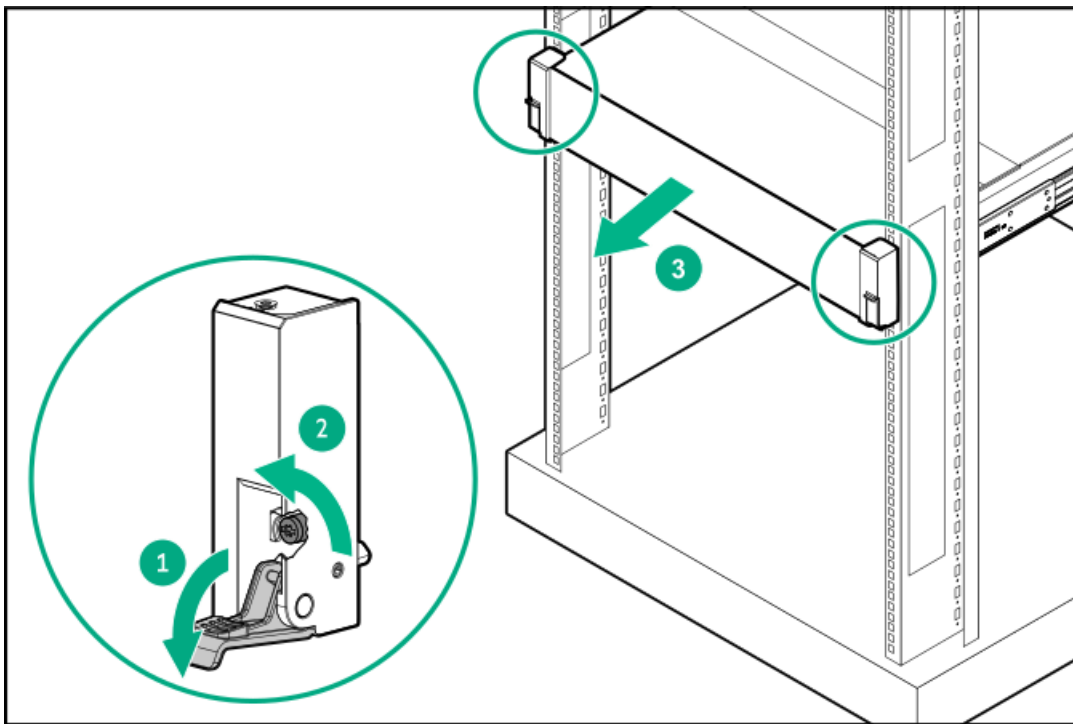


3. Extend the server from the rack.



WARNING

To reduce the risk of personal injury, be careful when pressing the server rail-release latches. The inner rails could pinch your fingers.

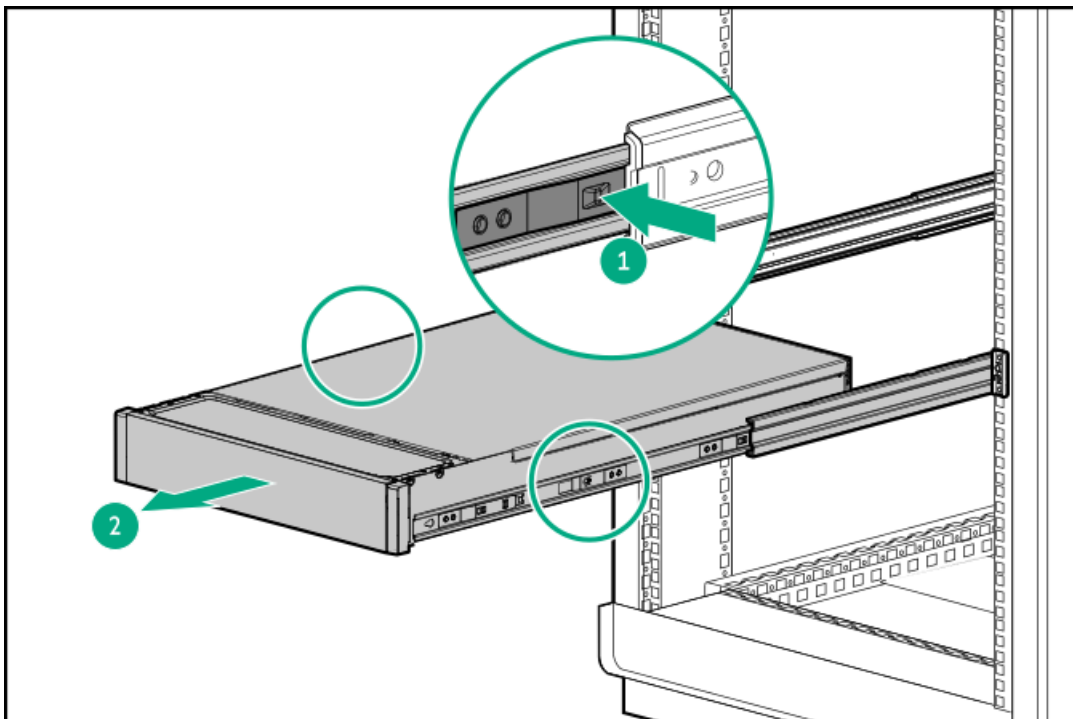

Remove the server from the rack

Prerequisites


- Before you perform this procedure, review the:
 - [Rack warnings and cautions](#)
 - [Server warnings and cautions](#)
- T-25 Torx screwdriver

About this task

To remove the server:

Procedure

1. [Power down the server.](#)
2. Disconnect the rear cabling.
3. [Extend the server from the rack.](#)
4. Release the rail latches and remove the server from the rack.

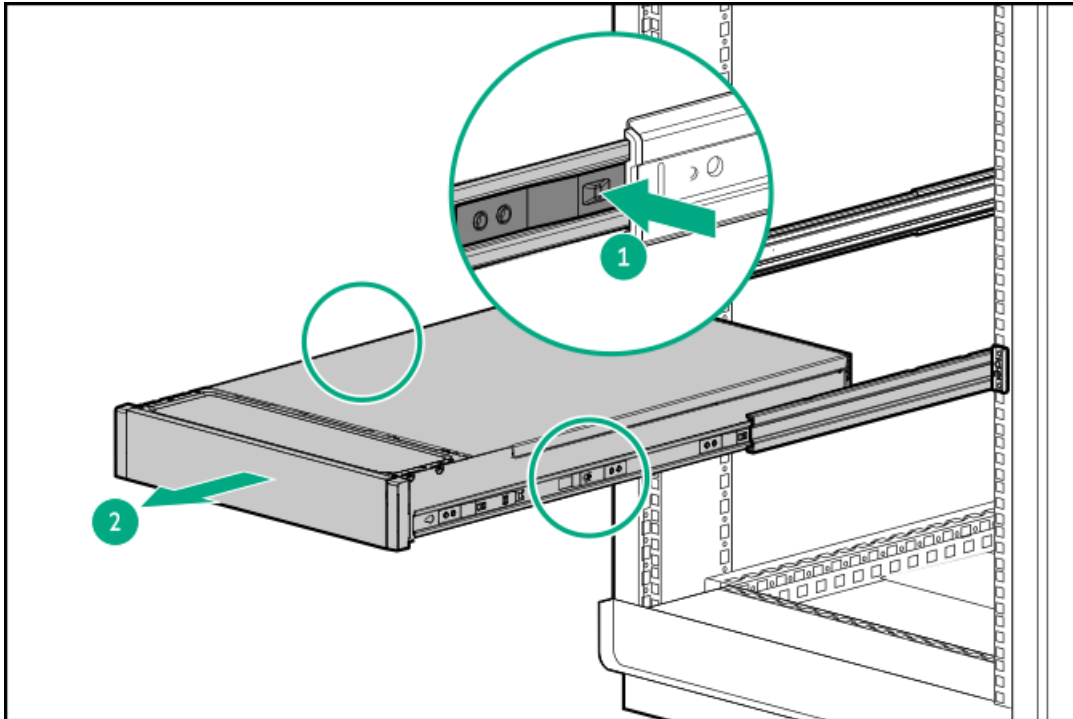

5. Place the server on a sturdy, level surface.

Remove the access panel

Prerequisites

If the access panel is locked, you might need a T-15 Torx screwdriver or small slotted screwdriver to unlock it.

About this task



WARNING

To reduce the risk of personal injury from hot surfaces, allow the drives, power supplies, and internal system components to cool before touching them.




CAUTION

Do not operate the chassis for long periods with the access panel open or removed. Operating the chassis in this manner results in improper airflow and improper cooling that can lead to thermal damage.

Procedure

1. Power down the server.
2. If installed, release the cable management arm.
3. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
4. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
5. If the latch is locked, use a T-15 Torx screwdriver or small slotted screwdriver to unlock it. Open the latch, slide the access panel to the rear of the chassis, and remove the access panel.

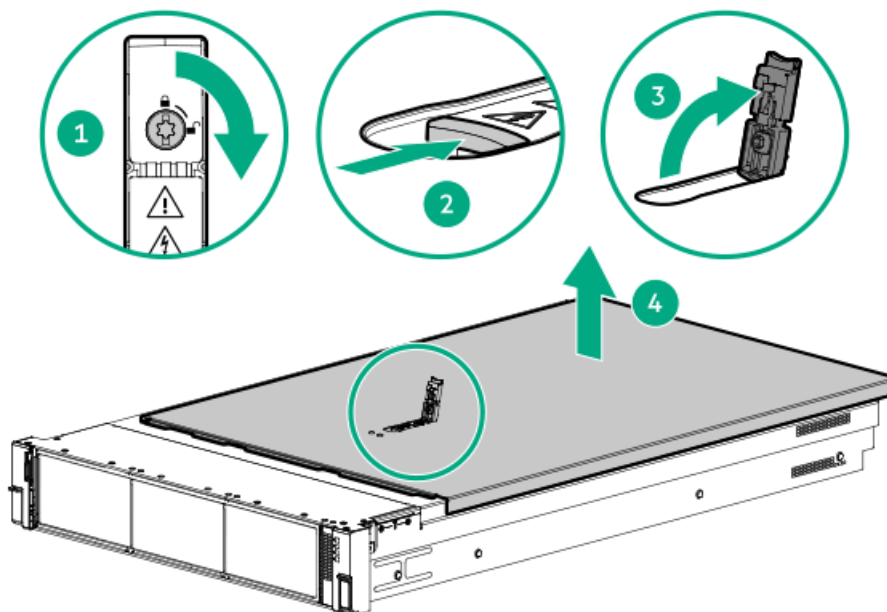

Remove the air baffle

About this task



CAUTION

For proper cooling, do not operate the server without the access panel, baffles, expansion slot covers, or blanks installed. If the server supports hot-plug components, minimize the amount of time the access panel is open.

To remove the component:

Procedure


1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Extend the server from the rack
4. Remove the access panel.



CAUTION

Do not detach the cable that connects the battery pack to the cache module. Detaching the cable causes any unsaved data in the cache module to be lost.

5. Remove the air baffle.

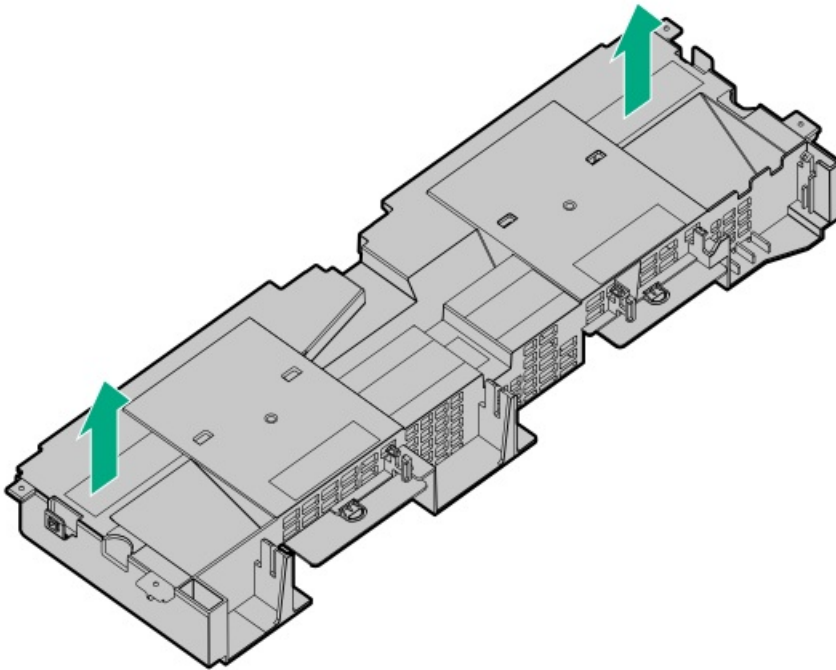

Remove the fan cage

About this task



CAUTION

Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.




IMPORTANT

For optimum cooling, install fans in all primary fan locations.

Procedure

1. Power down the server.
2. Remove all power:
 - Disconnect each power cord from the power source.
 - Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the fan cage.

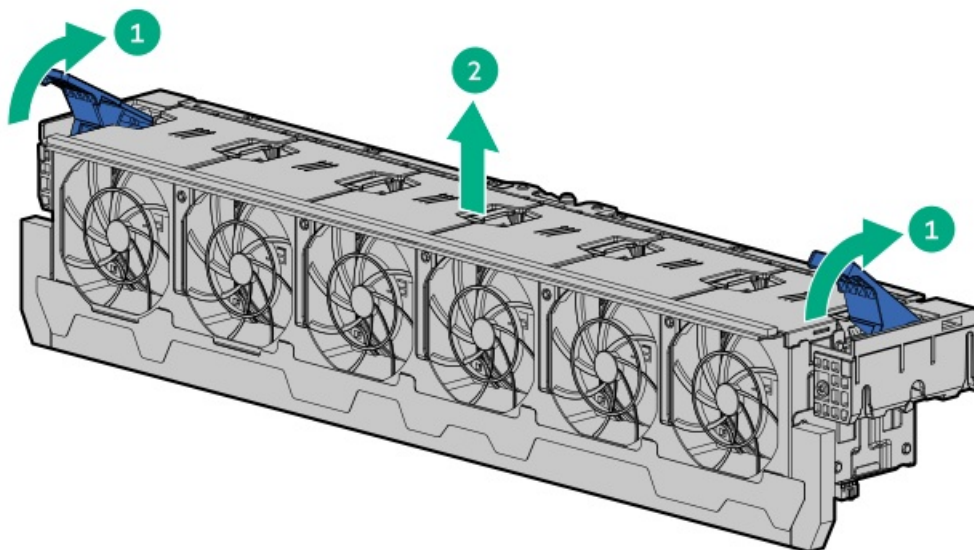

Remove the riser cage

About this task




CAUTION

To prevent damage to the server or expansion boards, power down the server and remove all AC power cords before removing or installing the PCI riser cage.


Procedure

1. Power down the server.

2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the riser cage:
 - Primary and secondary riser cages

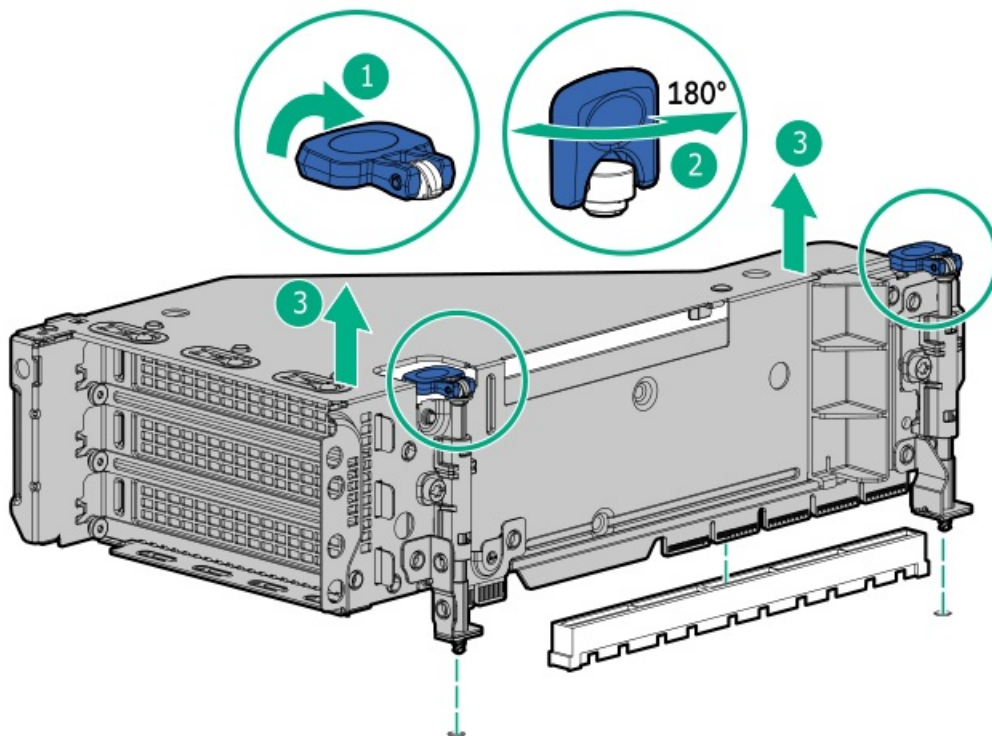

- Tertiary riser cage

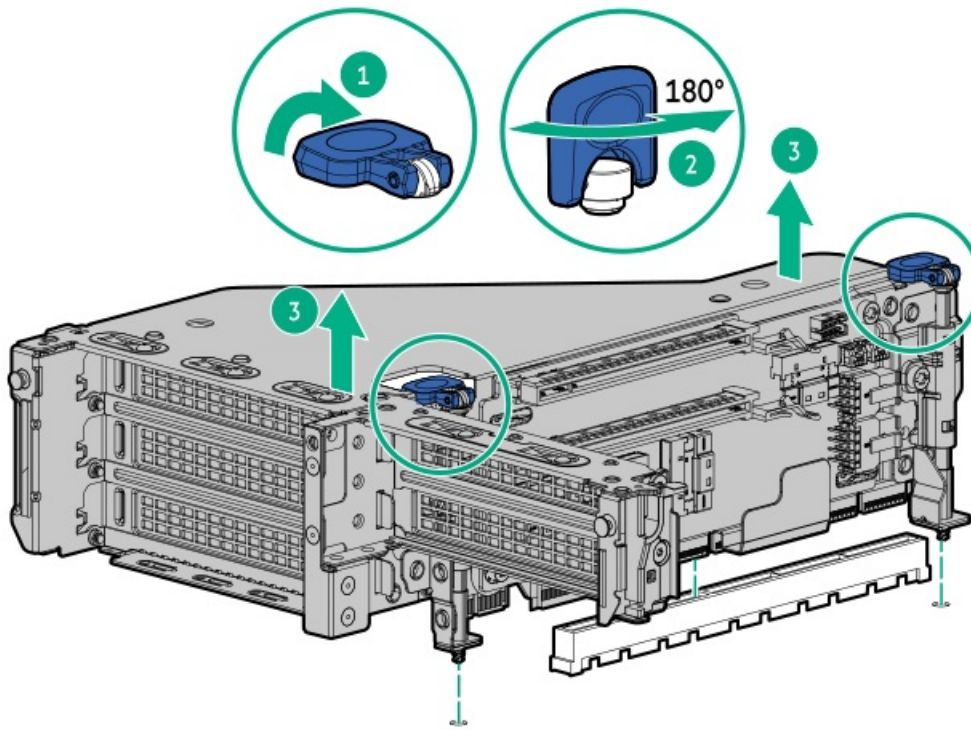

Power up the server

Procedure


- Press the Power On/Standby button.
- Use the virtual power button through iLO.

Removing and replacing the front bezel


About this task

Procedure

1. If installed, remove the Kensington security lock.

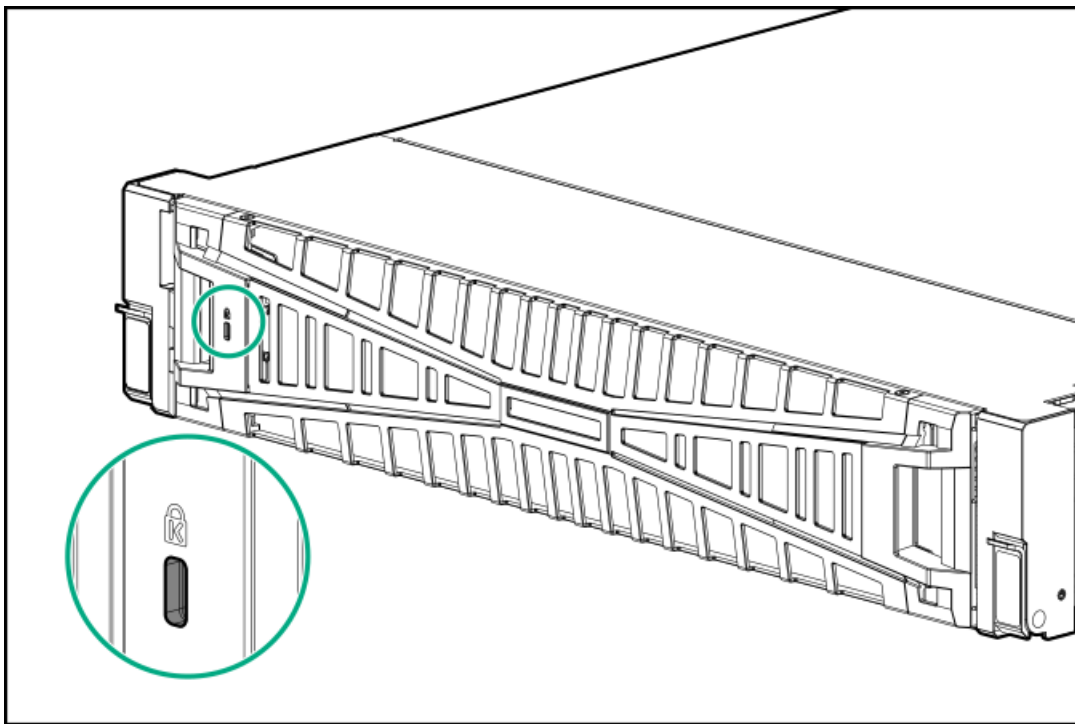

2. Remove the bezel.

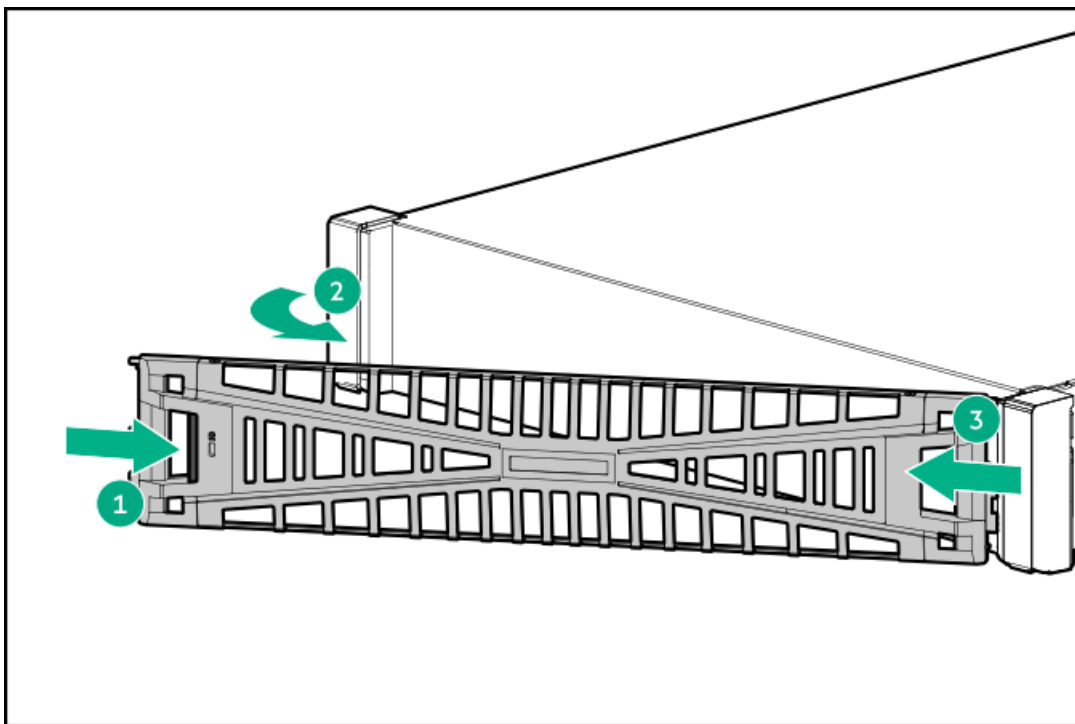

Results

To replace the component, reverse the removal procedure.

Removing and replacing the cable management arm

About this task




CAUTION


Support the CMA during the removal and replacement procedures. Do not allow the CMA to hang by its own weight during the procedure.

Procedure


1. Open the cable clamps.

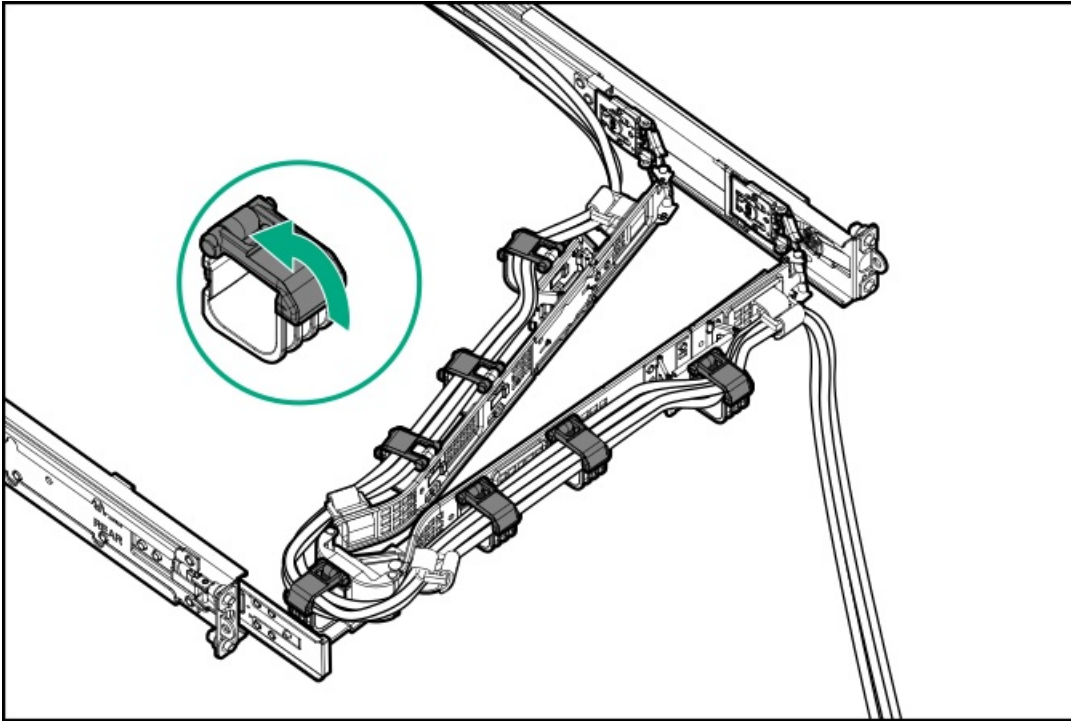

2. (Optional) If your CMA has cable straps, unwrap the straps.

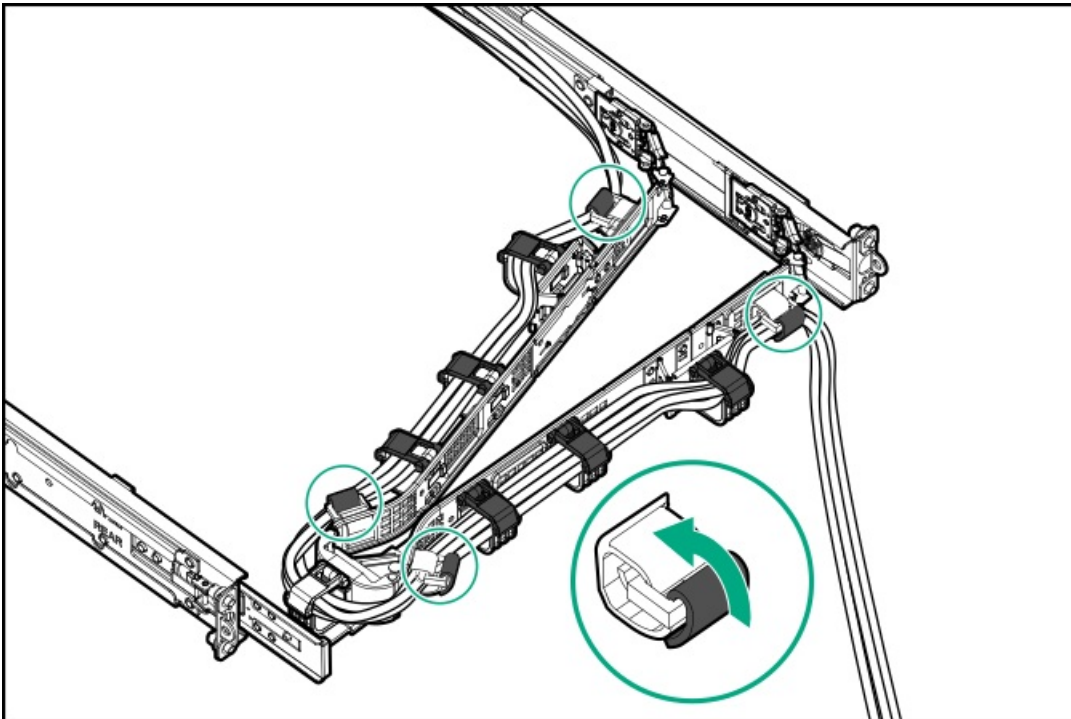


3. Remove the peripheral cables and power cords from the CMA.

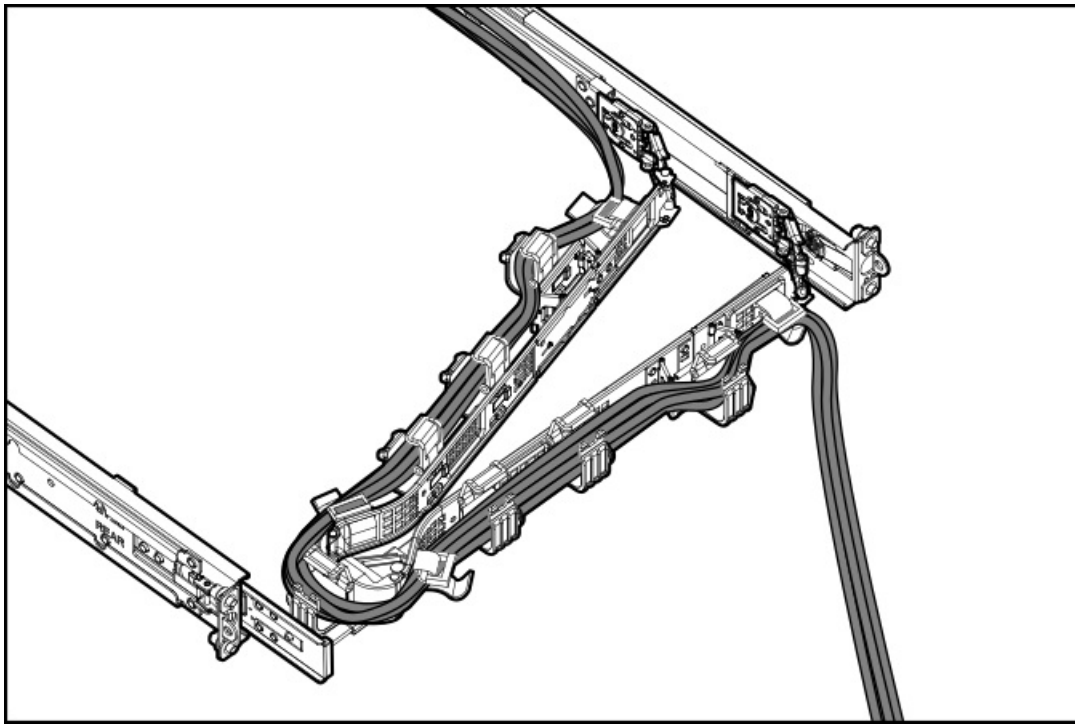

4. Remove the cable management arm:

- a. Press and hold the blue **PUSH** button on the retention bracket.
- b. Swing the arm away from the mounting rail.
- c. Press and hold the blue **PUSH** buttons on the outer and inner tabs and detach from the server rails.

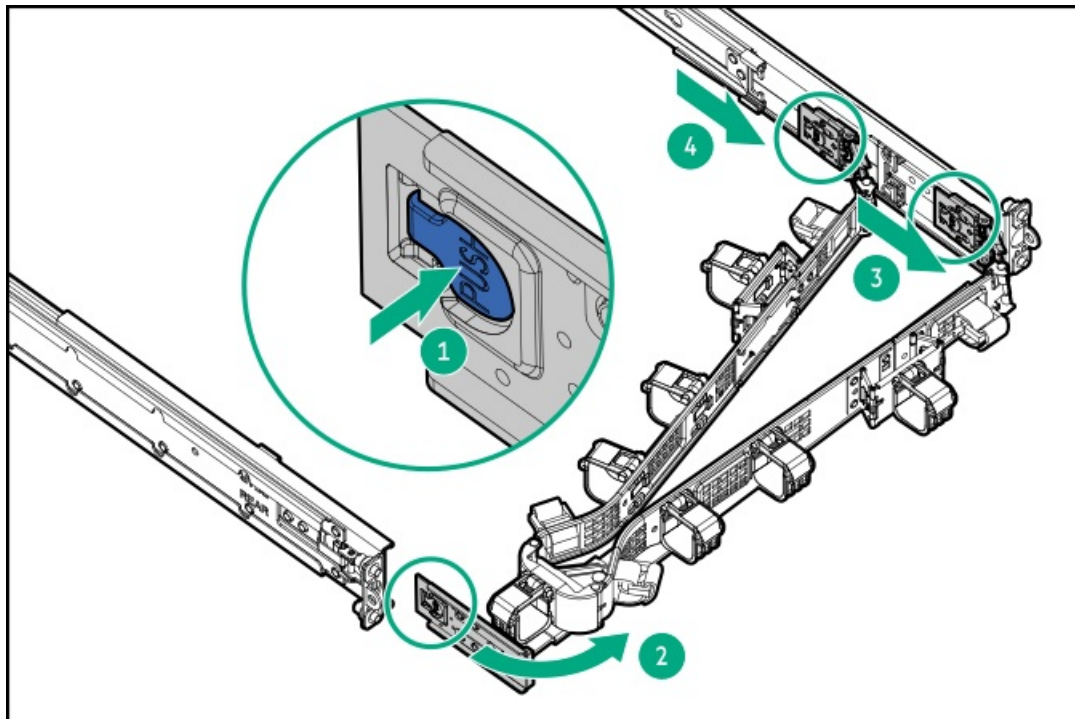

Results


The removal procedure is complete. To replace the component, reverse this procedure.

Removing and replacing the rack rails


About this task

Procedure


1. Remove the cable management arm.
2. Power down the server.
3. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
4. Disconnect all peripheral cables from the server.
5. Remove the server from the rack.
6. Place the server on a flat, level work surface.
7. Remove the sliding rails.

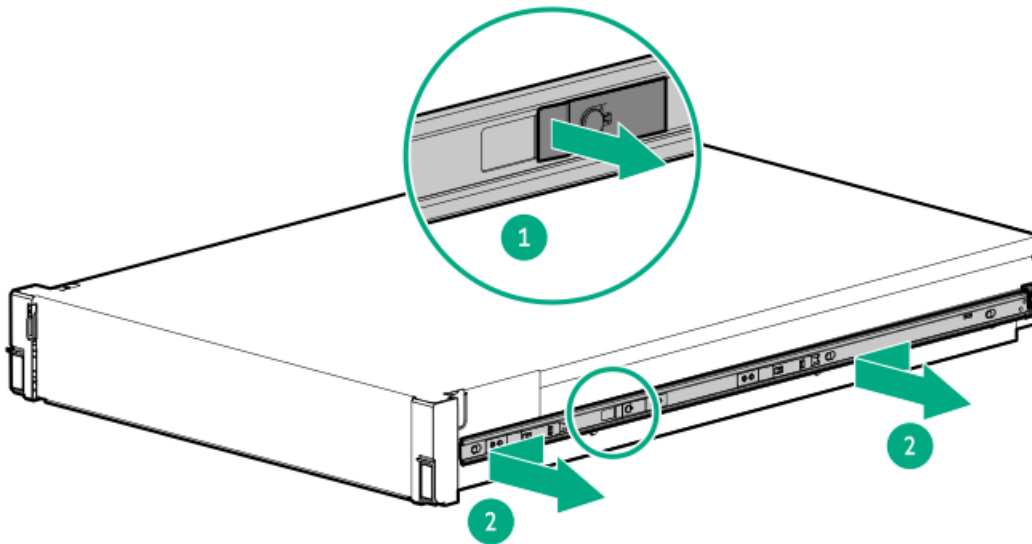

8. Remove the rack rails.
 - a. For threaded-hole racks, first remove the screws:

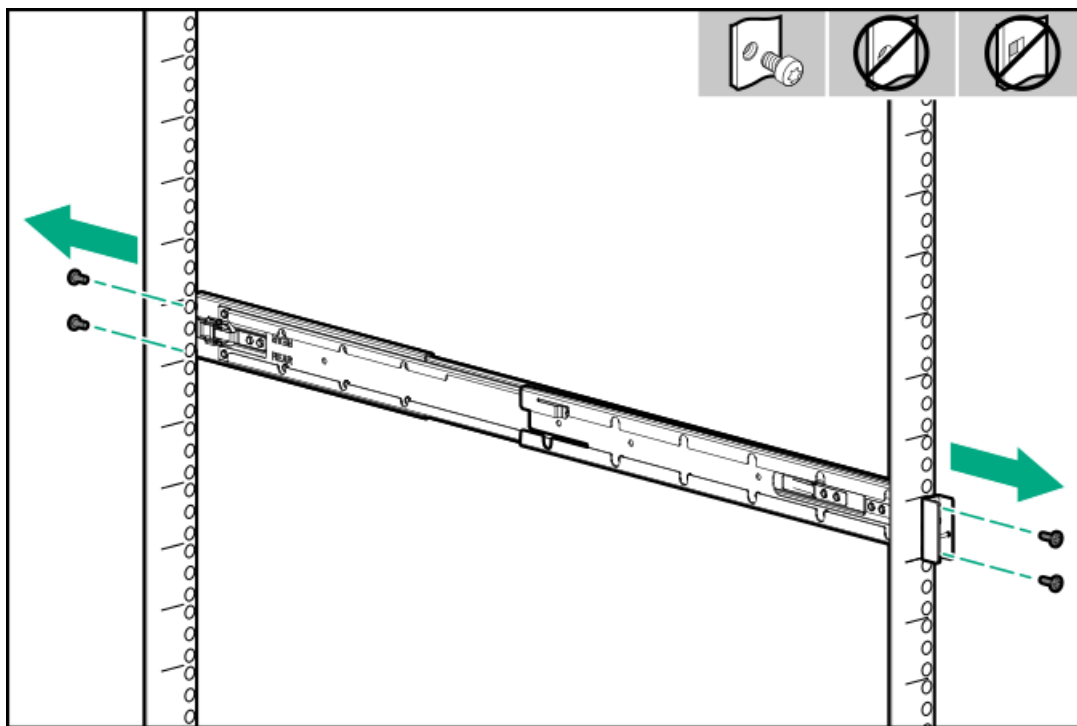

b. Remove the rack rail.

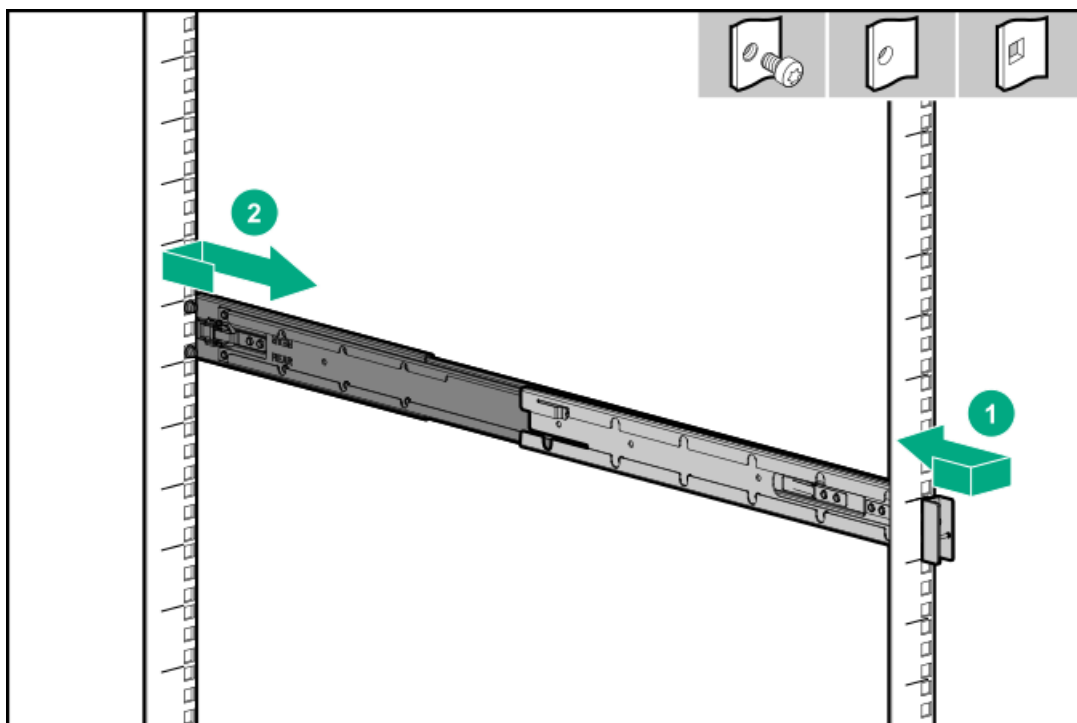

c. Repeat steps to remove the other rack rail.

Results

To replace the component, reverse the removal procedure.

Removing and replacing a drive blank

About this task




CAUTION


To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

Procedure


1. If installed, remove the front bezel.
2. Remove the drive blank.
 - EDSFF drive blank

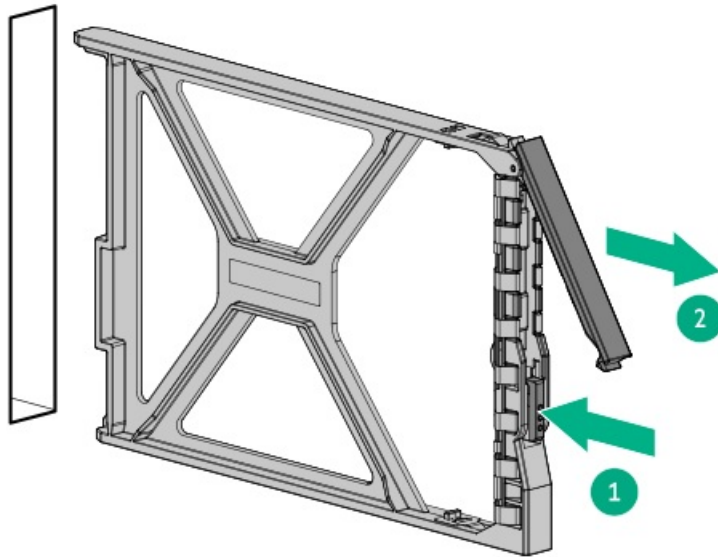

- SFF drive blank

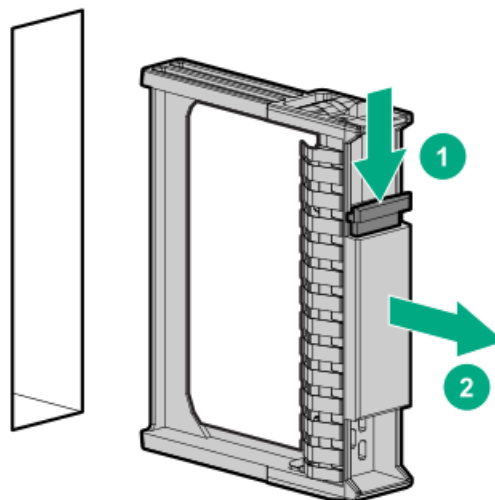

- LFF drive blank

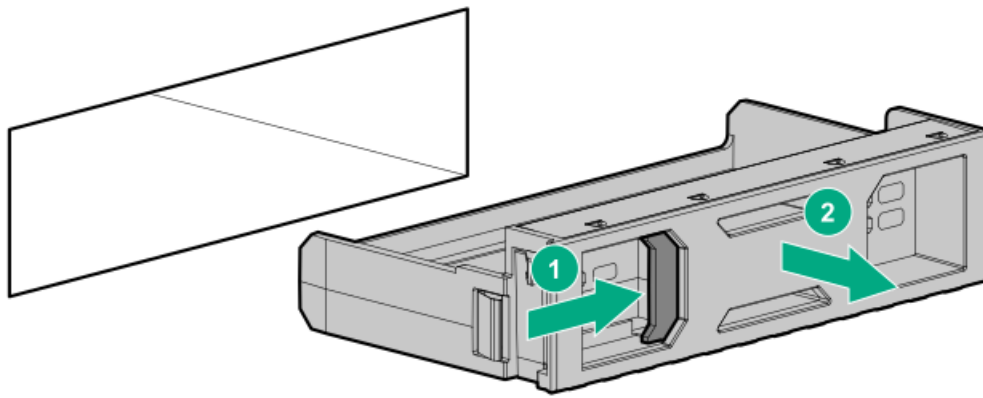

Results

To replace the component, reverse the removal procedure.

Removing and replacing a hot-plug LFF/SFF/E3.S drive

About this task

- E3.S drive

https://sketchfab.com/models/ad1a6368534a4773a4891013bd6838aa/embed?ui_infos=0&ui_watermark=0&ui_help=0&ui_vr=0&ui_settings=0&ui_inspector=0&ui_hint=2&ui_color=01a982&ui_theme=dark&autostart=1&camera=0

- SFF drive

https://sketchfab.com/models/1458622c15fa44c7bb9e74e10c02994d/embed?ui_infos=0&ui_watermark=0&ui_help=0&ui_vr=0&ui_settings=0&ui_inspector=0&ui_hint=2&ui_color=01a982&ui_theme=dark&autostart=1&camera=0

- LFF drive

https://sketchfab.com/models/fe114b46b4e54307bbb7c8e512bdcdbd0/embed?ui_infos=0&ui_watermark=0&ui_help=0&ui_vr=0&ui_settings=0&ui_inspector=0&ui_hint=2&ui_color=01a982&ui_theme=dark&autostart=1&camera=0



CAUTION

A discharge of static electricity from a finger or other conductor might damage system boards or other static-sensitive devices. To prevent damage, observe antistatic precautions.



CAUTION

To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

Procedure


1. Back up all server data.
2. If installed, remove the front bezel.

3. Observe the drive LED status and determine if the drive can be removed.


- LFF/SFF drive
- E3.S drive

4. Remove the drive.


- E3.S drive

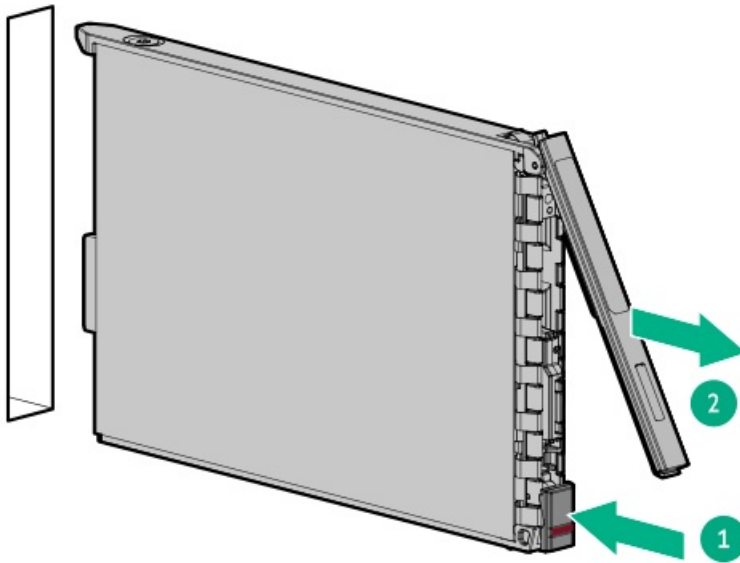

- SFF drive

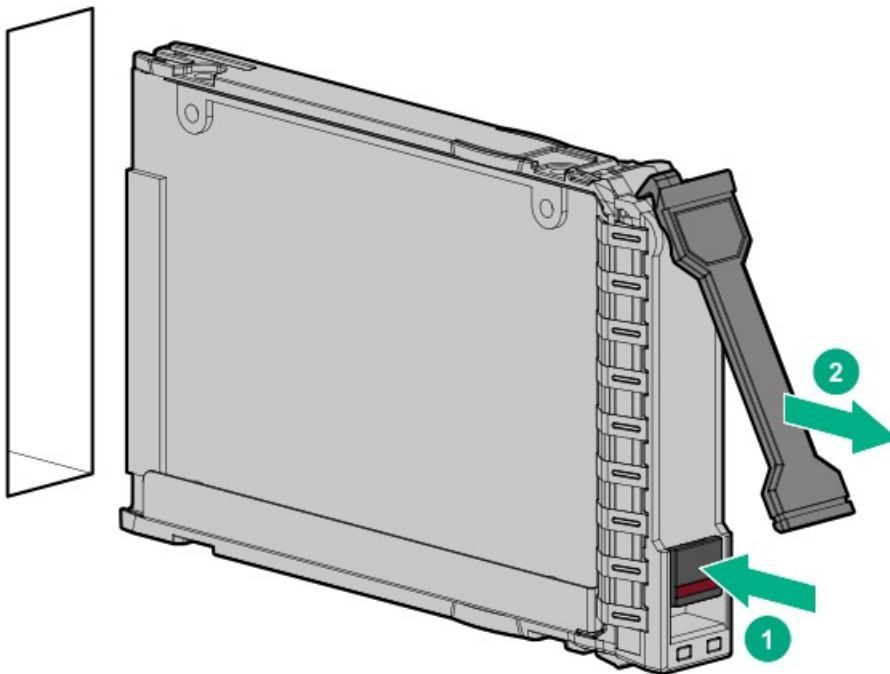

- LFF drive

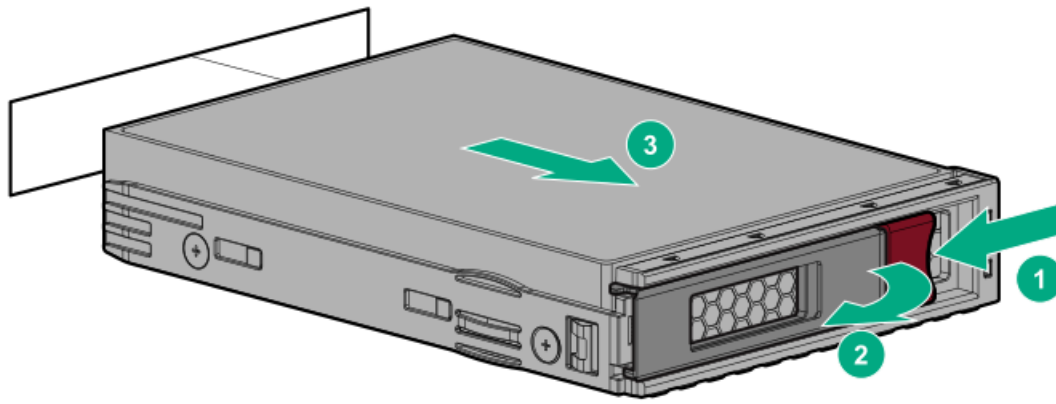

Results

The removal procedure is complete. To replace the component, reverse this procedure.

Removing and replacing a power supply blank

About this task

https://support.hpe.com/hpesc/public/videoDisplay?videoid=vp5g00005336en_us&noframe



WARNING

To reduce the risk of personal injury from hot surfaces, allow the power supply, power supply blank, or dual slot power supply adapter to cool before touching it.




CAUTION

To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.

Procedure

1. Remove the power supply blank.

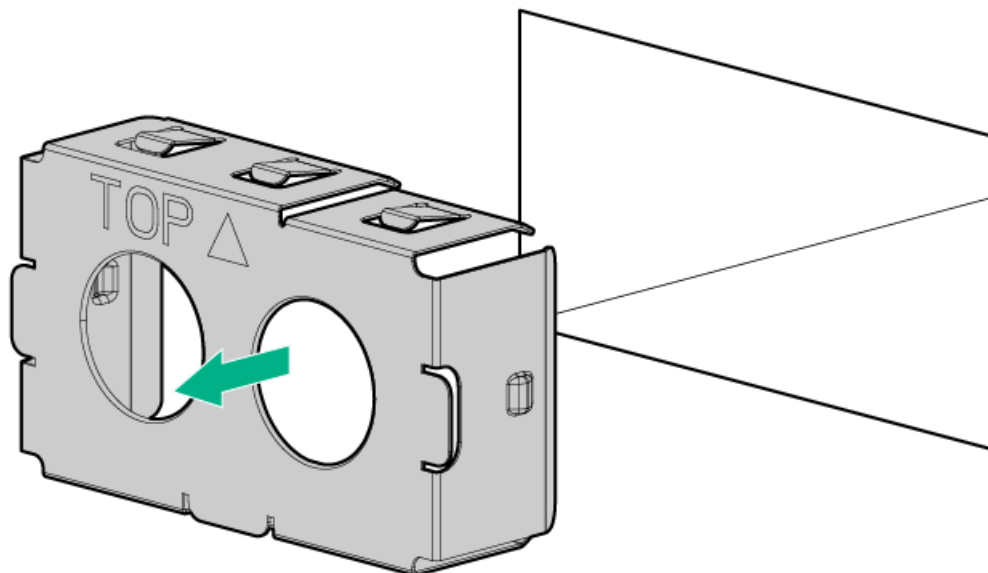

2. Immediately install the replacement power supply blank spare.

Removing and replacing a hot-plug AC power supply

About this task

https://support.hpe.com/hpesc/public/videoDisplay?videoid=vpqg00005323en_us&noiframe



WARNING

To reduce the risk of personal injury, fire, or damage to the equipment, do not overload the AC supply branch circuit that provides power to the rack. Consult the electrical authority having jurisdiction over wiring and installation requirements of your facility.



WARNING

To reduce the risk of personal injury from hot surfaces, allow the drives, power supplies, and internal system components to cool before touching them.



CAUTION

To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause electrostatic discharge.




CAUTION

To prevent improper cooling and thermal damage, do not operate the server or the enclosure unless all drive and device bays are populated with either a component or a blank.


Procedure

1. If installed, release the cable management arm.
2. If the server is using a single power supply only, remove all power from the server:
 - a. Back up all server data.


- b. Power down the server.
 - c. Disconnect all peripheral cables from the server.
3. Release the power cord from the strain relief strap.

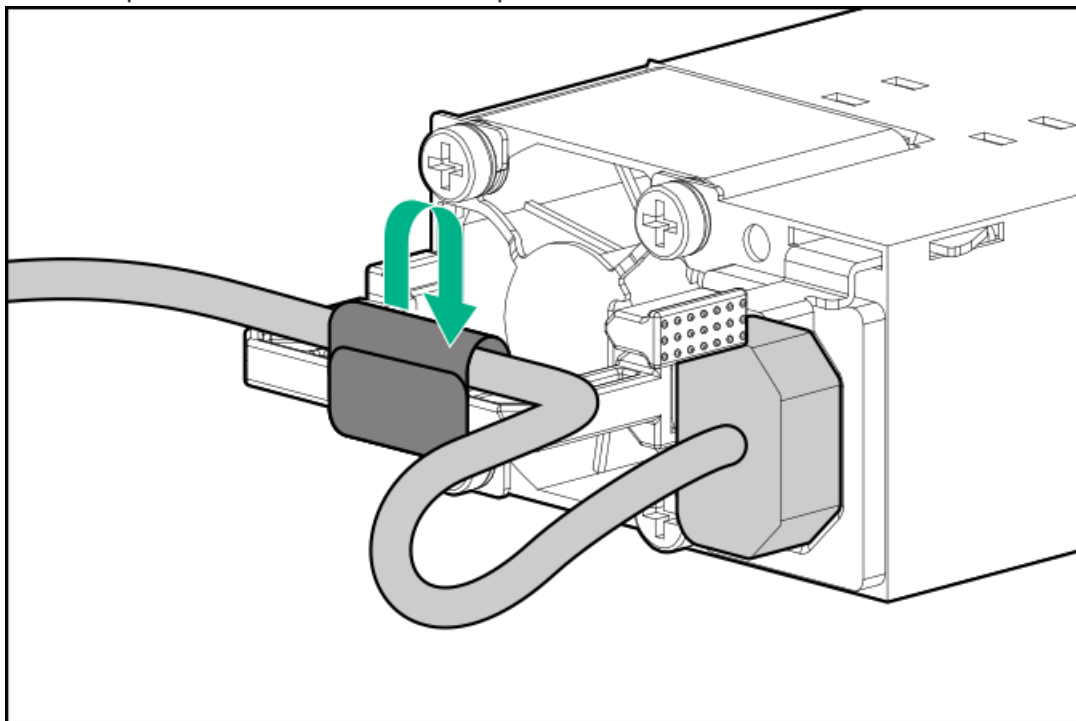

4. Disconnect the power cord from the power supply.

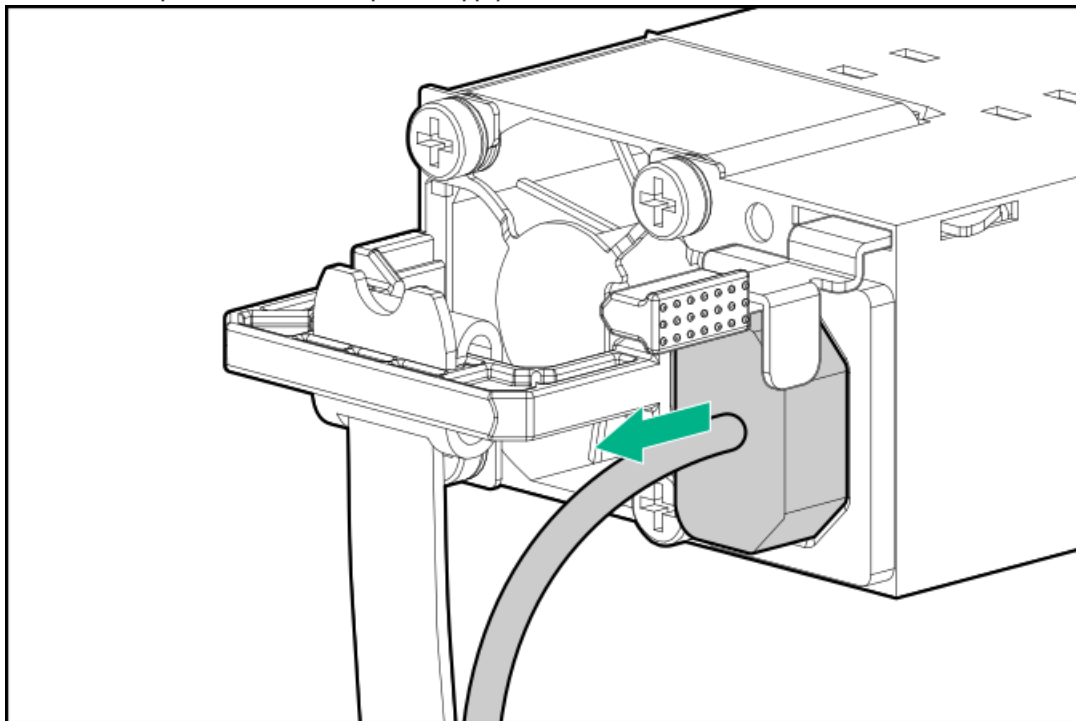

5. Remove the power supply.

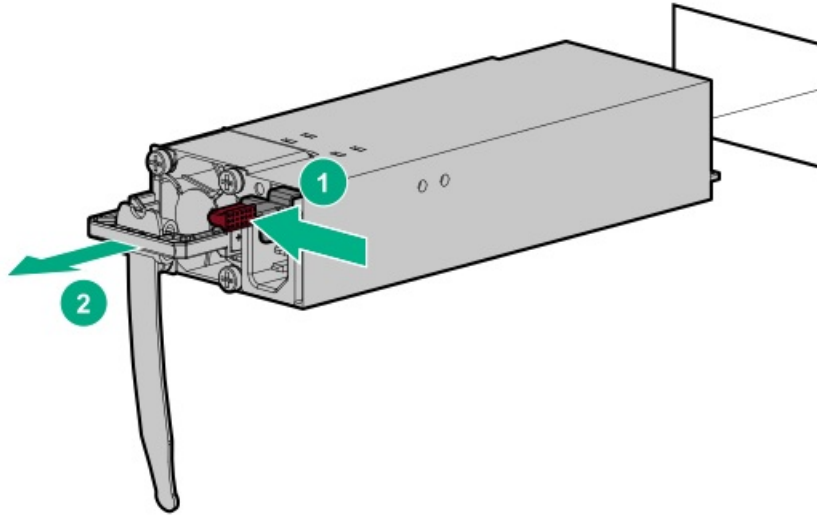

Results

To replace the component, reverse the removal procedure.

Removing and replacing the HPE 800 W Flex Slot -48 VDC hot-plug power supply

Prerequisites

Before you perform this procedure, make sure that you have the following items:

- No. 1 Phillips screwdriver
- If you are replacing the factory installed ground lug, use the KST RNB5-5 crimp terminal ring or equivalent. Use an M5-0.80 x 8 screw to attach the ground lug to the power supply.

About this task




WARNING

To reduce the risk of electric shock, fire, and damage to the equipment, you must install this product in accordance with the following guidelines:


- The HPE 800 W Flex Slot -48 VDC hot-plug power supply is intended only for installation in servers located in a restricted access location.
- The HPE 800 W Flex Slot -48 VDC hot-plug power supply is not intended for direct connection to the DC supply branch circuit. Only connect this power supply to a power distribution unit (PDU) that provides an independent overcurrent-protected output for each DC power supply. Each output overcurrent-protected device in the PDU must be suitable for interrupting fault current available from the DC power source and must be rated no more than 30 A.
- The PDU output must have a shut-off switch or a circuit breaker to disconnect power for each power supply. To completely remove power from the power supply, disconnect power at the PDU. Disconnect the power for each power supply, if there are multiple power supplies.
- In accordance with applicable national requirements for Information Technology Equipment and Telecommunications Equipment, this power supply only connects to DC power sources that are classified as SELV or TNV. Generally, these requirements are based on the International Standard for Information Technology Equipment, IEC 60950-1/IEC 62368-1. In accordance with local and regional electric codes and regulations, the DC source must have one pole (Neutral/Return) reliably connected to earth ground.
- You must connect the power supply ground screw located on the front of the power supply to a suitable ground (earth) terminal. In accordance with local and regional electric codes and regulations, this terminal must be connected to a suitable building ground (earth) terminal. Do not rely on the rack or cabinet chassis to provide adequate ground (earth) continuity.

Procedure


1. If installed, release the cable management arm.
2. If the server is using a single power supply only, remove all power from the server:
 - a. Back up all server data.
 - b. Power down the server.
 - c. Disconnect all peripheral cables from the server.
3. Release the power cord, wires, and/or cables from the strain relief strap.
4. To access the ground cable screw, slide the power supply out of the bay.

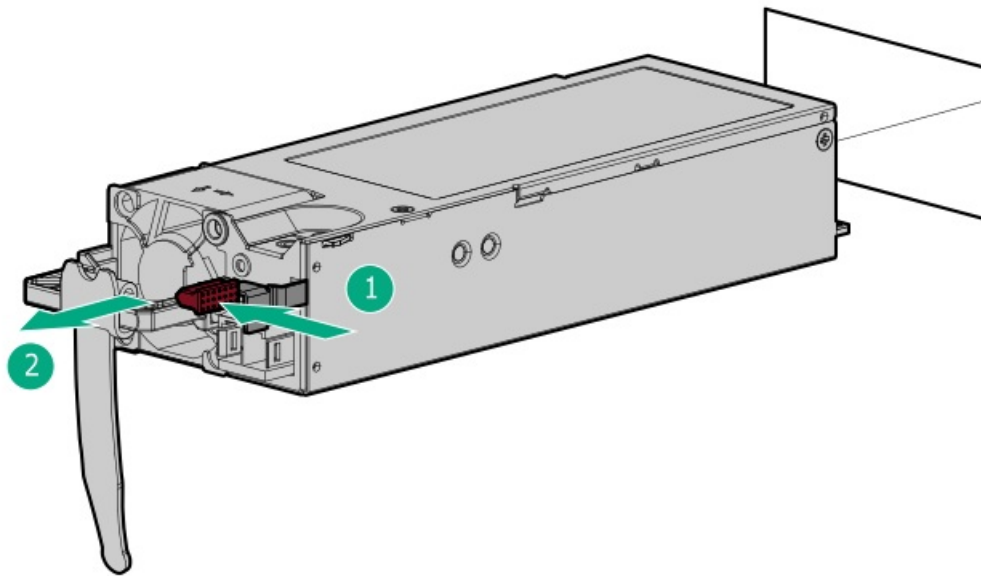

5. Detach the ground (earthed) cable from the power supply.

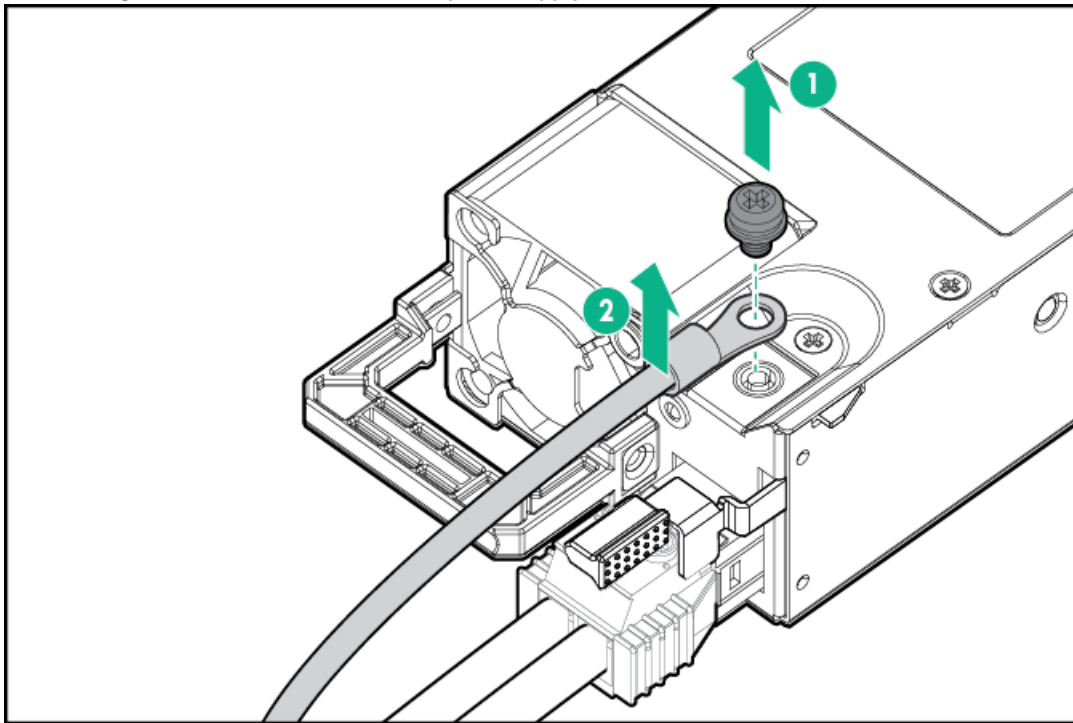

6. Remove the terminal block connector from the power supply.

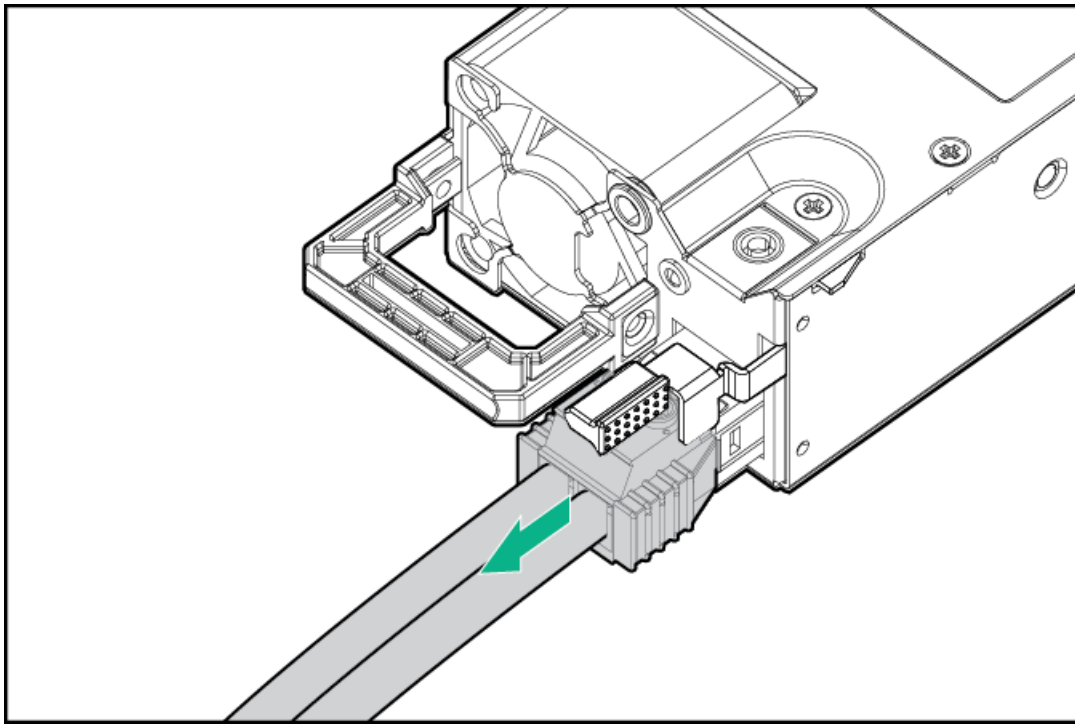

To replace the component, reverse the removal procedure.

Removing and replacing an HPE 1600 W Flex Slot -48 VDC hot-plug power supply

Prerequisites

Before you perform this procedure, make sure that you have a No. 1 Phillips screwdriver.

About this task




WARNING

To reduce the risk of electric shock, fire, and damage to the equipment, you must install this product in accordance with the following guidelines:


- The HPE 1600 W Flex Slot -48 VDC hot-plug power supply is intended only for installation in servers located in a restricted access location.
- The HPE 1600 W Flex Slot -48 VDC hot-plug power supply is not intended for direct connection to the DC supply branch circuit. Only connect this power supply to a power distribution unit (PDU) that provides an independent overcurrent-protected output for each DC power supply. Each output overcurrent-protected device in the PDU must be suitable for interrupting fault current available from the DC power source and must be rated no more than 45 A.
- The PDU output must have a shut-off switch or a circuit breaker to disconnect power for each power supply. To completely remove power from the power supply, disconnect power at the PDU. The end product may have multiple power supplies. To remove all power from the product, disconnect the power for each power supply.
- In accordance with applicable national requirements for Information Technology Equipment and Telecommunications Equipment, this power supply only connects to DC power sources that are classified as SELV or TNV. Generally, these requirements are based on the International Standard for Information Technology Equipment, IEC 60950-1/IEC 62368-1. In accordance with local and regional electric codes and regulations, the DC source must have one pole (Neutral/Return) reliably connected to earth ground.
- You must connect the power supply ground screw located on the front of the power supply to a suitable ground (earth) terminal. In accordance with local and regional electric codes and regulations, this terminal must be connected to a suitable building ground (earth) terminal. Do not rely on the rack or cabinet chassis to provide adequate ground (earth) continuity.

Procedure


1. If installed, release the cable management arm.
2. If the server is using a single power supply only, remove all power from the server:
 - a. Back up all server data.
 - b. Power down the server.
 - c. Disconnect all peripheral cables from the server.
3. Slide the power supply out of the bay.
4. Release the ground (earthed), -48 V, and return wires from the strain relief strap.

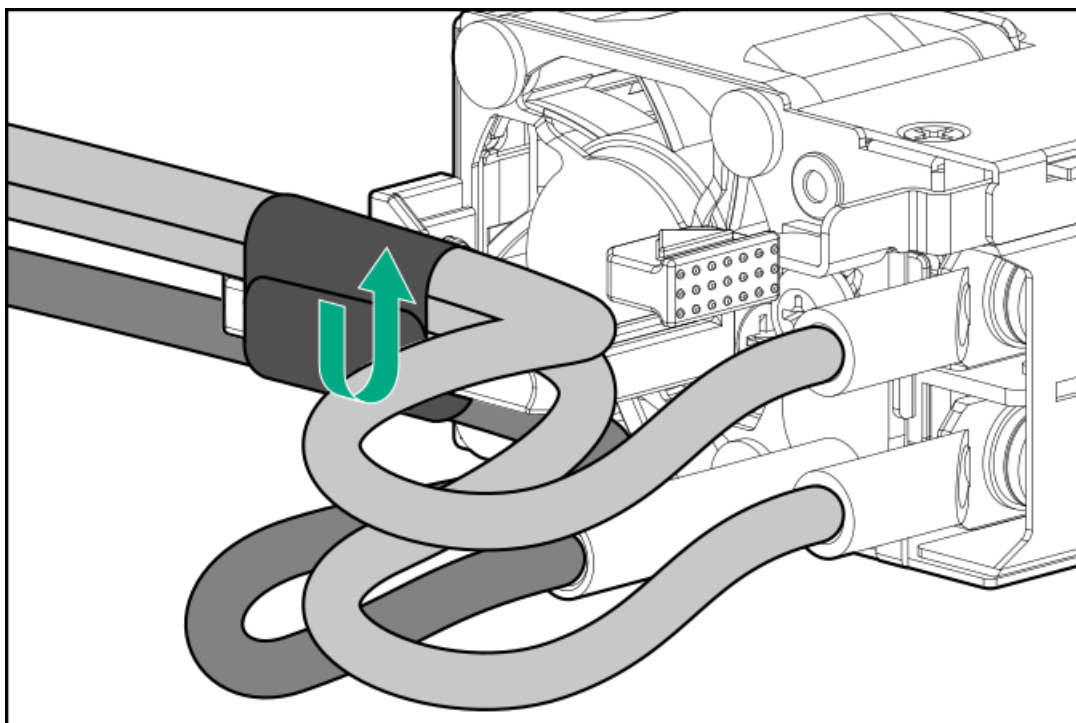


5. Disconnect the ground (earthed) wire from the power supply.

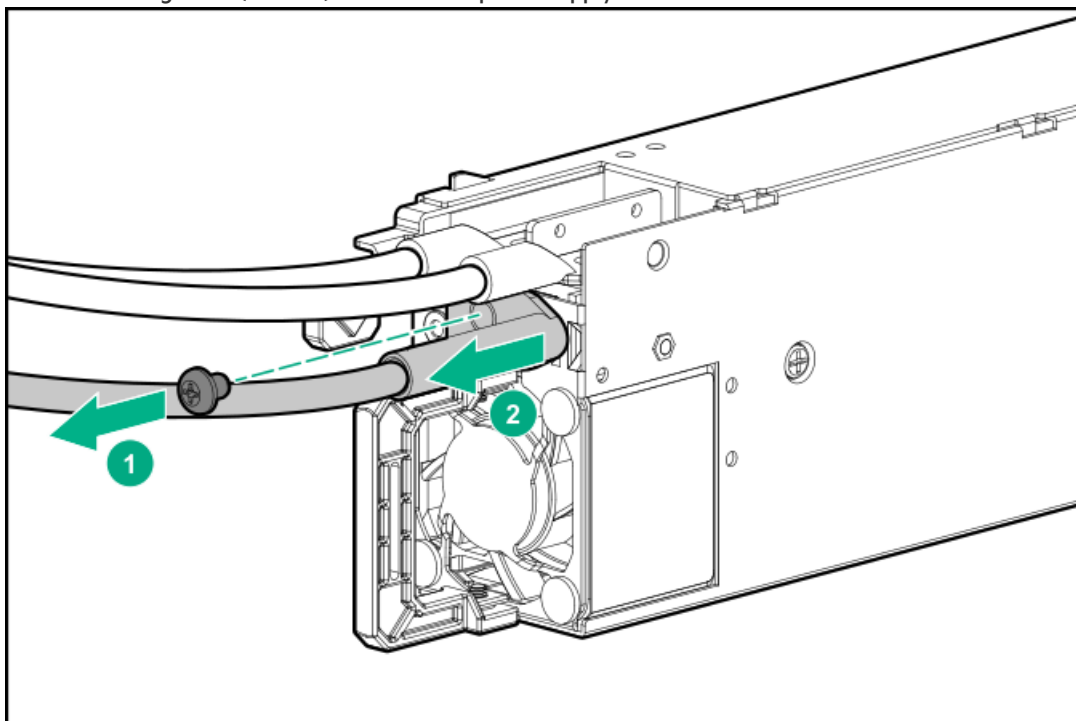

6. Remove the clear plastic cover from the power supply.

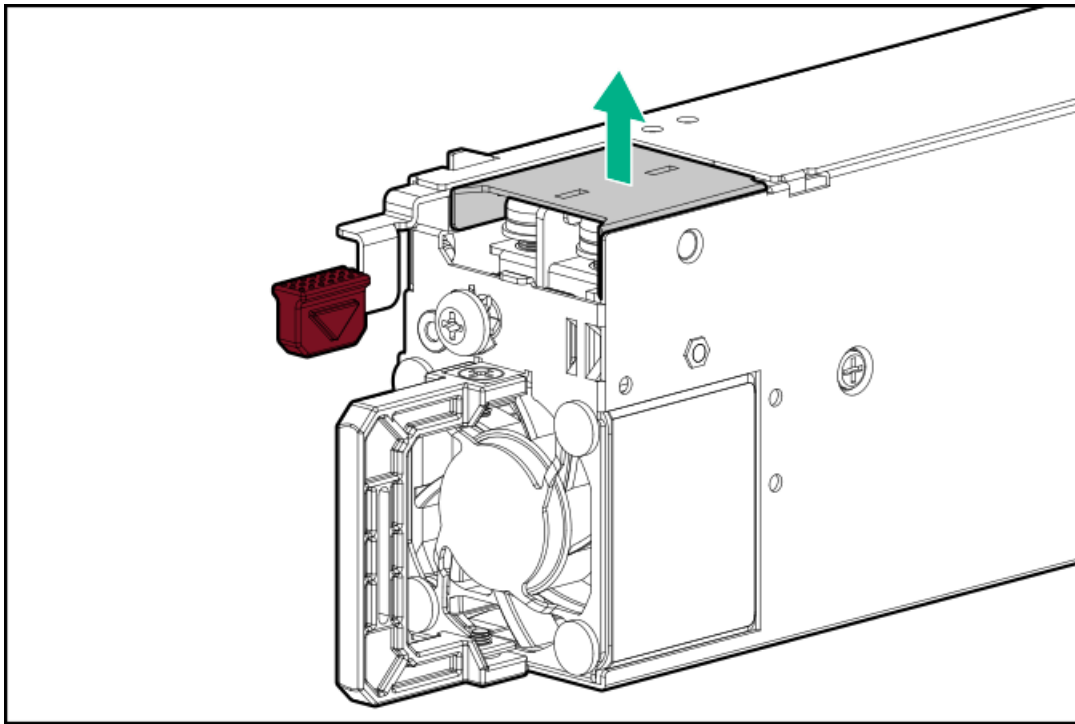

7. Disconnect the -48 V and return wires from the power supply.

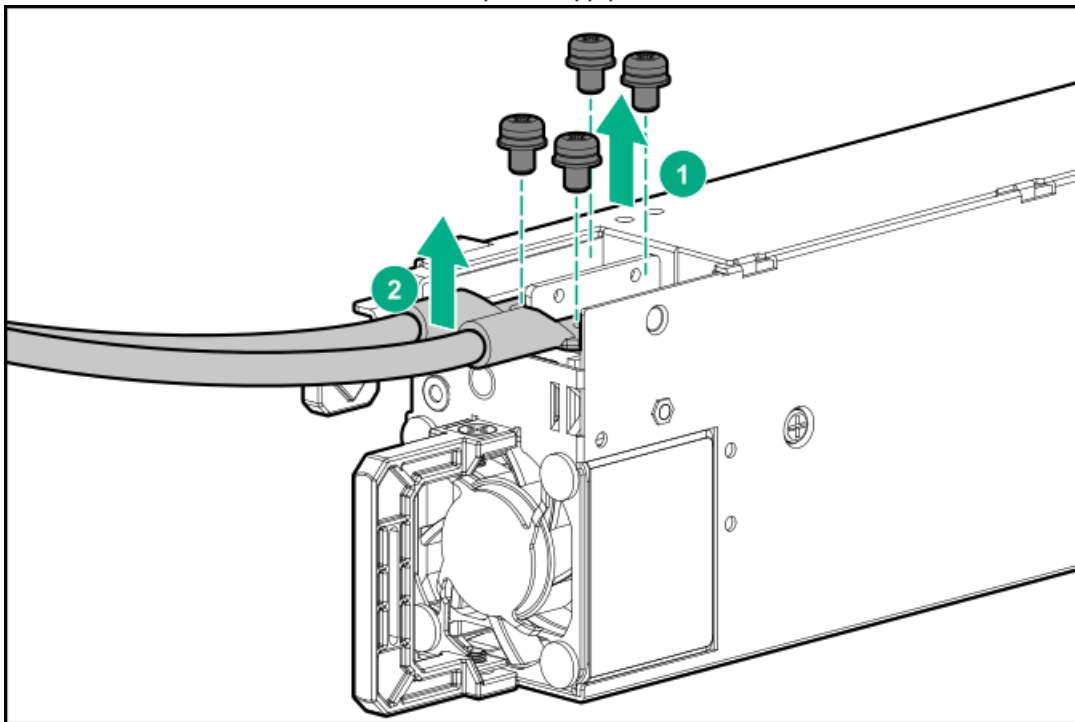

Results

To replace the component, reverse the removal procedure.

Removing and replacing the primary PCIe riser cage

About this task




CAUTION

To prevent improper cooling or thermal damage, the server PCI slots must have an expansion slot blank or an expansion board installed.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Disconnect any cables connected to the expansion board.
6. Remove the PCIe riser cage.

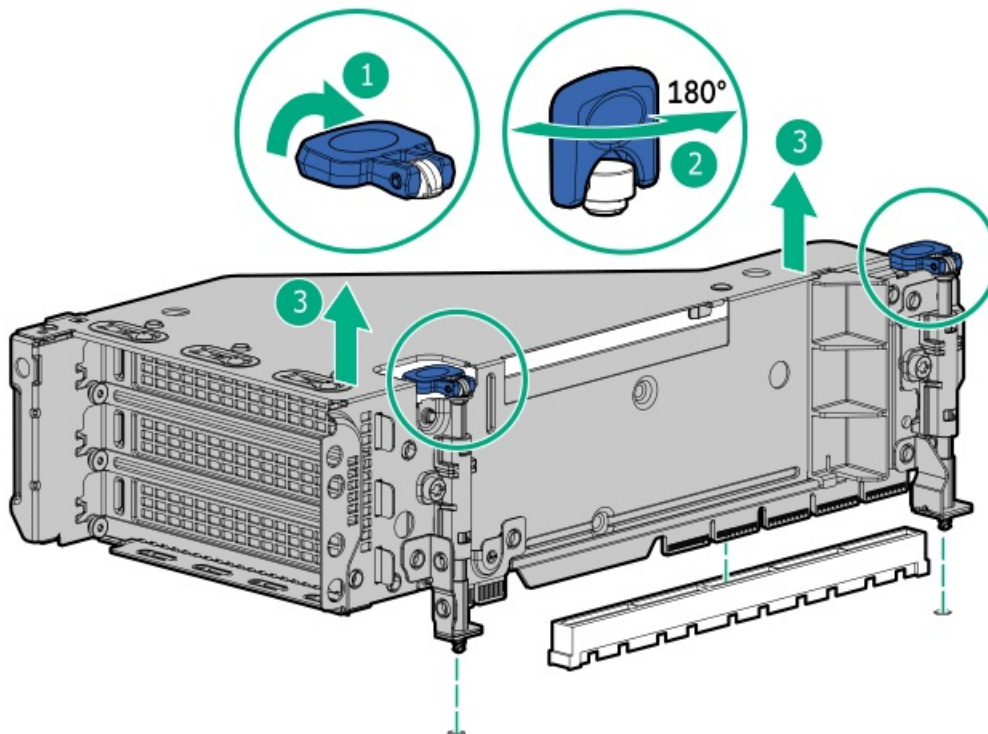

Results

To replace the component, reverse the removal procedure.

Removing and replacing the secondary and tertiary PCIe riser cage

About this task




CAUTION

To prevent improper cooling or thermal damage, the server PCI slots must have an expansion slot blank or an expansion board installed.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Disconnect any cables connected to the expansion board.
6. Remove the PCIe riser cage.

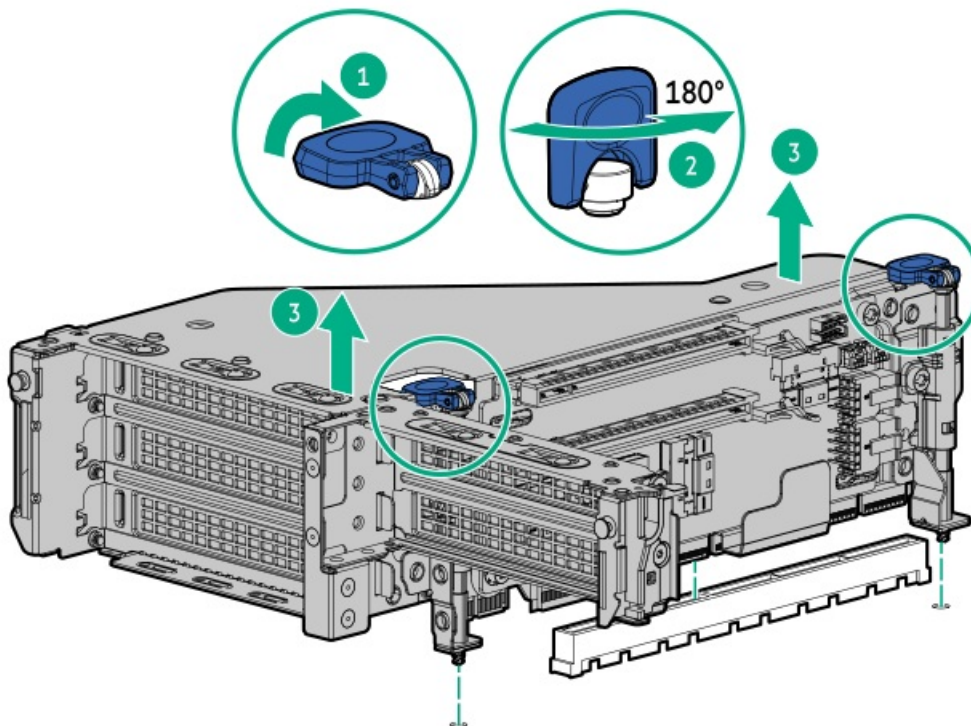

Results

To replace the component, reverse the removal procedure.

Removing and replacing the PCIe rear wall blank

About this task




CAUTION


To prevent improper cooling or thermal damage, the server PCI slots must have an expansion slot blank or an expansion board installed.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the secondary rear wall blank.

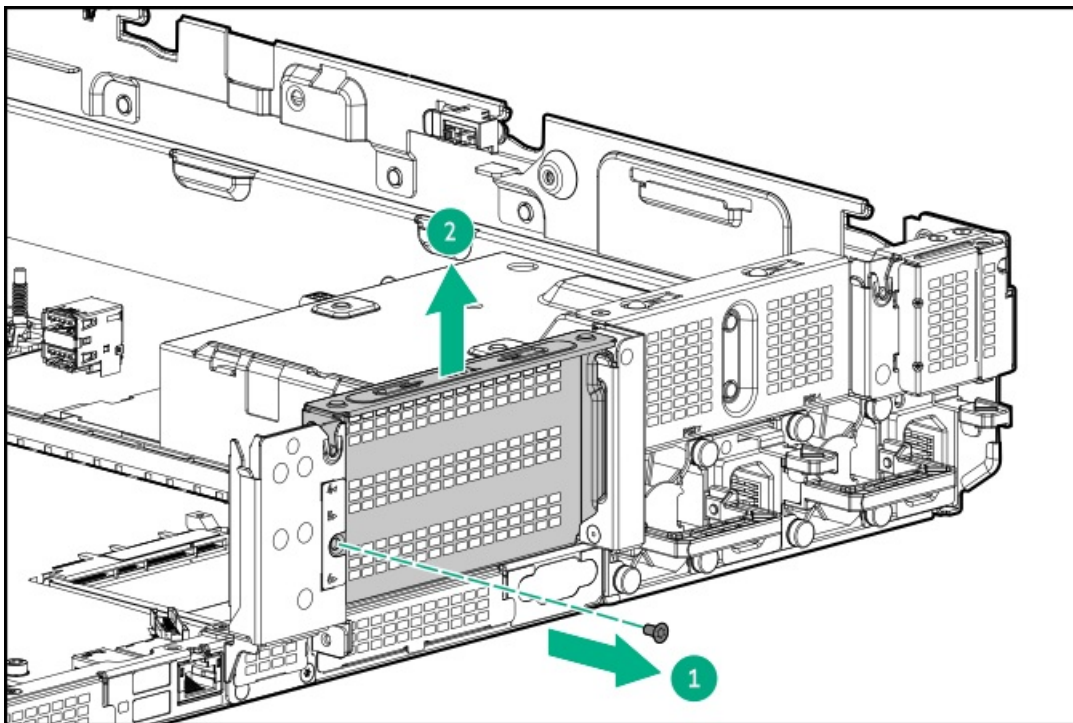

6. Remove the tertiary rear wall blank.

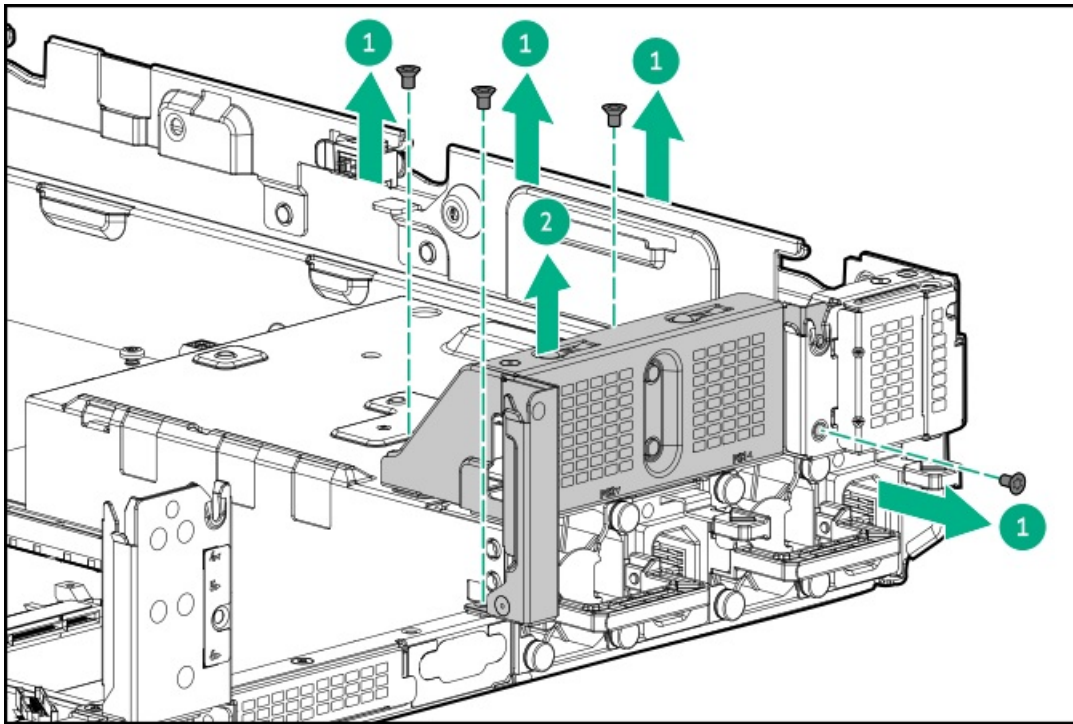

Results

To replace the component, reverse the removal procedure.

Removing and replacing an expansion board

About this task




WARNING


To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server by removing the power cord. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.

Procedure


1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Disconnect any internal cables connected to the expansion board.
6. Remove the PCIe riser cage:
 - Remove the primary PCIe riser cage.

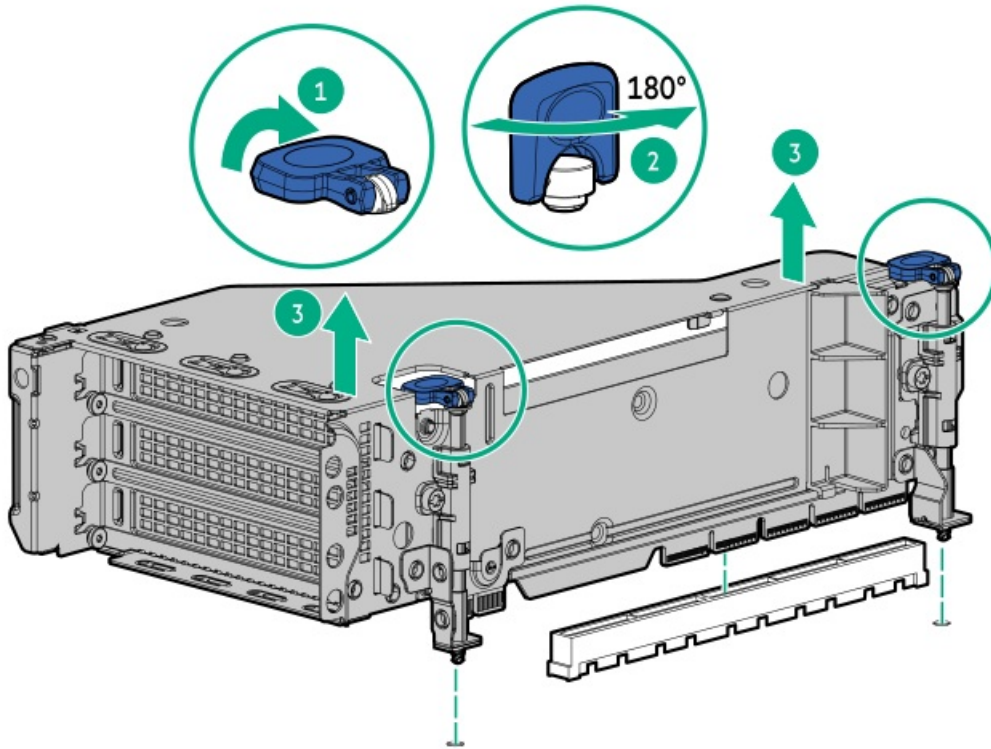

- Remove the secondary or tertiary PCIe riser cage.

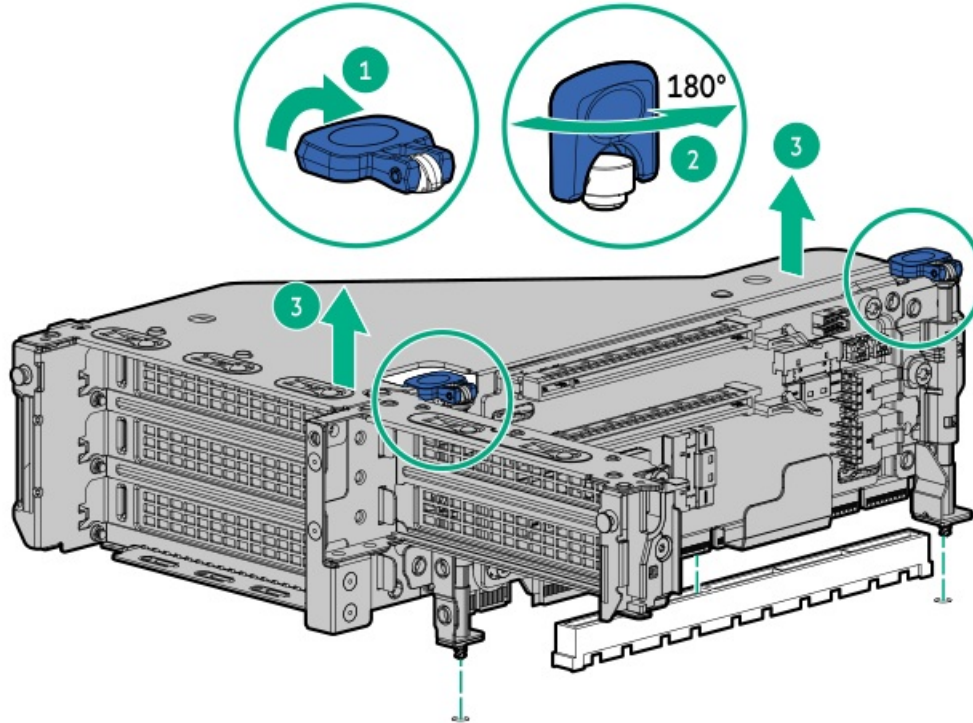

7. Remove the expansion board.

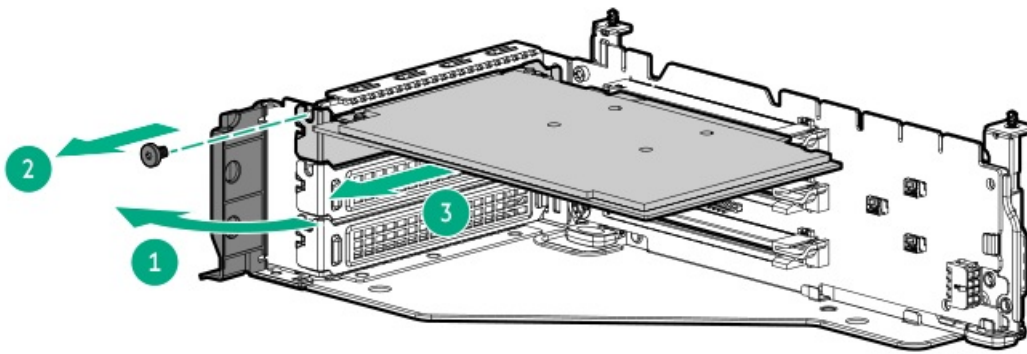

Results

To replace the component, reverse the removal procedure.

Removing and replacing the PCIe riser board


Prerequisites

Before you perform this procedure, make sure that you have a T-15 Torx screwdriver available.


About this task

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the PCIe riser cage:
 - Remove the primary PCIe riser cages
 - Remove the secondary and tertiary PCIe riser cage
6. Remove any expansion boards.
7. Disconnect any cables to the riser.
8. Remove the riser board:
 - Primary and secondary riser cages

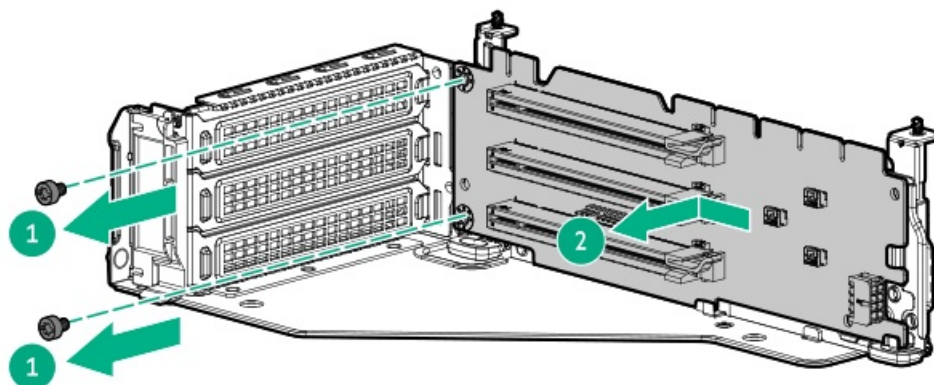

- Tertiary riser cage

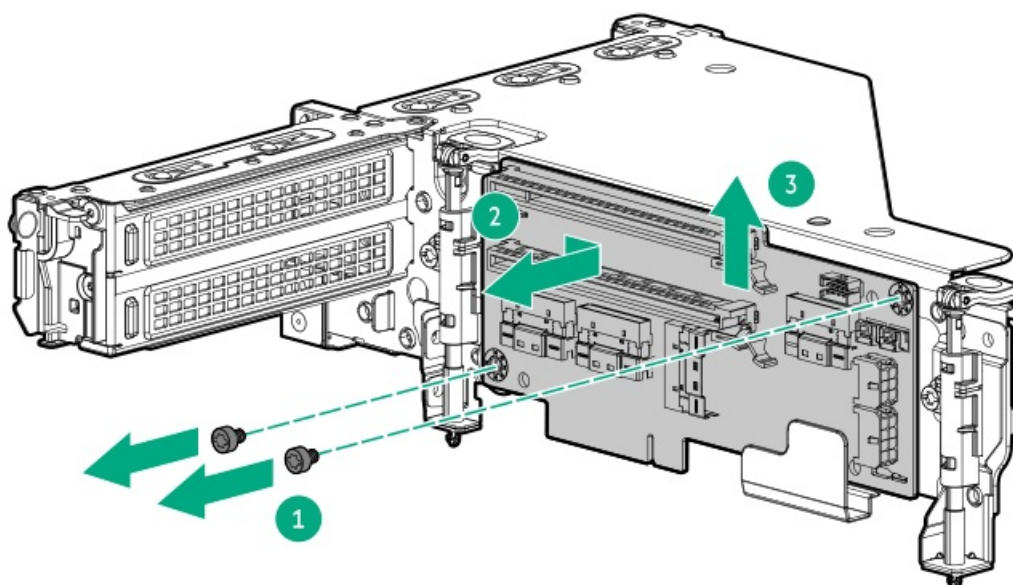

Results

To replace the component, reverse the removal procedure.

Removing and replacing an expansion slot blank

About this task



WARNING

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server by removing the power cord. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.




CAUTION

For proper cooling, do not operate the server without the access panel, baffles, expansion slot covers, or blanks installed. If the server supports hot-plug components, minimize the amount of time the access panel is open.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the PCIe riser cage:
 - Remove the primary PCIe riser cages
 - Remove the secondary and tertiary PCIe riser cage
6. Remove the expansion slot blank.

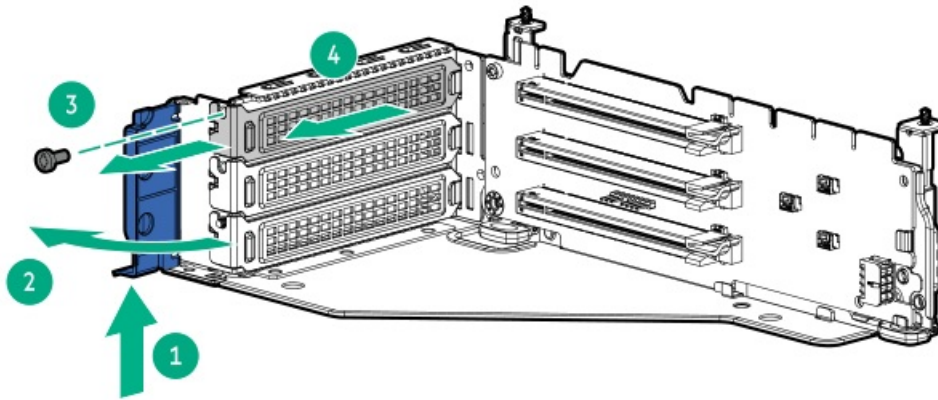

Results

To replace the component, reverse the removal procedure.

Removing and replacing a GPU or accelerator

About this task



WARNING

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove the power cord to remove power from the server. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.




CAUTION


To prevent improper cooling and thermal damage, do not operate the server unless all PCI slots have either an expansion slot cover or an expansion board installed.

Procedure


1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the air baffle.
6. Release the appropriate GPU support retainer.

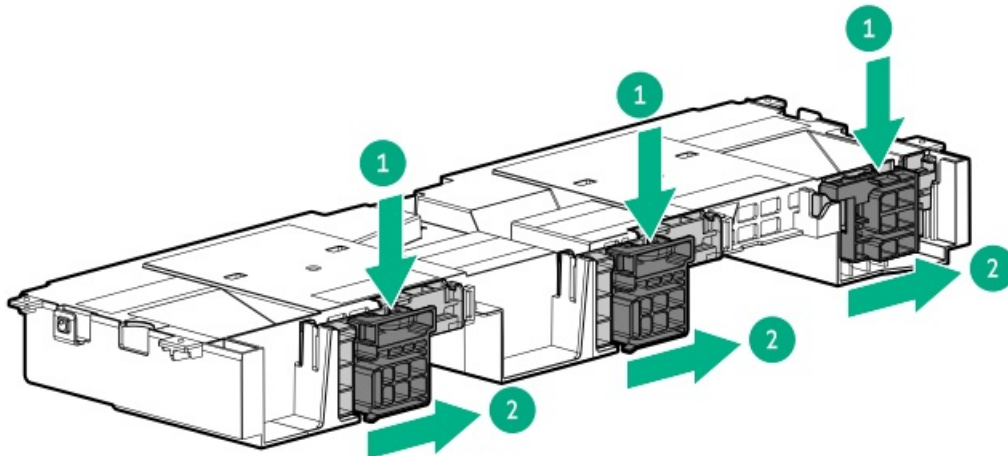

7. Remove the PCIe riser cage:
 - Remove the primary PCIe riser cages
 - Remove the secondary and tertiary PCIe riser cage
8. Disconnect the power cable from the GPU.
9. Remove the GPU:
 - Primary riser cage

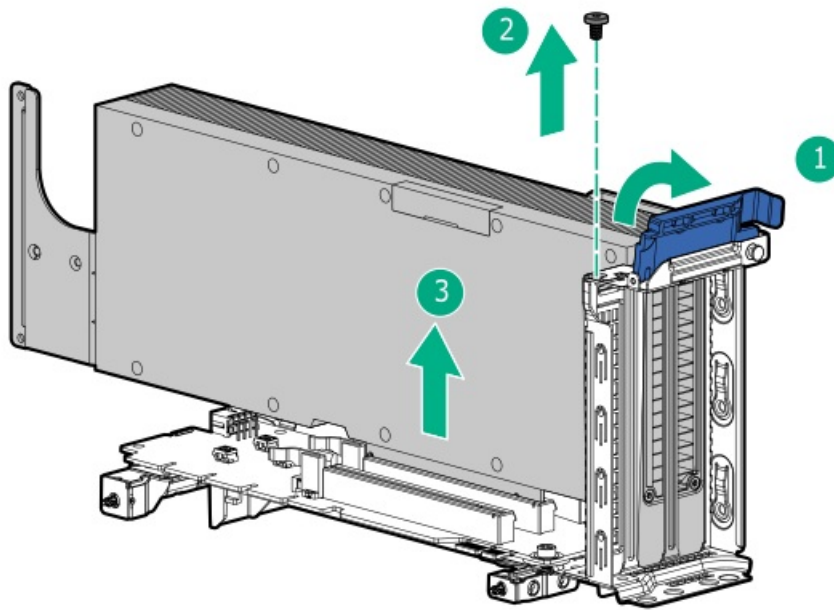

- Secondary and tertiary riser cage

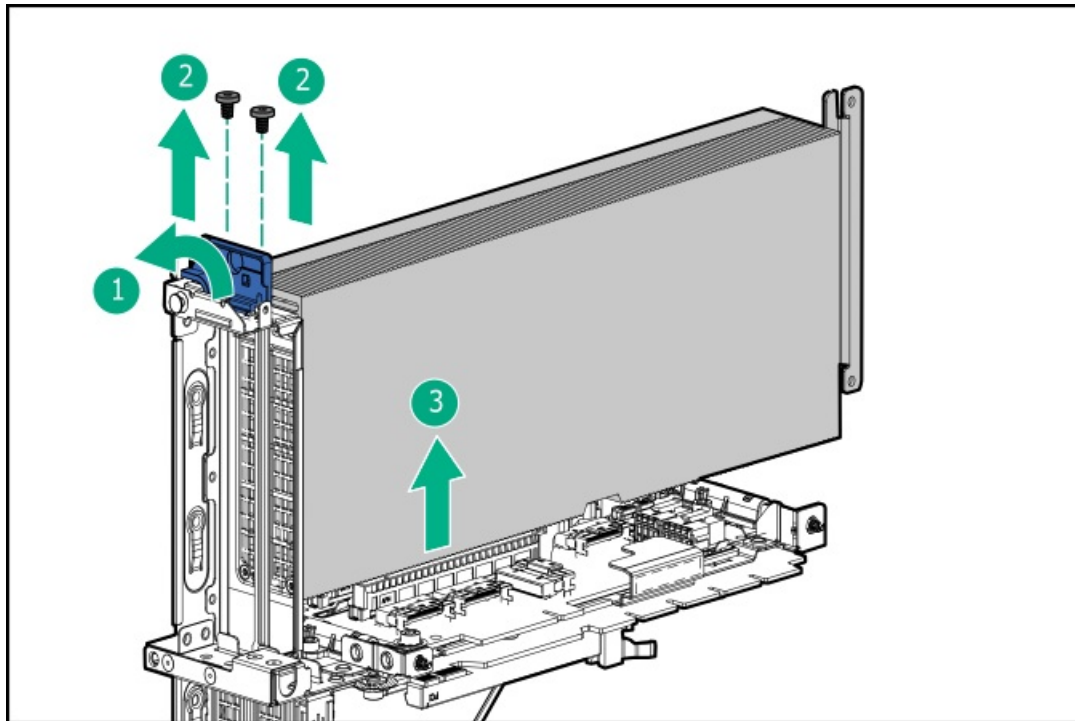

Results


To replace the component, reverse the removal procedure.

Removing and replacing fan blanks

Procedure

1. Extend the server from the rack.
2. Remove the access panel.

3. Remove the fan blank.

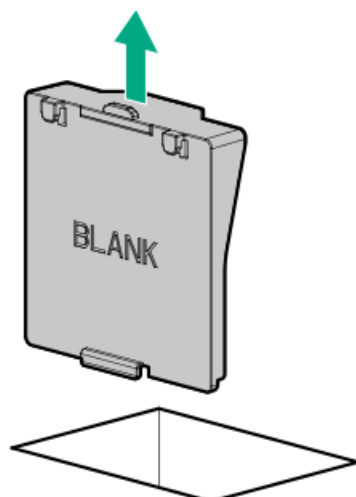

Removing and replacing a fan

About this task

https://support.hpe.com/hpesc/public/videoDisplay?videoid=vp5g00005332en_us&noiframe



CAUTION

To maintain proper system cooling, do not operate the server for long period with the access panel open or removed. Operating the server in this manner results in an improper system airflow. For internal hot-plug component procedures, complete the procedure within 60 seconds. Failure to do so can cause the system temperature to increase and trip the safety threshold. When this happens:

- The health LED flashes amber.
- The operating system gracefully shuts down.



CAUTION

To prevent improper cooling and thermal damage, do not operate the server unless all bays are populated with either a component or a blank.




IMPORTANT

The fan setup can either be standard, single-rotor fans or high performance, dual-rotor fans. Do not mix fan types in the same server.

Procedure

1. Extend the server from the rack.
2. Remove the access panel.
3. Remove the fan.

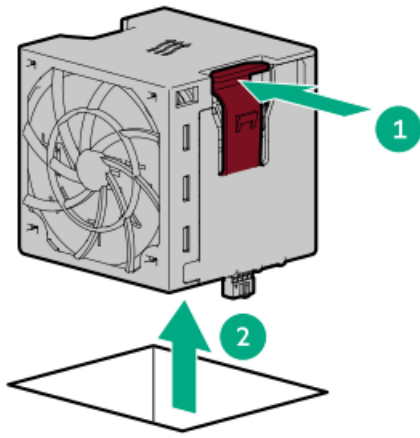

Results

To replace the component, reverse the removal procedure.

Removing and replacing the fan cage

About this task

Procedure


1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.



CAUTION

Do not operate the server for long periods with the access panel open or removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.

5. Remove the fan cage.

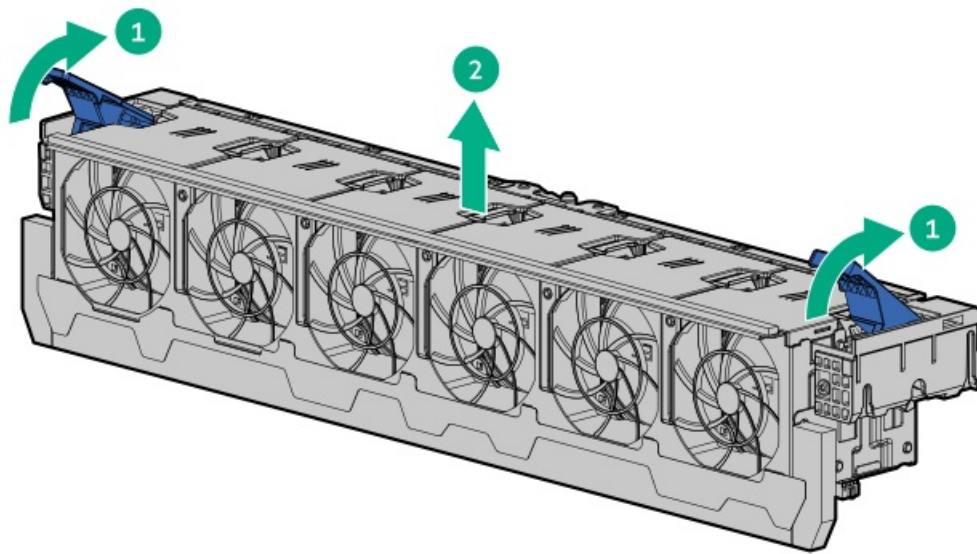

IMPORTANT

For optimum cooling, install fans in all primary fan locations.

Results

To replace the component, reverse the removal procedure.

Removing and replacing a rear OCP adapter blank

About this task




WARNING

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server by removing the power cord. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Disconnect any external cables that are connected to the expansion board.
4. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
5. Remove the access panel.
6. If installed, remove the riser cage.
7. Remove the adapter blank.

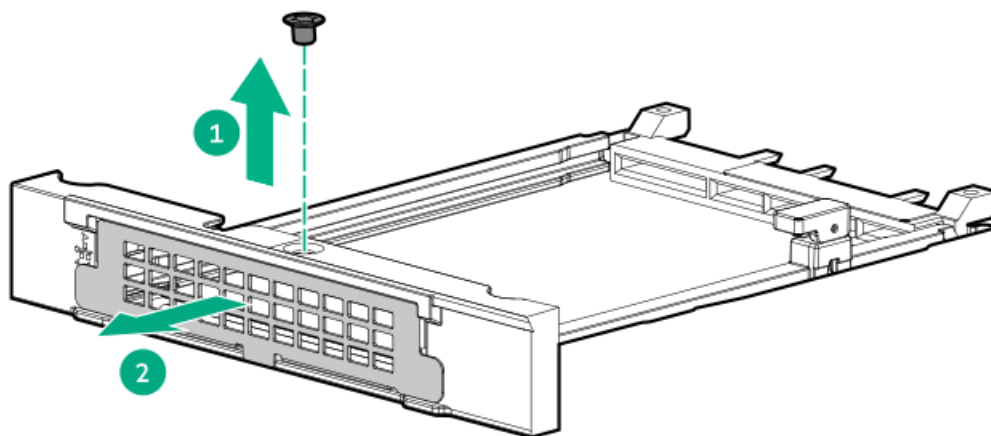

To replace the component, reverse the removal procedure.

Removing and replacing the rear OCP adapter

About this task

https://support.hpe.com/hpesc/public/videoDisplay?videoid=vp5g00005334en_us&noframe




WARNING

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server by removing the power cord. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Disconnect any external cables that are connected to the expansion board.
4. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
5. Remove the access panel.
6. If installed, remove the riser cage.
7. Remove the OCP 3.0 adapter.

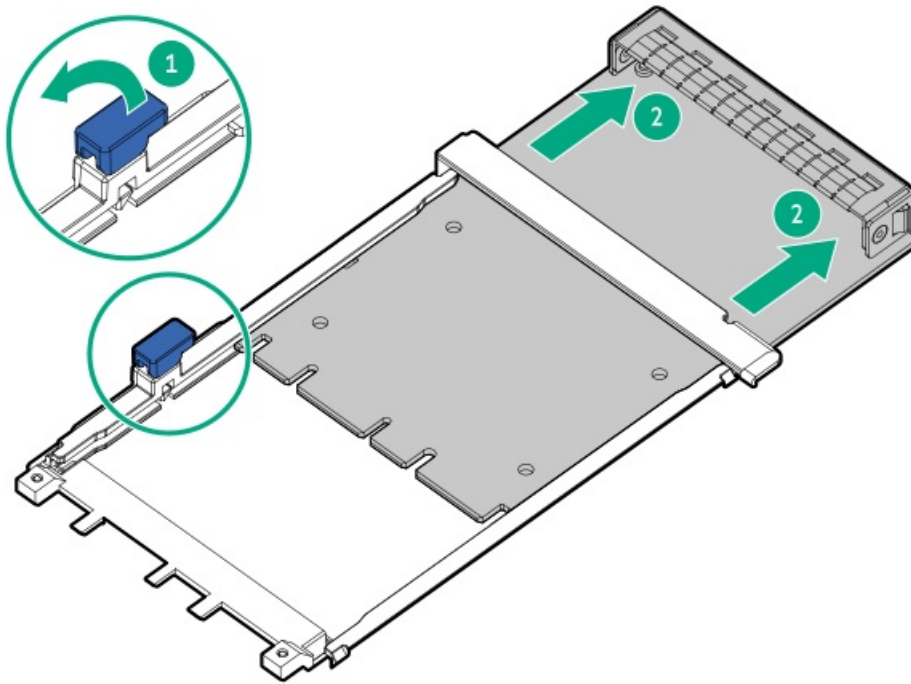

To replace the component, reverse the removal procedure.


Removing and replacing the left chassis ear

About this task

https://support.hpe.com/hpesc/public/videoDisplay?videoid=vpqg00005342en_us&noframe

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Remove the server from the rack.
4. Remove the left chassis ear.

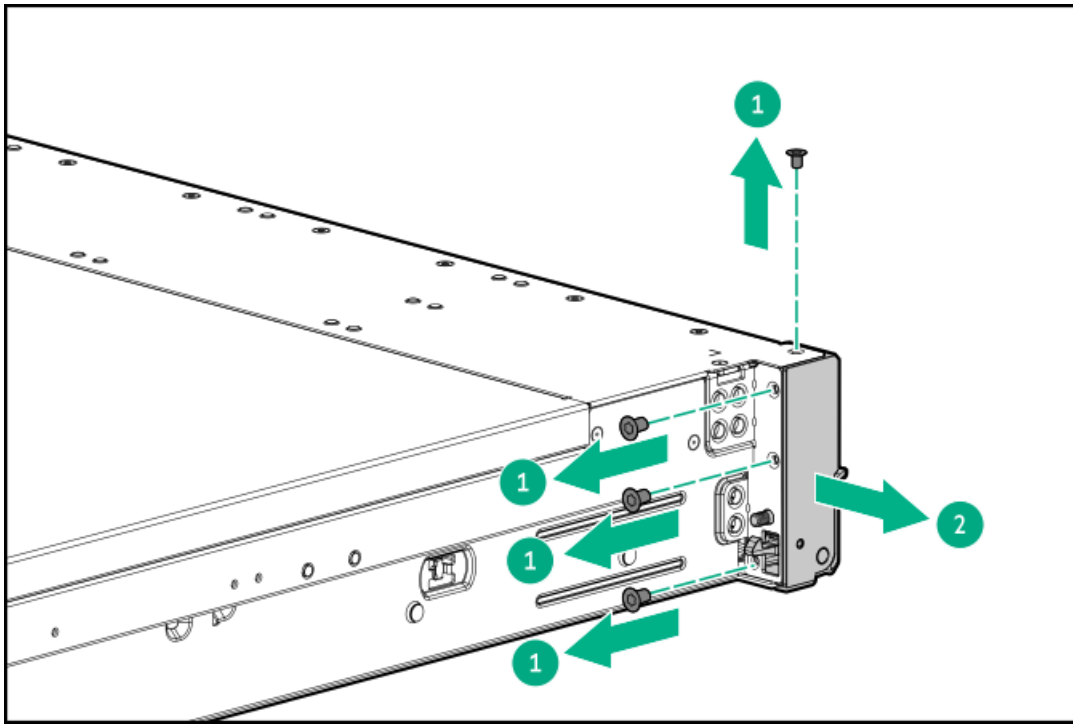

Results

To replace the component, reverse the removal procedure.

Removing and replacing the right chassis ear power switch module

Prerequisites

Before you perform this procedure, make sure that you have a T-10 Torx screwdriver available.


About this task

https://support.hpe.com/hpesc/public/videoDisplay?videoId=vpmsg00005343en_us&noframe


Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove all hot-plug hard drives.
6. Remove the fan cage.
7. Disconnect the power switch module cable from the system board.

8. Remove the power switch module.

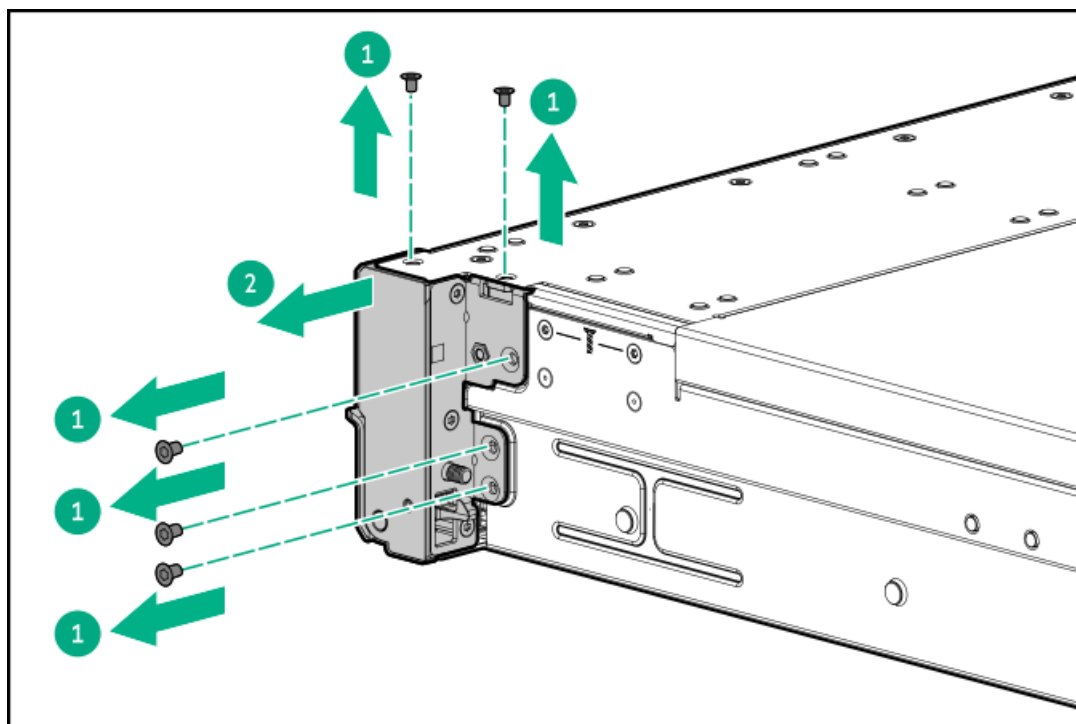

9. Remove the cable access cover and carefully feed the cable through the front of the server.

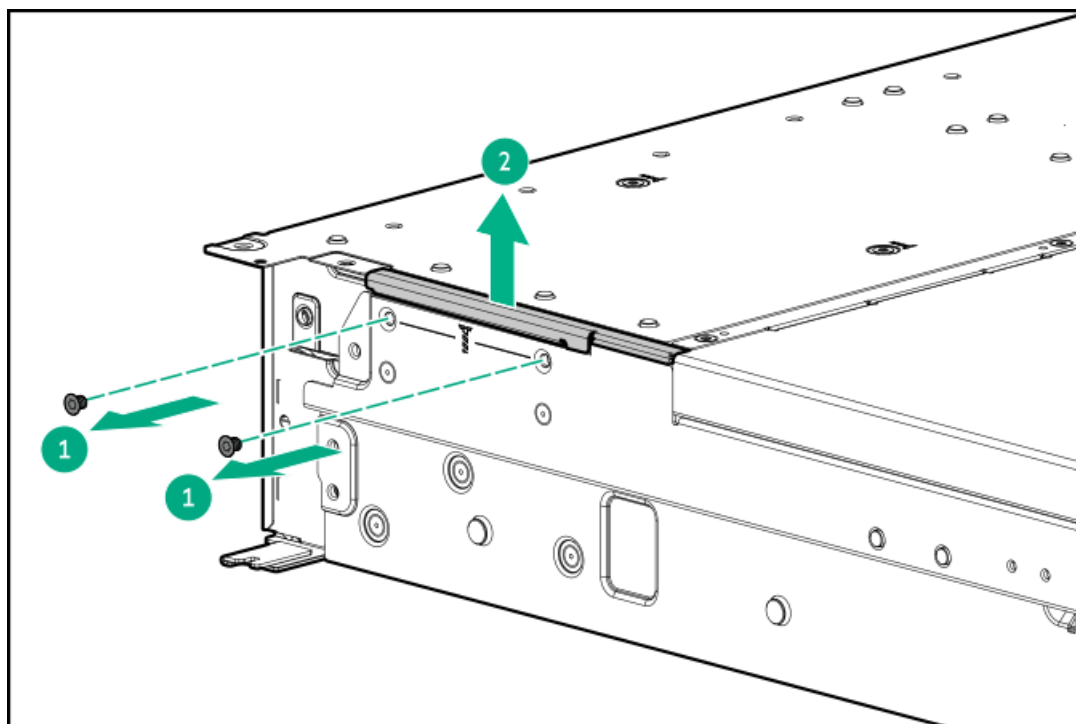

Results

To replace the component, reverse the removal procedure.

Removing and replacing the LFF universal media bay


Prerequisites

Before you perform this procedure, make sure that you have a T-15 Torx screwdriver available.

About this task

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove all hot-plug hard drives.
6. Do one of the following:
 - Remove the fan cage.
 - Remove the midplane drive cage.
7. Disconnect all cables from the universal media bay.
8. Remove the universal media bay.

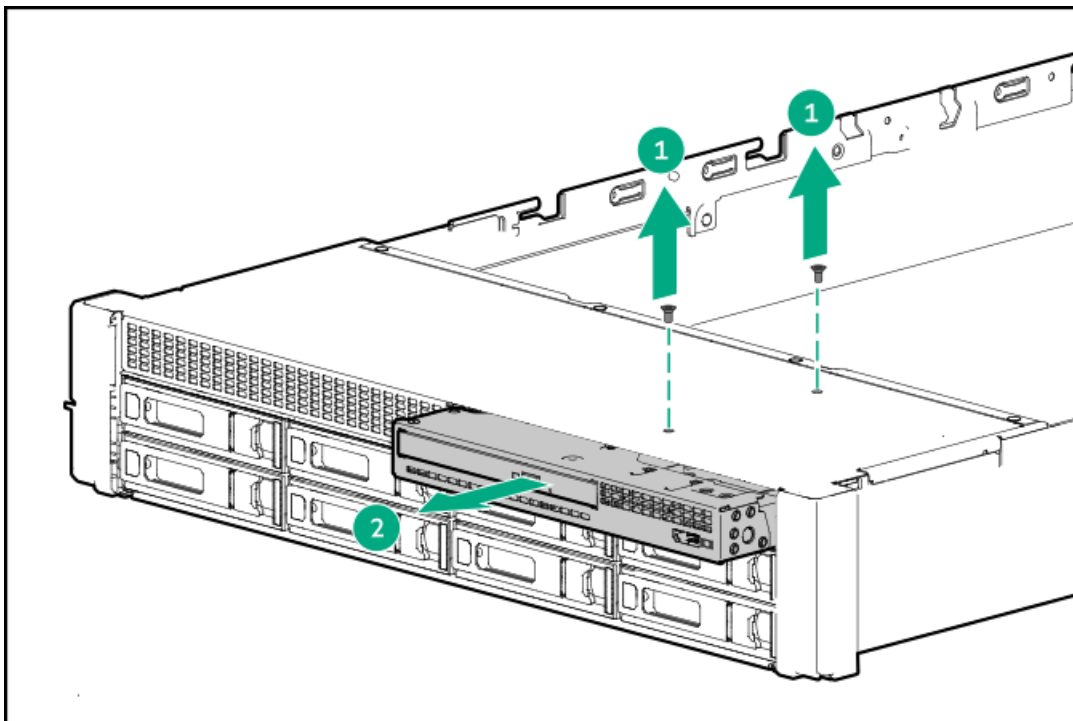

Results

To replace the component, reverse the removal procedure.

Removing and replacing the SFF universal media bay

Prerequisites


Before you perform this procedure, make sure that you have a T-15 Torx screwdriver available.

About this task

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove all hot-plug hard drives.

Note where each drive was installed.
6. Do one of the following:
 - Remove the fan cage.
 - Remove the midplane drive cage.
7. Disconnect all cables from the universal media bay.
8. Remove the universal media bay.

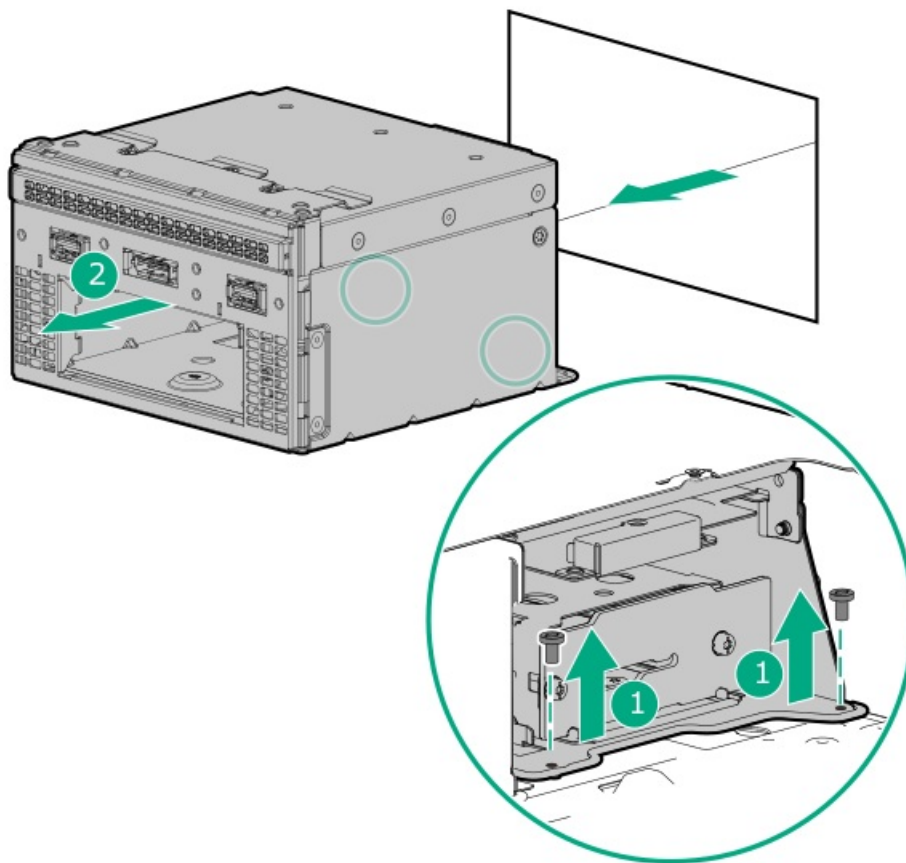

Results

To replace the component, reverse the removal procedure.

Removing and replacing the SFF optical drive


Prerequisites

Before you perform this procedure, make sure that you have a T-10 Torx screwdriver available.


Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the fan cage.
6. Disconnect all cables from the SFF universal media bay.


7. Remove the SFF universal media bay.
8. Remove the optical drive.

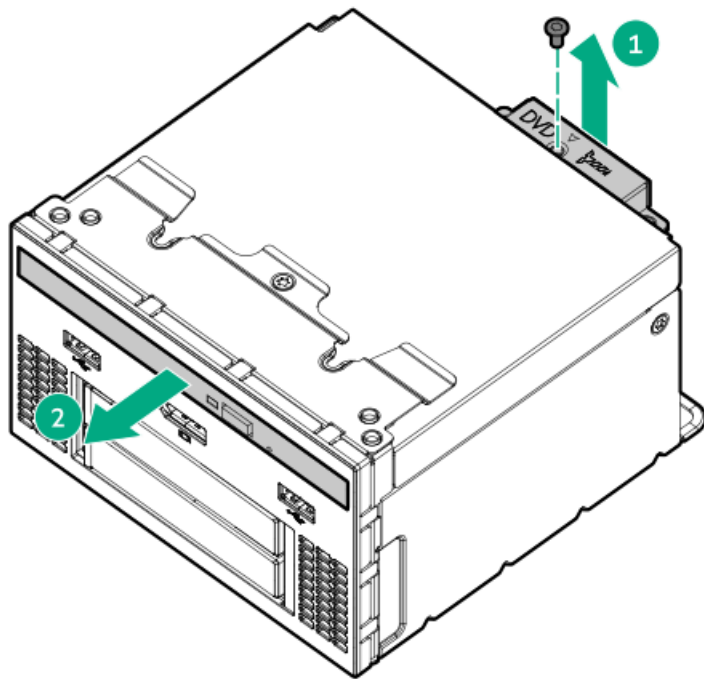

9. Remove the optical drive bracket and retain for use with the replacement optical drive.

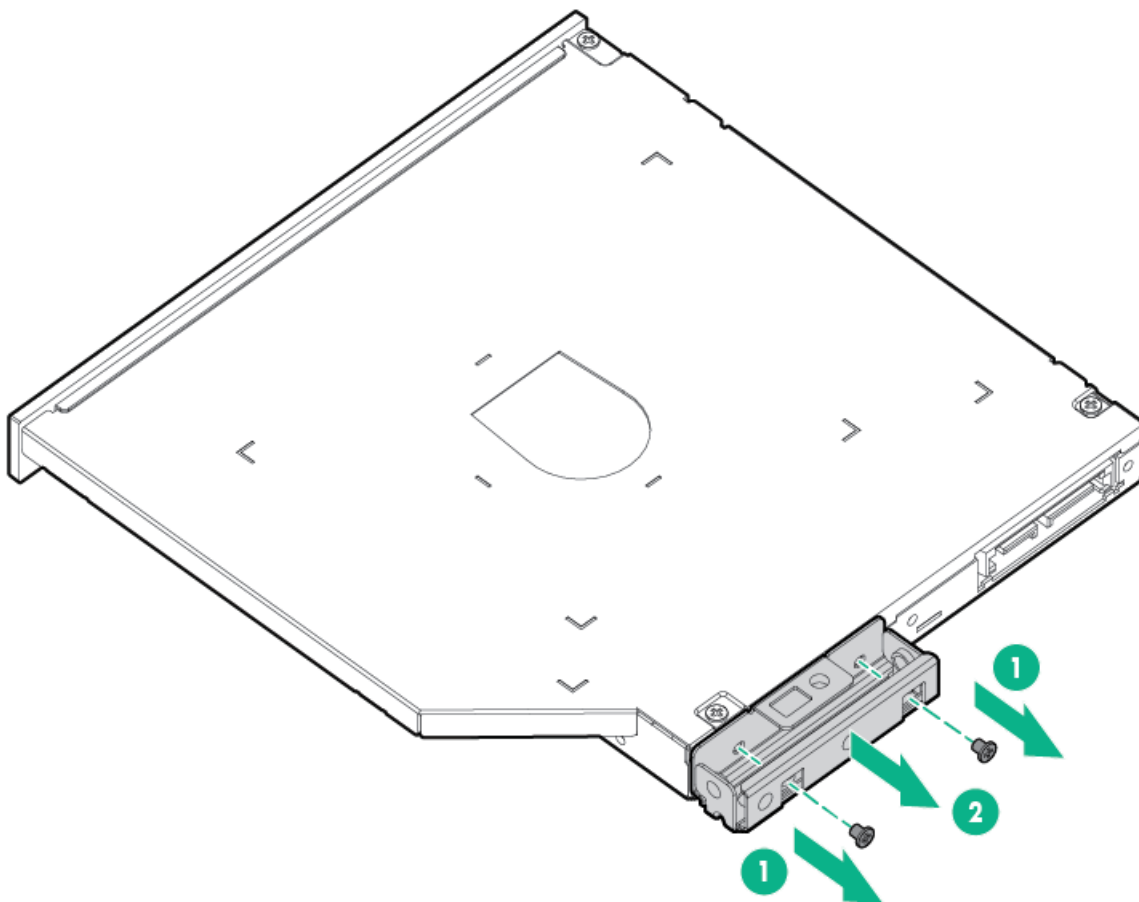

10. Before replacing the component, install the optical drive bracket retained from the optical drive you are replacing.

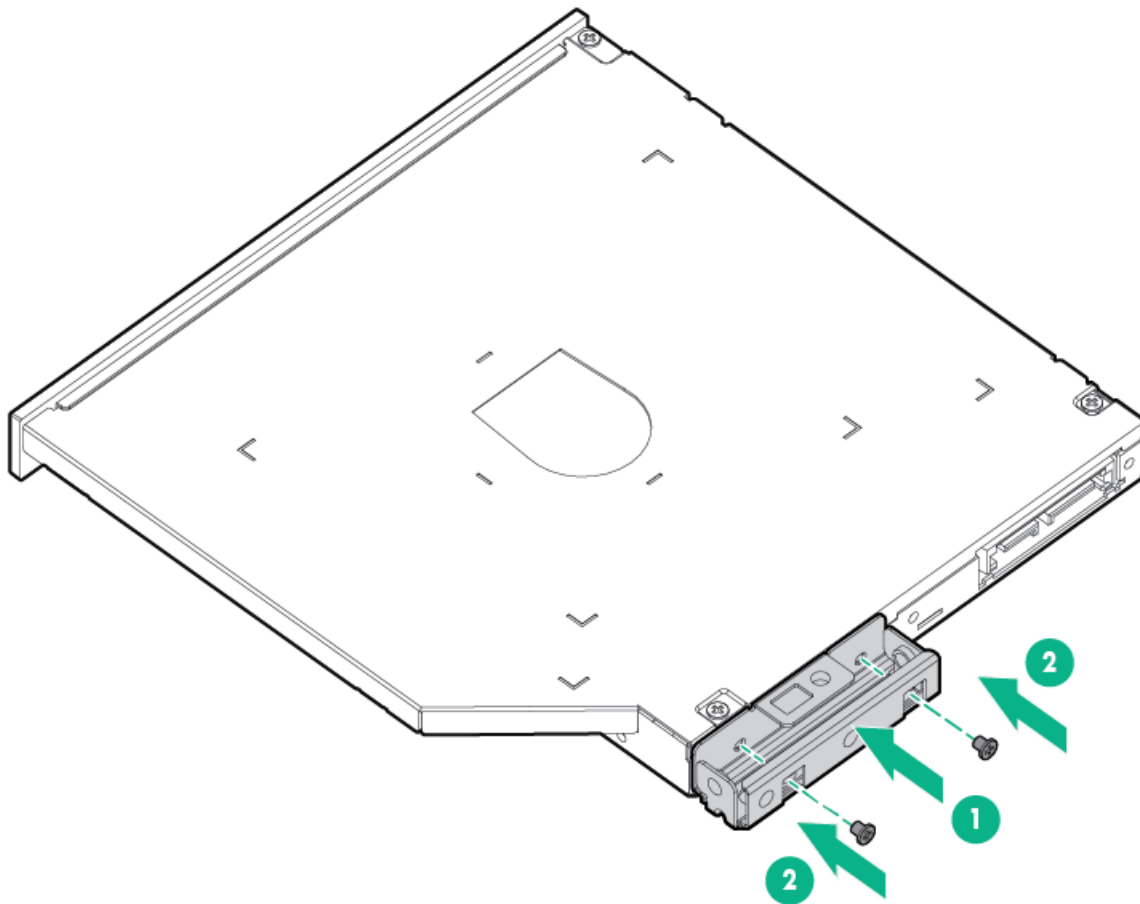

Results

To replace the component, reverse the removal procedure.

Removing and replacing the LFF optical drive


Prerequisites

Before you perform this procedure, make sure that you have a T-10 Torx screwdriver available.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.

5. Remove the fan cage.
6. Remove the LFF universal media bay.
7. Remove the optical drive.

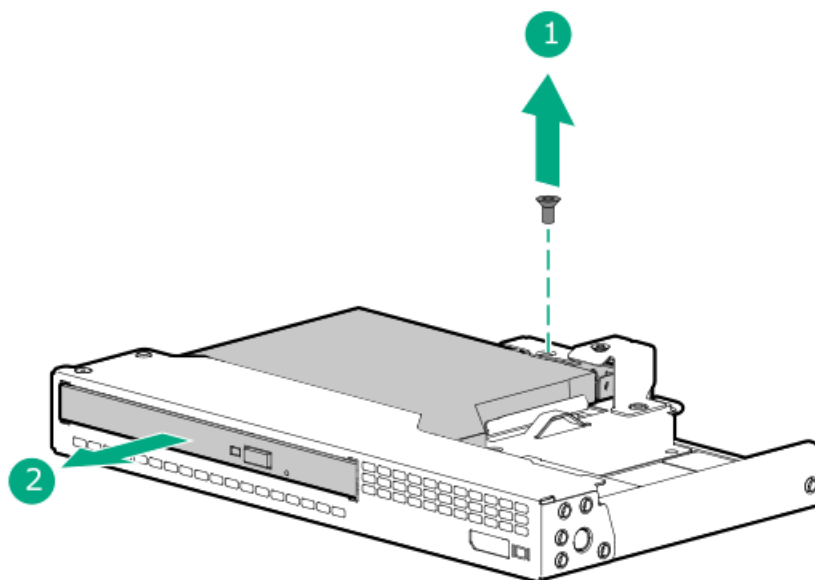

Results

To replace the component, reverse the removal procedure.

Removing and replacing a front SFF drive cage

Prerequisites

Before you perform this procedure, make sure that you have a T-15 Torx screwdriver available.

About this task

https://support.hpe.com/hpesc/public/videoDisplay?videoid=vp5g00005320en_us&noframe

This procedure applies to all front boxes.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.

- Remove the server from the rack.

4. Remove the access panel.


5. Remove all drives.

Note where each drive was installed.

6. Remove the fan cage.

7. Disconnect all cables from the drive backplane.

8. Remove the drive cage.

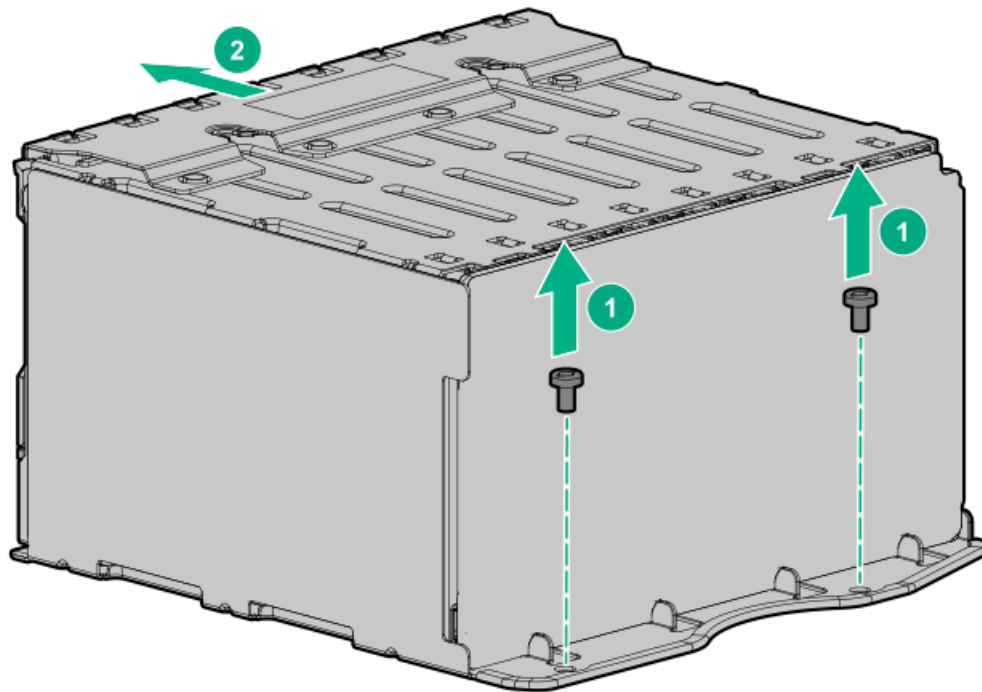

Results

To replace the component, reverse the removal procedure.

Removing and replacing an EDSFF drive backplane

Prerequisites

Before you perform this procedure, make sure that you have a T-15 Torx screwdriver available.

Procedure

1. Power down the server.

2. Remove all power:

- a. Disconnect each power cord from the power source.
- b. Disconnect each power cord from the server.

3. Do one of the following:

- Extend the server from the rack.

- Remove the server from the rack.

4. Remove the access panel.


5. Remove the fan cage.

6. Remove all drives.

Note where each drive was installed.

7. Remove the drive cage.

8. Remove the drive backplane.

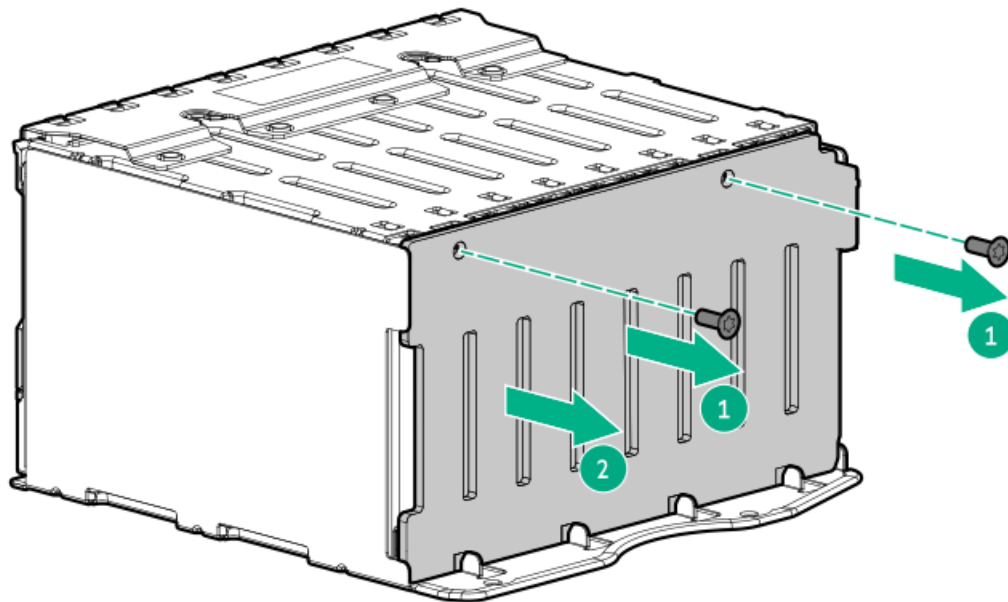

Results

To replace the component, reverse the removal procedure.

Removing and replacing the 8 SFF drive backplane

Prerequisites

Before you perform this procedure, make sure that you have a T-15 Torx screwdriver available.

About this task


https://support.hpe.com/hpesc/public/videoDisplay?videoid=vp5g00005319en_us&noframe

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.

- b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the fan cage.
6. Remove all drives.

Note where each drive was installed.
7. Remove the 8 SFF drive cage.
8. Remove the drive backplane.

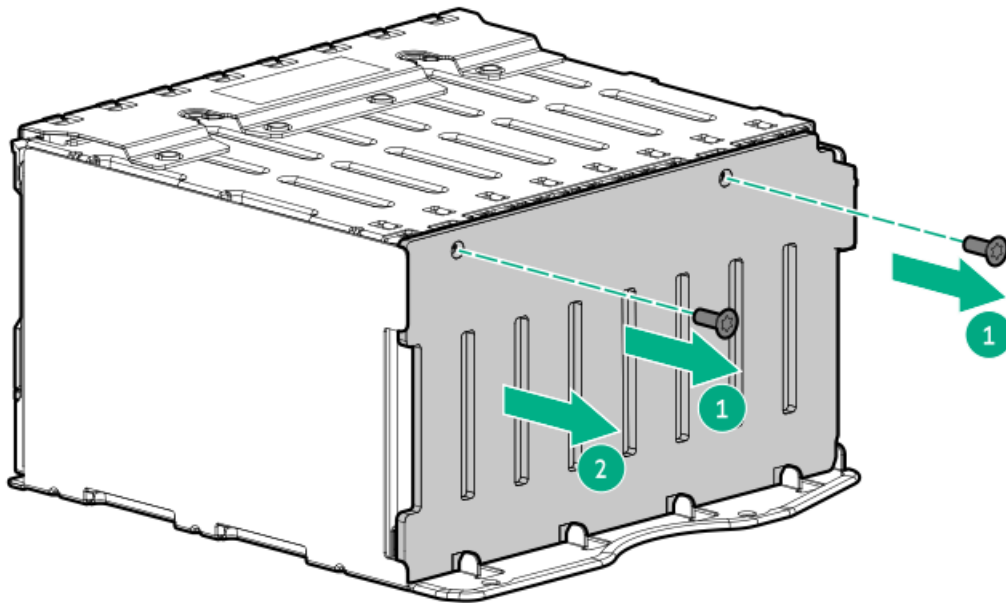

Results

To replace the component, reverse the removal procedure.

Removing and replacing the 2 SFF front drive cage

Prerequisites

Before you perform this procedure, make sure that you have a T-10 Torx screwdriver available.


Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.


- b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove all drives.

Note where each drive was installed.

6. Disconnect all cables from the drive backplane.
7. Remove the drive cage.

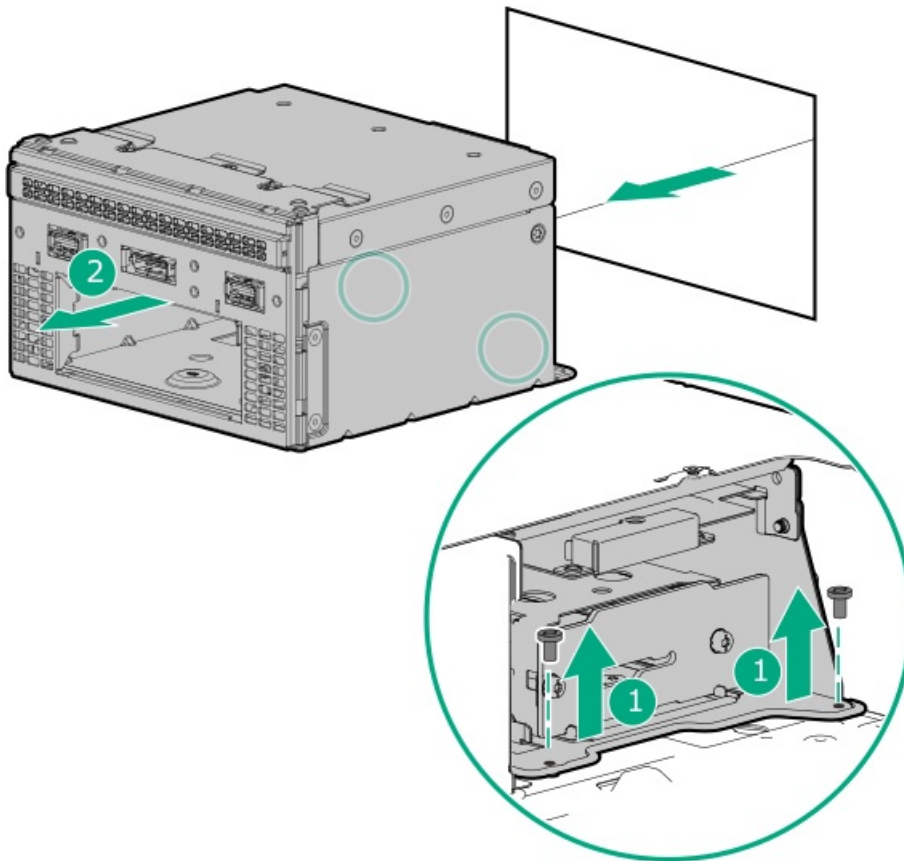

8. Remove the drive backplane.

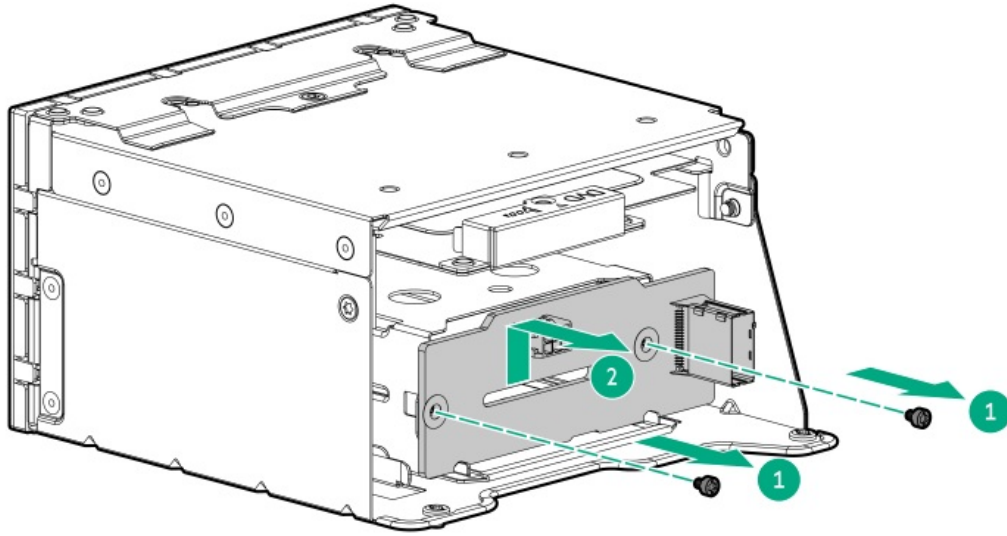

Results


To replace the component, reverse the removal procedure.

Removing and replacing the 2 SFF stacked riser cage backplane


Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove all drives.

Note where each drive was installed.
6. Disconnect all cables from the drive backplane.
7. Remove the drive cage.

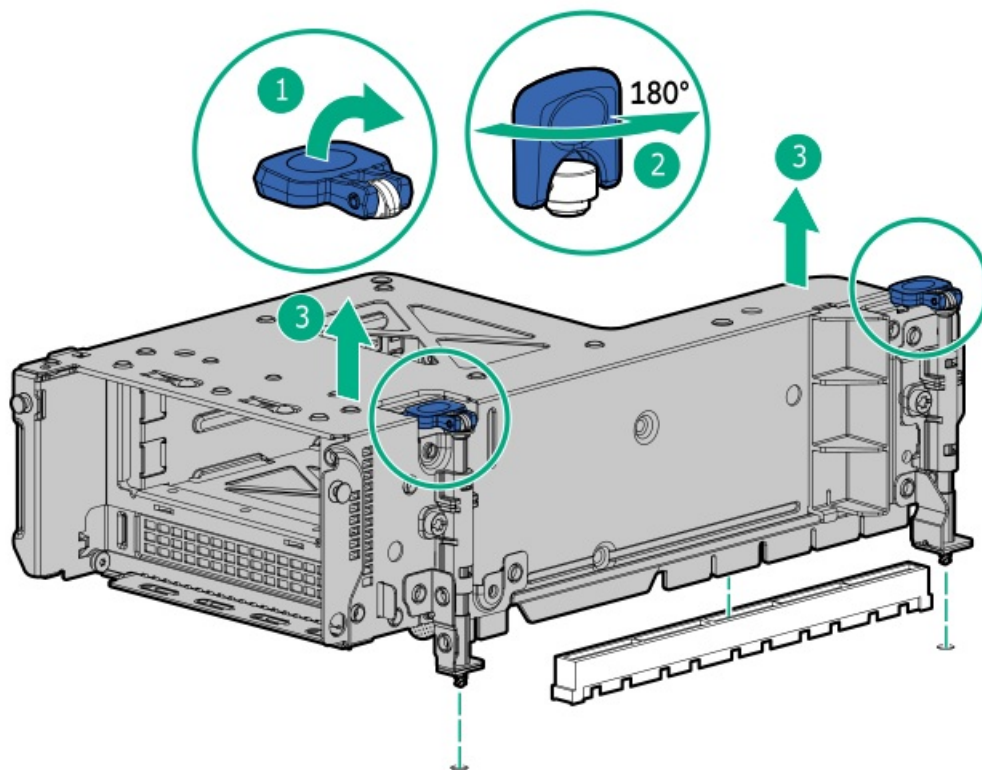

8. Remove the drive backplane.

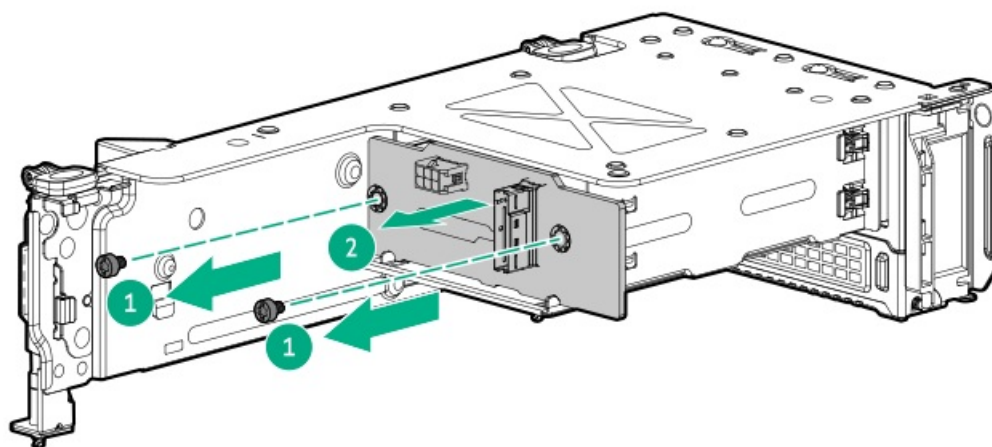

Results

To replace the component, reverse the removal procedure.

Removing and replacing the 2 SFF rear stacked drive backplane

About this task

Procedure

1. Power down the server.

2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.


4. Remove the access panel.

5. Remove all drives.


Note where each drive was installed.

6. Disconnect all cables from the drive backplane.

7. Remove the drive cage.

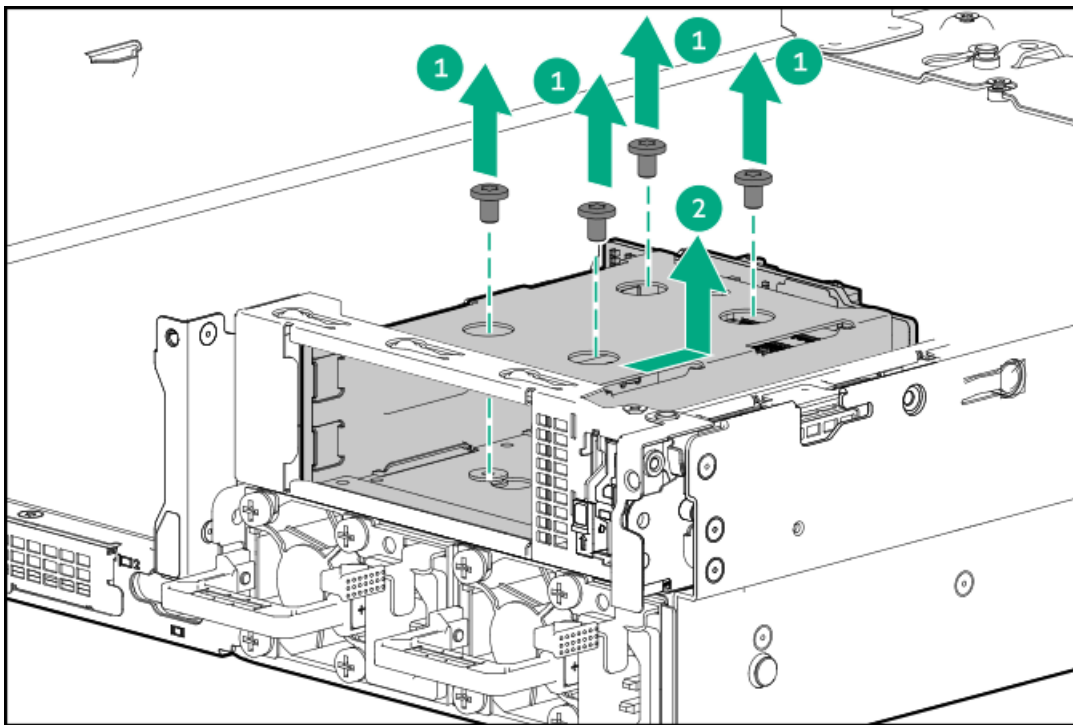

8. Remove the backplane.

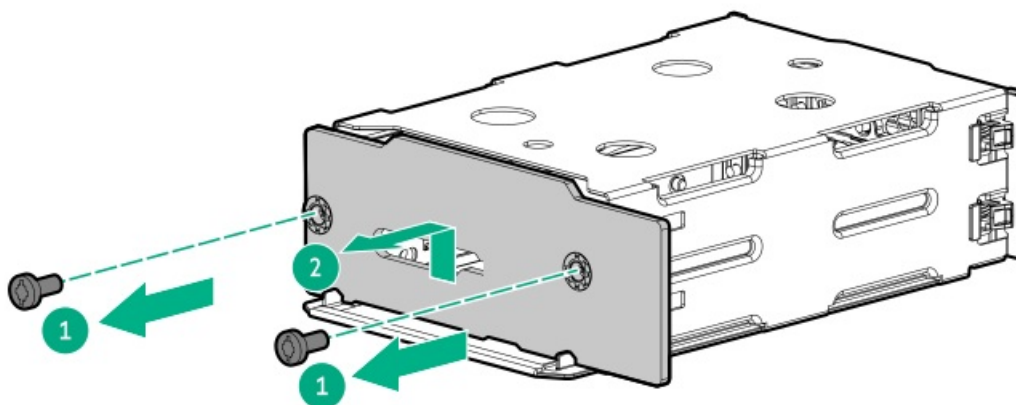


Results

To replace the component, reverse the removal procedure.


Removing and replacing the 2 LFF riser cage backplane

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove all drives from the riser cage .
6. Disconnect all cables from the drive backplane.
7. Remove the drive cage.

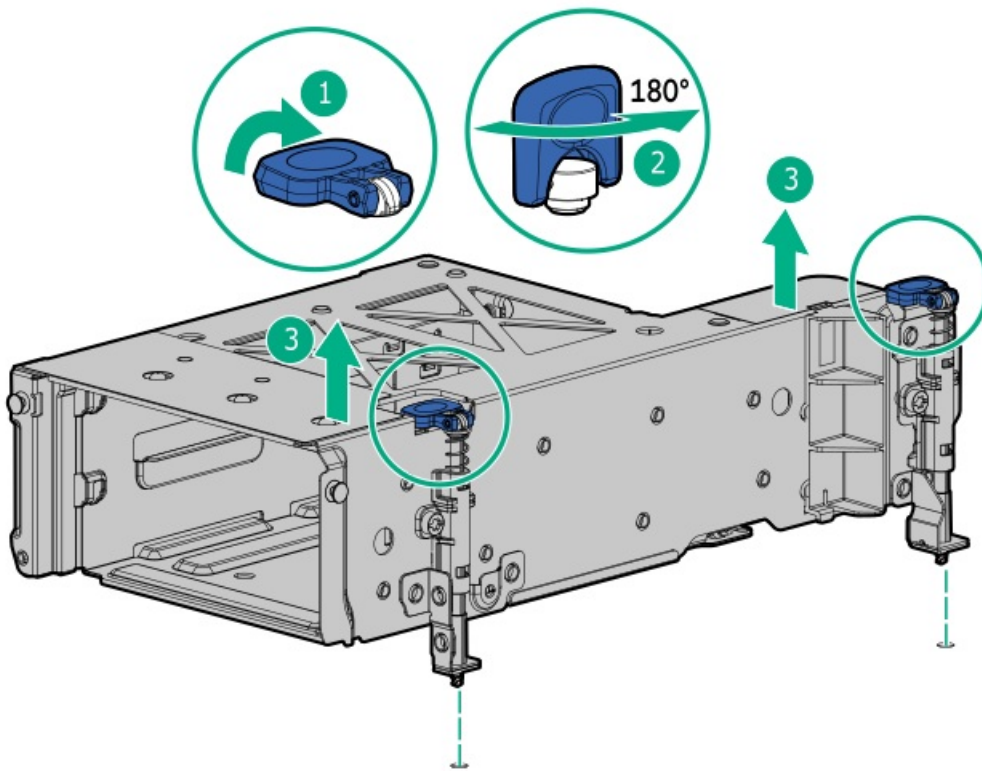

8. Remove the backplane.

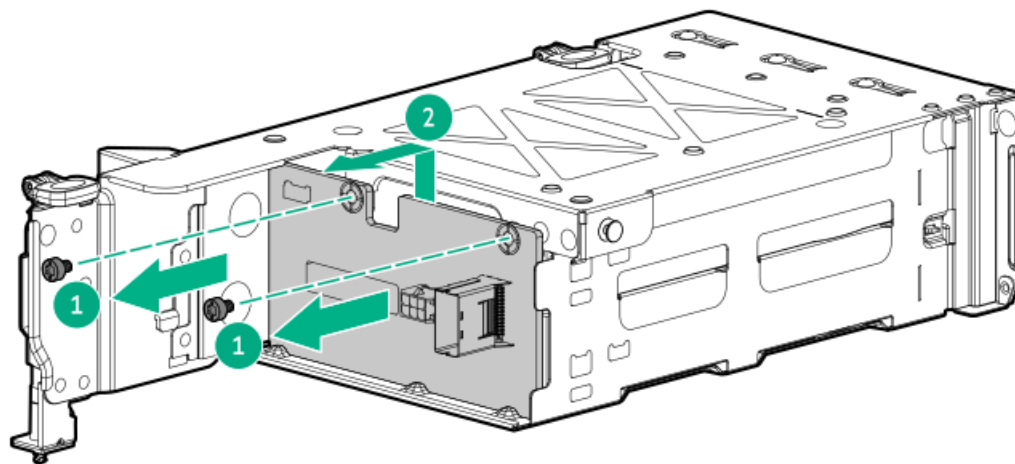

Results

To replace the component, reverse the removal procedure.


Removing and replacing the LFF backplane assembly

Prerequisites

Before you perform this procedure, make sure that you have a T-10 Torx screwdriver available.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the fan cage.
6. Remove all drives.
7. Disconnect all cables connected to the LFF backplane assembly.
8. Remove the LFF backplane assembly.

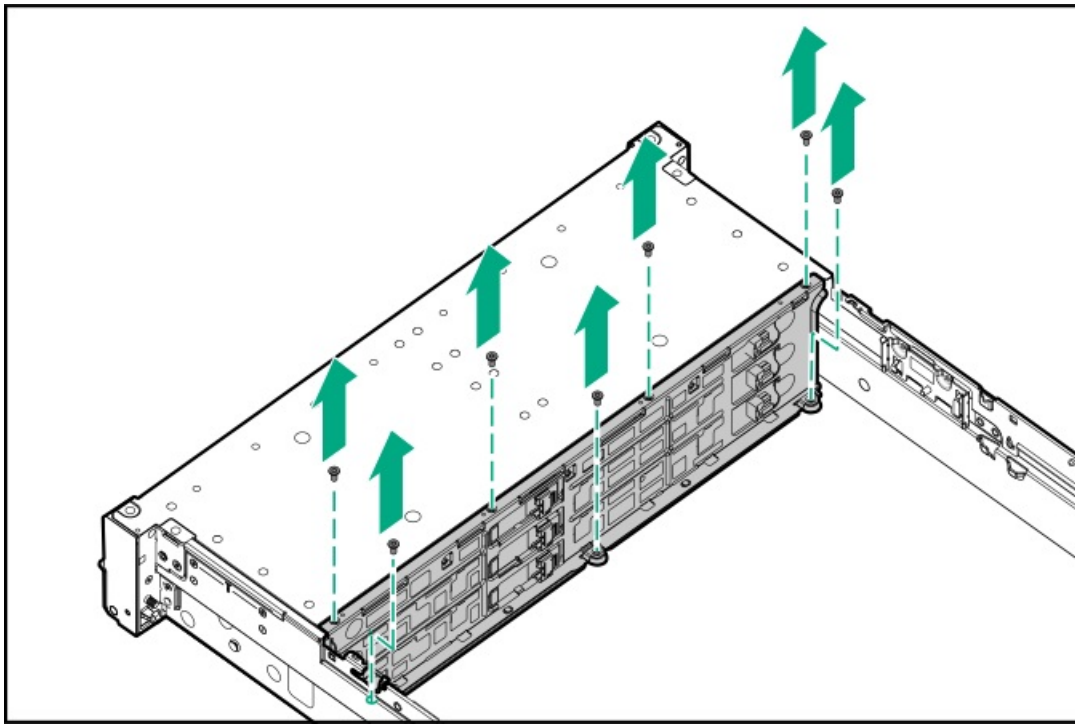

Results

To replace the component, reverse the removal procedure.


Removing and replacing a front LFF drive backplane

Prerequisites


Before you perform this procedure, make sure that you have a T-15 Torx screwdriver available.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the fan cage.
6. Remove all drives.
7. Disconnect all cables connected to the backplane.
8. Remove the LFF backplane assembly.

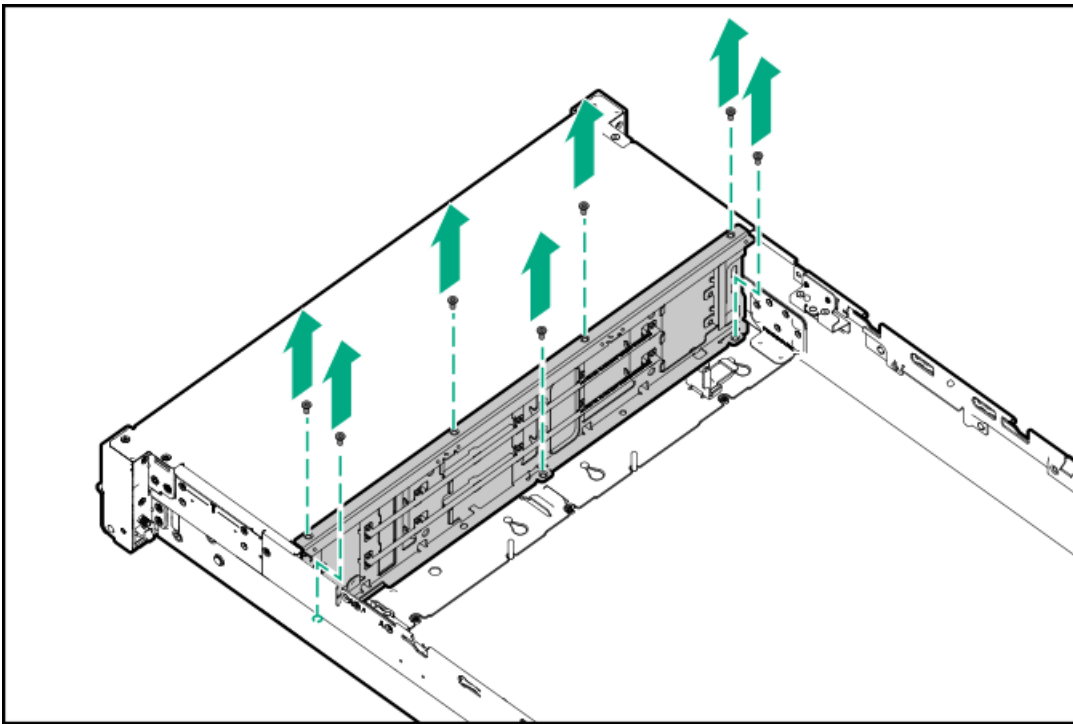

9. Remove the drive backplane.

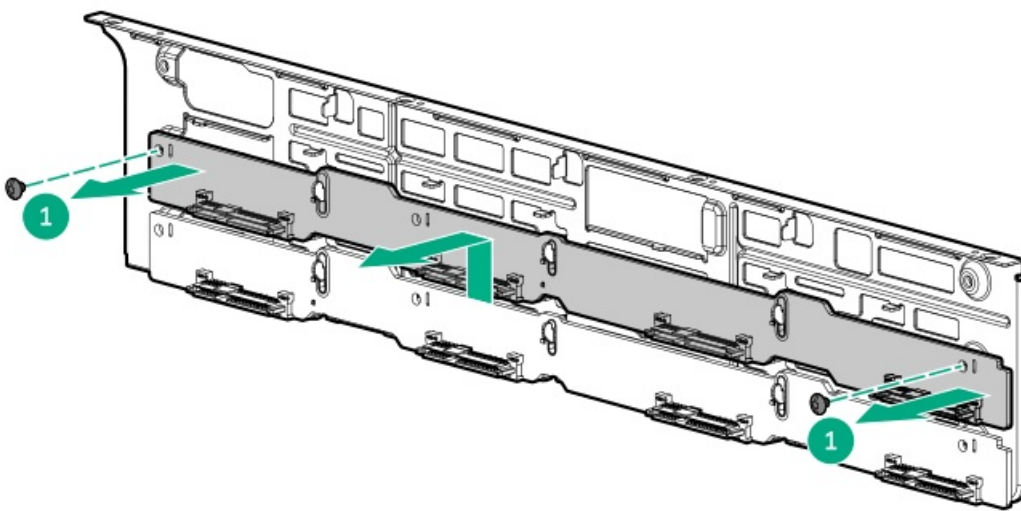

Results

To replace the component, reverse the removal procedure.

Removing and replacing the Systems Insight Display

Prerequisites


Before you perform this procedure, make sure that you have a T-10 Torx screwdriver available.

About this task

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Disconnect the cable from the system board .

Carefully feed the cable to the front of the server.
6. Remove the display.

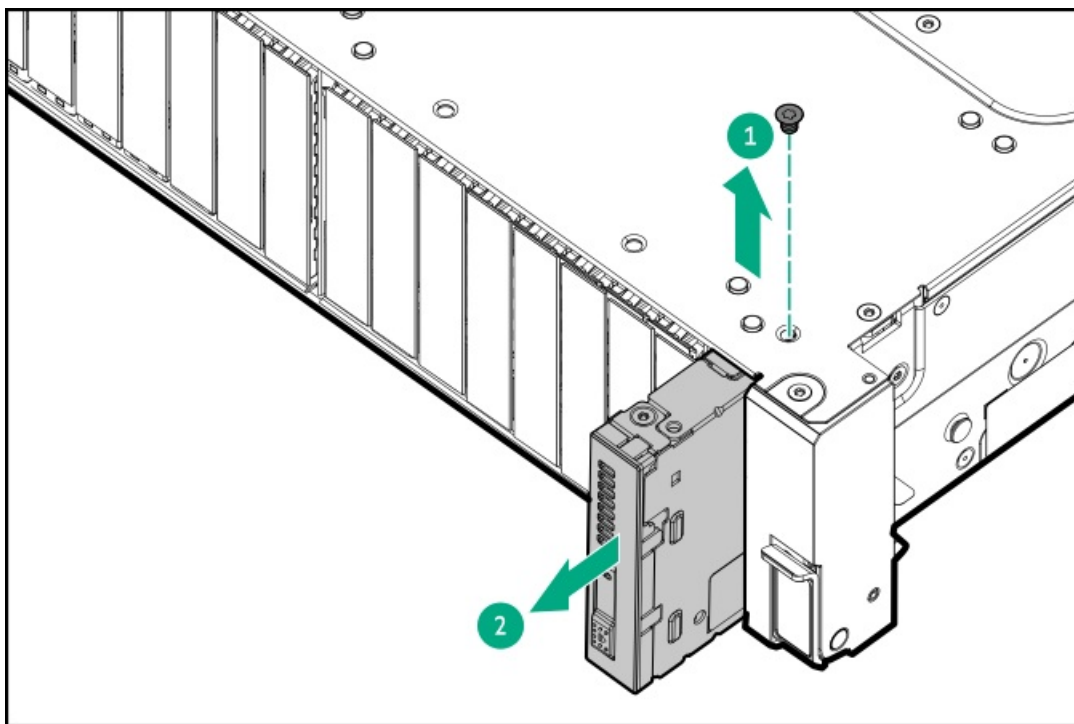

Results

To replace the component, reverse the removal procedure.

Removing and replacing the serial port


Prerequisites

Before you perform this procedure, make sure that you have a 5mm nut driver.


Procedure

1. Power down the server.
2. Remove all power:

- a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
- Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Using a 5mm nut driver, remove the serial port.

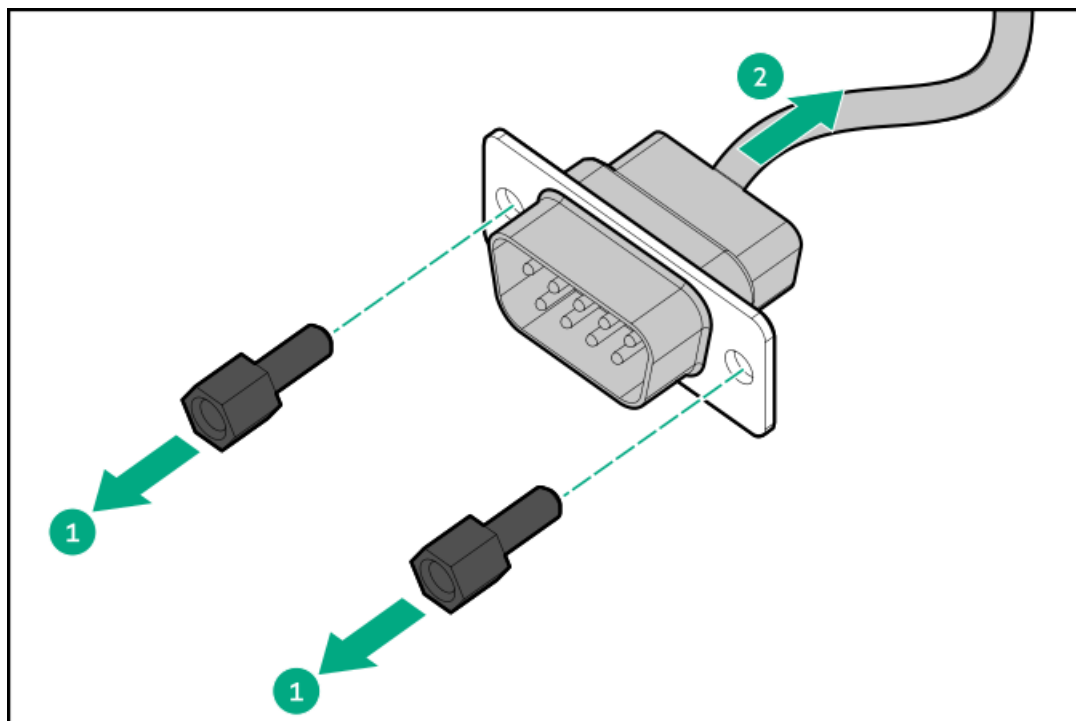

6. Disconnect and remove the serial cable.

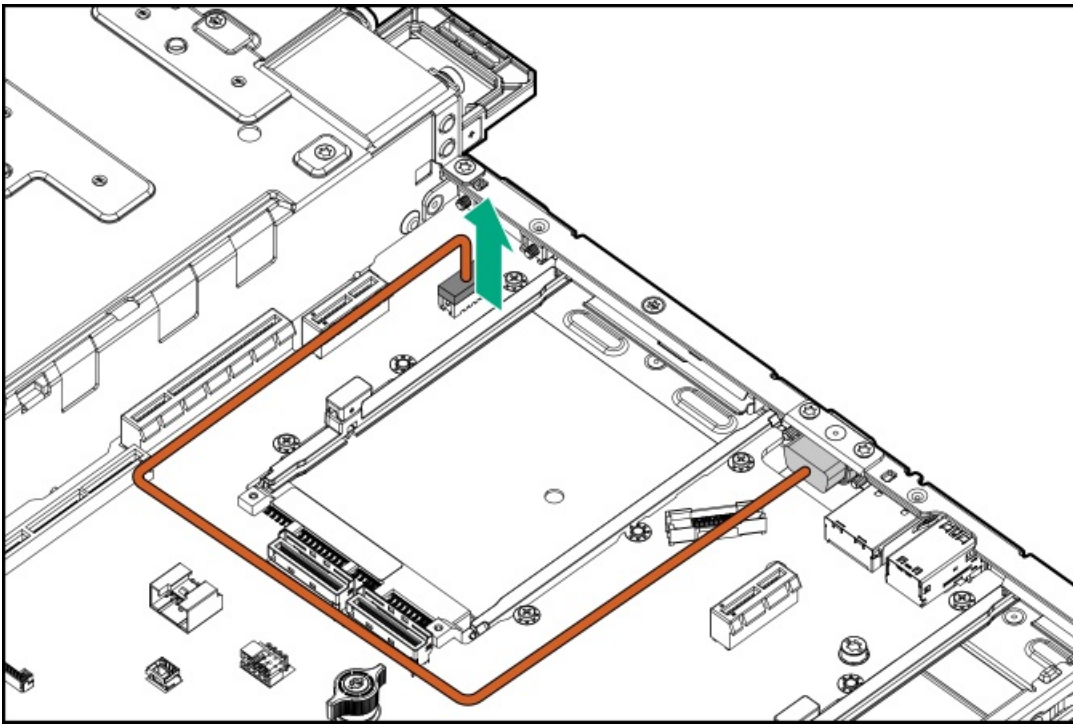

Results

To replace the component, reverse the removal procedure.


Removing and replacing the chassis intrusion detection switch

About this task

https://support.hpe.com/hpesc/public/videoDisplay?videoid=vpqg00005326en_us&noframe

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the chassis intrusion detection switch.

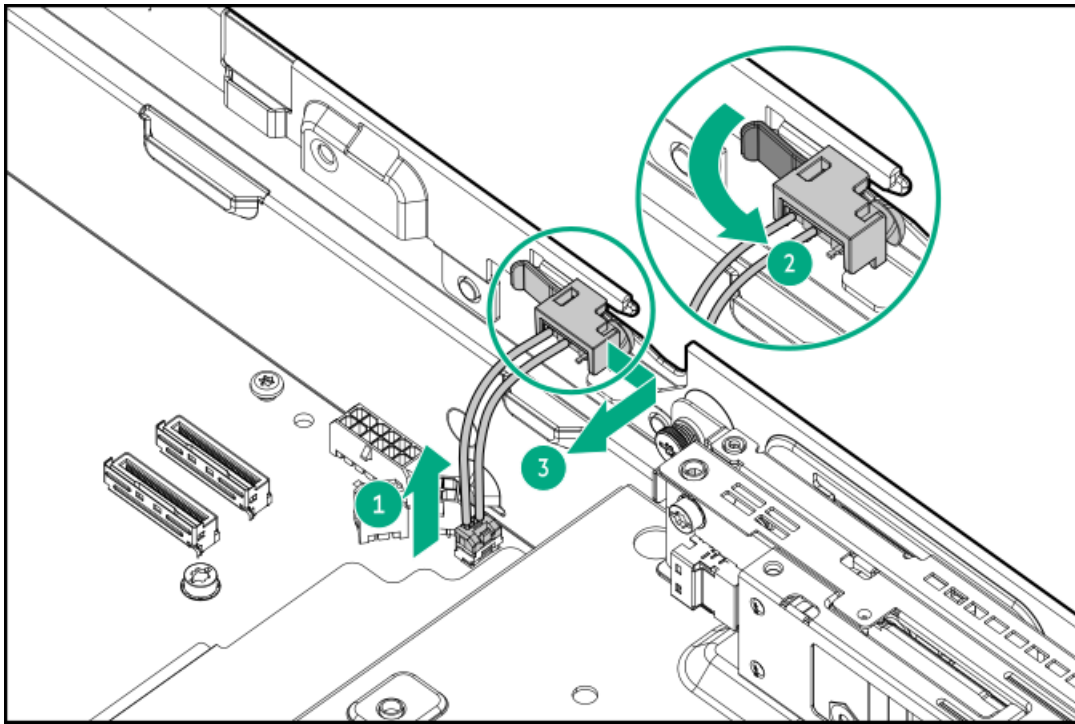

Results

To replace the component, reverse the removal procedure.

Removing and replacing a DIMM

About this task

https://sketchfab.com/models/1ce25ade5f414bb9b1169639bde27151/embed?ui_infos=0&ui_watermark=0&ui_help=0&ui_vr=0&ui_settings=0&ui_inspector=0&ui_hint=2&ui_color=01a982&ui_theme=dark&autostart=1&camera=0

To identify the DIMMs installed in the server, see [DIMM slot locations](#).




WARNING

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server by removing the power cord. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.


Procedure

1. [Power down the server](#).
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - [Extend the server from the rack](#).
 - [Remove the server from the rack](#).

4. Remove the access panel.
5. If needed, do one of the following:
 - Remove the air baffle.
 - Remove the midplane drive cage.
6. Remove the DIMM.

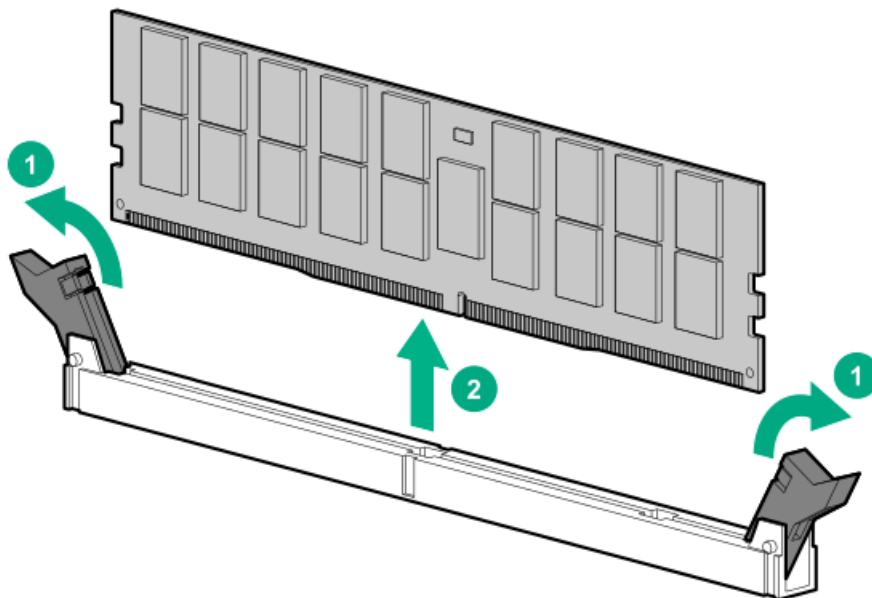

To remove DIMMs in a max-performance heatsink configuration, carefully unlatch and remove the DIMM:

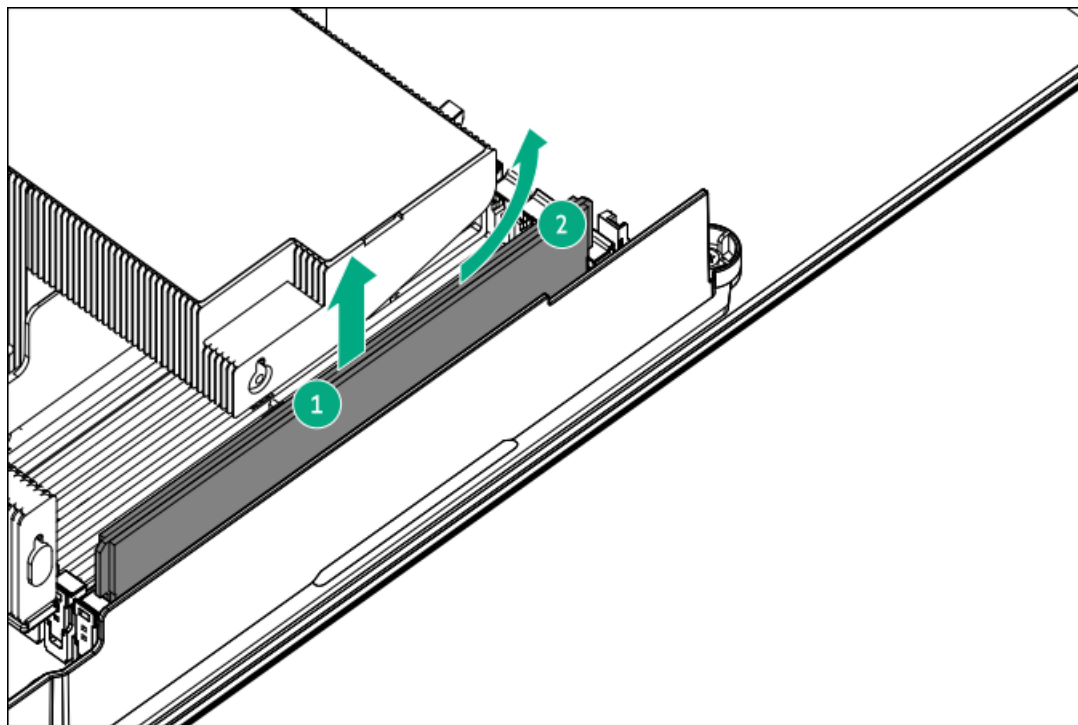

Results


To replace the component, reverse the removal procedure.

Removing and replacing an energy pack

About this task

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Disconnect any external cables that are connected to the expansion board.
4. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
5. Remove the access panel.
6. Do one of the following:
 - Remove the air baffle.
 - Remove the midplane drive cage.
7. Remove the fan cage.
8. Disconnect the energy pack cable, and then remove the energy pack.

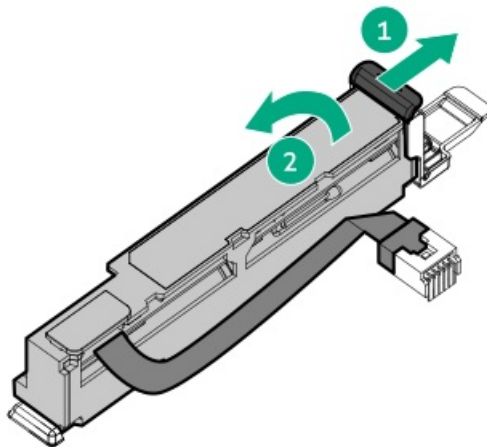

Results

To replace the component, reverse the removal procedure.

Removing and replacing a type-o storage controller

About this task




WARNING

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server by removing the power cord. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Disconnect any external cables that are connected to the expansion board.
4. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
5. Remove the access panel.
6. If installed, remove the riser cage.
7. Remove the OCP 3.0 adapter.

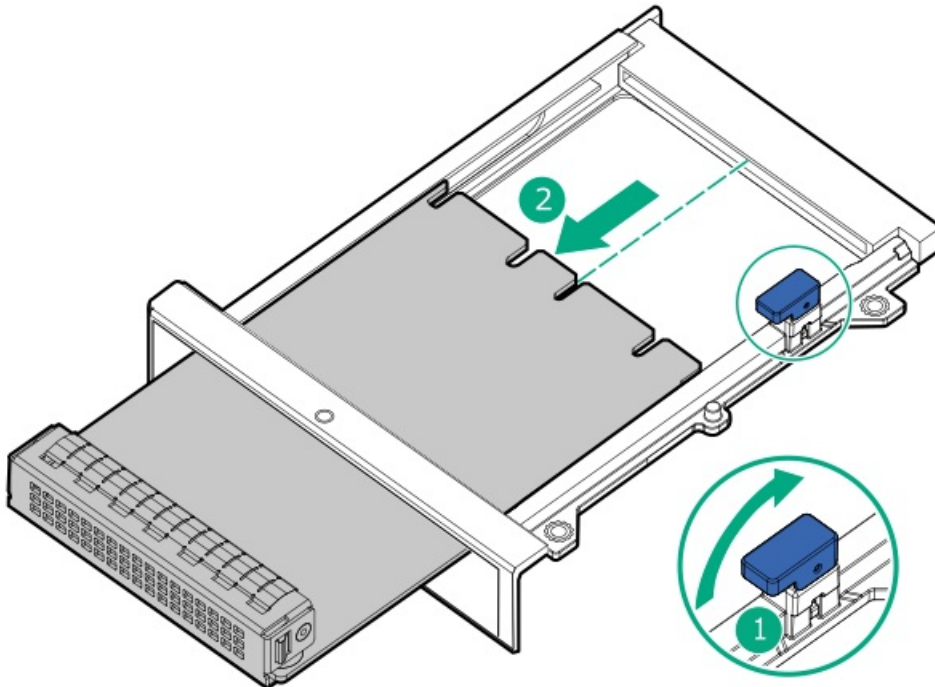

To replace the component, reverse the removal procedure.

Removing and replacing a type-p storage controller

About this task




WARNING

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server by removing the power cord. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.

Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Remove the riser cage:
 - Remove the primary riser cage.
 - Remove the secondary riser cage.
6. Disconnect any cables from the storage controller.
Note the connection for each cable.
7. Remove the storage controller from the riser.

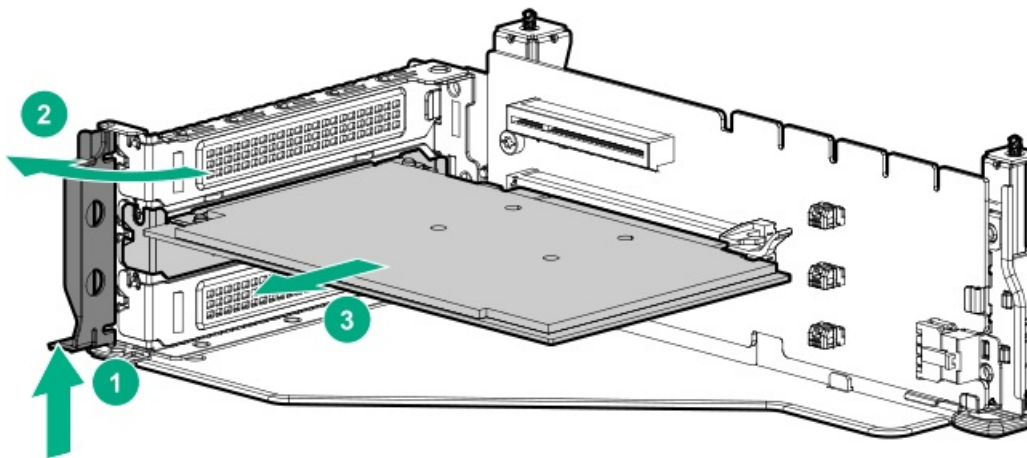

Results

To replace the component, reverse the removal procedure.

Removing and replacing a rear NS204i-u boot device

About this task




WARNING

To reduce the risk of personal injury, electric shock, or damage to the equipment, remove power from the server by removing the power cord. The front panel Power On/Standby button does not shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.


Procedure

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. Disconnect any cables from the boot device.


Note the connection for each cable.
6. Remove the boot device drives.

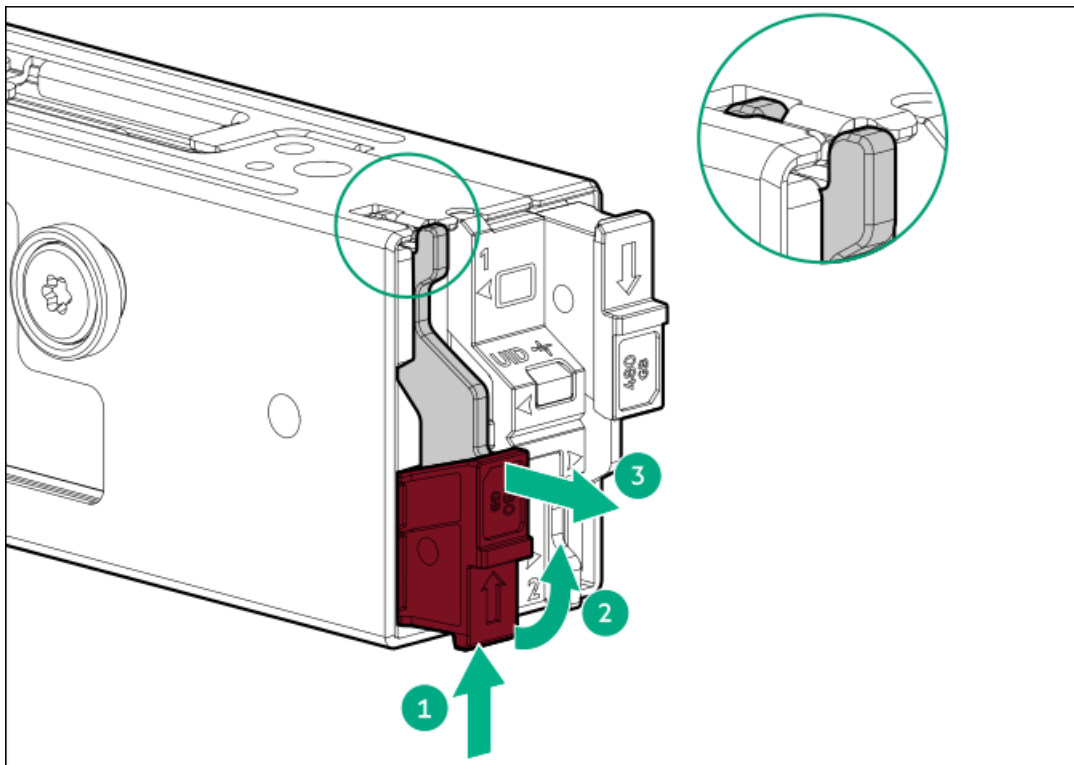

7. Remove the boot device.

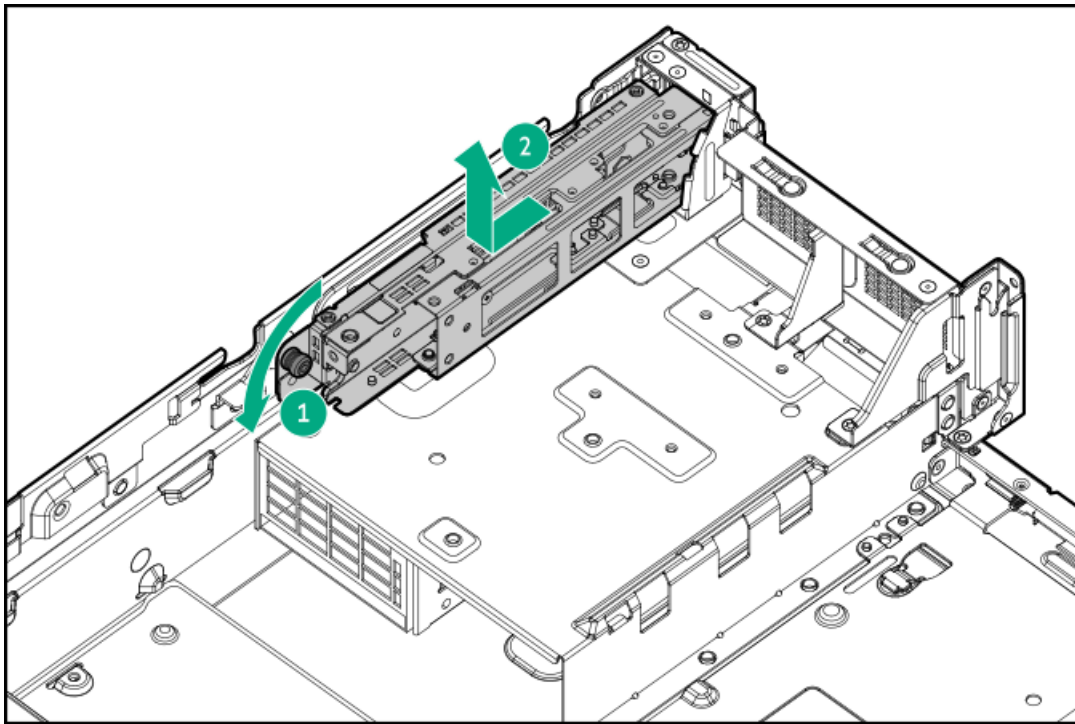

8. Remove the boot device bracket.

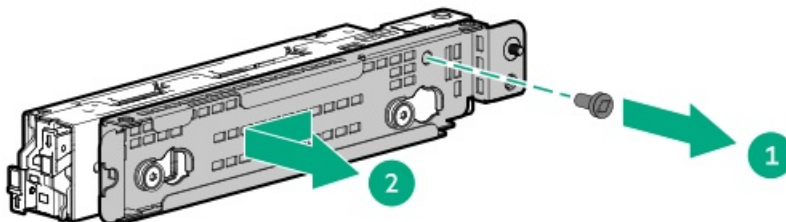

Results

To replace the component, reverse the removal procedure.

Removing and replacing a processor or heatsink

Prerequisites

- Identify the heatsink and processor socket components.
- Review the processor cautions.
- Before you perform this procedure, make sure that you have the following items available:
 - T-30 Torx screwdriver
 - Alcohol wipe

About this task

**WARNING**

To reduce the risk of personal injury from hot surfaces, allow the drives, power supplies, and internal system components to cool before touching them.

**CAUTION**


A discharge of static electricity from a finger or other conductor might damage system boards or other static-sensitive devices. To prevent damage, observe antistatic precautions.

Procedure


1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Disconnect all peripheral cables from the server.
4. If the server is installed in an enclosure or a rack, remove the server and place it on a flat, level work surface.
5. Remove the access panel.
6. Remove the air baffle and all components that block access to the heatsink and processor.
7. Allow all internal system components to cool before continuing.
8. Loosen one pair of diagonally opposite heatsink screws, and then loosen the other pair of heatsink screws.

**CAUTION**

Heatsink screws must be tightened and loosened in alternating sequence. Do not overtighten the screws as this might damage the system board or the processor socket.

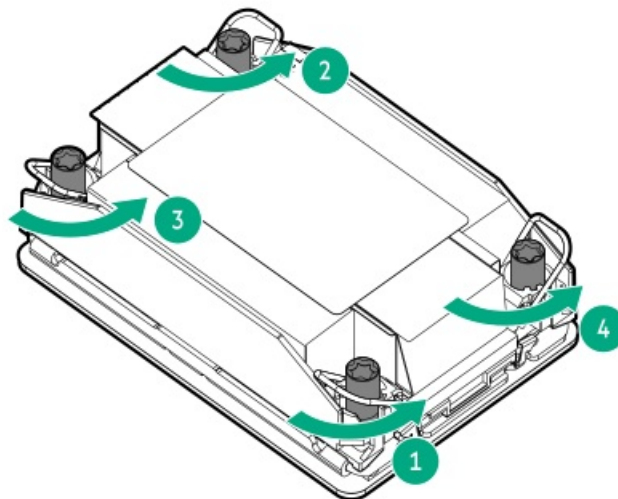

9. Set the anti-tilt wires to the unlocked position.

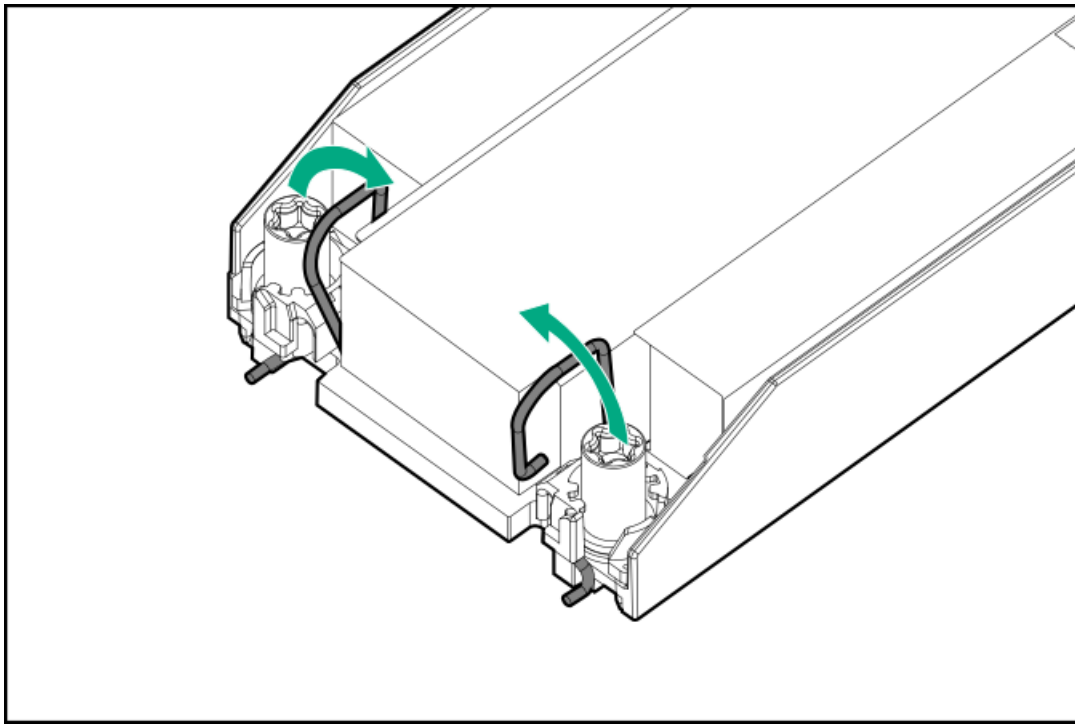


10. Lift the processor-heatsink module straight up from the system board.



CAUTION

To prevent mechanical damage or depositing oil on your hands or other contaminants to the heatsink contact surface, hold the heatsink only by the edge of its base plate. Do not touch the heatsink fins.

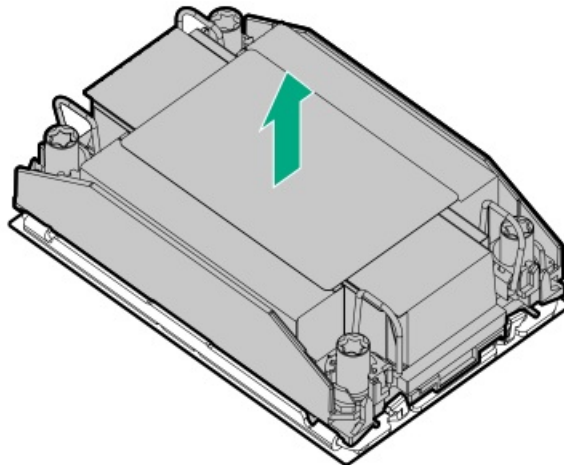

11. Place the processor-heatsink module on a flat work surface with its contact side facing up.
12. If you are not immediately installing the replacement processor-heatsink module, install the dust cover on the empty processor socket:




CAUTION

Do not press down on the dust cover. Pressing down on the dust cover might damage the processor socket.

- a. Press and hold the grip tabs on the dust cover.
- b. Carefully lower the dust cover onto the bolster plate guide posts.

Make sure that the corner holes of the dust cover are properly engaged with the guide posts on the bolster plate.

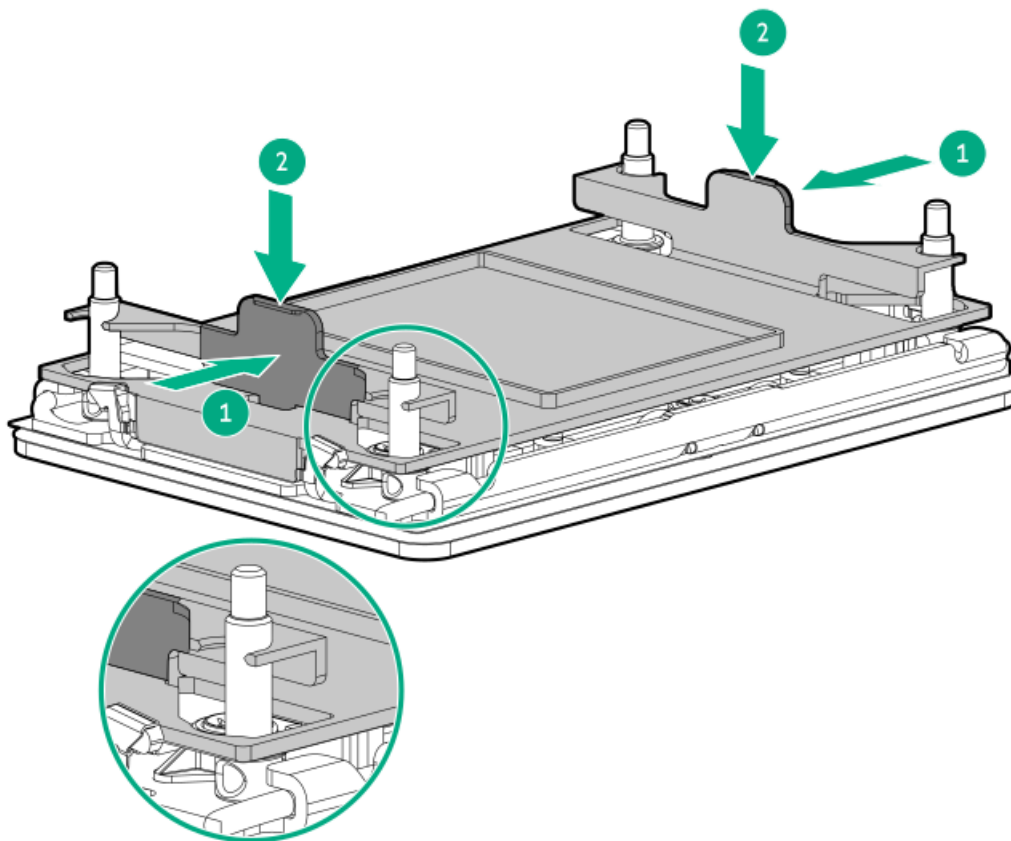



13. Do not touch the pins on the processor socket and the processor.




CAUTION

THE PINS ON THE PROCESSOR SOCKET AND ON THE PROCESSOR ARE VERY FRAGILE AND EASILY DAMAGED. Any damage to them might require replacing the system board.

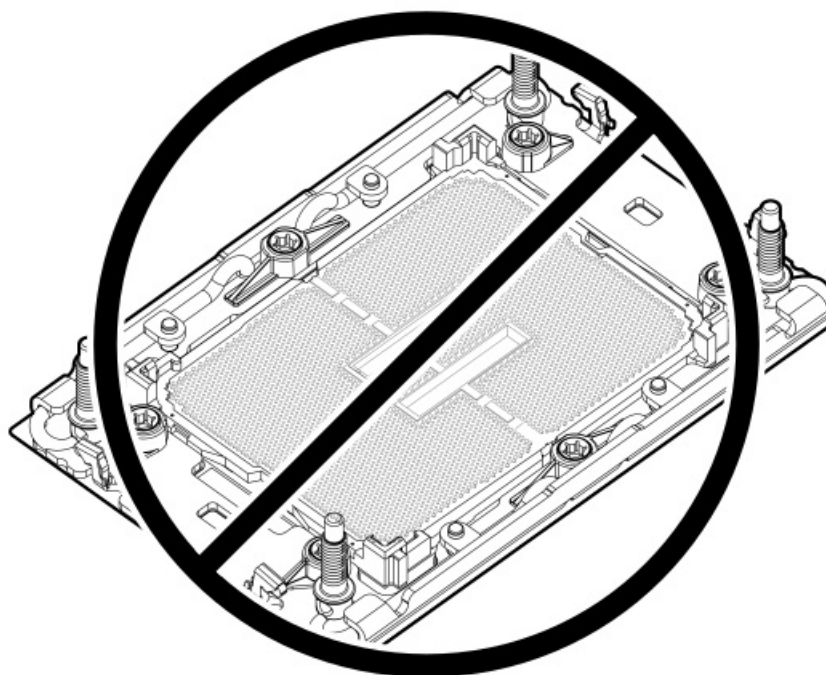

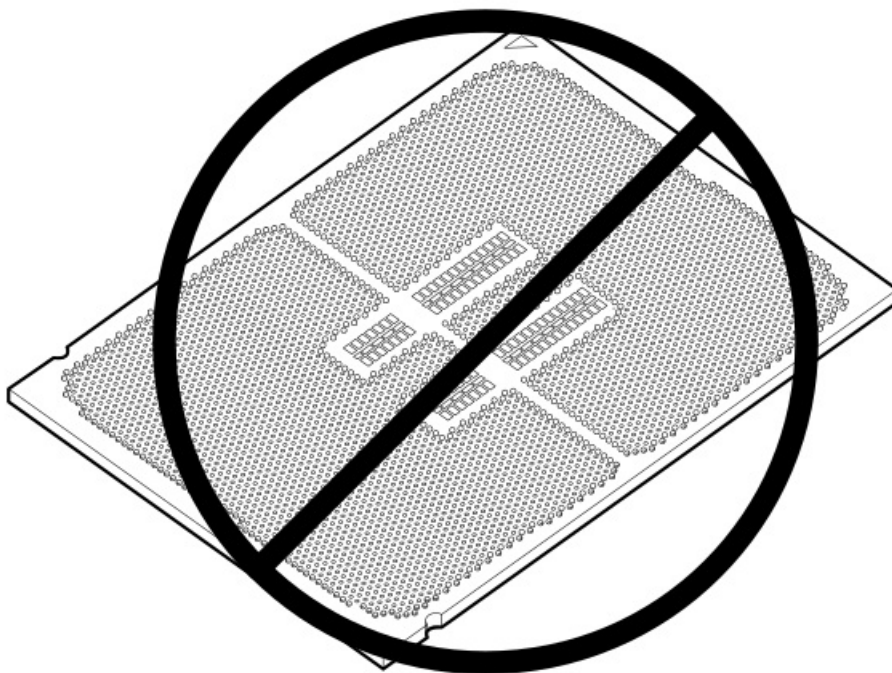

14. Set the anti-tilt wires to the locked position.

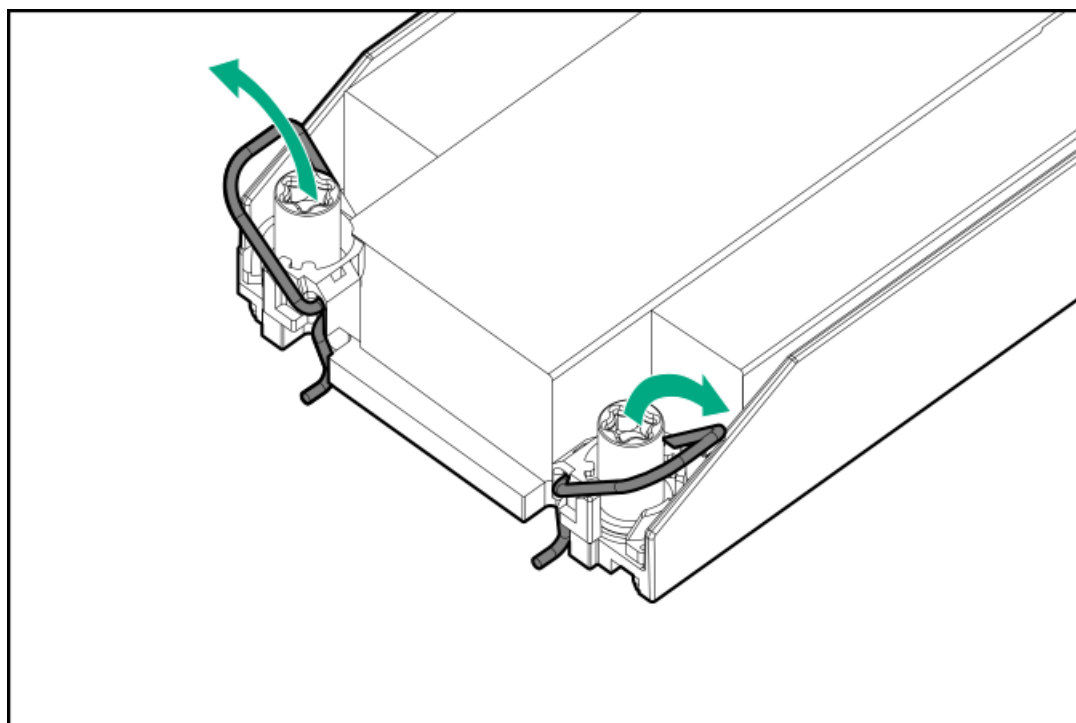

15. Remove the processor from the heatsink:




NOTE

Some processor carriers have a thermal interface material (TIM) breaker lever; some do not. For information about removing a processor without a TIM breaker lever, see the server maintenance and service guide.


- a. Open the TIM breaker lever.

This action breaks the adhesion between the processor and the heatsink.


- b. Hold the processor on its edges, and then remove it from the carrier.

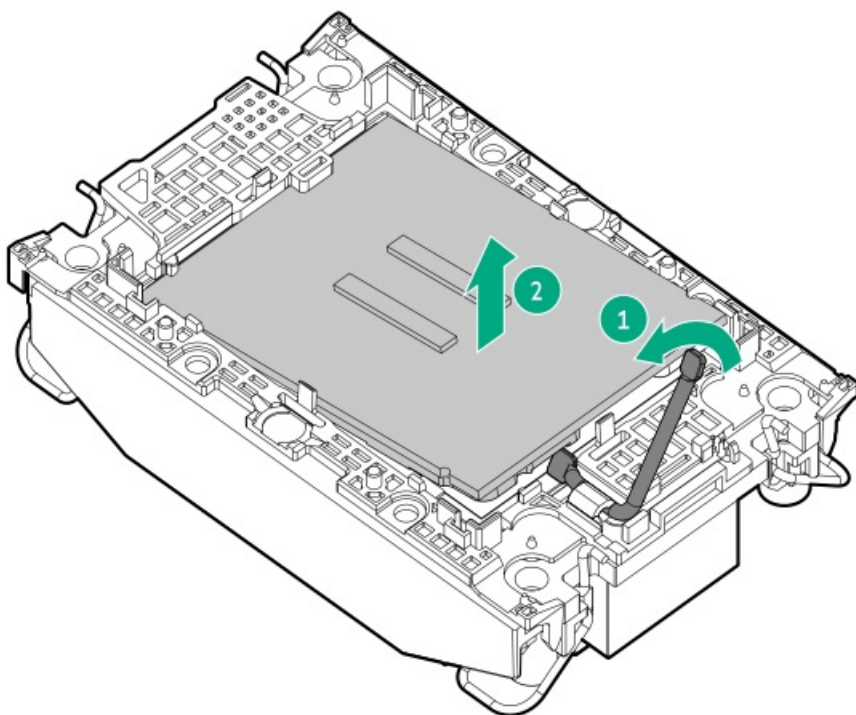

c. Starting from the pin 1 corner and moving in an opposite manner, disengage the processor carrier release tabs from the heatsink.

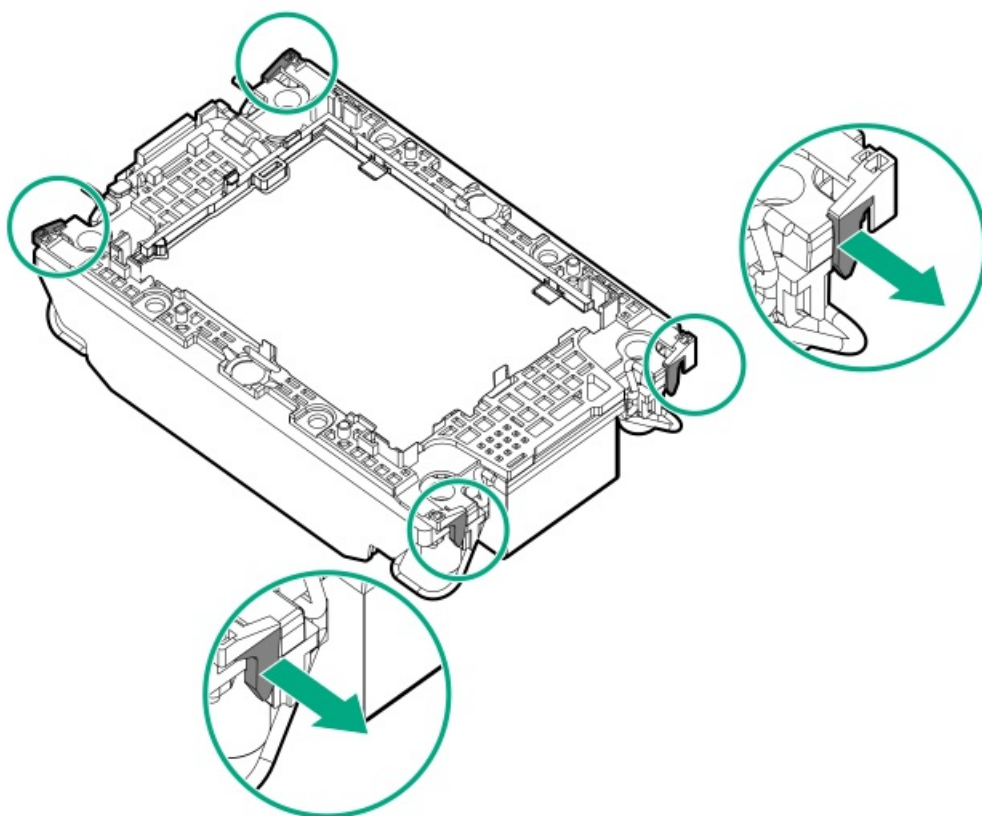


d. Lift the processor carrier away from the heatsink.

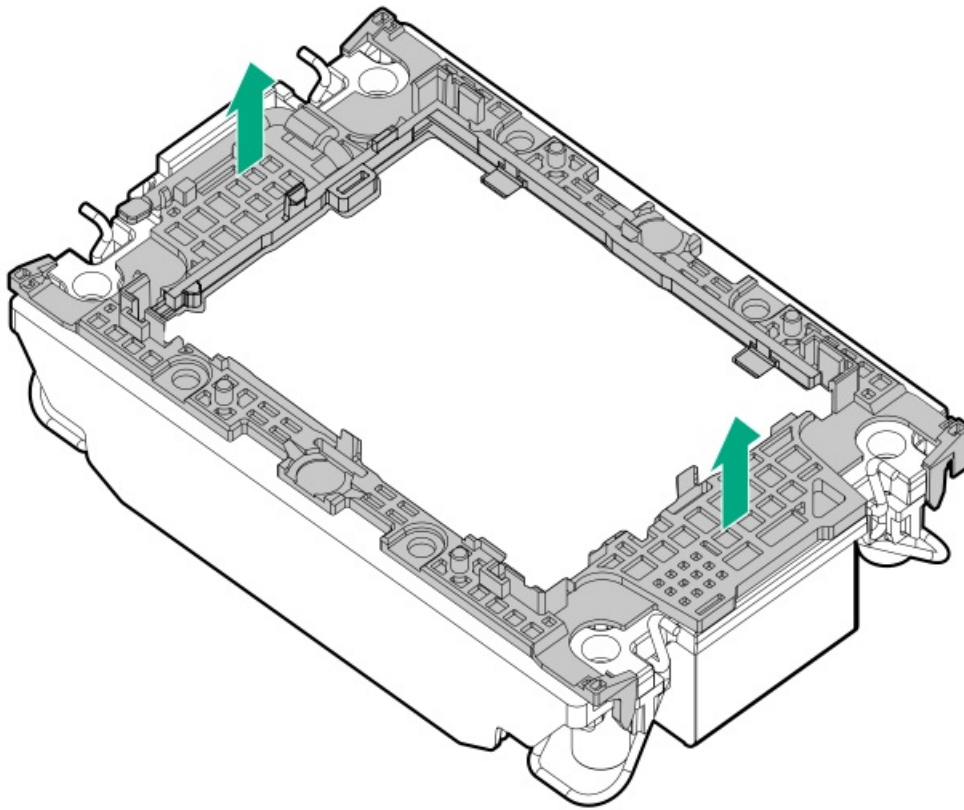

16. If you are using the same heatsink, use an alcohol wipe to remove the existing thermal grease from the heatsink.

Allow the alcohol to evaporate before continuing.

17. If you are using the same heatsink, apply the full content of the thermal grease syringes on top of the processor. Follow the pattern shown in the following image.

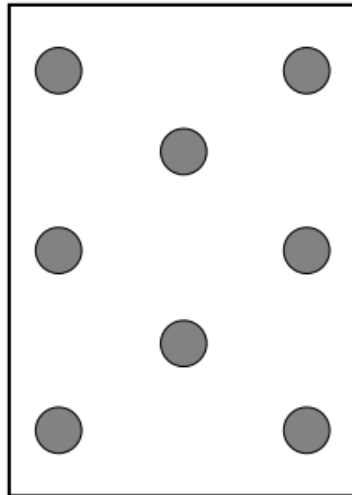


18. If you are using a new heatsink, remove the protective film from the thermal interface material.




CAUTION

To prevent mechanical damage or depositing oil on your hands or other contaminants to the heatsink contact surface, hold the heatsink only by the edge of its base plate. Do not touch the heatsink fins.

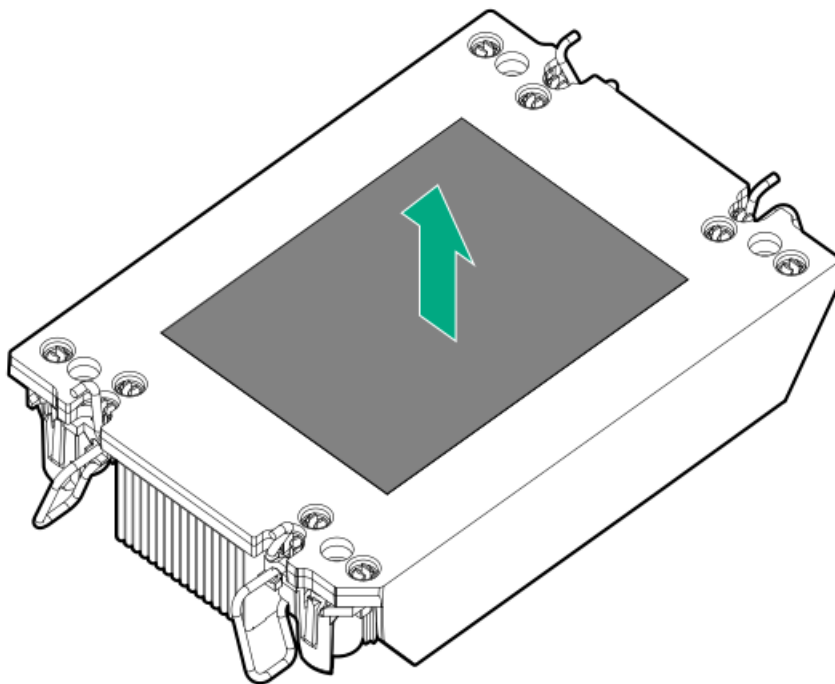


19. Set the anti-tilt wires to the locked position.

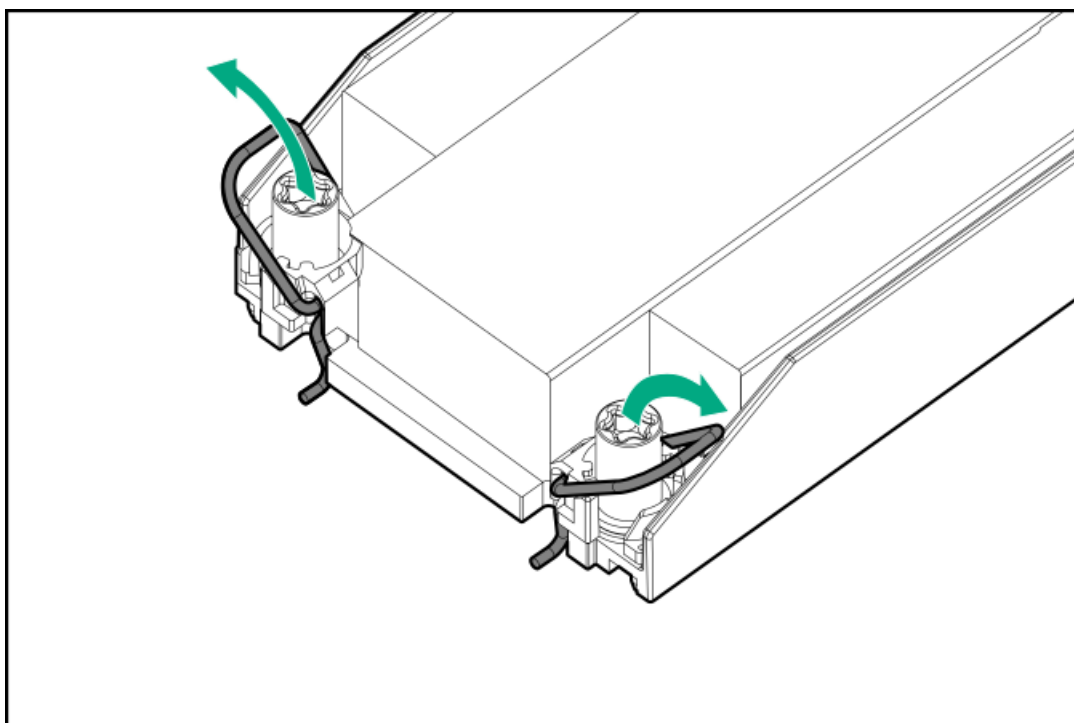


20. Verify that the processor is securely latched to the processor carrier.

The following illustration calls out the keying feature tabs that secure the processor. Different processor carriers will have these tabs in different locations.

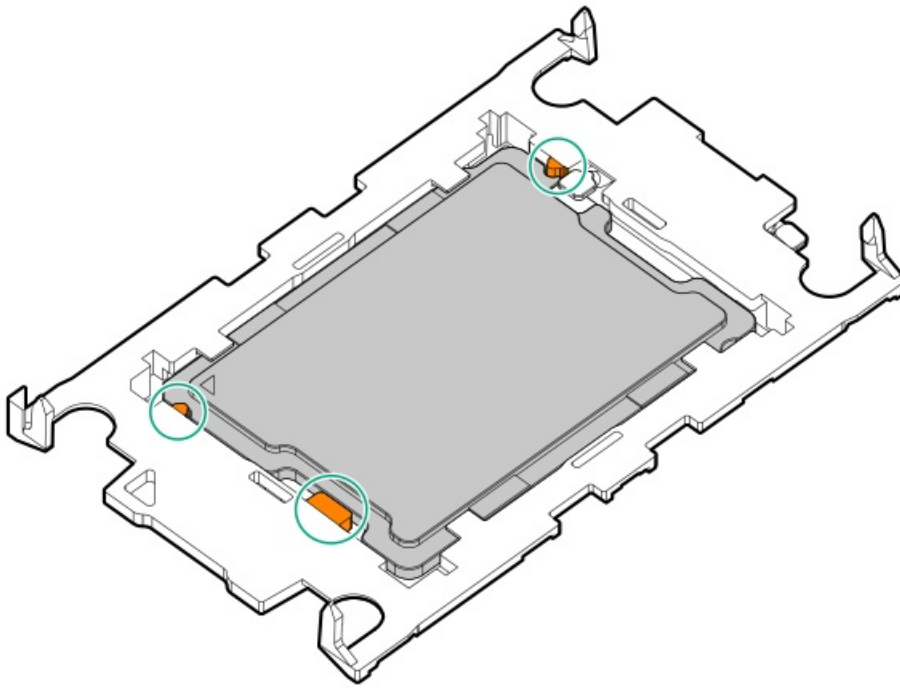


21. Attach the heatsink to the processor carrier:

- a. Align the pin 1 indicator on the processor carrier with that on the heatsink.

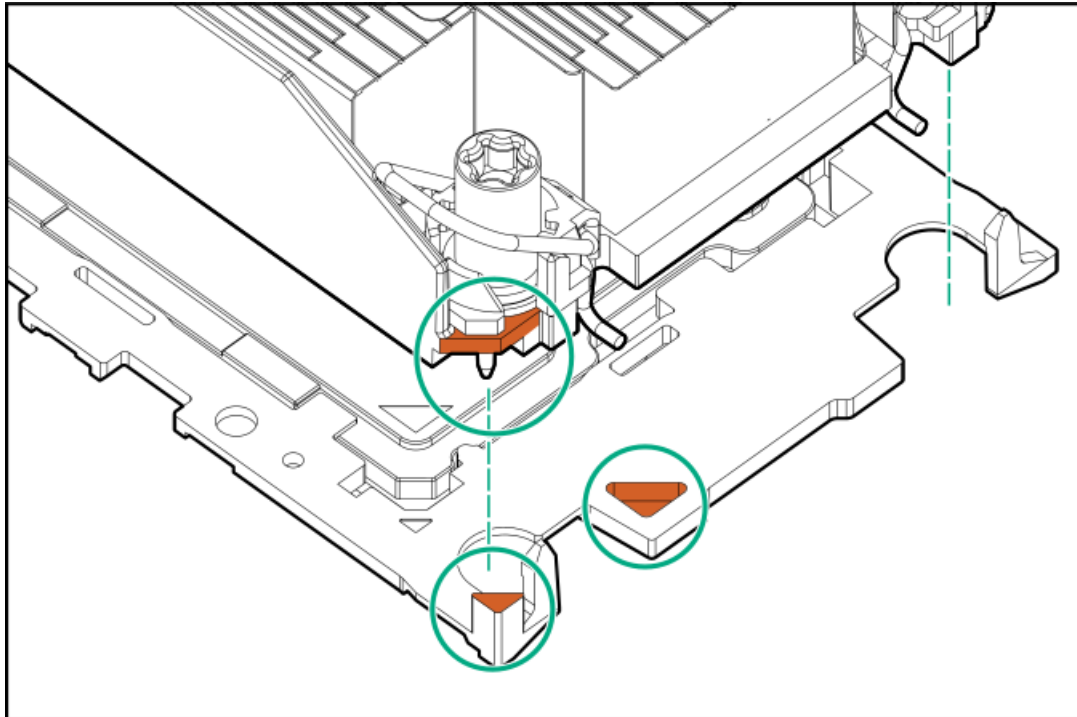


- b. Lower the heatsink on the processor carrier until the carrier tabs snap into place.

There will be an audible click to indicate that the heatsink is properly latched on the processor carrier.

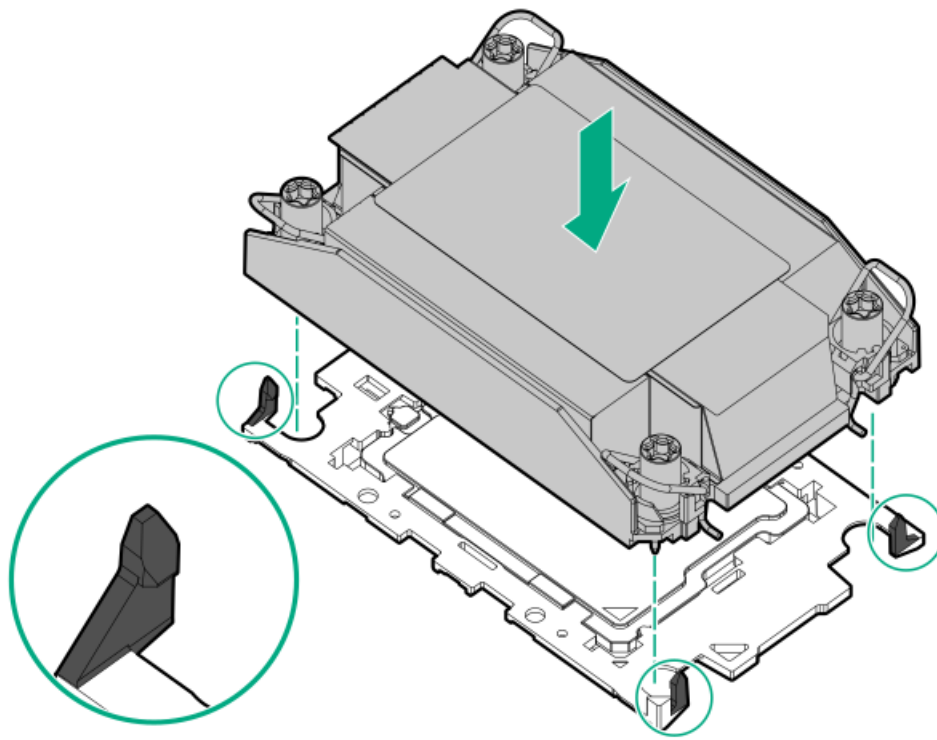


22. Perform the following verification steps:


- a. Verify that the tabs on the processor carrier are securely latched on the heatsink.

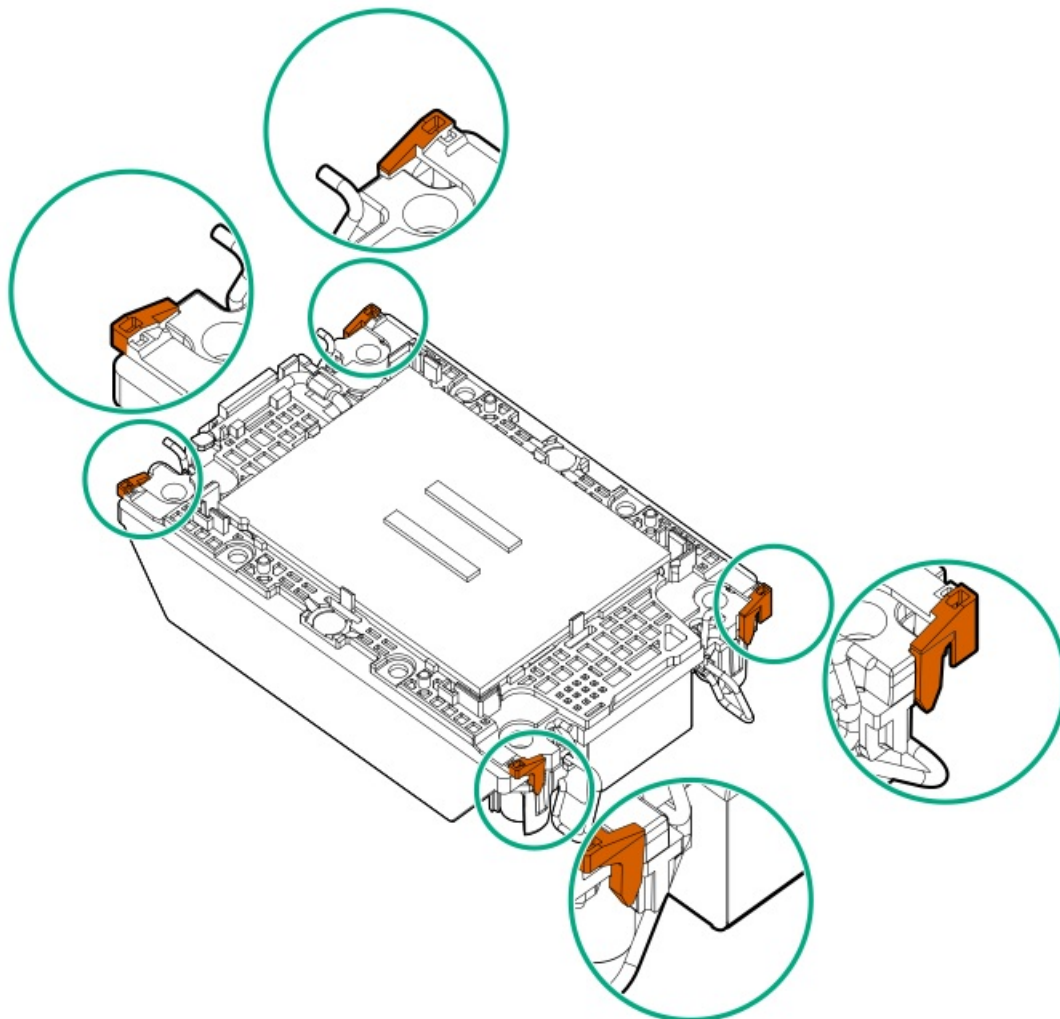


- b. Verify that the pin 1 indicators on the processor and processor carrier are aligned.

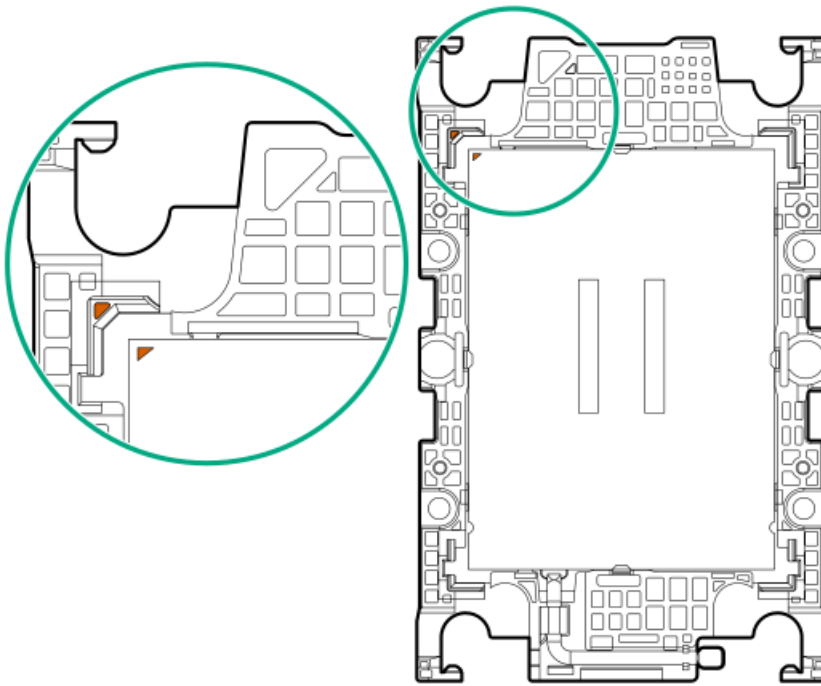

- c. Verify that the processor is properly secured by the carrier snaps.

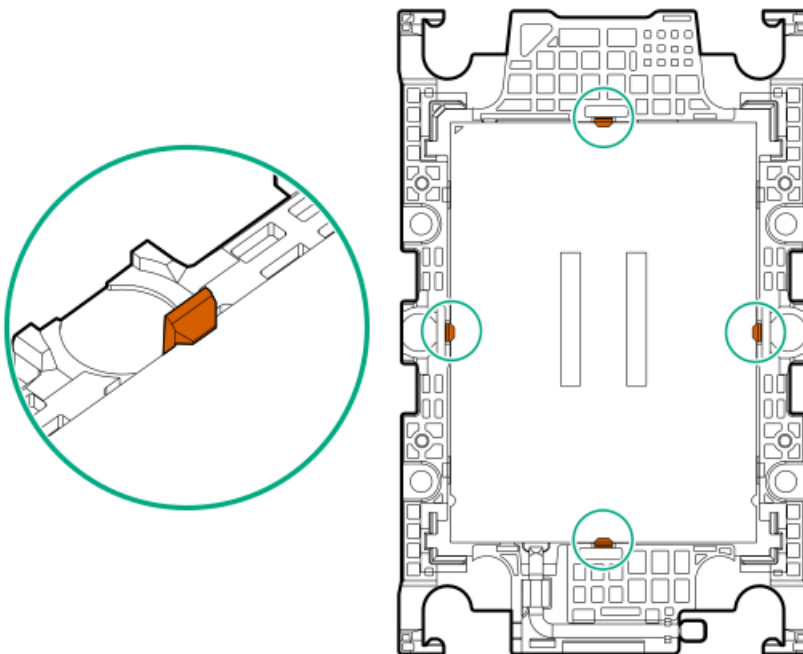

23. Set the anti-tilt wires to the unlocked position.

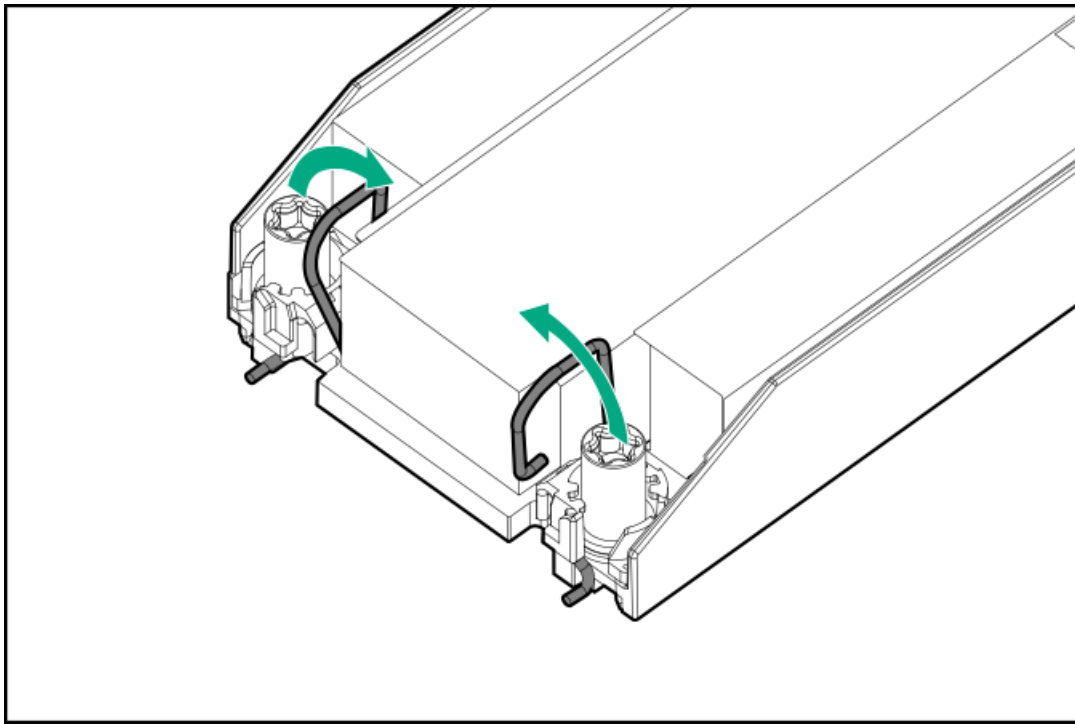

24. Install the processor-heatsink module:




CAUTION


To prevent thermal failure or component damage, do not move the heatsink once the bottom of its base plate touches the top of the processor. Excessive heatsink movement can cause the thermal grease to smear and become uneven. Voids in the compound can adversely impact the transfer of heat away from the processor.

- a. When using a torque screwdriver to tighten the heatsink screws, set 0.9 N-m (8 in-lb) of torque .
- b. Note the **Front of server** text on the heatsink label to correctly orient the processor-heatsink module over the bolster plate.
- c. Carefully lower the processor-heatsink module onto the bolster plate guide posts.


The posts are keyed so that the module can only be installed one way. Make sure that the module is properly seated on the bolster plate before securing the screws.

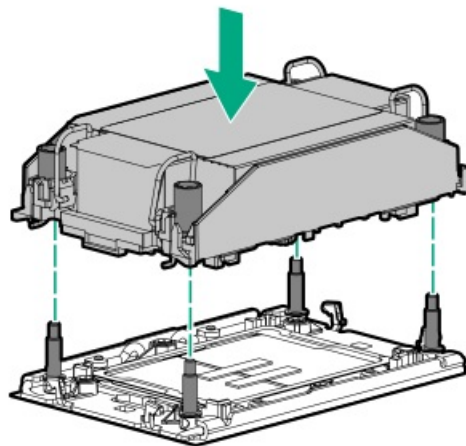

- d. Set the anti-tilt wires to the locked position.

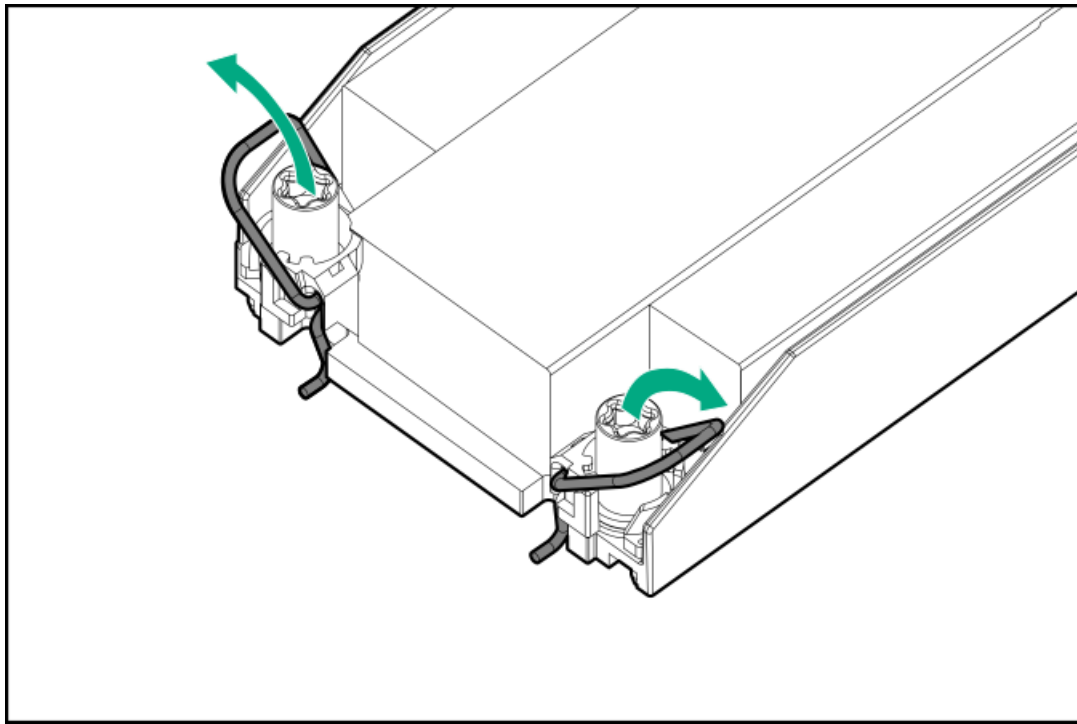

- e. Tighten one pair of diagonally opposite heatsink screws, and then tighten the other pair of heatsink screws.

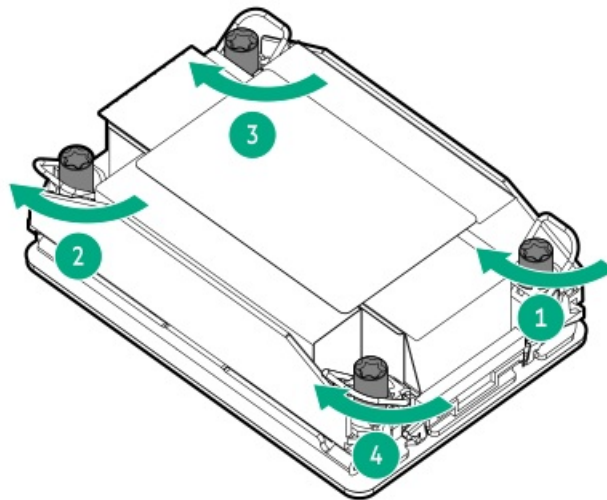

25. Install the air baffle and other removed hardware components.
26. Install the access panel.
27. If the server was removed from an enclosure or a rack, reinstall it now.
28. Connect all peripheral cables to the server.
29. Connect each power cord to the server.
30. Connect each power cord to the power source.
31. Power up the server.

Results

The installation procedure is complete.

Removing and replacing the direct liquid cooling assembly

Prerequisites


- Read the **HPE Cray XD Direct Liquid Cooling System Site Preparation, User, and Maintenance Guide** :
<https://www.hpe.com/info/xdDLCguide>
- Identify liquid cooling components
- In addition to the tools and materials required for the DLC System, be sure you also have the following:
 - T-30 Torx screwdriver
 - T-10 Torx screwdriver

About this task


The entire cooling loop must be removed as one unit. Do not attempt to remove riser cages or cold plates separately.

Procedure


1. Back up all server data.
2. Power down the server.
3. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
4. Disconnect the hoses from the DLC manifold.
5. Remove the server from the rack.
6. Remove the access panel.
7. Prepare to remove the components.
 - a. Loosen the riser cage or NS204i-u boot device. Set it on the slot or chassis while you loosen the cold plate nuts.
 - For the NS204i-u assembly:

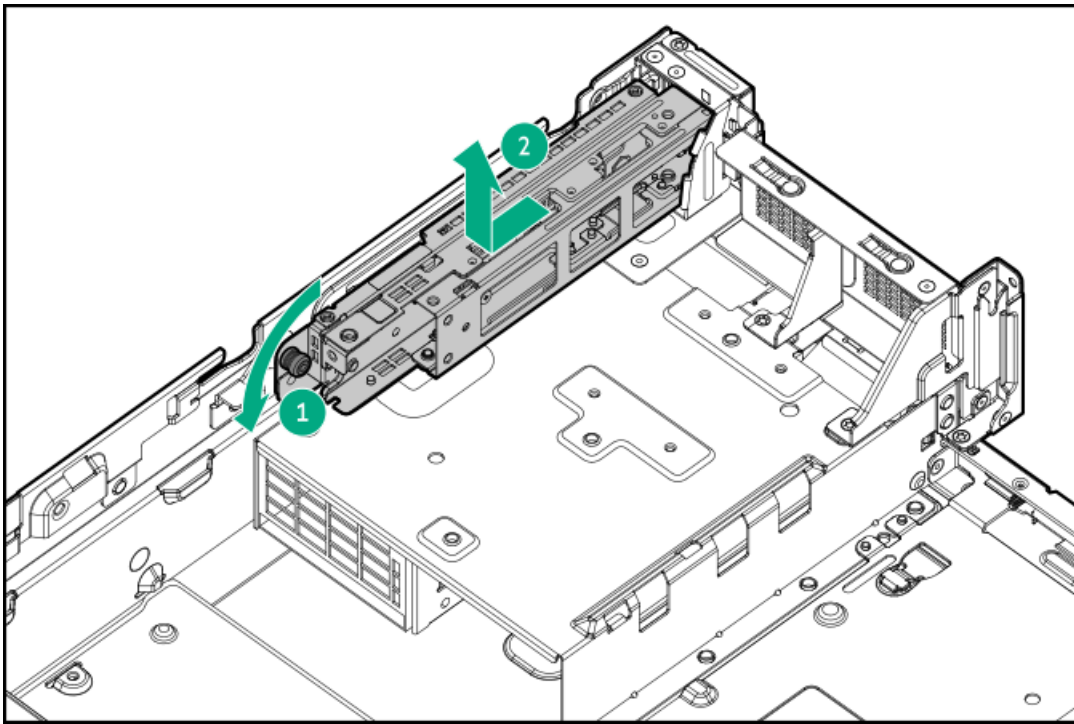


- For the PCIe assembly:

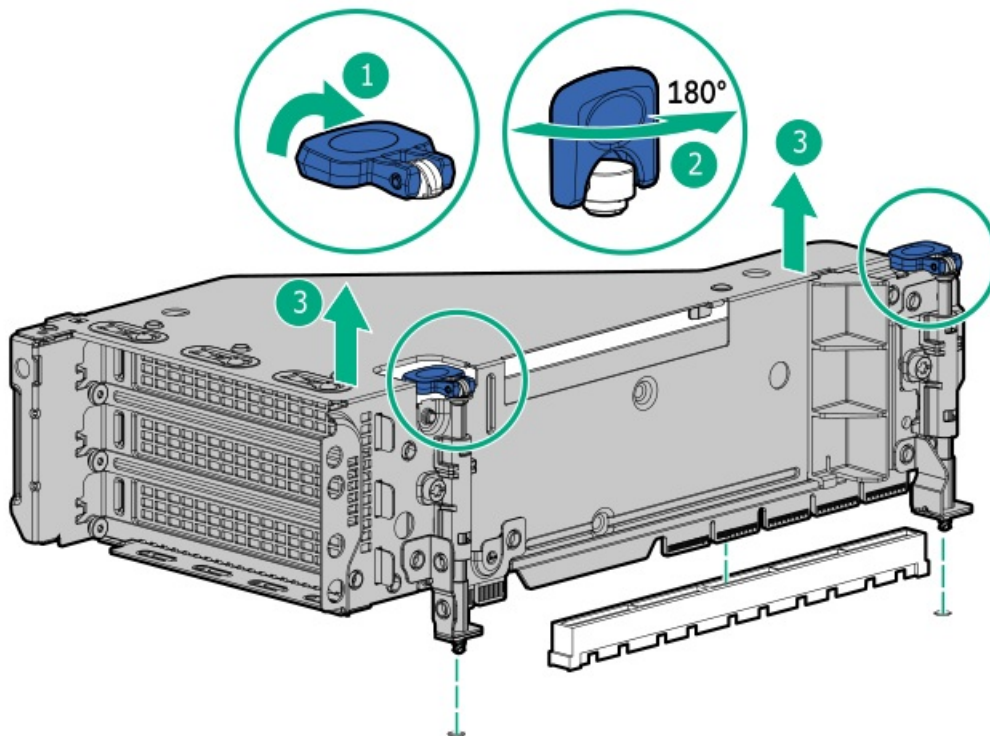


- Using a T-30 Torx screwdriver, loosen the nuts on both cold plates.

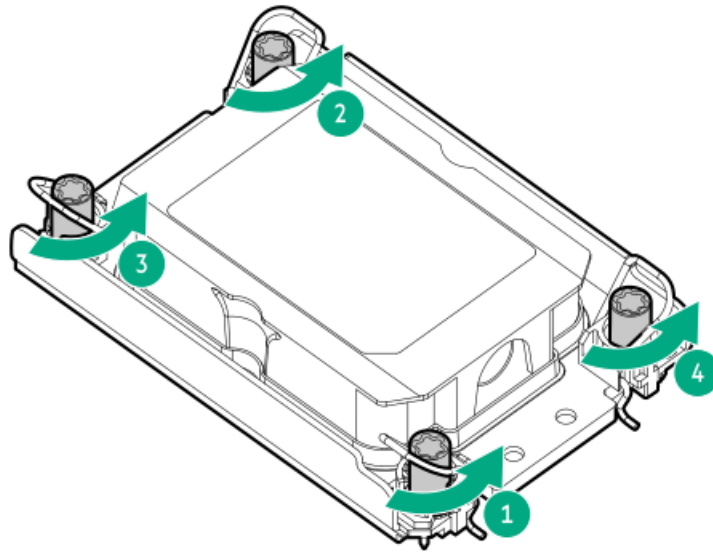


- c. Verify that the nuts are disengaged. Partially lift the cold plates away from the socket, and then set them back down.

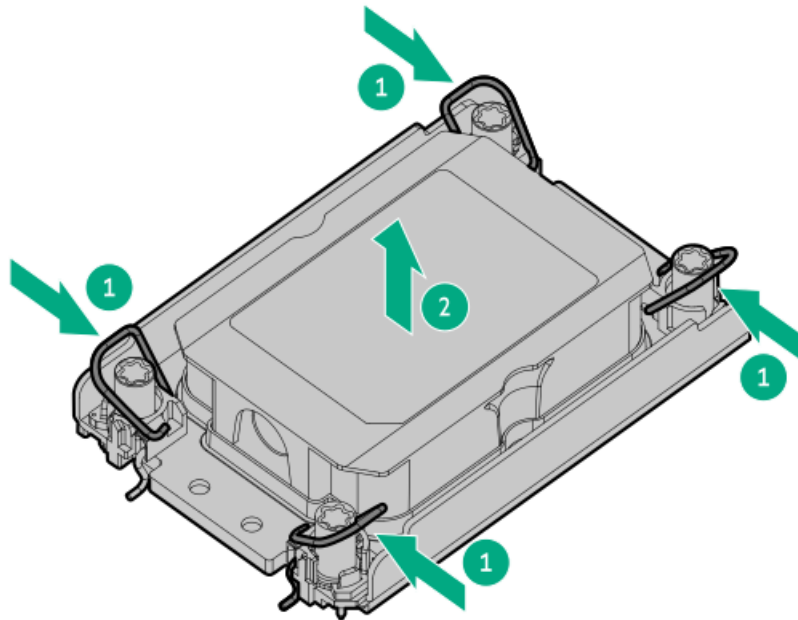


8. Holding the hose between the cold plates and the riser cage, lift the assembly away from the server.
- To remove the NS204i-u assembly:

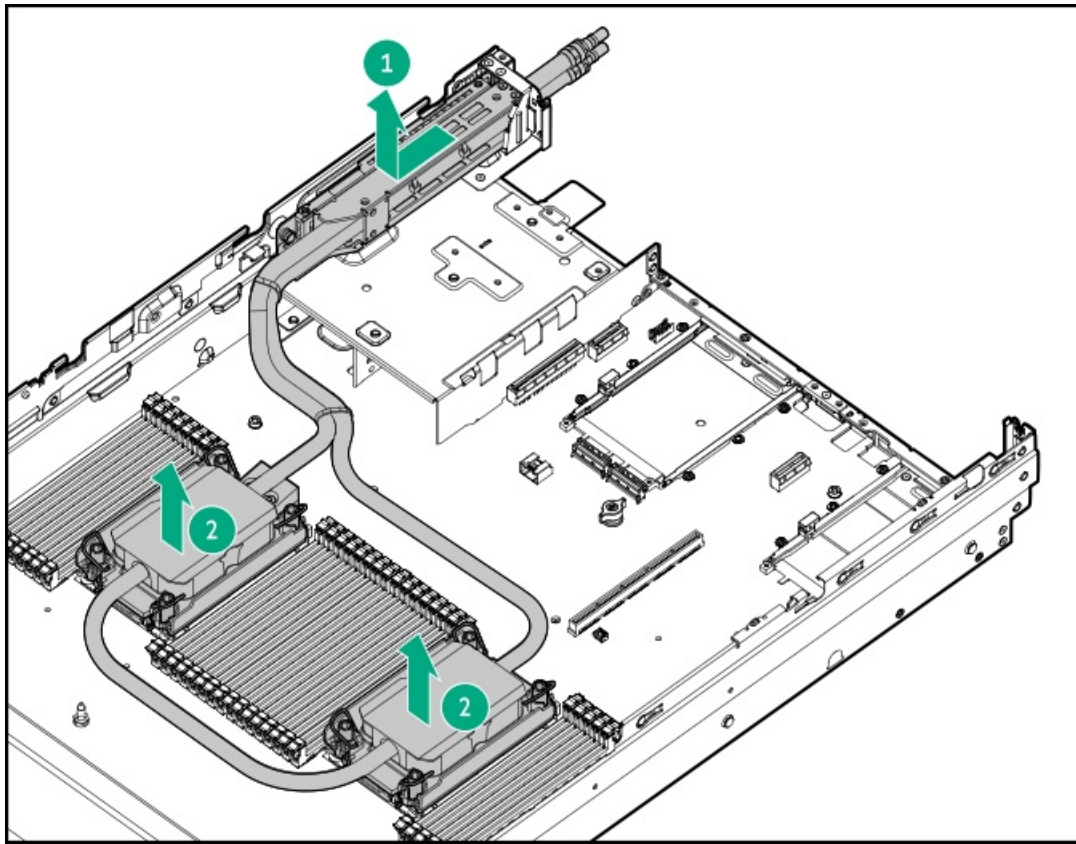


- To remove the PCIe assembly:

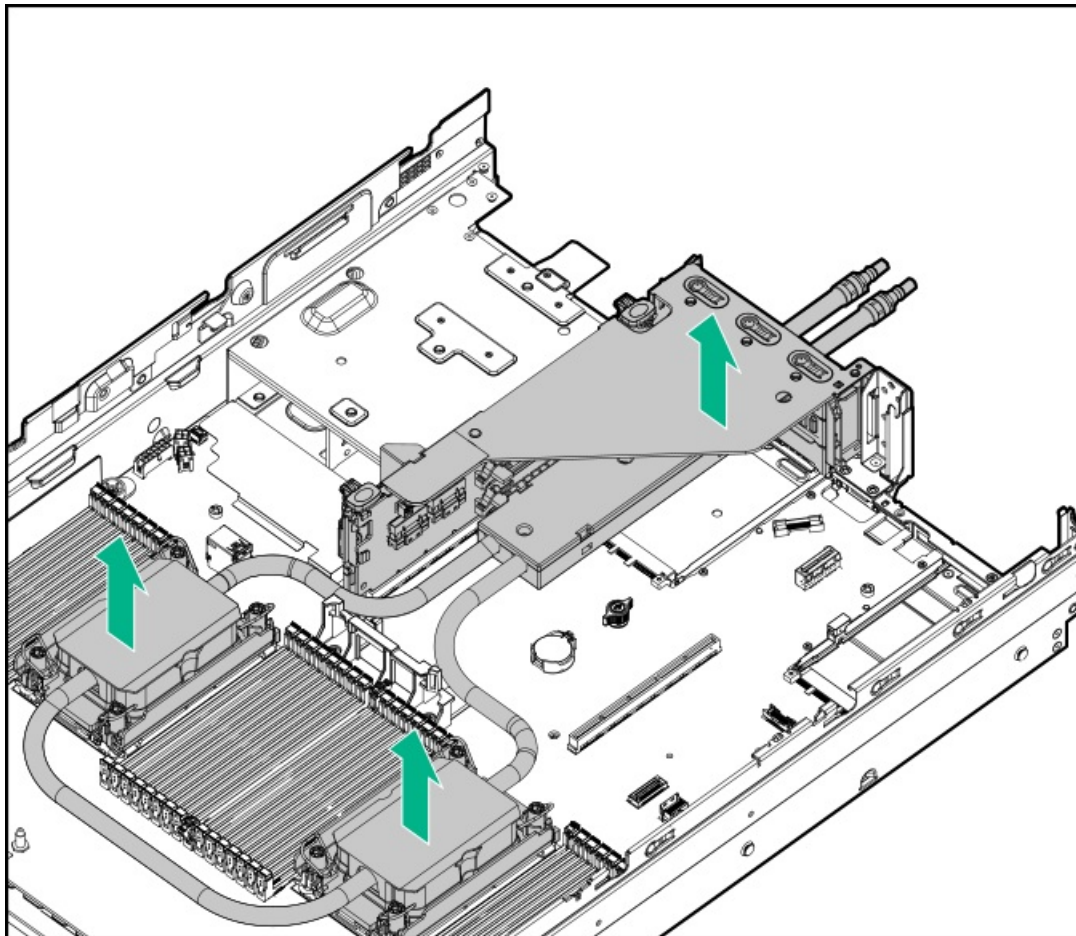

9. Set the assembly upside down on a flat surface.
10. Remove the bracket.
 - To remove the NS204i-u assembly:

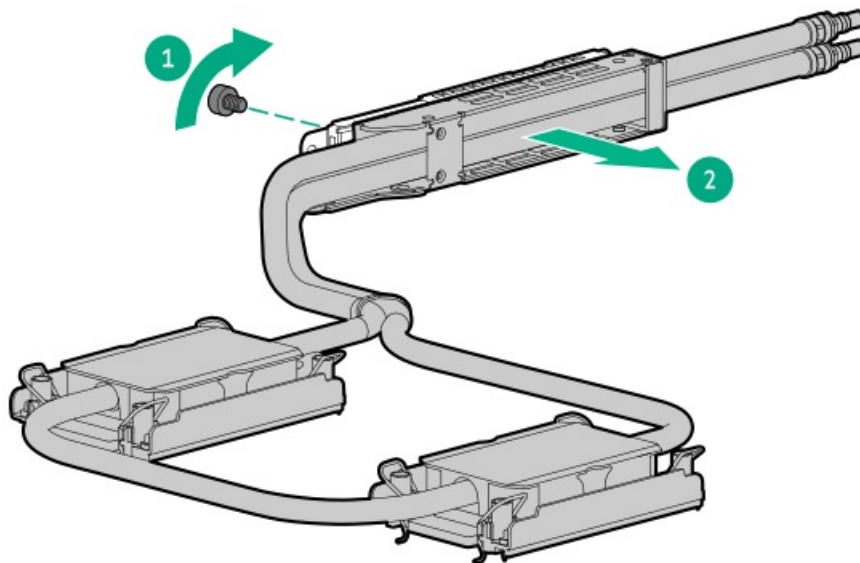

- To remove the riser cage assembly:

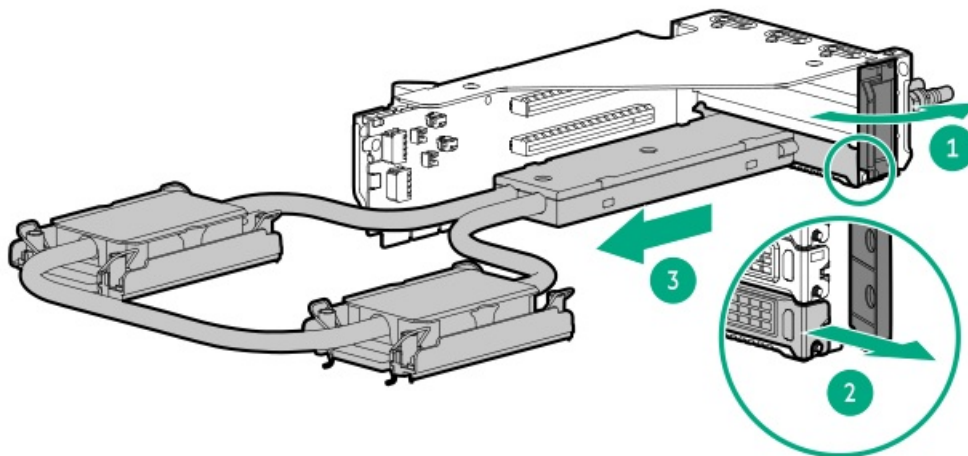

Results

To replace the assembly, reverse the removal procedure.

Removing and replacing the system battery

About this task

The system battery provides power to the real-time clock. If the server no longer automatically displays the correct date and time, you might need to replace the system battery.




WARNING

The computer contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery pack. A risk of fire and burns exists if the battery pack is not properly handled. To reduce the risk of personal injury:

- Do not attempt to recharge the battery.
- Do not expose the battery to temperatures higher than 60°C (140°F).
- Do not expose the battery to extremely low air pressure as it might lead to explosion or leakage of flammable liquid or gas.
- Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
- Replace only with the spare designated for this product.

Procedure

1. Power down the server.
2. Remove all power:
 - Disconnect each power cord from the power source.
 - Disconnect each power cord from the server.
3. Do one of the following:
 - Extend the server from the rack.
 - Remove the server from the rack.
4. Remove the access panel.
5. If installed, remove the PCIe riser cage.
6. Locate the battery.
7. Remove the battery.

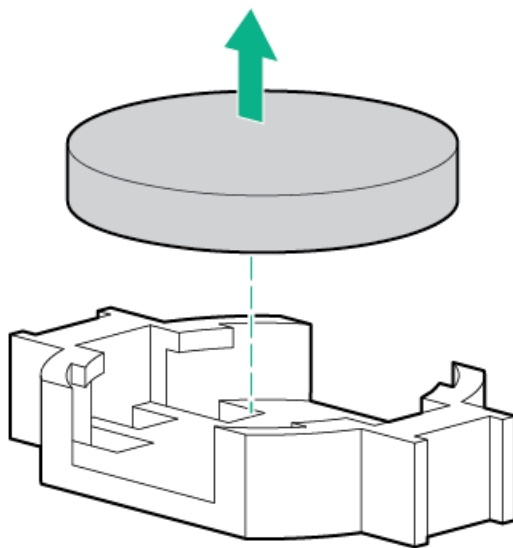

8. To replace the component, reverse the removal procedure.
9. Properly dispose of the old battery.

Removing and replacing the system board

Prerequisites

- Be sure you have a T-30 Torx screwdriver.
- Note where all drives, controllers, DIMMs, cables and other options were installed before replacing the system board.
- Note any secure boot keys.
- Note the serial and product IDs



CAUTION

Be sure to have the BitLocker recovery key/password prior to replacing the system board. If you do not have the key/password, you will need to reinstall the OS.



CAUTION

Do not use One-button secure erase (OBSE). OBSE should only be used to decommission or repurpose a system. **This option erases all data. Be sure to disconnect any drives, SANs, NAS, or other shared/external storage devices that you do not want erased.**

Procedure

Removing the system board

1. Power down the server.
2. Remove all power:
 - a. Disconnect each power cord from the power source.
 - b. Disconnect each power cord from the server.
3. Remove the server from the rack.
4. Remove all power supplies.
5. Remove the access panel.
6. Do one of the following:
 - Remove the air baffle.
 - Remove the midplane drive cage.
7. Remove the primary or secondary PCIe riser cage.
8. If installed, remove the tertiary PCIe riser cage.
9. Remove the OCP 3.0 adapter.
10. Remove all DIMMs.
11. Remove the fan cage.
12. Disconnect all cables connected to the system board.
13. Observe the following cautions.

**CAUTION**

Loosen each nut or screw in the order indicated. Otherwise, damage might occur to components.


**CAUTION**

Install the processor as soon as possible after removing it. Do not leave the socket unpopulated for extended periods of time.


14. Remove the processor heatsink assembly:

- a. Allow the heatsink to cool.
- b. Using a T-30 Torx screwdriver, loosen the heatsink nuts.

A standard heatsink is shown.

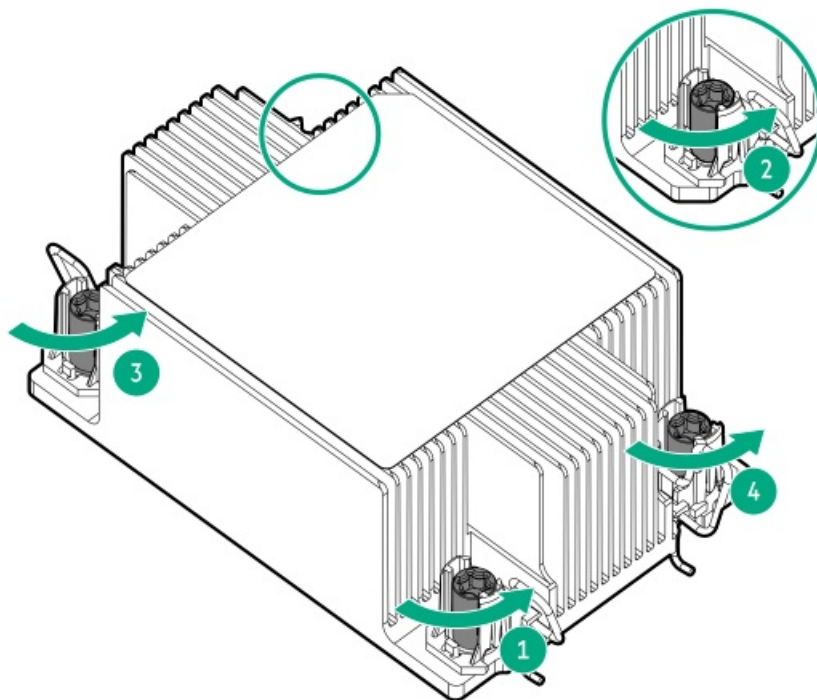

- c. Lift the processor heatsink assembly up and away from the system board.

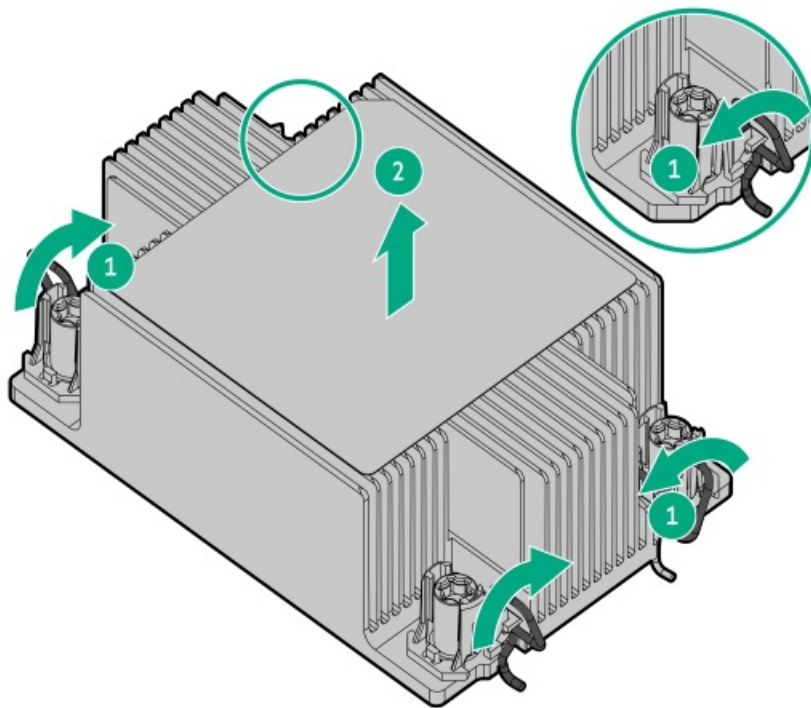


d. Turn the processor heatsink assembly over and place it on a work surface with the processor assembly facing up.

e. Install the dust cover.

15. Loosen the system board thumbscrews.


16. Remove the system board.

Use the handle near the DIMM slots to lift the system board.

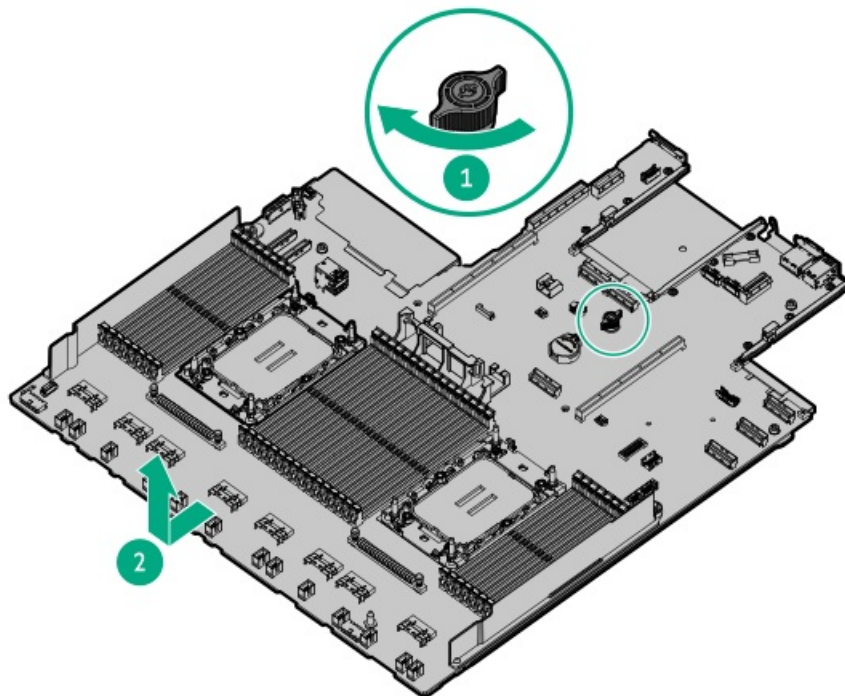


Replacing the system board

17. Install the spare system board.

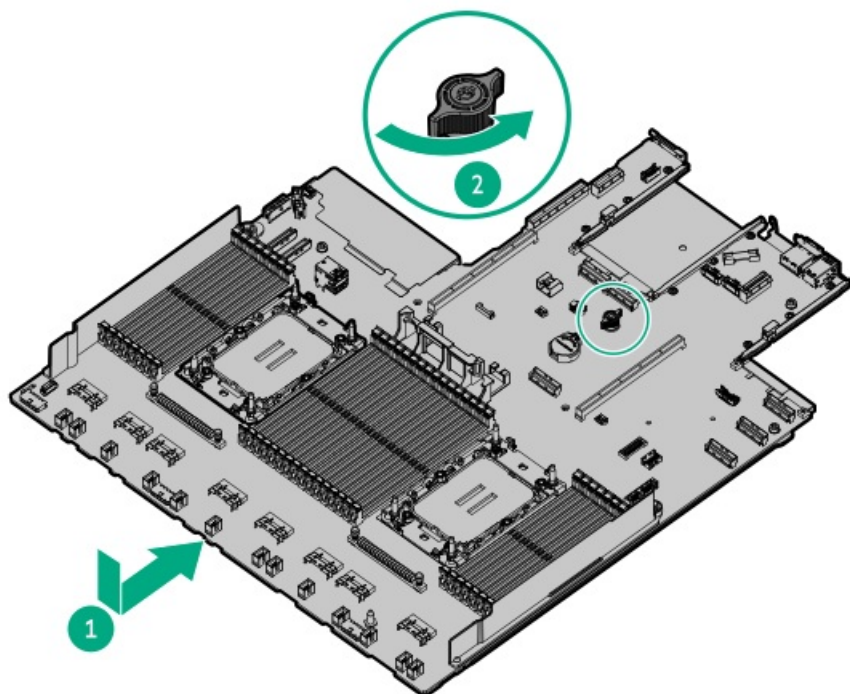

18. Install the processor-heatsink assembly:


- a. Remove the dust cover from the socket.
- b. On the heatsink, identify the front-of-server label and look for the notched corner to verify the pin 1 indicator.
- c. Unlock the heatsink latches.
- d. Align the assembly and gently lower it down until it sits on the socket.

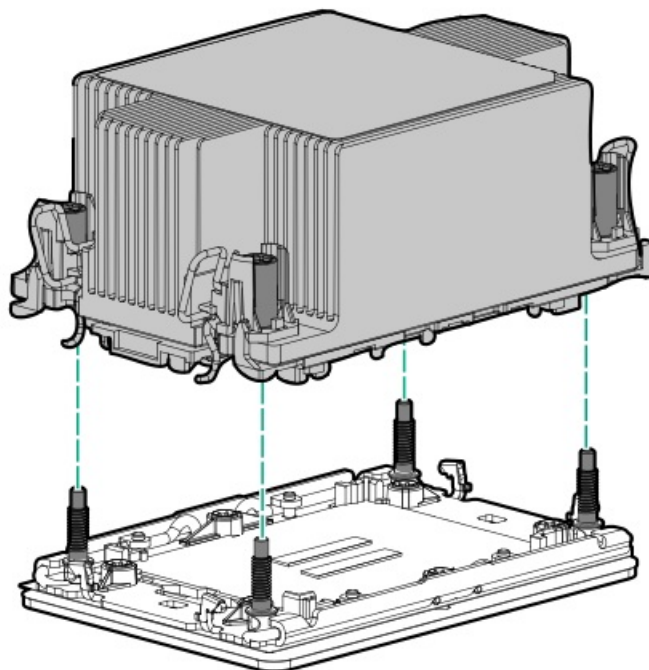

The heatsink and socket are keyed. The processor will only install one way.

Be sure to fully engage the latches.

- e. Using a T-30 Torx screwdriver, tighten the nuts.

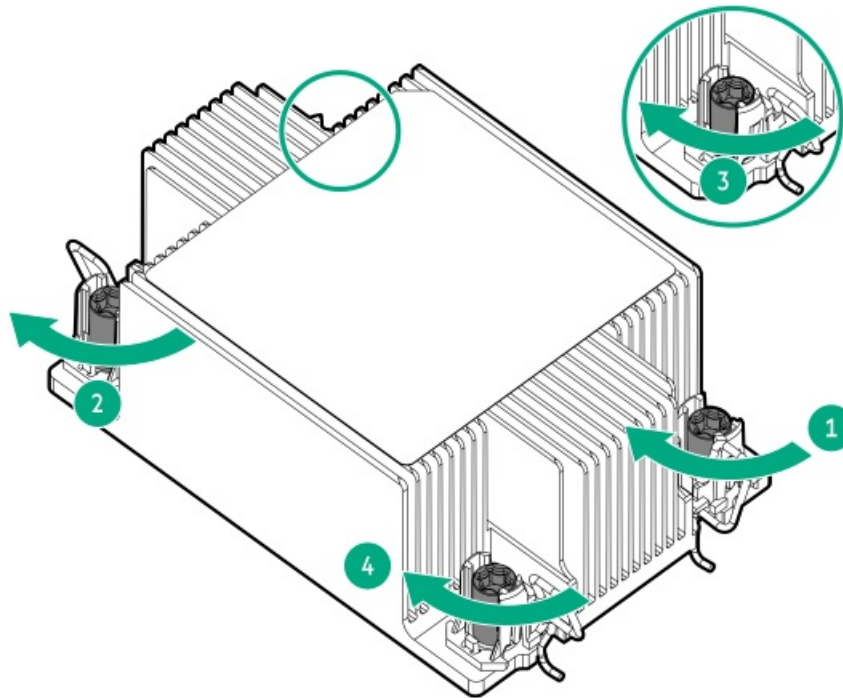

19. Install all cables and components removed from the failed system board.
20. Install the access panel.
21. Install the power supplies.
22. Power up the server.
23. Ensure all firmware, including option cards and embedded devices, is updated to the same versions to ensure that the latest drivers are being used.
24. Re-enter any Secure Boot Keys that were previously added in the Secure Boot configuration.



CAUTION

(For Microsoft Windows only) After replacing the system board, we recommend using BitLocker Recovery to restore the OS and access drive data. The recovery key/password previously generated during the initial server installation and BitLocker setup is required to enter Recovery Mode.

For more information about BitLocker Recovery, see the [Microsoft website](#).

25. Re-enter the server serial number and the product ID:
 - a. During the server startup sequence, press the **F9** key to access UEFI System Utilities.
 - b. Select System Configuration > BIOS/Platform Configuration (RBSU) > Advanced Options > Advanced System ROM Options > Serial Number, and then press the **Enter** key.
 - c. Enter the serial number and press the **Enter** key. The following message appears:
Only qualified service personnel must modify the serial number. This value must always match the serial number on the chassis.

- d. To clear the warning, press the **Enter** key.
- e. Enter the serial number and press the **Enter** key.
- f. From the System Utilities screen, select System Configuration > BIOS/Platform Configuration (RBSU) > Date and Time.
- g. Select a setting, and then complete your entry:
- Date (mm-dd-yyyy)—Enter the date in a month-day-year (mm-dd-yyyy) format.
 - Time (hh:mm:ss)—Enter the time in a 24-hour format (hh:mm:ss) format.
 - Time Zone—Select your current time zone for the system.
 - Daylight Savings Time:
 - Enabled—Adjusts the local time displayed by one hour for Daylight Savings Time.
 - Disabled—Does not adjust the local time displayed for Daylight Savings Time.
 - Time Format
 - Coordinated Universal Time (UTC) — Calculates the time stored in the hardware Real Time Clock (RTC) from the associated Time Zone setting.
 - Local Time—Removes the use of the Time Zone setting.
- This option is useful for addressing interaction issues between Windows operating systems set in Legacy BIOS boot mode.
- h. Save your settings.
- i. Select Product ID. The following warning appears:
Warning: The Product ID must ONLY be modified by qualified service personnel. This value must always match the Product ID on the chassis.
- j. Enter the product ID and press the **Enter** key.
- k. To confirm exiting System Utilities, press the **F10** key.
- l. The server automatically reboots.

Results

The replacement is complete.

Troubleshooting

Subtopics

[Troubleshooting resources](#)

Troubleshooting resources

Troubleshooting resources are available for HPE Gen11 server products in the following documents:

- Troubleshooting Guide for HPE ProLiant Gen11 servers provides procedures for resolving common problems and comprehensive courses of action for fault isolation and identification, issue resolution, and software maintenance.

<https://www.hpe.com/info/gen11-troubleshooting>

- Integrated Management Log Messages for HPE ProLiant Gen10, Gen10 Plus, and Gen11 servers and HPE Synergy provides IML messages and associated troubleshooting information to resolve critical and cautionary IML events.

<https://www.hpe.com/info/Troubleshooting-IML-en>

Cabling

Subtopics

[Cabling guidelines](#)

[Cabling diagrams](#)

Cabling guidelines

Observe the following:



NOTE

The colors in the cabling diagrams are for illustration purposes only.

- For cable option kits, see the product QuickSpecs.
- For cable spare part numbers, see the Illustrated parts catalog in the maintenance and service guide.
- Some diagrams show alphabetical callouts such as A, B, C, etc. These callouts correspond to labels near the connectors on the cable.
- Some cables have more than one connector, such as a Y-cable, but not all connectors are used.
- Observe all guidelines when working with server cables.

Before connecting cables

- Note the port labels on the PCA components. Not all these components are used by all servers:
 - System board ports
 - Drive and power supply backplane ports
 - Expansion board ports (controllers, retimers, adapters, expanders, risers, and similar boards)
- Note the label near each cable connector. This label indicates the destination port for the cable connector.
- Some data cables are prebent. Do not unbend or manipulate the cables.
- To prevent mechanical damage or depositing oil that is present on your hands, and other contamination, do not touch the ends of the connectors.


When connecting cables

- Before connecting a cable to a port, lay the cable in place to verify the length of the cable.
- Use the internal cable management features to properly route and secure the cables.

- When routing cables, be sure that the cables are not in a position where they can be pinched or crimped.
- Avoid tight bend radii to prevent damaging the internal wires of a power cord or a server cable. Never bend power cords and server cables tight enough to cause a crease in the sheathing.
- Make sure that the excess length of cables is properly secured to avoid excess bends, interference issues, and airflow restriction.
- To prevent component damage and potential signal interference, make sure that all cables are in their appropriate routing position before installing a new component and before closing up the server after hardware installation/maintenance.

When disconnecting cables

- Grip the body of the cable connector. Do not pull on the cable itself because this action can damage the internal wires of the cable or the pins on the port.
- If a cable does not disconnect easily, check for any release latch that must be pressed to disconnect the cable.

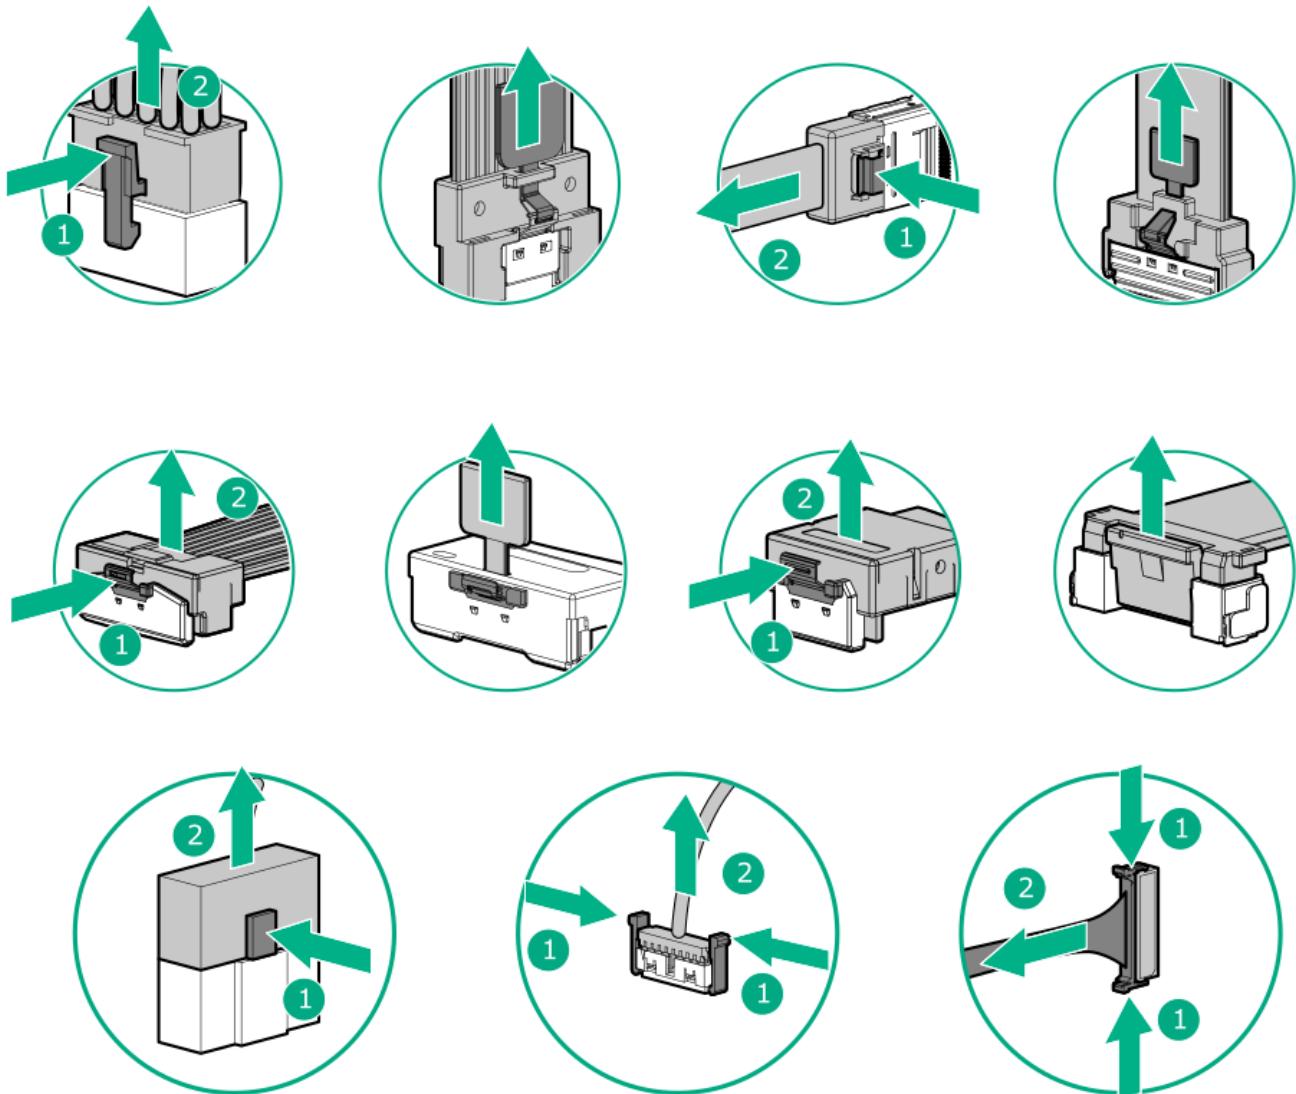

- Remove cables that are no longer being used. Retaining them inside the server can restrict airflow. If you intend to use the removed cables later, label and store them for future use.

Cabling diagrams

Observe the following:

Drive backplanes

Component cabling	Cable part number
EDSFF cabling	<u>P51556-001</u>
	<u>P51555-001</u>
	<u>P51542-001</u>
	<u>P51542-001</u>
	<u>P53288-001</u>
	<u>P51564-001</u>
	<u>P51544-001</u>
8 SFF box 1 cabling	<u>P51545-001</u>
	<u>P51546-001</u>
	<u>P51549-001</u>
	<u>P51550-001</u>
	<u>P51551-001</u>
	<u>P51552-001</u>
	<u>P51553-001</u>
	<u>P51548-001</u>
	<u>P51543-001</u>
	<u>P53287-001</u>
	<u>P53285-001</u>
	<u>P51556-001</u>
	<u>P22904-001</u>
	<u>P22905-001</u>
8 SFF box 2 cabling	<u>P51545-001</u>
	<u>P51547-001</u>
	<u>P51546-001</u>
	<u>P22905-001</u>
	<u>P51551-001</u>
	<u>P51552-001</u>
	<u>P22904-001</u>
	<u>P53286-001</u>
8 SFF box 3 cabling	<u>P51545-001</u>
	<u>P51546-001</u>
	<u>P22904-001</u>
	<u>P14330-001</u>
	<u>P51553-001</u>
	<u>P53287-001</u>
	<u>P51543-001</u>
8 SFF box 7 cabling	<u>P51554-001</u>
	<u>P22903-001</u>
	<u>P14329-001</u>

Component cabling	Cable part number
Front 2 SFF cabling	<u>P51555-001</u>
	<u>P51556-001</u>
	<u>P22905-001</u>
	<u>P51545-001</u>
Rear 2 SFF cabling	<u>P22903-001</u>
	<u>P14329-001</u>
	<u>P51554-001</u>
	<u>P51557-001</u>
LFF cabling	<u>P51559-001</u>
	<u>P51560-001</u>
	<u>P51561-001</u>
	<u>P58791-001</u>
	<u>P46047-001</u>
	<u>P51563-001</u>
	<u>P51558-001</u>
Riser enablement cabling	<u>P46031-001</u>
	<u>P46034-001</u>
	<u>P51571-001</u>
	<u>P46032-001</u>
	<u>P46028-001</u>
	<u>P46026-001</u>
	<u>P46029-001</u>
	<u>P46030-001</u>

Power

Component cabling	Cable part number
Front EDSFF boxes 1-3	<u>P51577-001</u>
Rear 2 SFF riser cage	<u>P51574-001</u>
Front 8 SFF boxes 1-3	<u>869825-001</u>
Front 4 LFF box 1	<u>P14341-001</u>
Front 4 LFF box 2/3	<u>P14342-001</u>
Front 2 SFF side-by-side	<u>P14343-001</u>
8 SFF midplane + 2 LFF riser cage + 2 SFF rear stacked	<u>P51575-001</u>
Smart battery	<u>P45618-001</u>
GPU power	<u>869820-001</u>
GPU power + sideband	<u>P58422-001</u>

NS204i-u cabling

Component cabling	Cable part number
NS204i-u data cabling (SFF)	<u>P51579-001</u>
NS204i-u power cabling	<u>P54089-001</u>
NS204i-u data cabling (LFF)	<u>P51578-001</u>

OCP bandwidth

Component cabling	Cable part number
OCP bandwidth upgrade	P43736-001
	P43735-001
	P43734-001

Systems Insight Display

Component cabling	Cable part number
Systems Insight Display	P48971-001

I/O cabling

Component cabling	Cable part number
SFF media bay USB	P50731-001
SFF media bay DP/USB	P14314-001
LFF Display Port	869808-001
SFF/LFF ODD	756914-001

Front power switch

Component cabling	Cable part number
SFF/LFF front power switch	P43727-001

Serial port cabling


Component cabling	Cable part number
Serial port cable	P45623-001

Subtopics

- [EDSFF cabling](#)
- [8 SFF box 1 cabling](#)
- [8 SFF box 2 cabling](#)
- [8 SFF box 3 cabling](#)
- [Mid 8 SFF cabling](#)
- [Front 2 SFF cabling](#)
- [Rear 2 SFF cabling](#)
- [LFF cabling](#)
- [Riser enablement cabling](#)
- [Power cabling](#)
- [GPU cabling](#)
- [NS204i-u boot device cabling](#)
- [OCP bandwidth enablement](#)
- [Systems Insight Display cabling](#)
- [I/O cabling](#)
- [Front power switch cabling](#)
- [Serial port cabling](#)


EDSFF cabling

EDSFF box 1

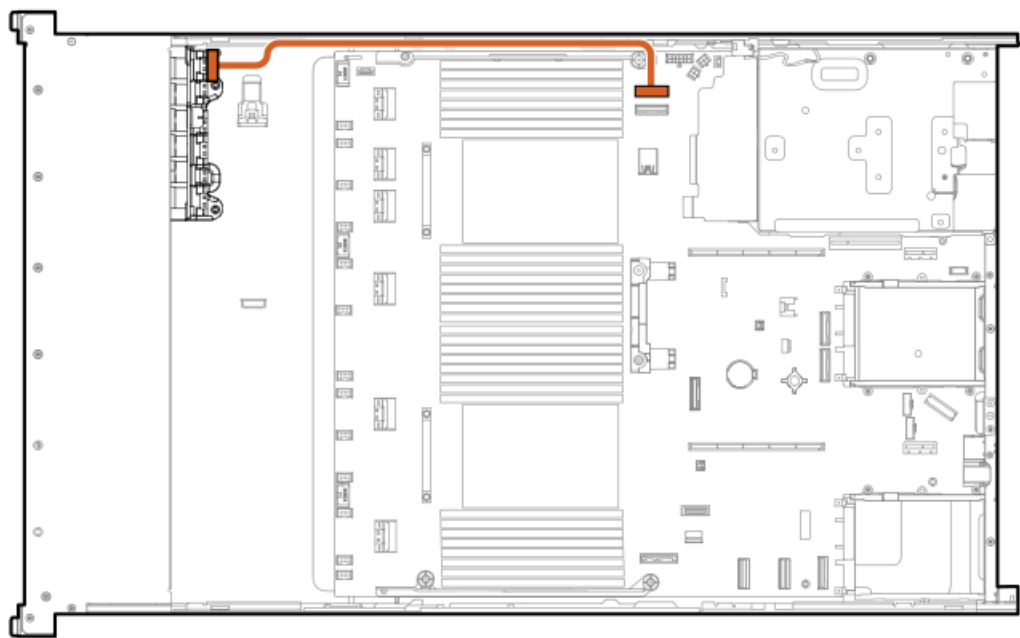


Cable part number	Color	From	To
P51556-001	Orange	Box 1 port 1	System board port 9

Front EDSFF box 1 port 2

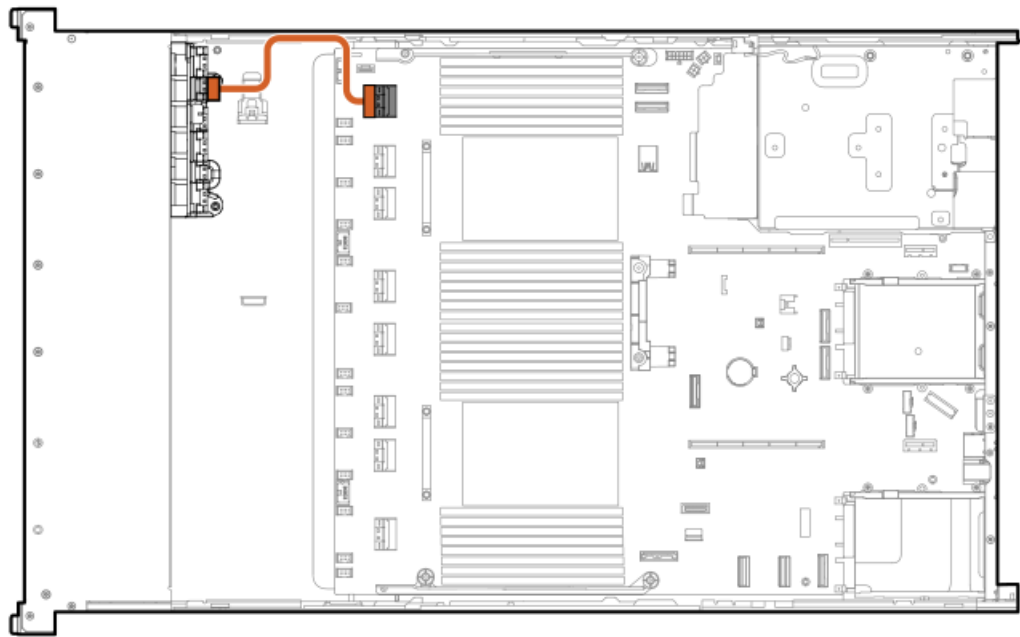


Cable part number	Color	From	To
P51555-001	Orange	Box 1 port 2	System board port 8

EDSFF box 1

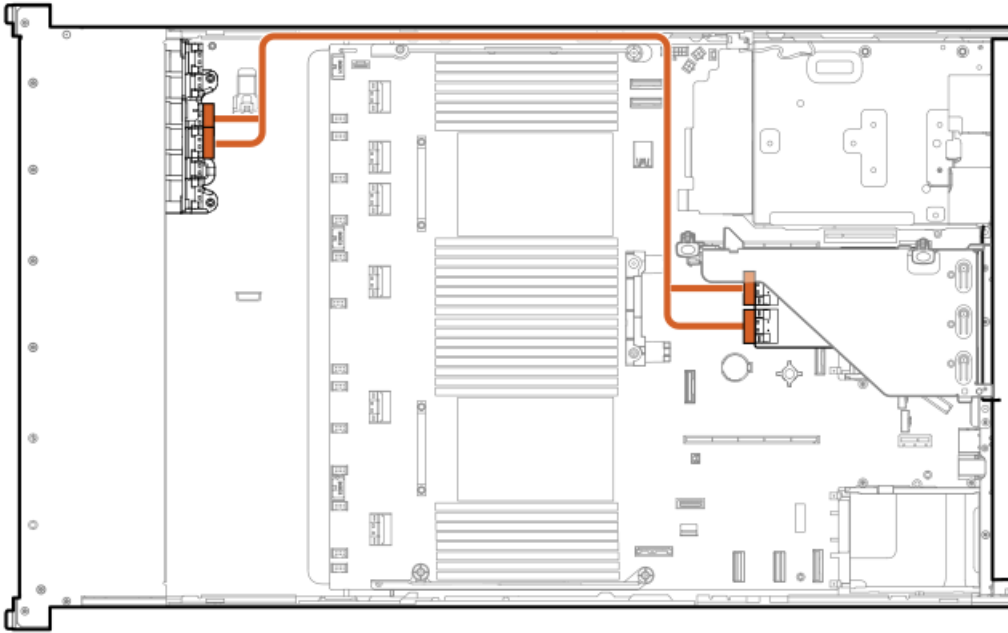


Cable part number	Color	From	To
P51542-001	Orange	Box 1 ports 3/4	Secondary riser controller 1 ports 1/2

EDSFF box 1

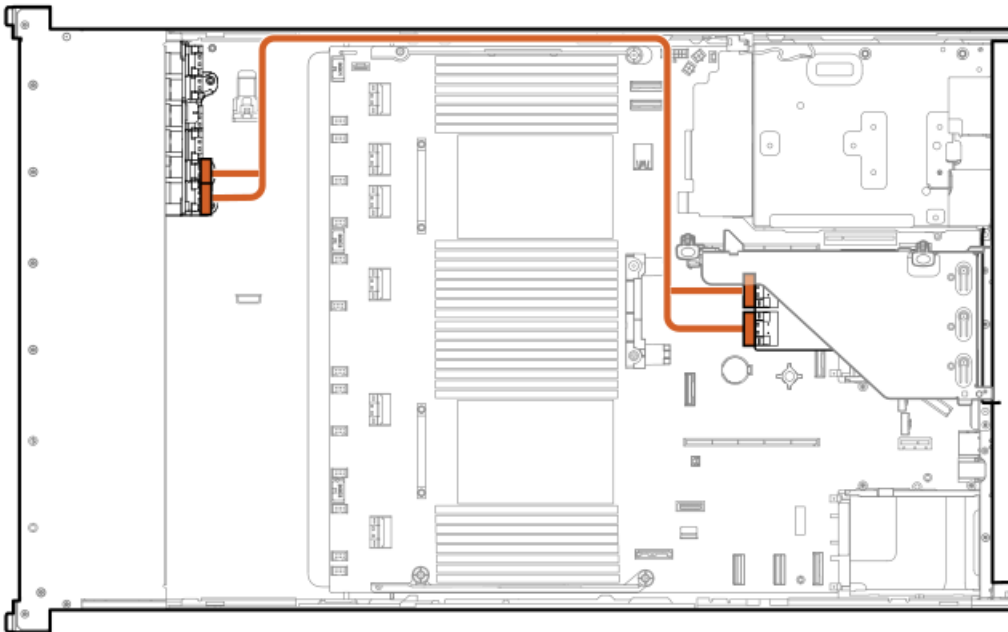


Cable part number	Color	From	To
P51542-001	Orange	EDSFF Box 1 ports 5/6	Secondary riser controller 2 ports 1/2

EDSFF box 2

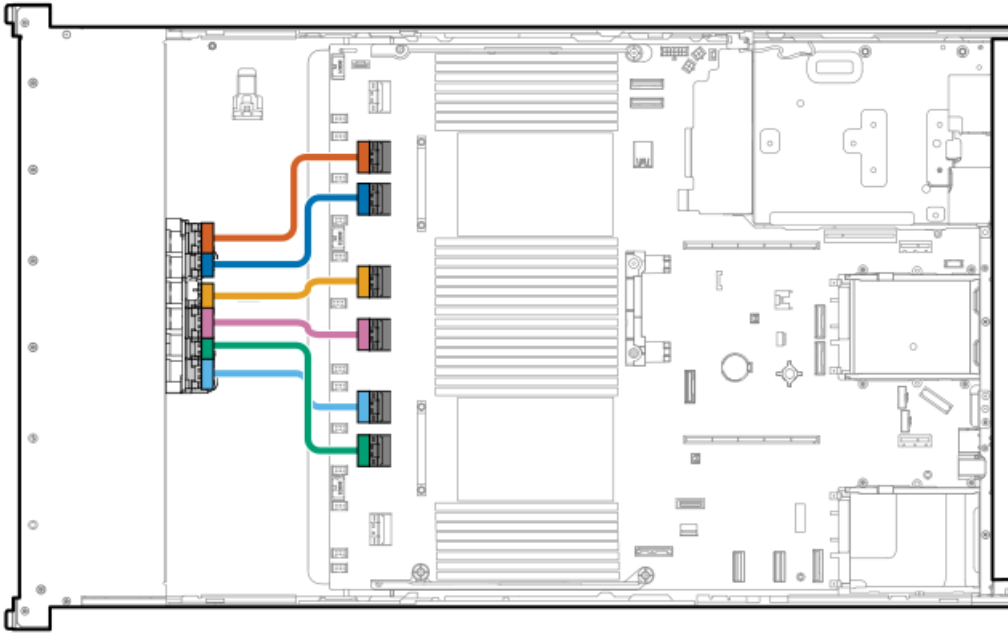


Cable part number	Color	From	To
P53288-001	Orange	Box 2 port 1	System board port 7
	Blue	Box 2 port 2	System board port 6
	Yellow	Box 2 port 3	System board port 5
	Pink	Box 2 port 4	System board port 4
	Green	Box 2 port 5	System board port 3
	Light blue	Box 2 port 6	System board port 2

EDSFF box 3

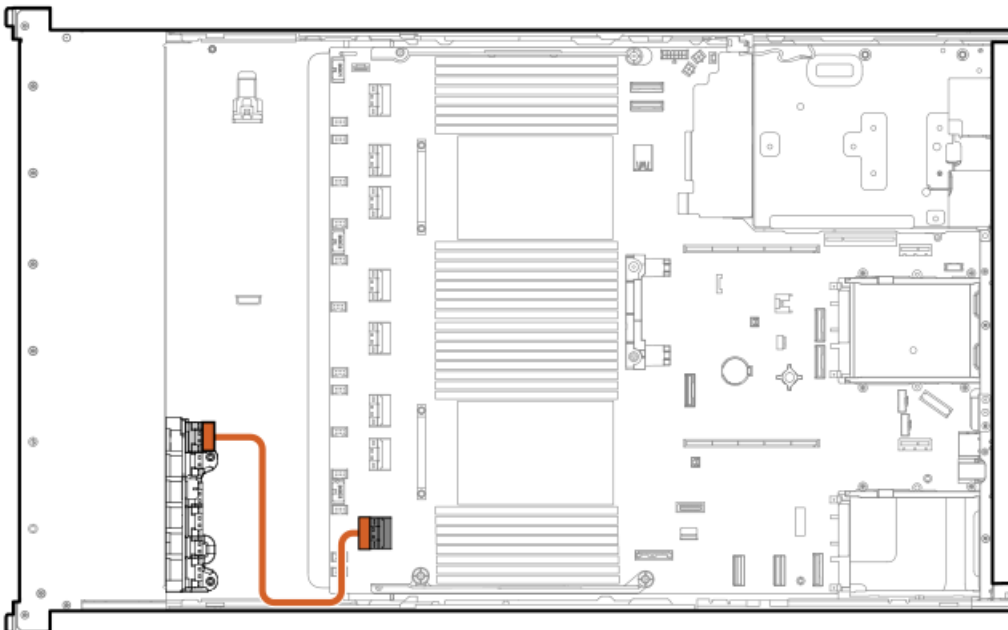


Cable part number	Color	From	To
P51555-001	Orange	Box 3 port 1	System board port 1

EDSFF box 3

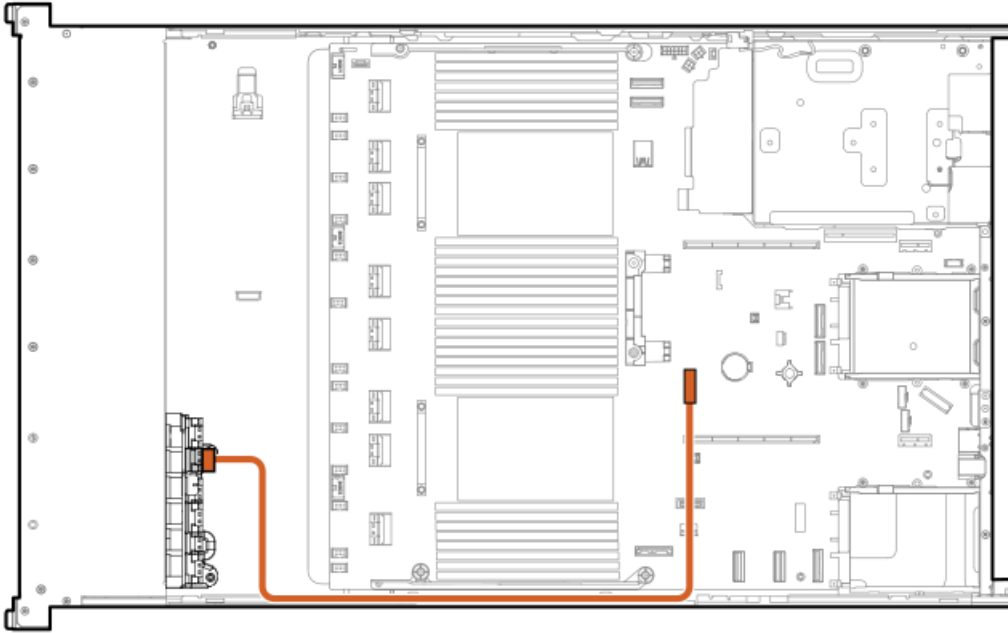


Cable part number	Color	From	To
P51564-001	Orange	Box 3 port 2	System board port 11

EDSFF box 3

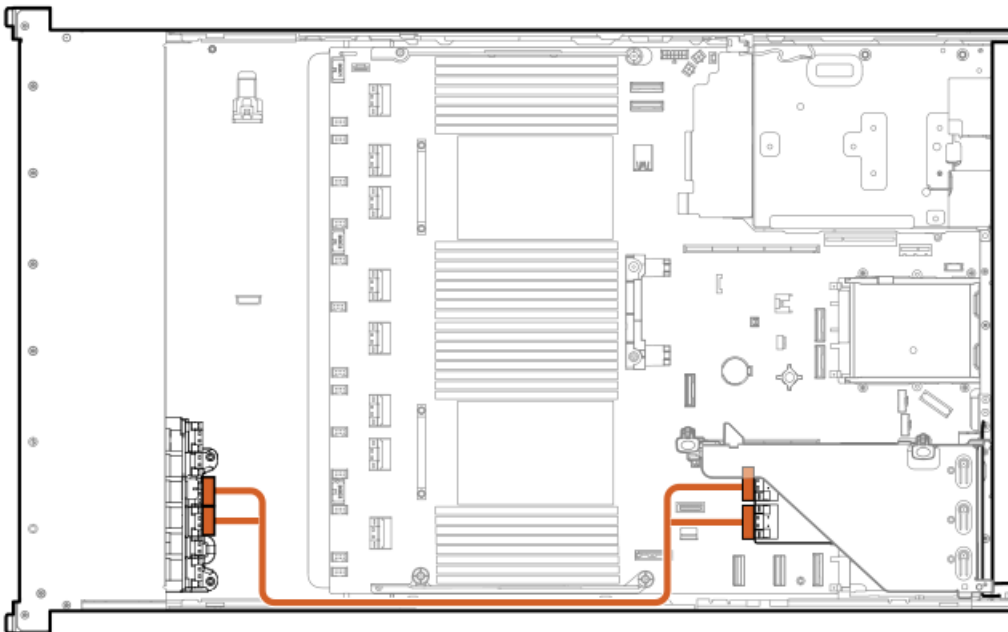

Cable part number	Color	From	To
P51544-001	Orange	Box 3 ports 3/4	Primary riser controller ports 1/2


EDSFF box 3

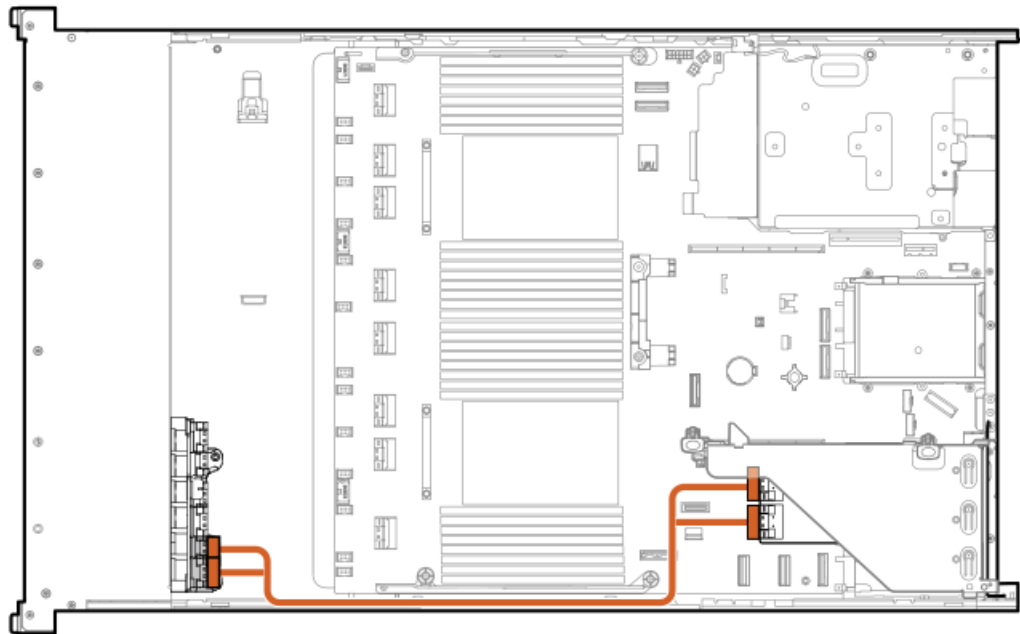

Cable part number	Color	From	To
P51544-001	Orange	Box 3 ports 5/6	Primary riser controller ports 1/2


8 SFF box 1 cabling

8 SFF box 1: Secondary type-o controller

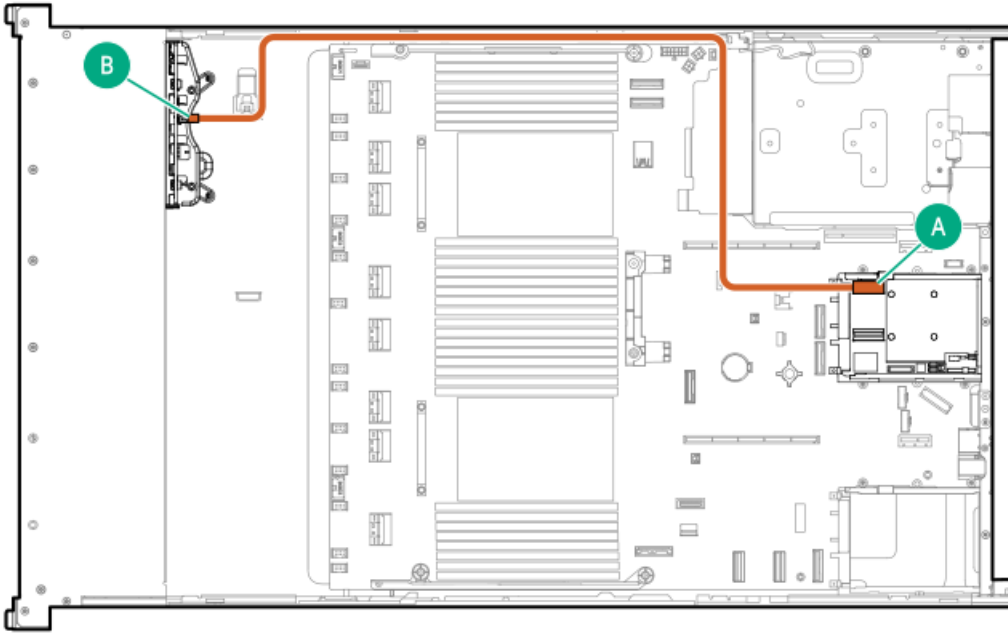


Cable part number	Color	From	To
P51545-001	Orange	Drive backplane	Secondary type-o controller

8 SFF box 1: Primary type-o controller

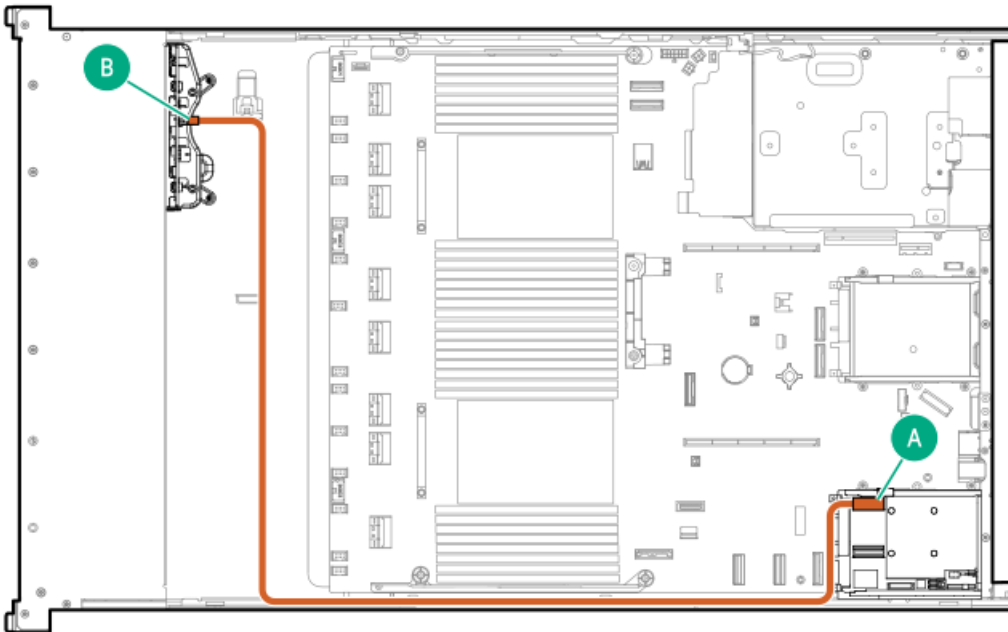


Cable part number	Color	From	To
P51545-001	Orange	Drive backplane	Primary type-o controller

8 SFF box 1: Onboard controller

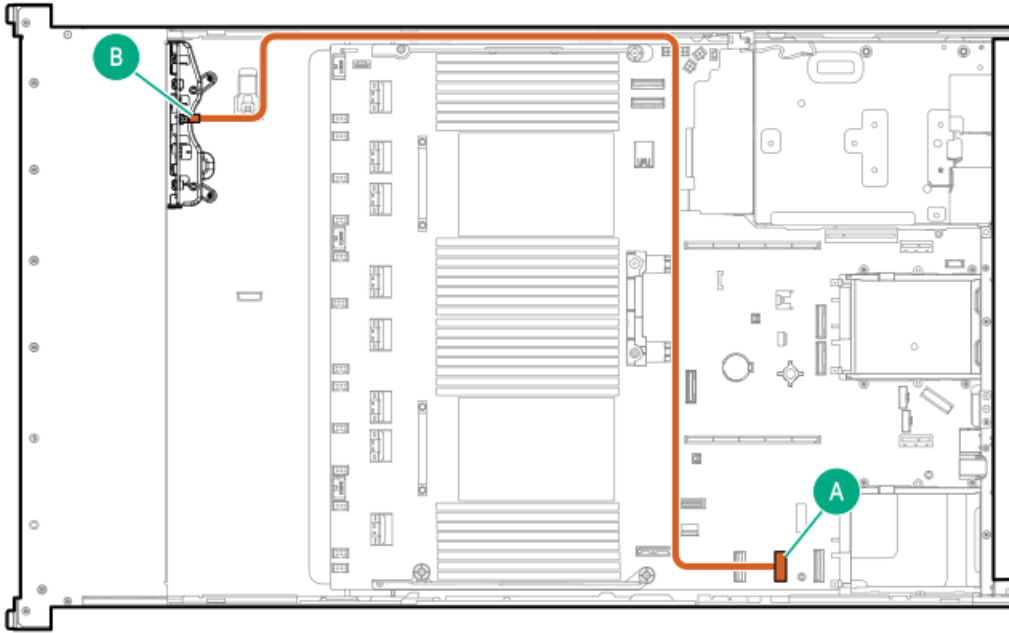


Cable part number	Color	From	To
P51545-001	Orange	Drive backplane	System board

8 SFF box 1: to OCP 2

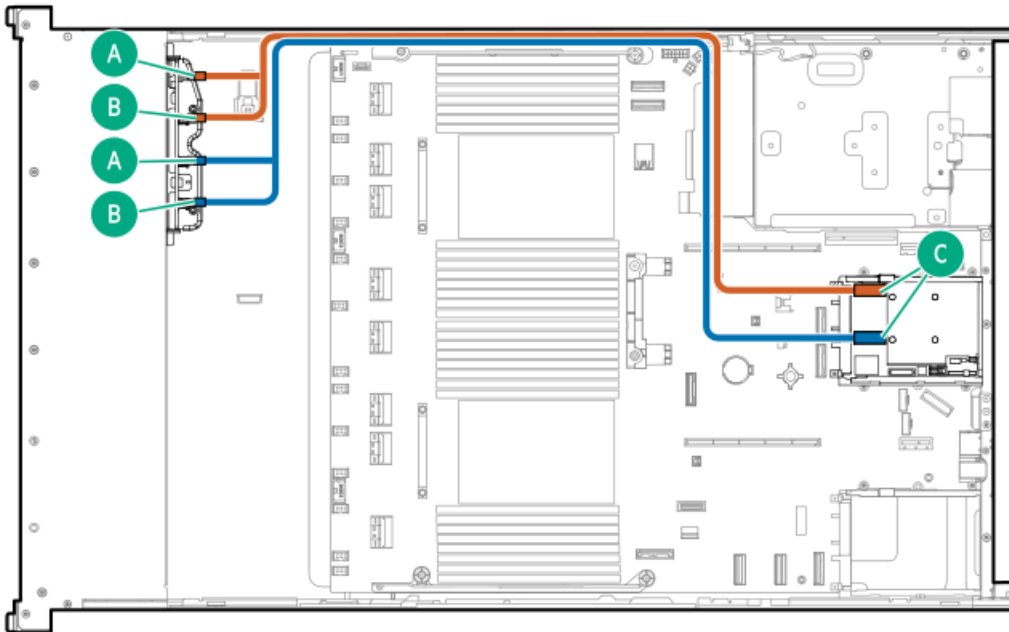


Cable part number	Color	From	To
P51546-001	Orange	Drive backplane	Secondary type-o controller

8 SFF box 1: Secondary type-p controller

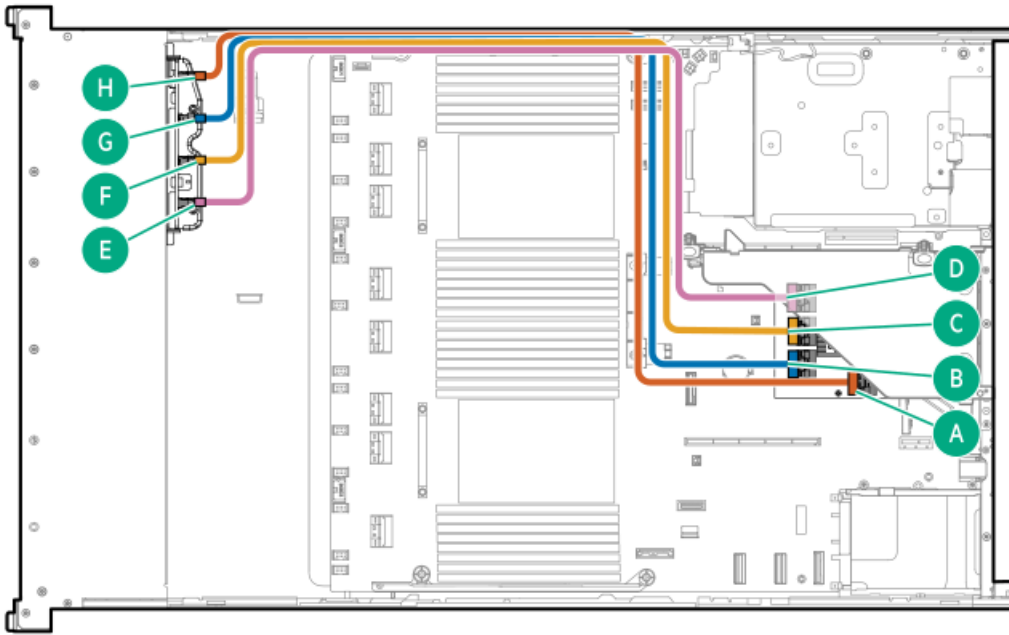


Cable part number	Color	From	To
P51549-001	Orange	Drive backplane	Secondary type-p controller
	Blue	Drive backplane	Secondary type-p controller
	Yellow	Drive backplane	Secondary type-p controller
	Pink	Drive backplane	Secondary type-p controller

8 SFF box 1:

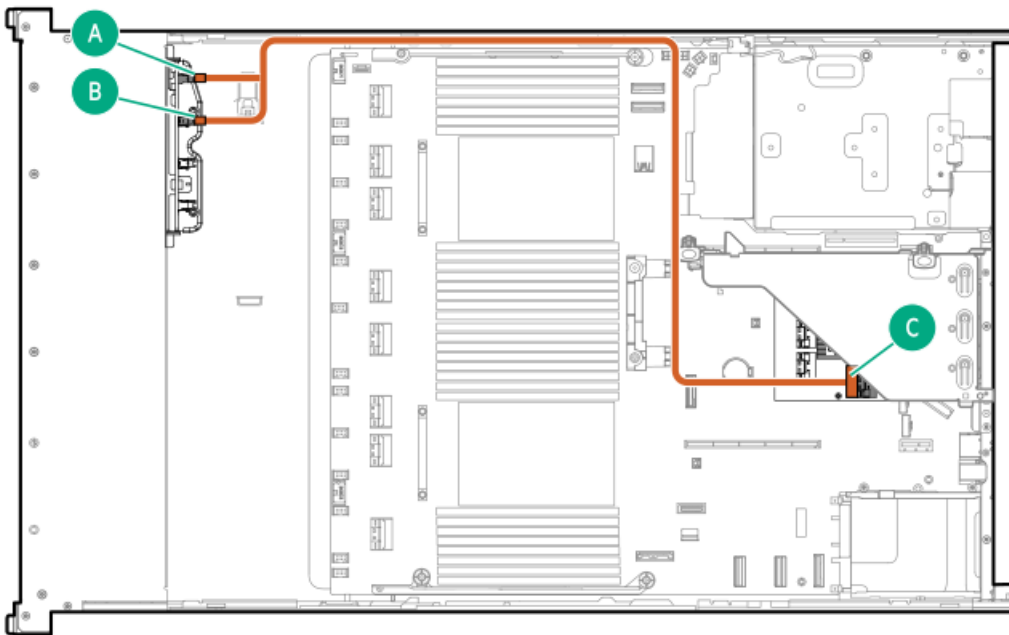


Cable part number	Color	From	To
P51548-001	Orange	Drive backplane	Secondary type-p controller

8 SFF box 1: Secondary type-p controller

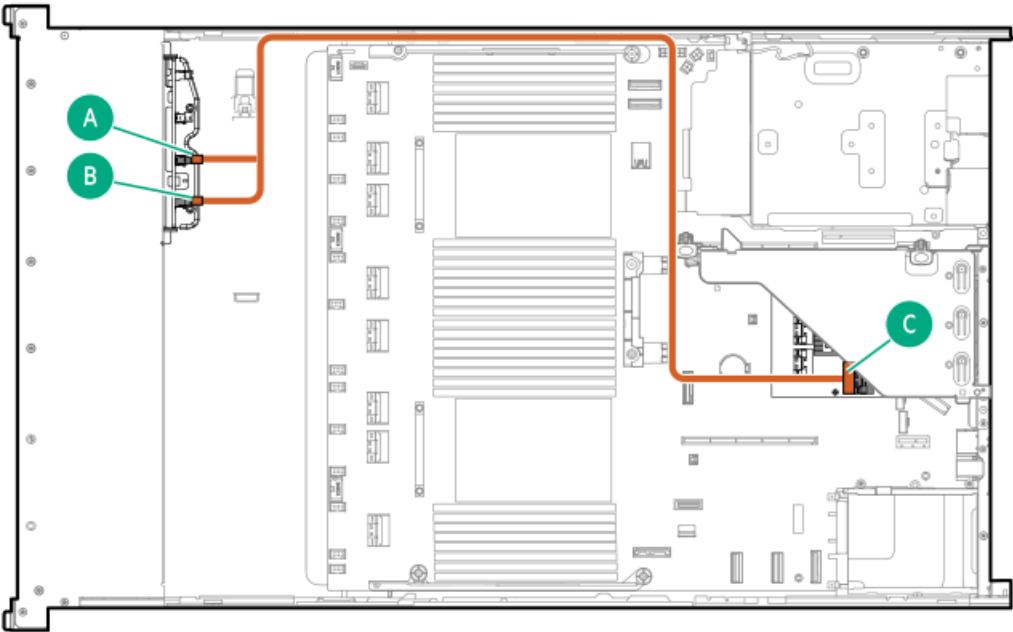


Cable part number	Color	From	To
P51548-001	Orange	Drive backplane	Secondary type-p controller

8 SFF box 1: System board

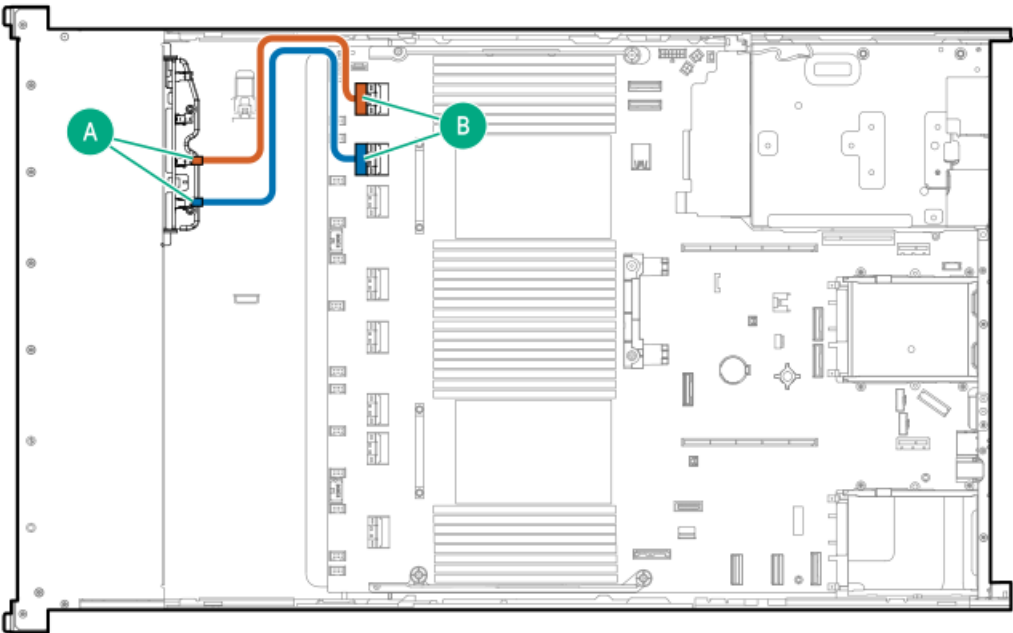

Cable part number	Color	From	To
P51543-001	Orange	Drive backplane port 3/4	System board port 7/8

8 SFF box 1: System board

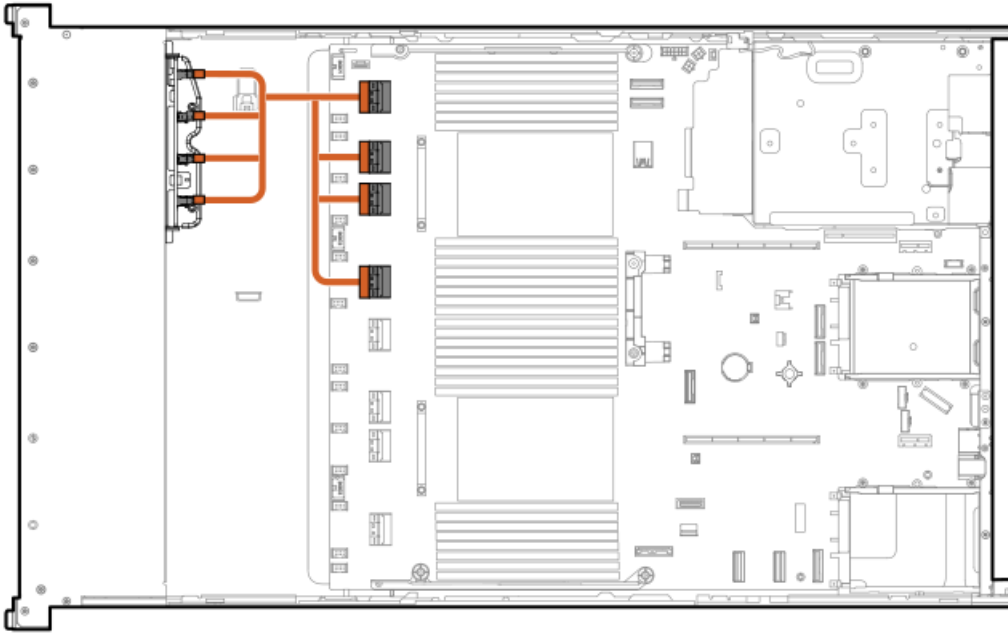


Cable part number	Color	From	To
P53285-001	Orange	Box 1 ports 1-4	System board ports 5-8

8 SFF box 1: System board




Cable part number	Color	From	To
P51556-001	Orange	8 SFF box 1	System board

8 SFF box 1: System board

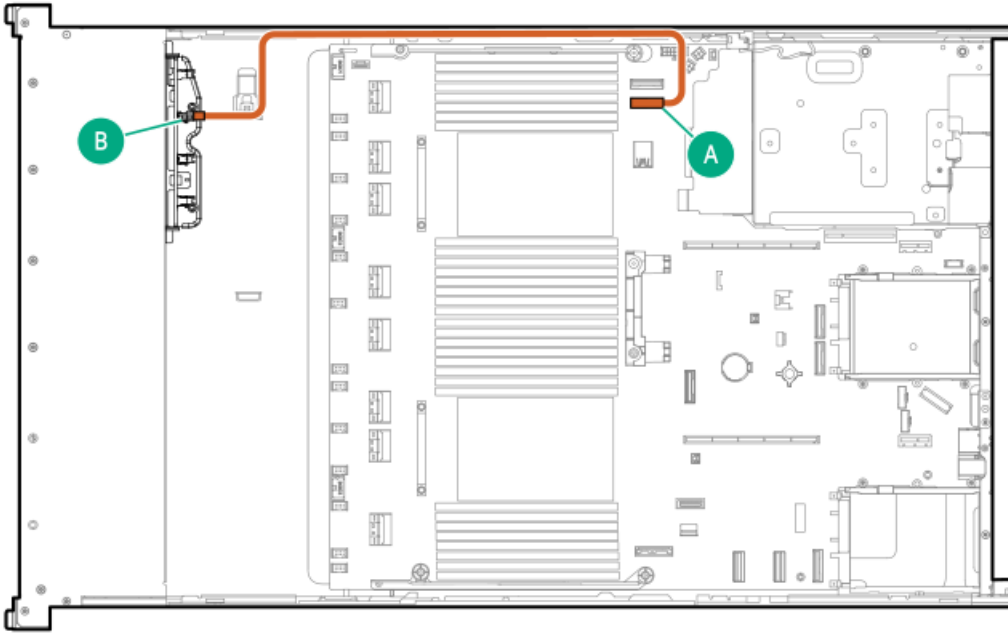


Cable part number	Color	From	To
P51556-001	Orange	8 SFF box 1	System board

8 SFF box 1-3: Primary and secondary type-p controllers

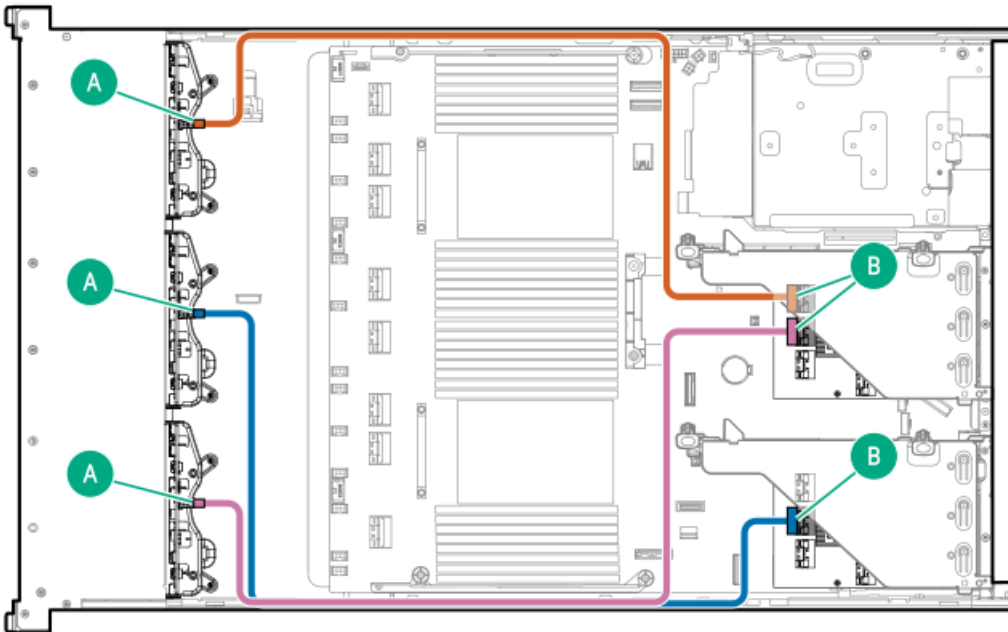


Cable part number	Color	From	To
P22904-001	Orange	Drive backplane	Secondary type-p controller
	Blue	Drive backplane	Secondary type-p controller
	Pink	Drive backplane	Primary type-p controller

8 SFF boxes 1 and 2: Primary and secondary type-p controllers

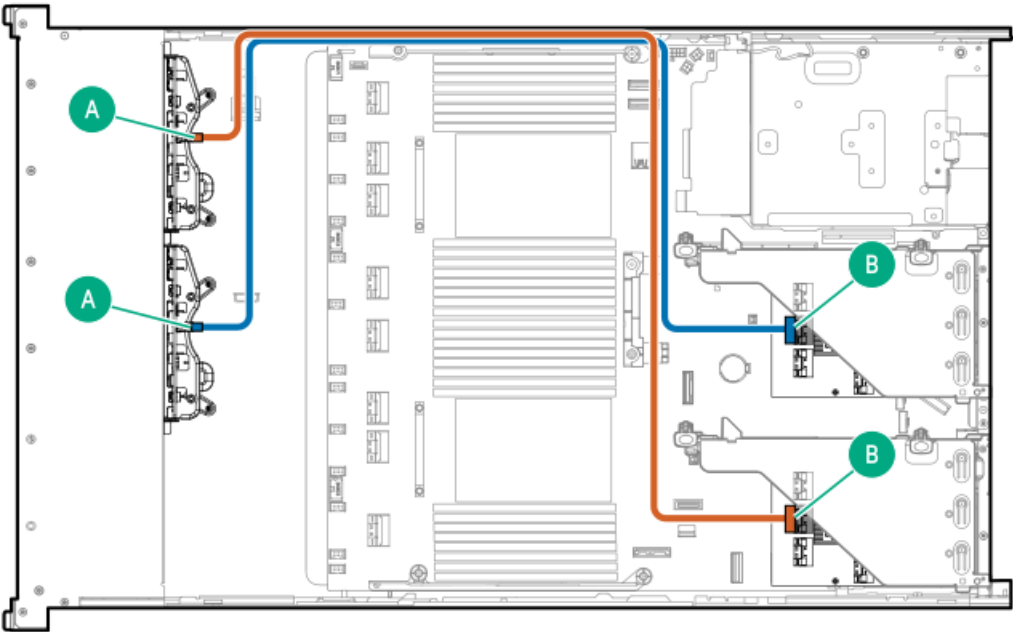


Cable part number	Color	From	To
P22905-001	Orange	Box 1 drive backplane	Primary type-p controller
	Blue	Box 2 drive backplane	Secondary type-p controller

8 SFF box 1: Secondary type-p controller

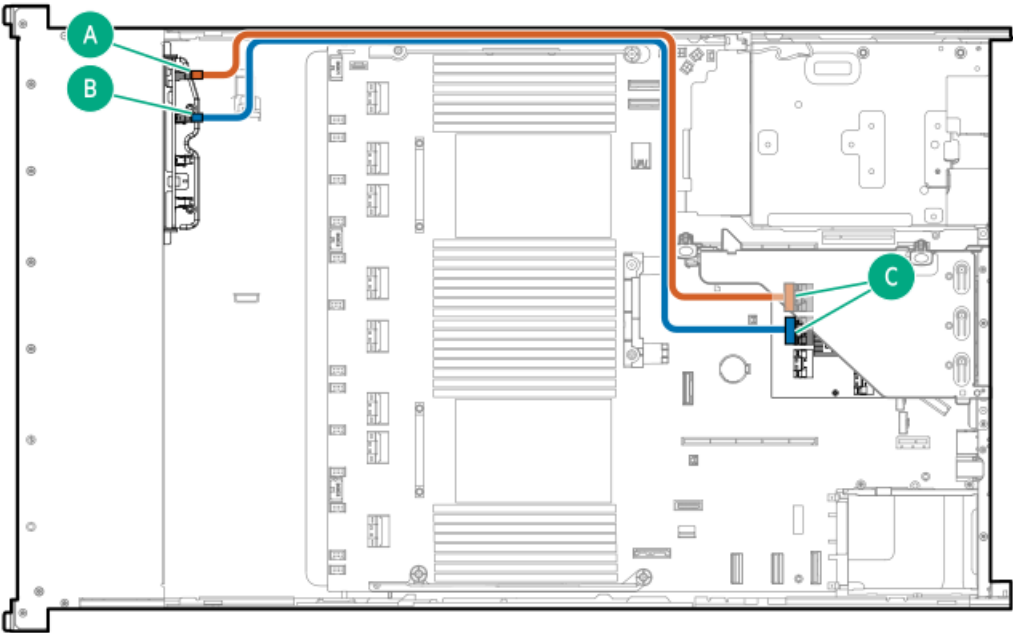

Cable part number	Color	From	To
P22905-001	Orange	Drive backplane	Secondary type-p controller
	Blue	Drive backplane	Secondary type-p controller


8 SFF box 1: Secondary retimer

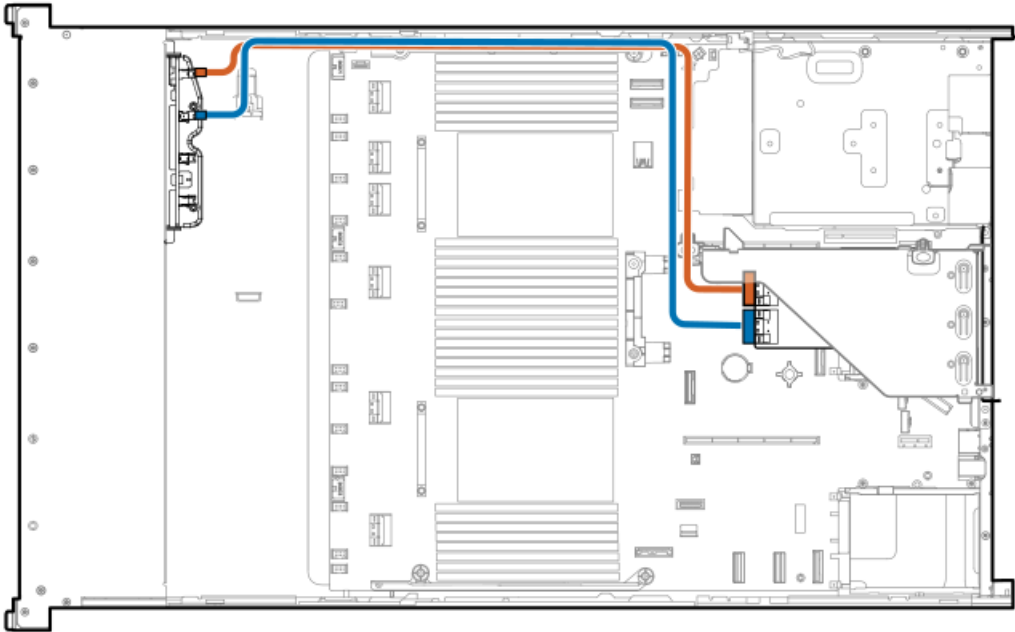

Cable part number	Color	From	To
P22905-001	Orange	Drive backplane	Secondary retimer
	Blue	Drive backplane	Secondary retimer

8 SFF box 2 cabling


8 SFF boxes 1 and 2: Primary and secondary type-p controllers

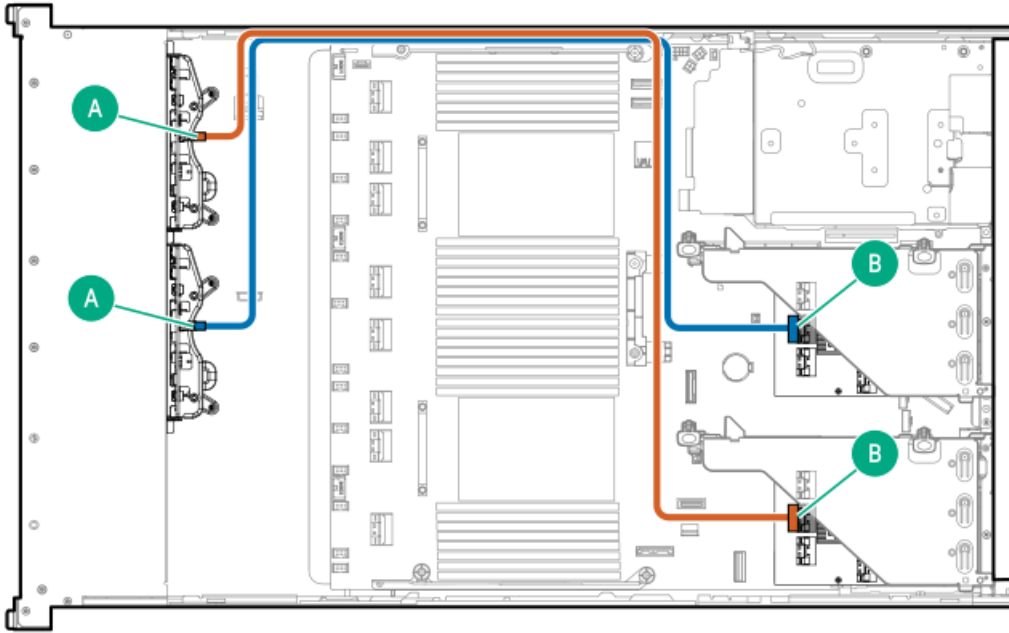

Cable part number	Color	From	To
P22905-001 ¹	Orange	Box 1 drive backplane	Primary type-p controller
	Blue	Box 2 drive backplane	Secondary type-p controller

¹ Option kit: P54874-B21


8 SFF box 2: Secondary type-p controller

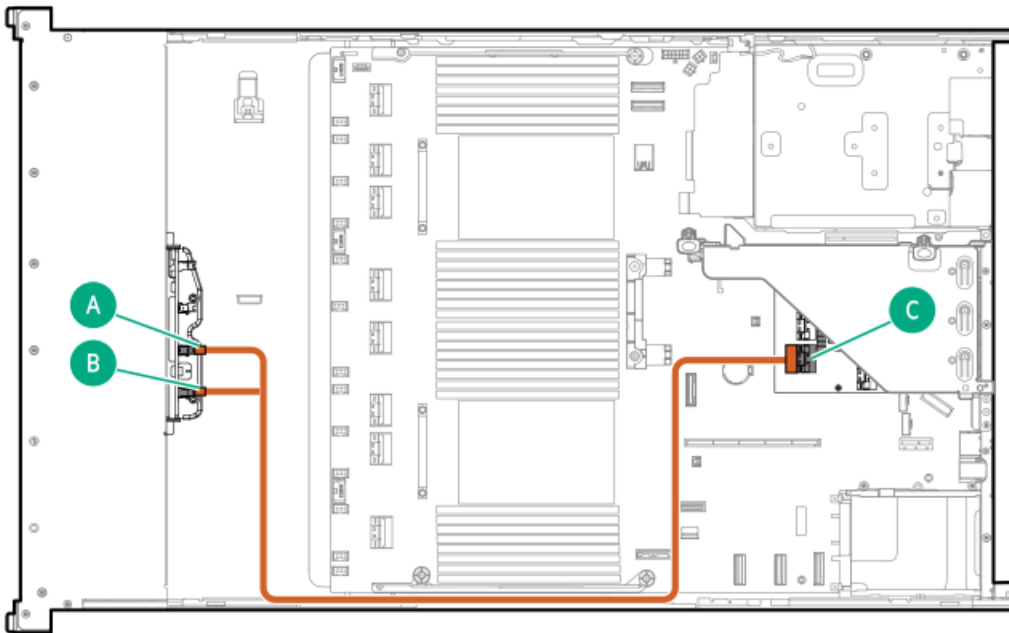

Cable part number	Color	From	To
P51547-001 ¹	Orange	Drive backplane	Secondary type-p controller

¹ Option kit: P48832-B21


8 SFF box 2: Secondary type-p controller

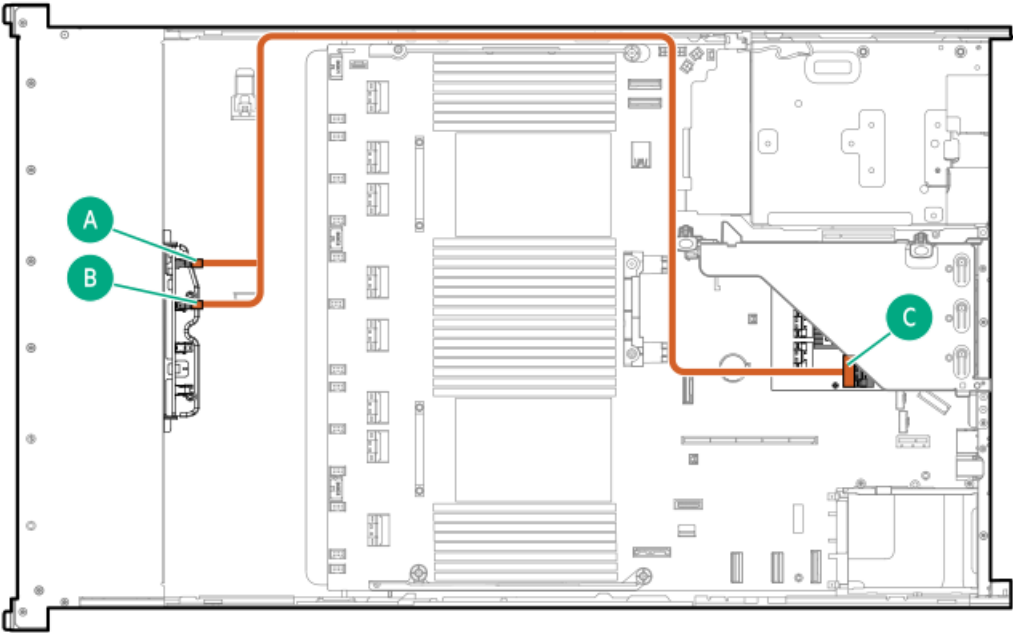

Cable part number	Color	From	To
P51547-001 ¹	Orange	Drive backplane	Secondary type-p controller

¹ Option kit: P48832-B21


8 SFF box 2: Primary type-p controller

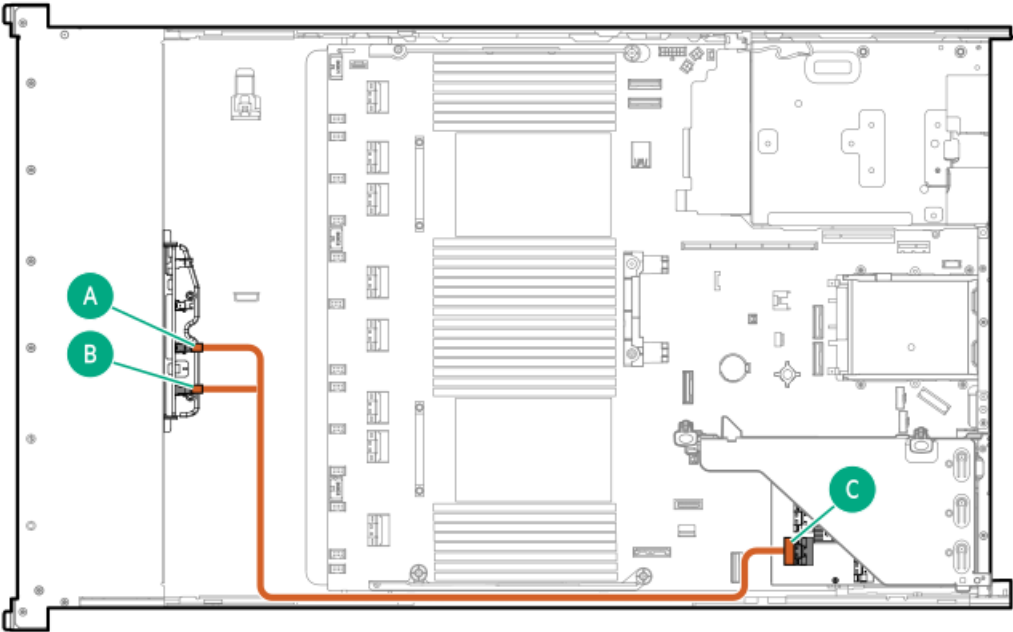

Cable part number	Color	From	To
P51547-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48832-B21


8 SFF box 2: Primary type-p controller

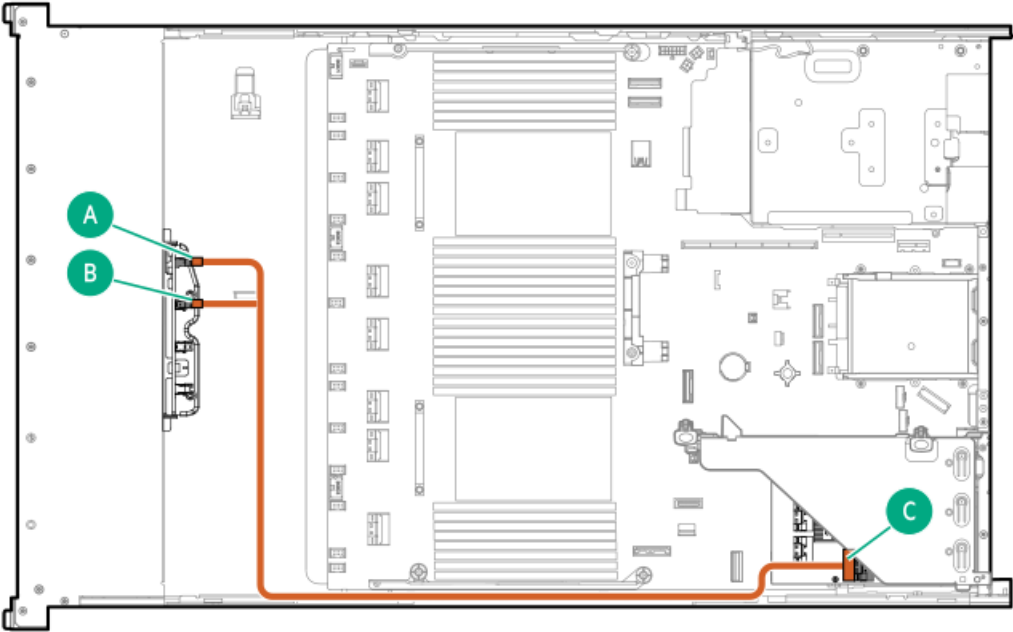

Cable part number	Color	From	To
P51547-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48832-B21


8 SFF box 2: Secondary type-o controller

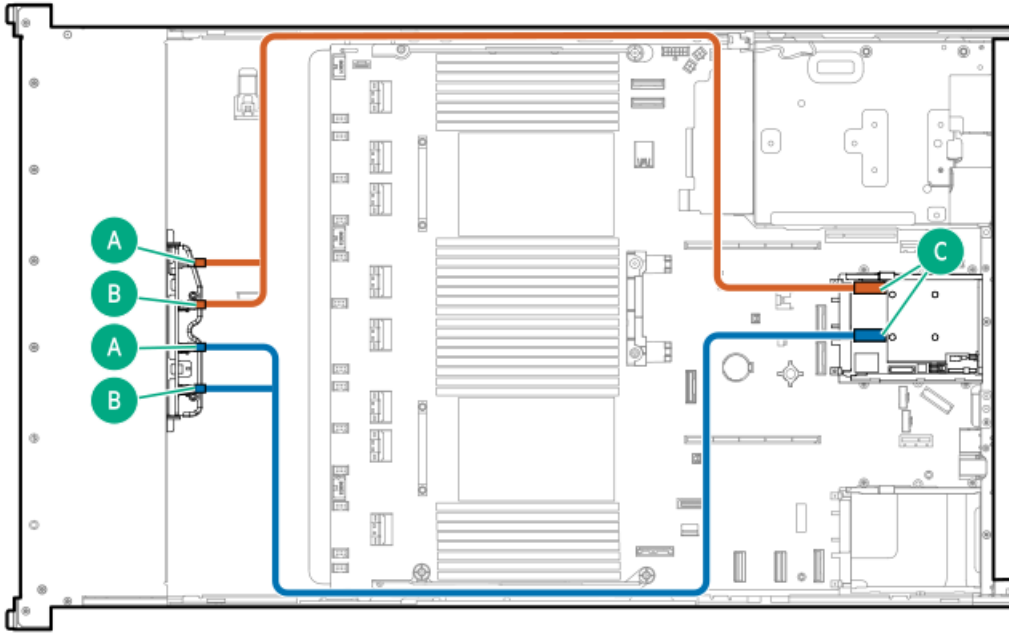

Cable part number	Color	From	To
P51546-001 ¹	Orange	Drive backplane	Secondary type-o controller

¹ Option kit: P48829-B21


8 SFF box 2: Secondary type-o controller

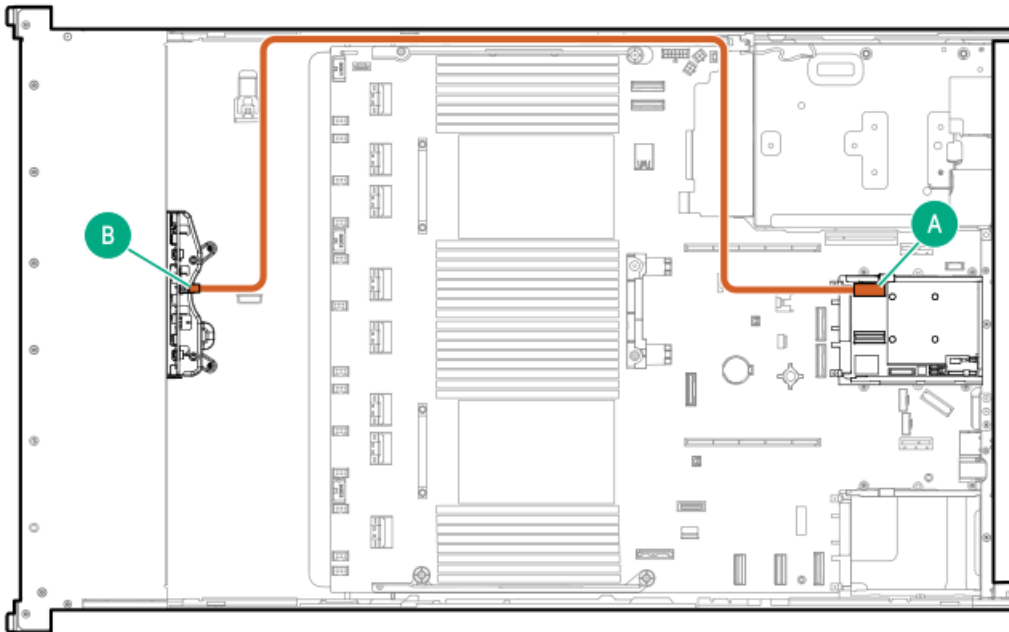

Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	Secondary type-o controller

¹ Option kit: P48813-B21


8 SFF box 2: Primary type-o controller

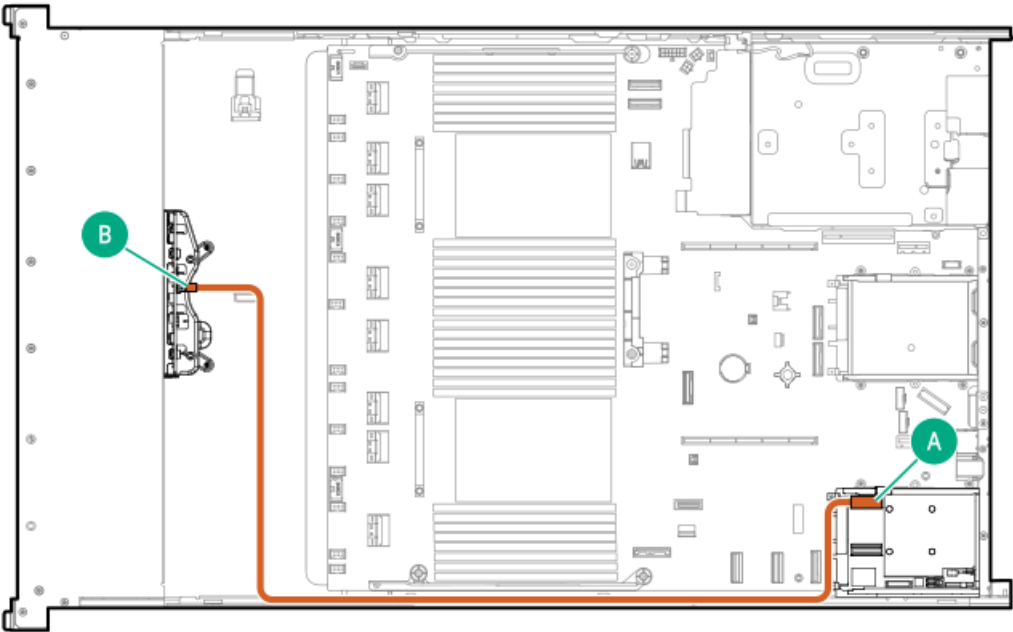

Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	Primary type-o controller

¹ Option kit: P48813-B21

8 SFF box 2 to OCP 1

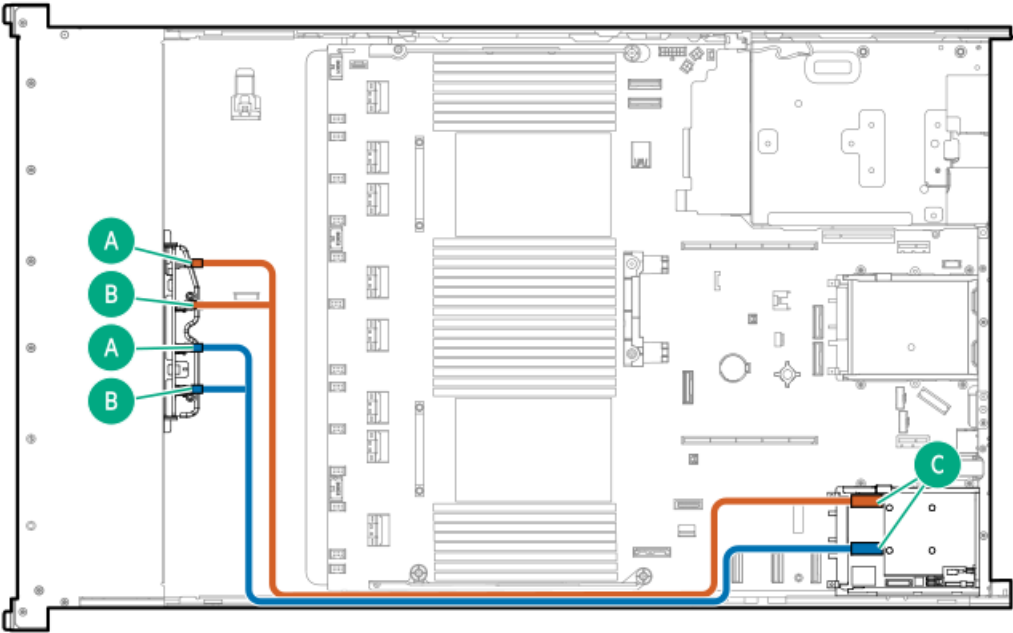

Cable part number	Color	From	To
P51546-001 ¹	Orange	Drive backplane	Primary type-o controller

¹ Option kit: P48829-B21


8 SFF box 2: System board



Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P48813-B21


8 SFF box 2: Secondary type-p controller

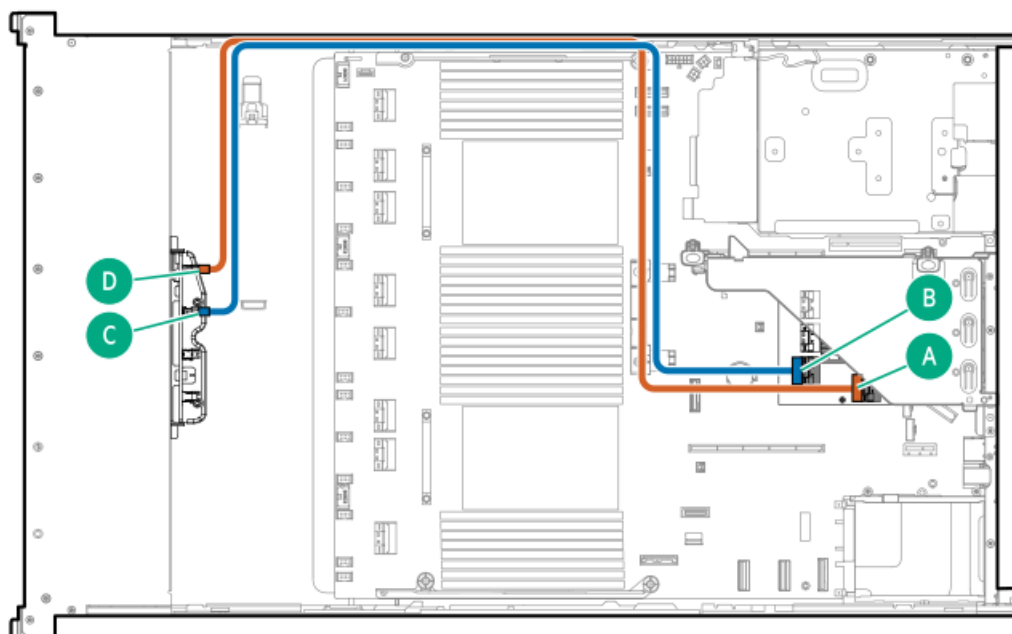

Cable part number	Color	From	To
P51550-001 ¹	Yellow	Drive backplane	Secondary type-p controller
	Pink	Drive backplane	Secondary type-p controller


¹ Option kit: P48831-B21

8 SFF box 2: Secondary type-p controller

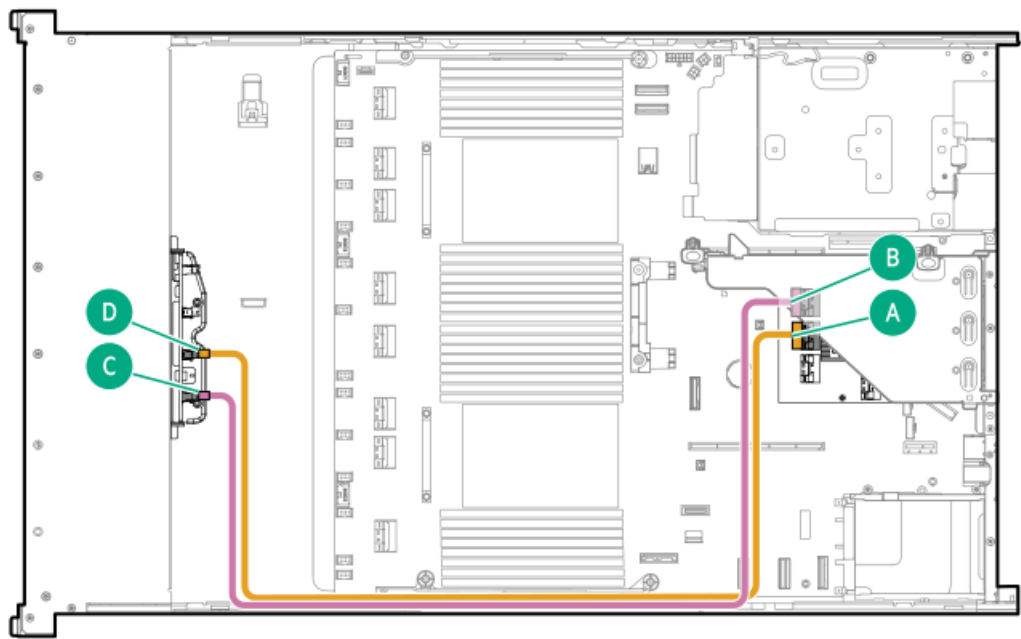

Cable part number	Color	From	To
P51551-001 ¹	Yellow	Drive backplane	Secondary type-p controller
	Pink	Drive backplane	Secondary type-p controller


¹ Option kit: P48831-B21

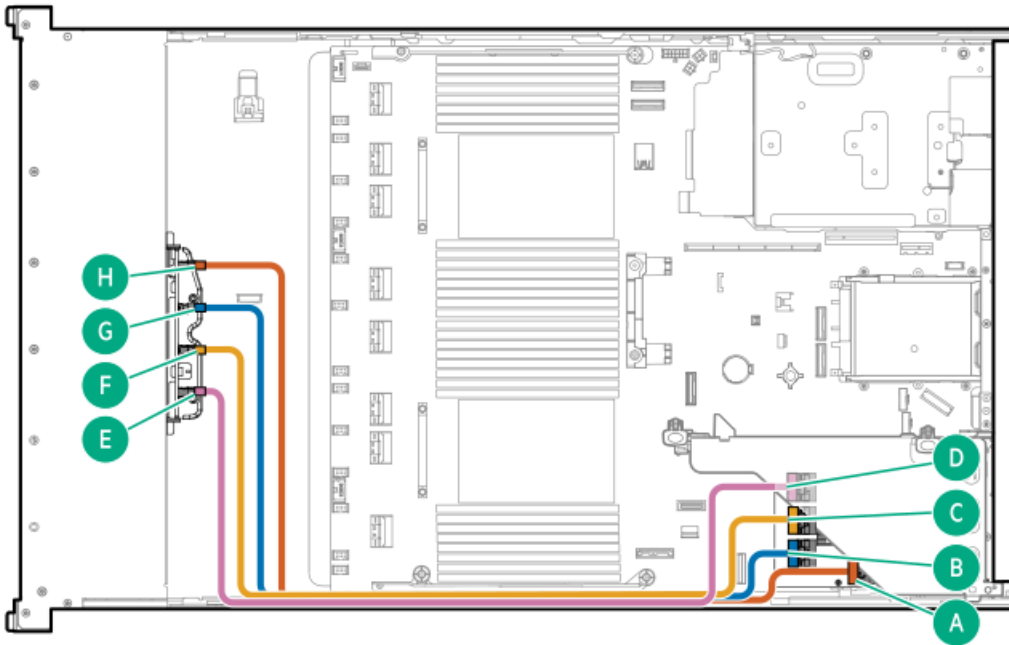

Cable part number	Color	From	To
P51552-001 ¹	Orange	Drive backplane	Primary type-p controller
	Blue	Drive backplane	Primary type-p controller
	Yellow	Drive backplane	Primary type-p controller
	Pink	Drive backplane	Primary type-p controller

¹ Option kit: P48831-B21


8 SFF box 1-3: Primary and secondary type-p controllers

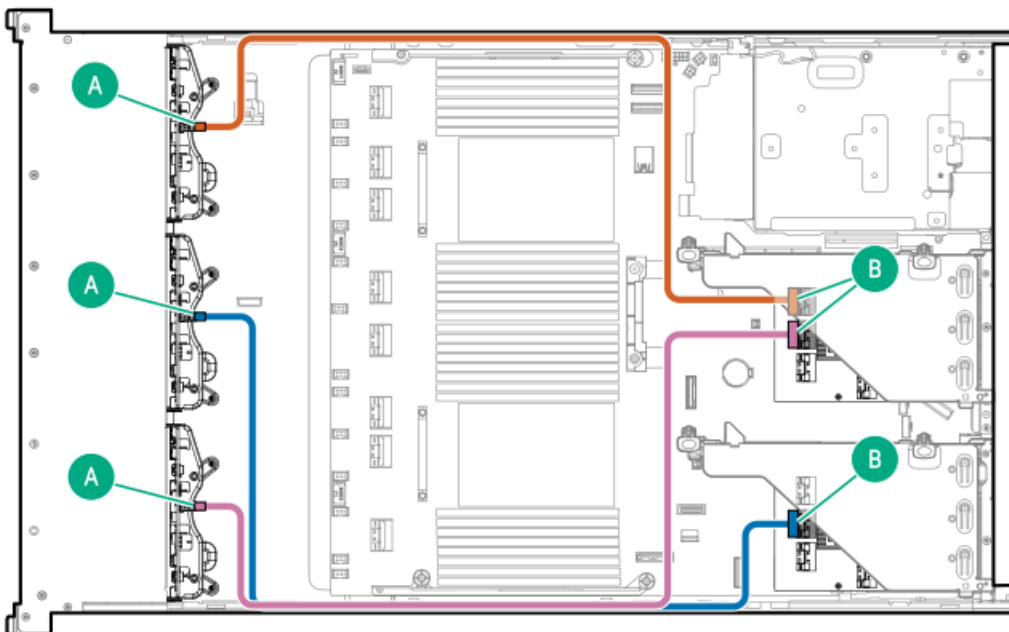

Cable part number	Color	From	To
P22904-001 ¹	Orange	Drive backplane	Secondary type-p controller
	Blue	Drive backplane	Secondary type-p controller
	Pink	Drive backplane	Primary type-p controller

¹ Option kit: P54874-B21

8 SFF NVMe box 2 to system board cabling

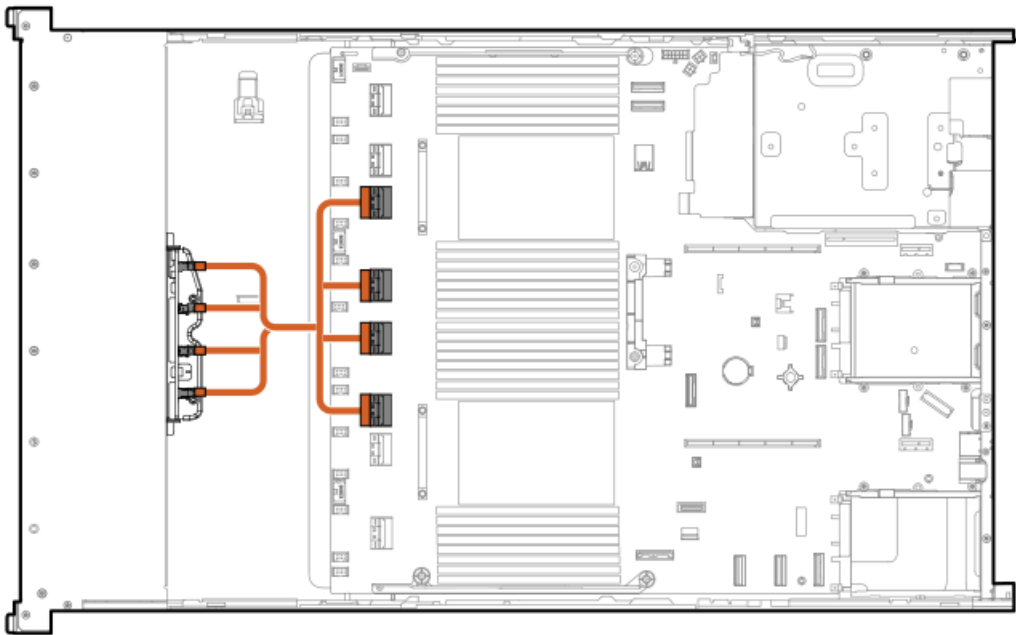


Cable part number	Color	From	To
P53286-001 ¹	Orange	Box 2 ports 1-4	System board ports 3-6

¹ Option kit: P48825-B21

8 SFF box 3 cabling


8 SFF box 3: System board

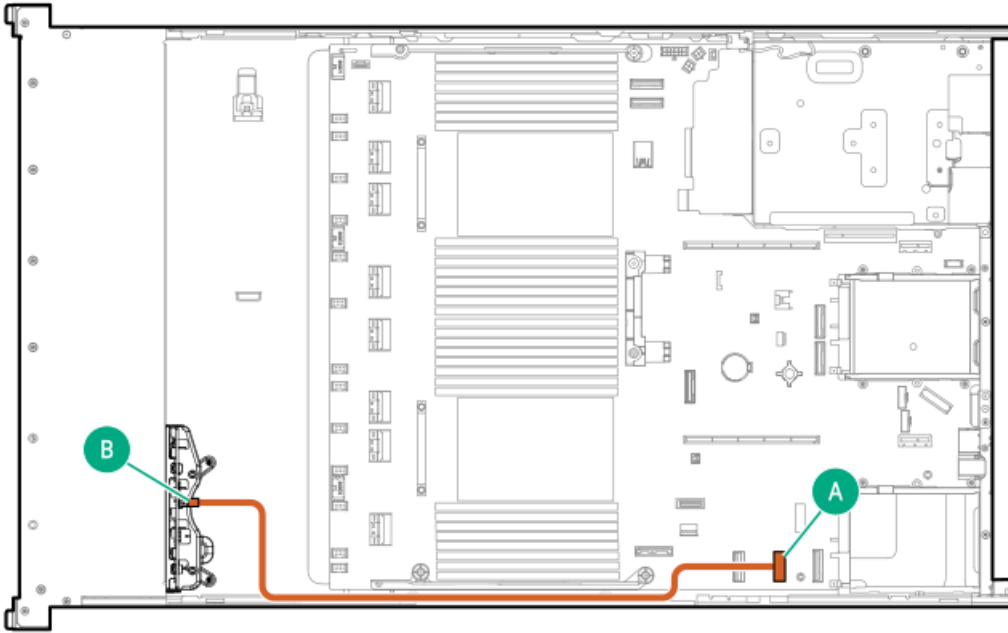

Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P48813-B21


8 SFF box 3: Primary type-o controller

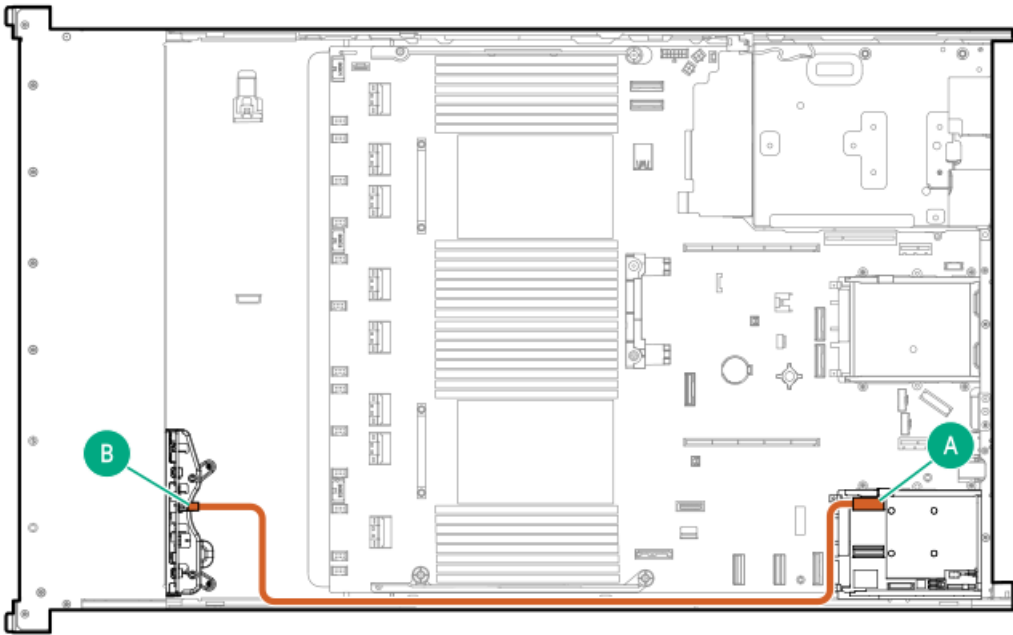

Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	Primary type-o controller

¹ Option kit: P48813-B21


8 SFF box 3: Secondary type-o controller

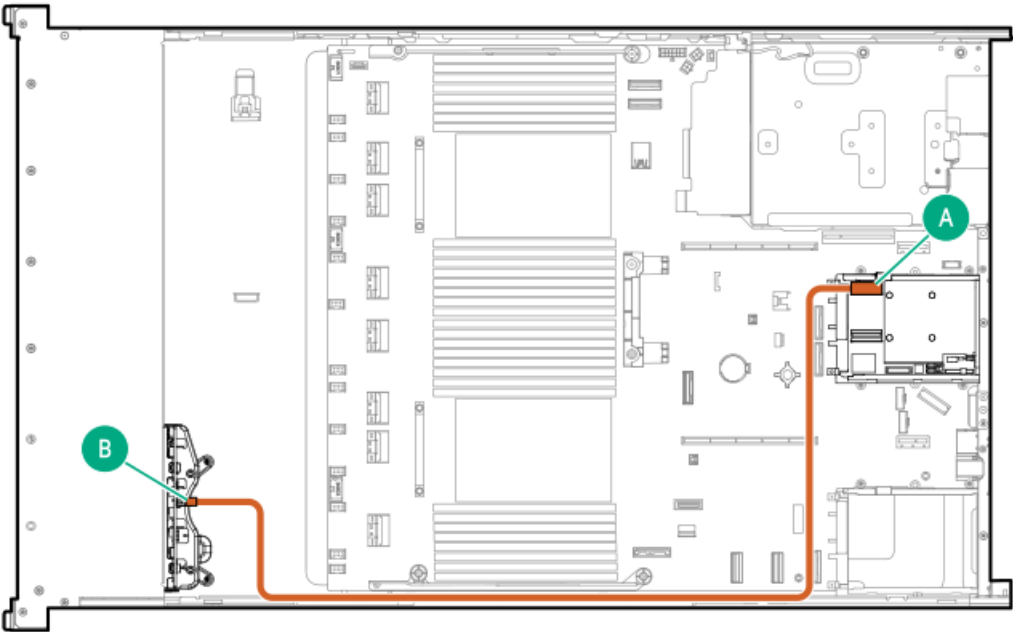

Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	Secondary type-o controller

¹ Option kit: P48813-B21


8 SFF box 3: Secondary type-o controller

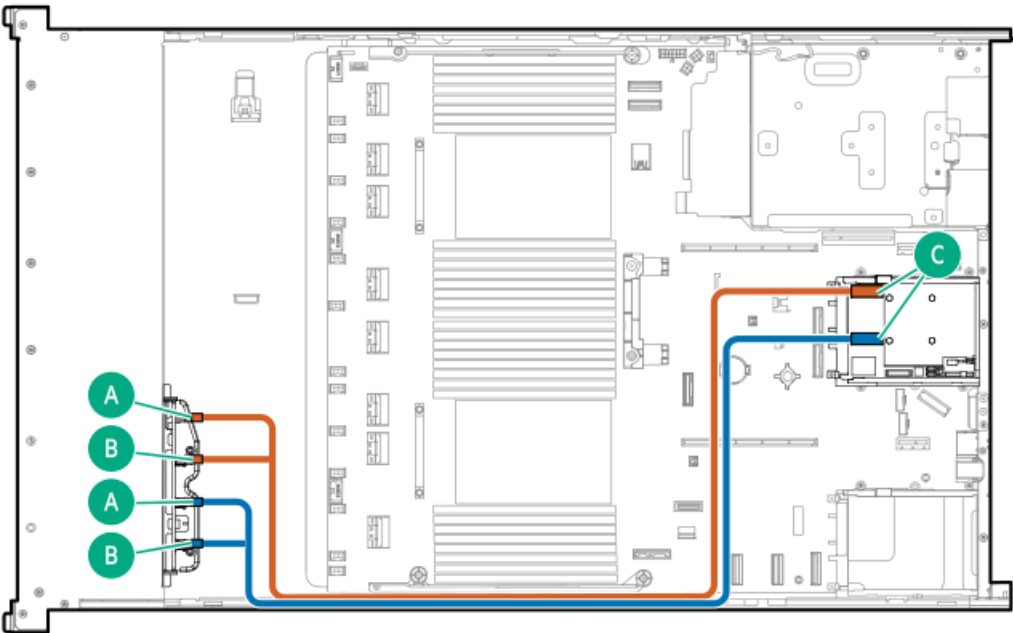

Cable part number	Color	From	To
P51546-001 ¹	Orange	Drive backplane	Secondary type-o controller

¹ Option kit: P48829-B21


8 SFF box 3: Primary type-o controller

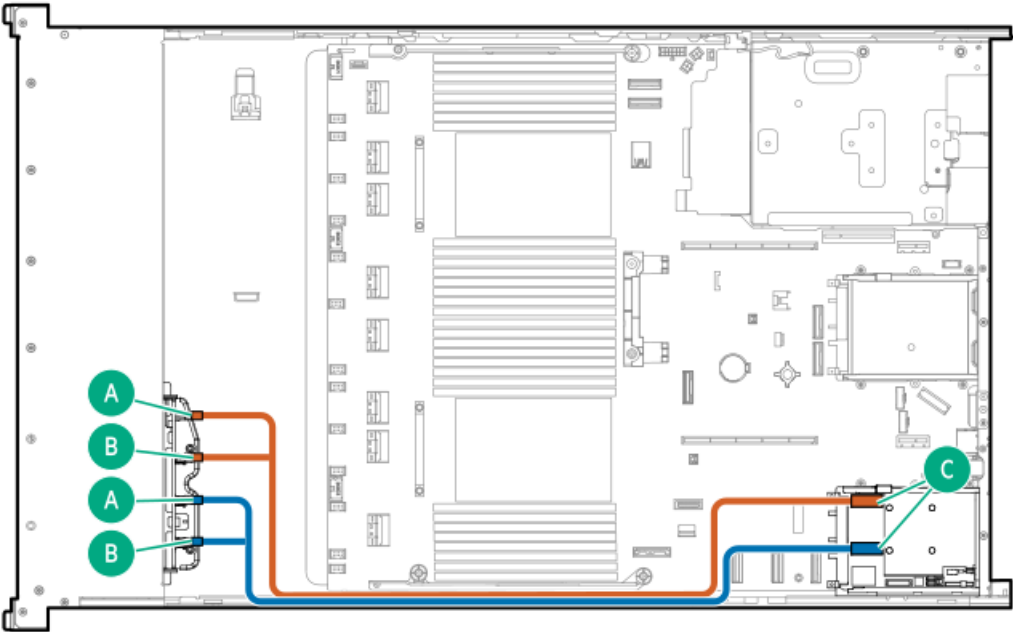

Cable part number	Color	From	To
P51546-001 ¹	Orange	Drive backplane	Primary type-o controller

¹ Option kit: P48829-B21


8 SFF box 3: Primary retimer

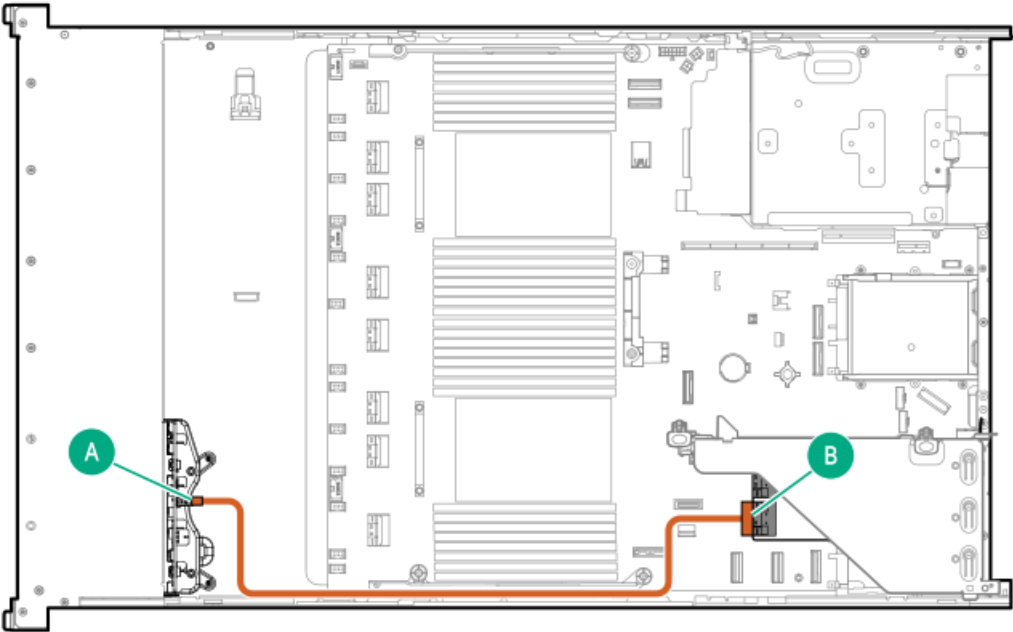

Cable part number	Color	From	To
P22904-001 ¹	Orange	Drive backplane	Primary retimer

¹ Option kit: P54874-B21


8 SFF box 1-3: Primary and secondary type-p controllers

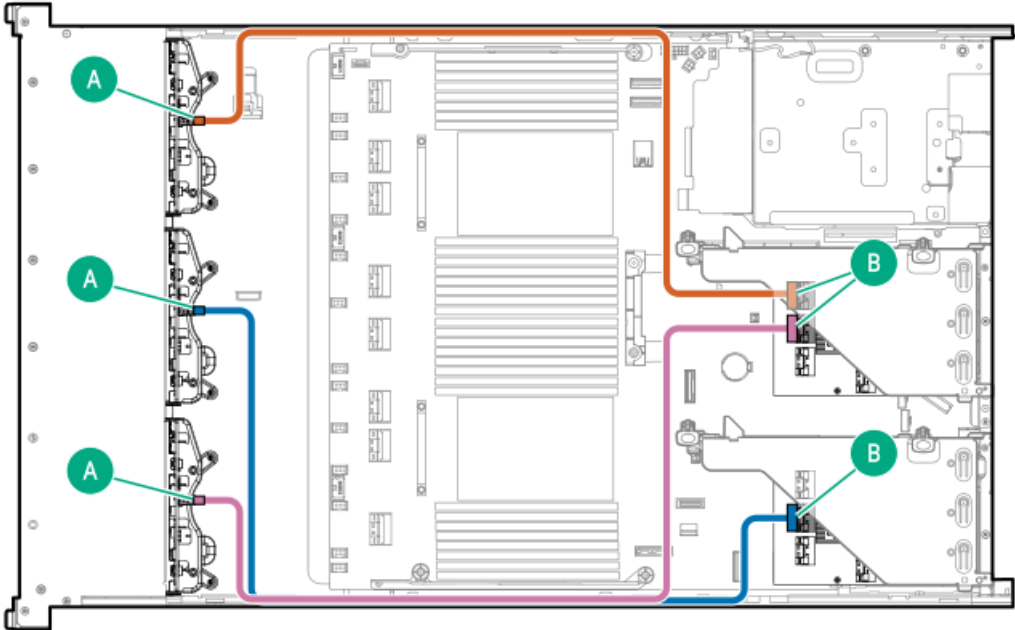

Cable part number	Color	From	To
P22904-001 ¹	Orange	Drive backplane	Secondary type-p controller
	Pink	Drive backplane	Secondary type-p controller
	Blue	Drive backplane	Primary type-p controller

¹ Option kit: P54874-B21


8 SFF box 3: Primary retimer

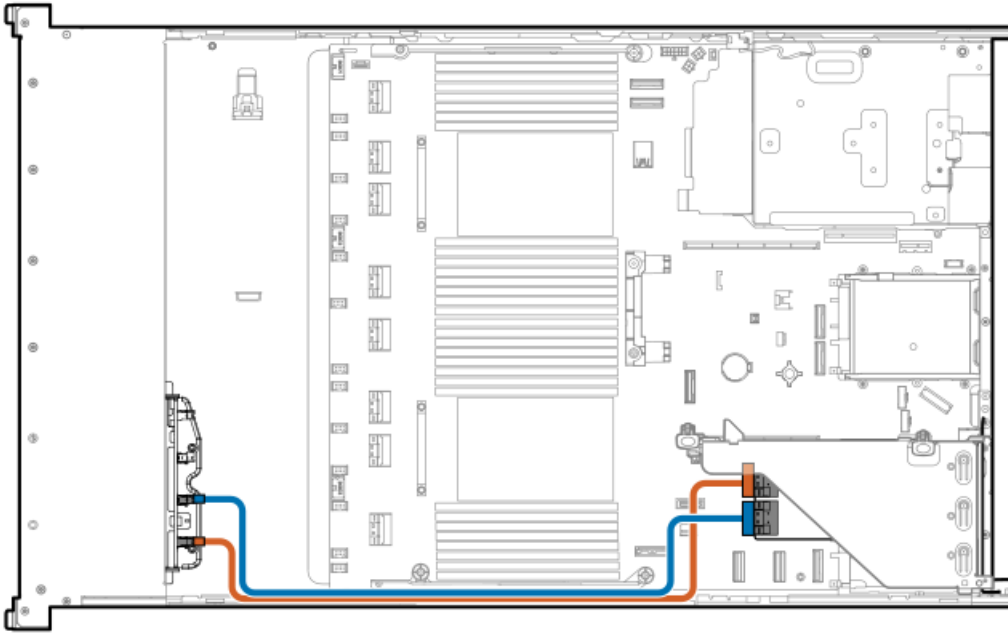

Cable part number	Color	From	To
P22904-001 ¹	Orange and blue	Drive backplane	Primary retimer

¹ Option kit: P54874-B21


8 SFF box 3: Primary type-p controller

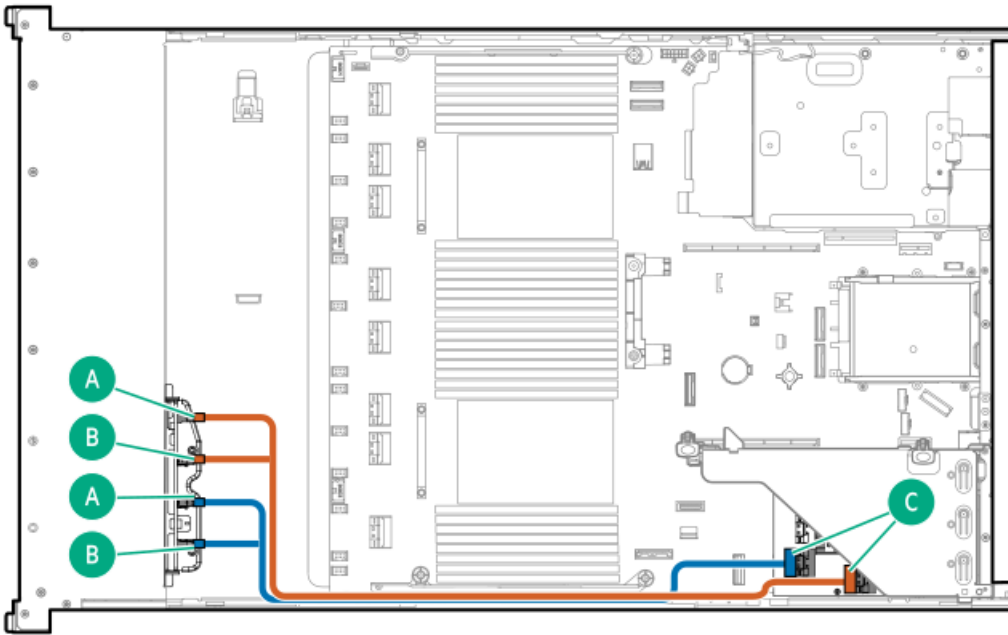

Cable part number	Color	From	To
P14330-001 ¹	Orange	Drive backplane	Primary type-p controller
	Blue	Drive backplane	Primary type-p controller

¹ Option kit: P48832-B21

8 SFF box 3: Primary type-p controller

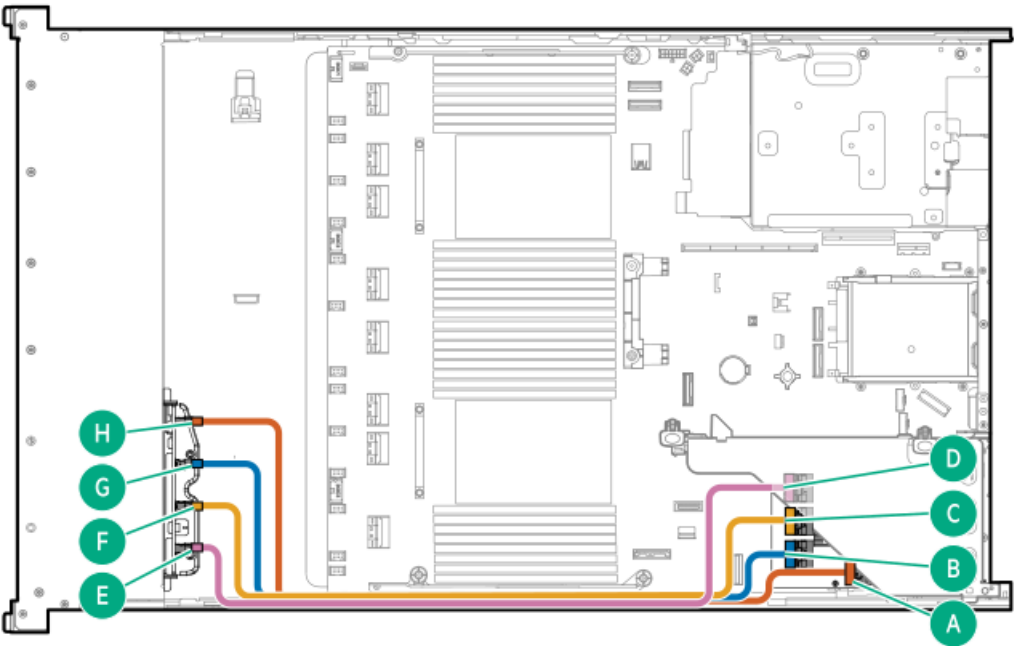


Cable part number	Color	From	To
P51553-001 ¹	Orange	Drive backplane	Primary type-p controller
	Blue	Drive backplane	Primary type-p controller
	Yellow	Drive backplane	Primary type-p controller
	Pink	Drive backplane	Primary type-p controller

¹ Option kit: P48831-B21

8 SFF box 3: System board




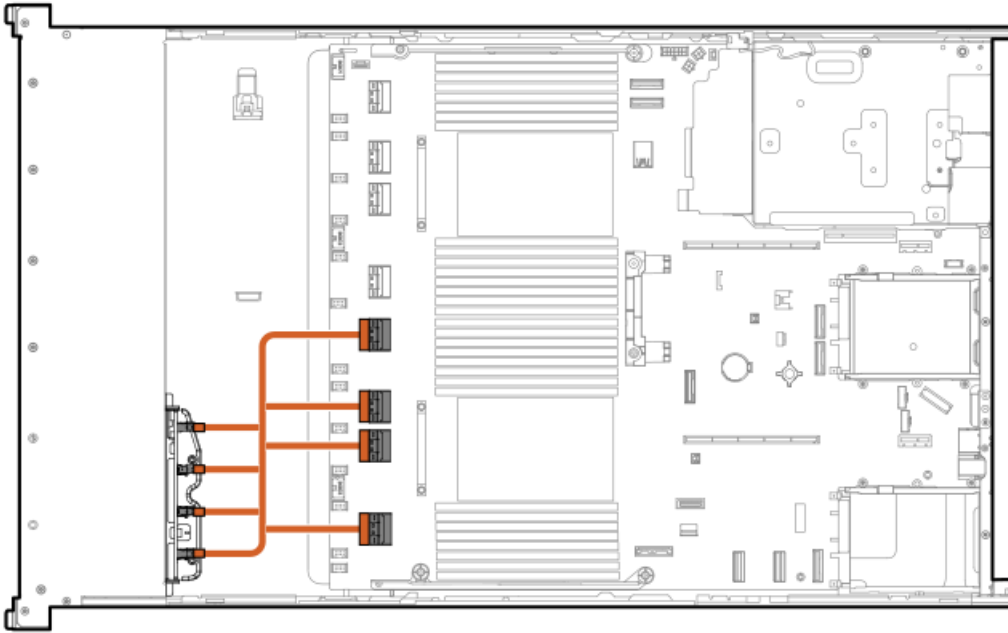

Cable part number	Color	From	To
P53287-001 ¹	Orange	Box 3 ports 1-4	System board ports 1-4

¹ Option kit: P48825-B21

8 SFF box 3: System board

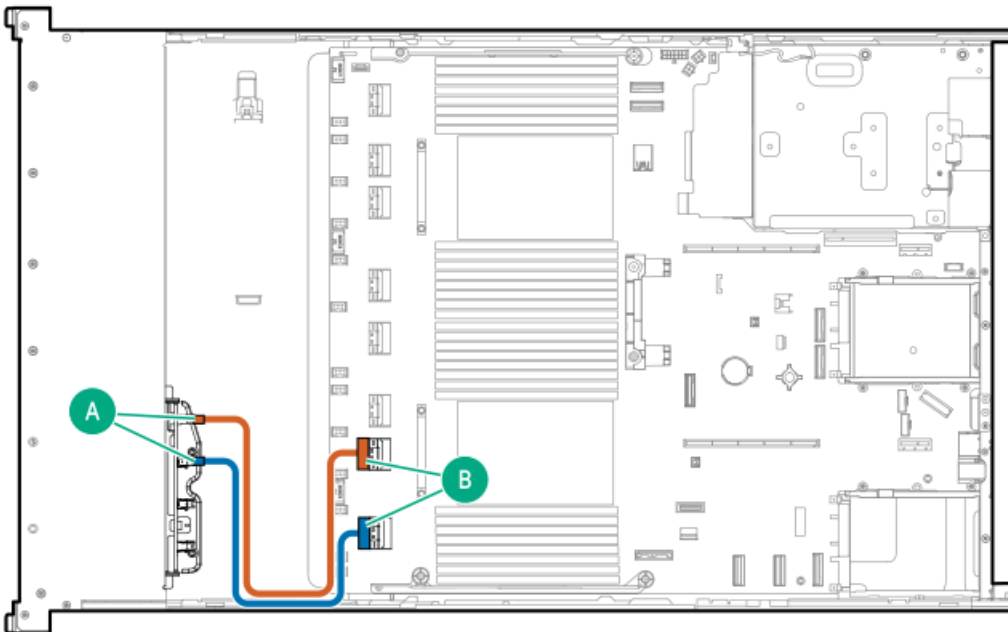


Cable part number	Color	From	To
P51543-001 ¹	Orange	Drive backplane port 1 and 2	System board port 1 and 2

¹ Option kit: P48825-B21

Mid 8 SFF cabling

8 SFF box 7: Primary type-o controller

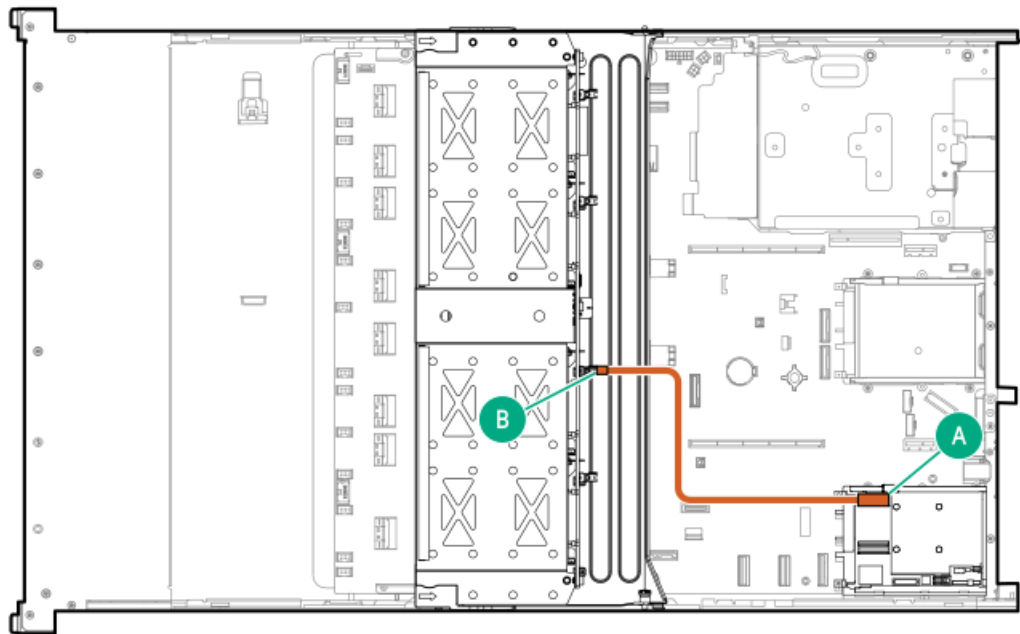


Cable part number	Color	From	To
P51554-001 ¹	Orange	Drive backplane	Primary type-o controller

¹ Option kit: P48815-B21

8 SFF box 7: Secondary type-o controller




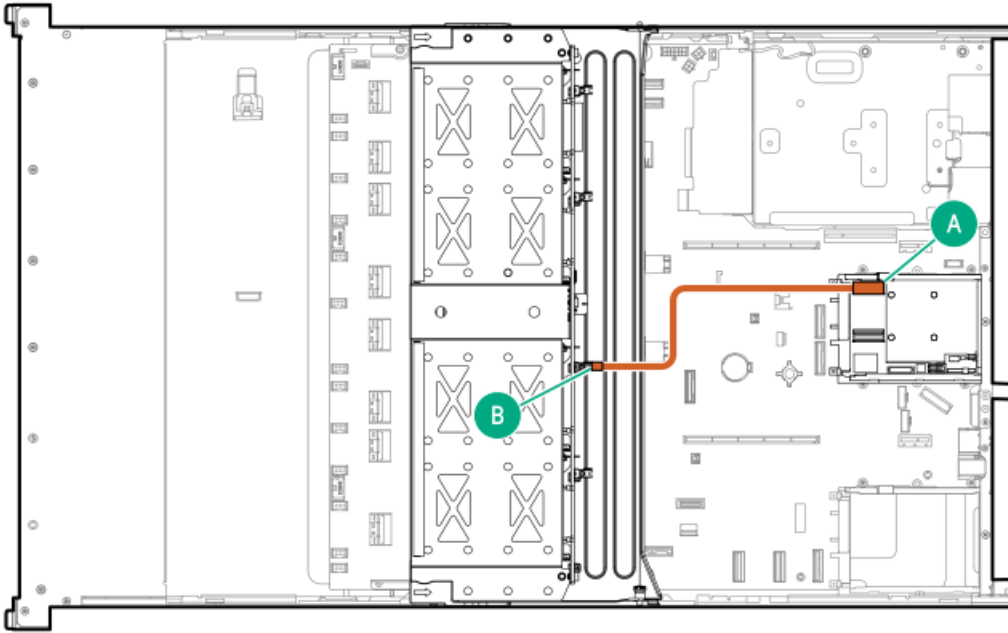

Cable part number	Color	From	To
P51554-001 ¹	Orange	Drive backplane	Secondary type-o controller

¹ Option kit: P48815-B21


8 SFF box 7: Primary type-p controller

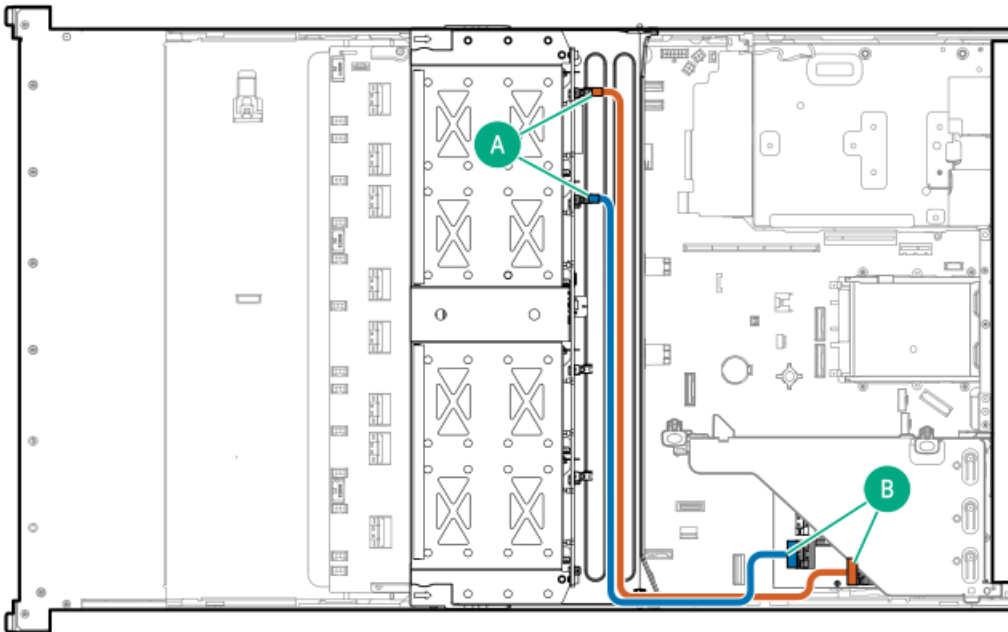

Cable part number	Color	From	To
P22903-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48816-B21


8 SFF midplane drive cabling: Type-p controllers

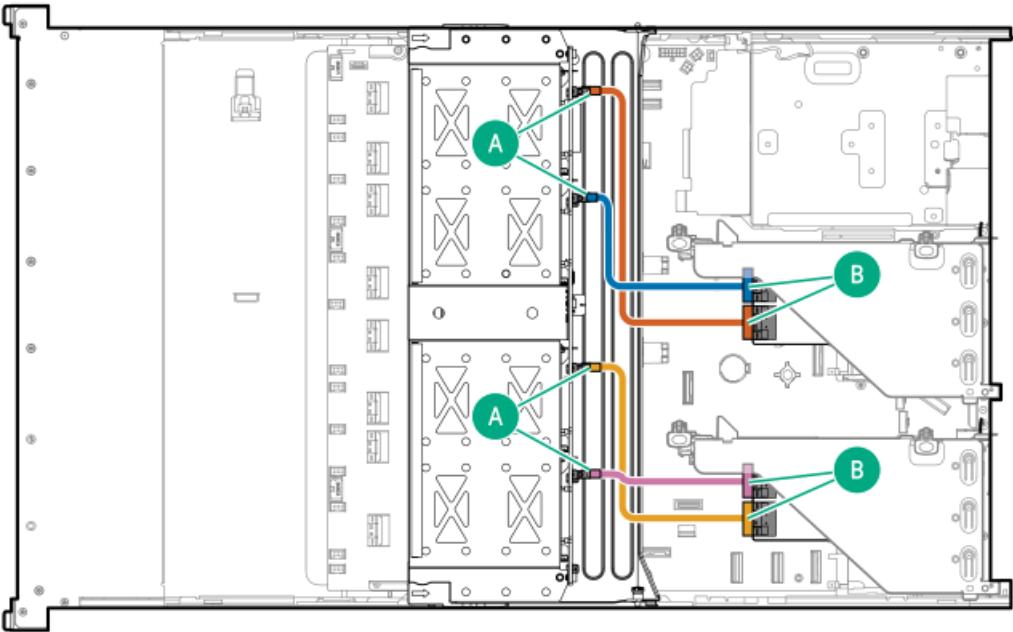

Cable part number	Color	From	To
P14329-001 ¹	Orange	Drive backplane	Primary and Secondary type-p controllers

¹ Option kit: P48816-B21


8 SFF midplane drive cabling: Secondary type-p controller

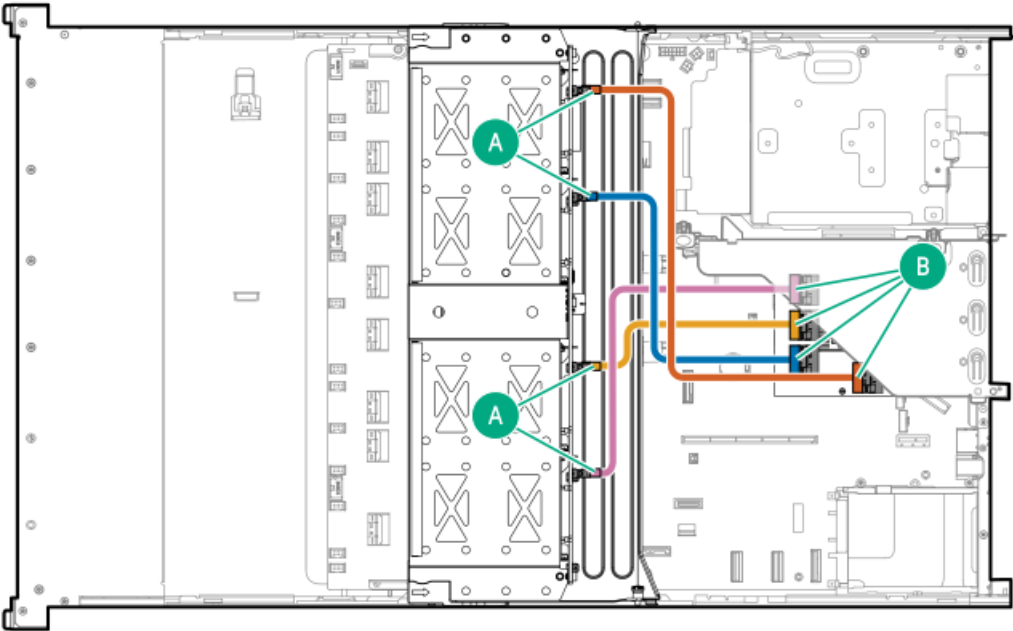

Cable part number	Color	From	To
P14329-001 ¹	Orange	Drive backplane	Secondary type-p controller

¹ Option kit: P48810-B21

8 SFF midplane drive cabling: Primary type-p controller

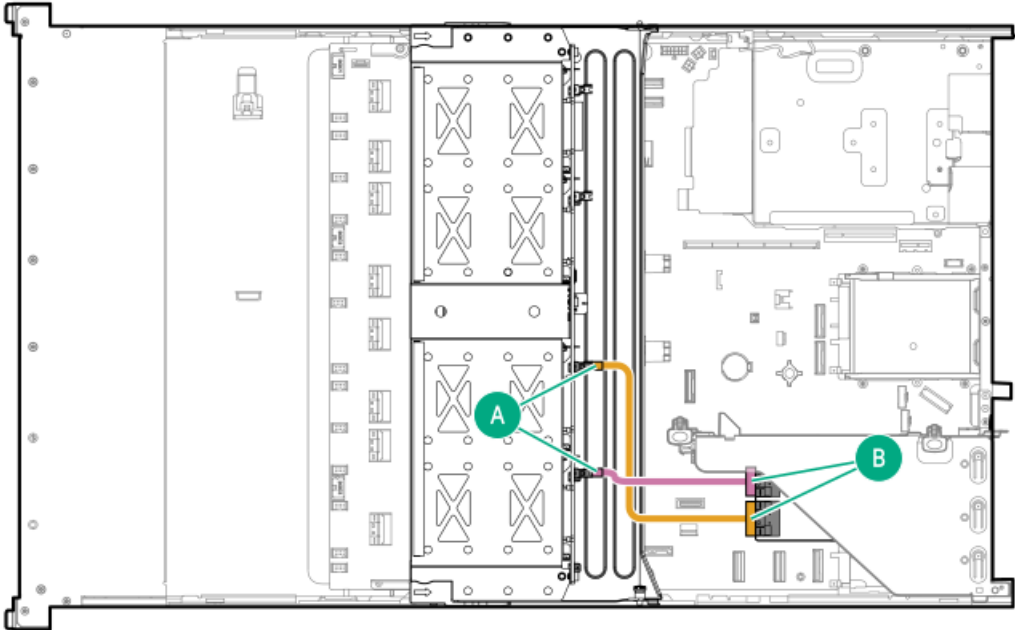


Cable part number	Color	From	To
P14329-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48810-B21

Front 2 SFF cabling

2 SFF box 1: System board




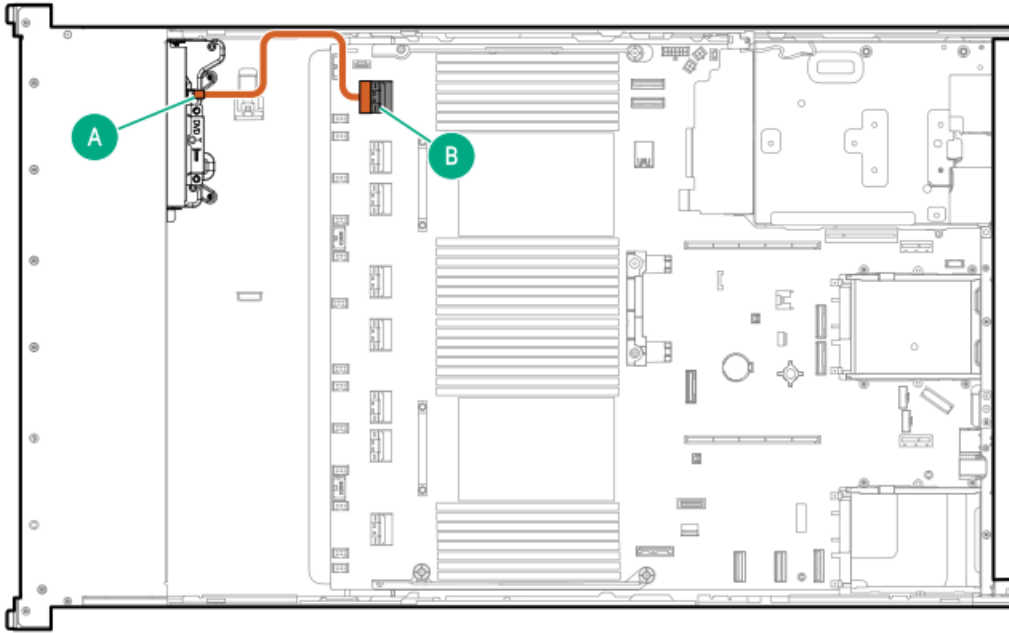

Cable part number	Color	From	To
P51555-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P52153-B21


2 SFF box 1: to system board cabling

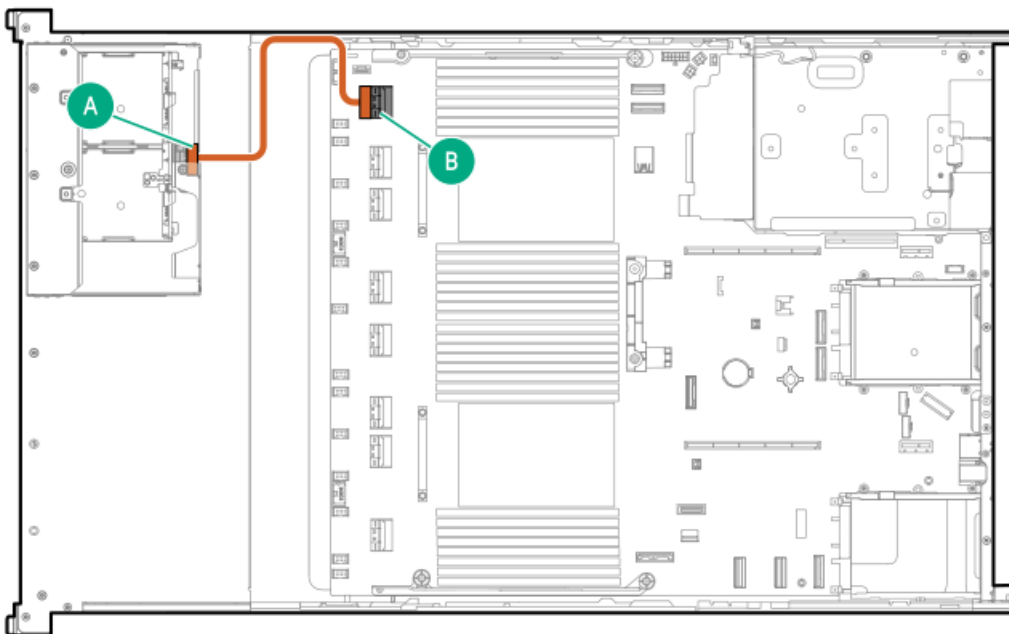

Cable part number	Color	From	To
P51555-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P52153-B21


2 SFF box 1: System board

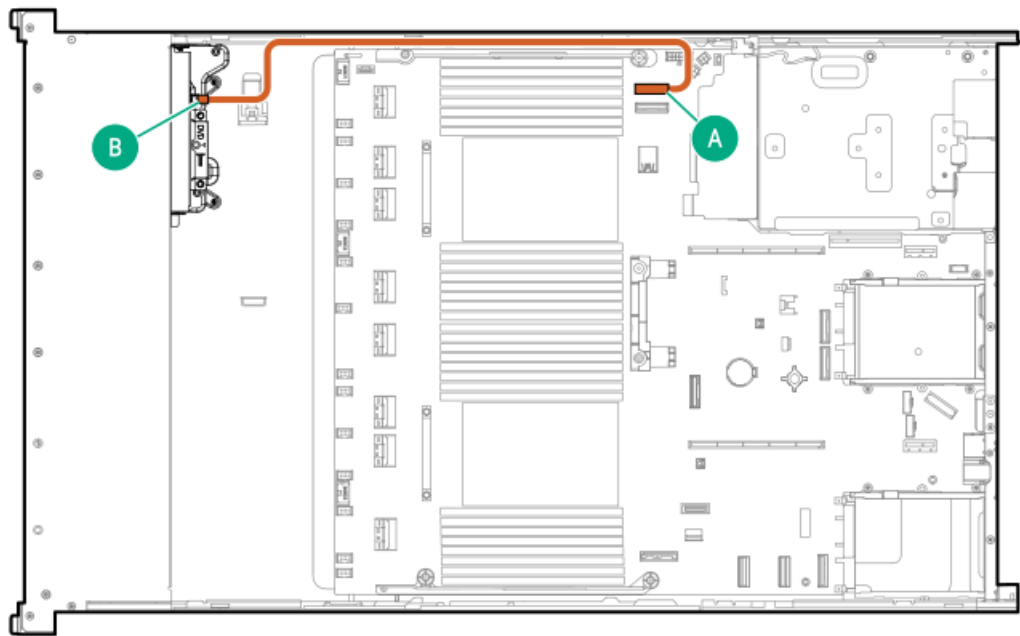

Cable part number	Color	From	To
P51556-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P52153-B21


2 SFF box 1: System board

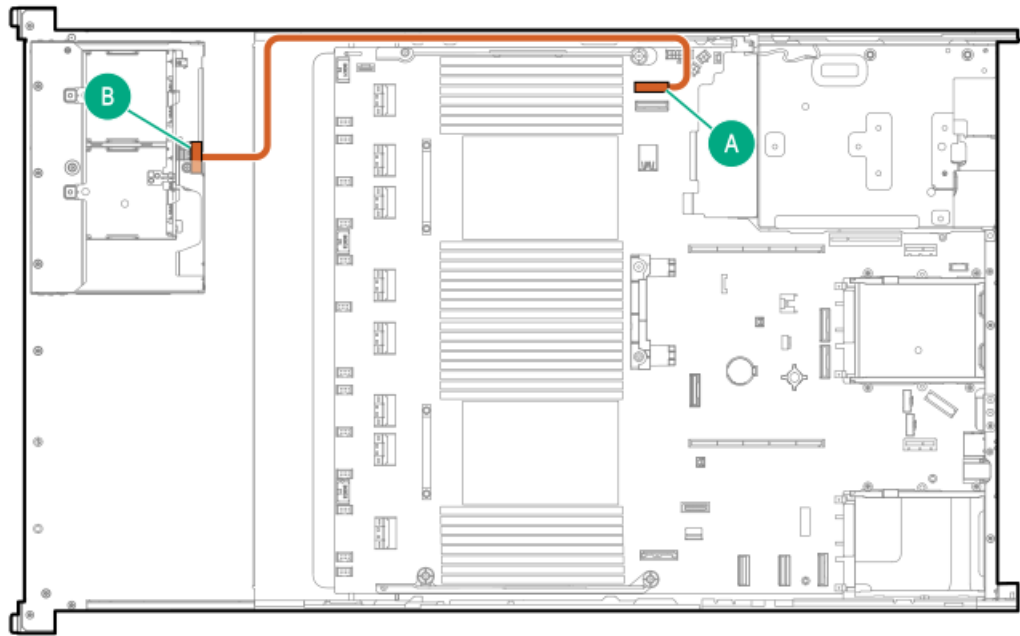

Cable part number	Color	From	To
P51556-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P52153-B21


2 SFF box 1: Secondary type-p controller

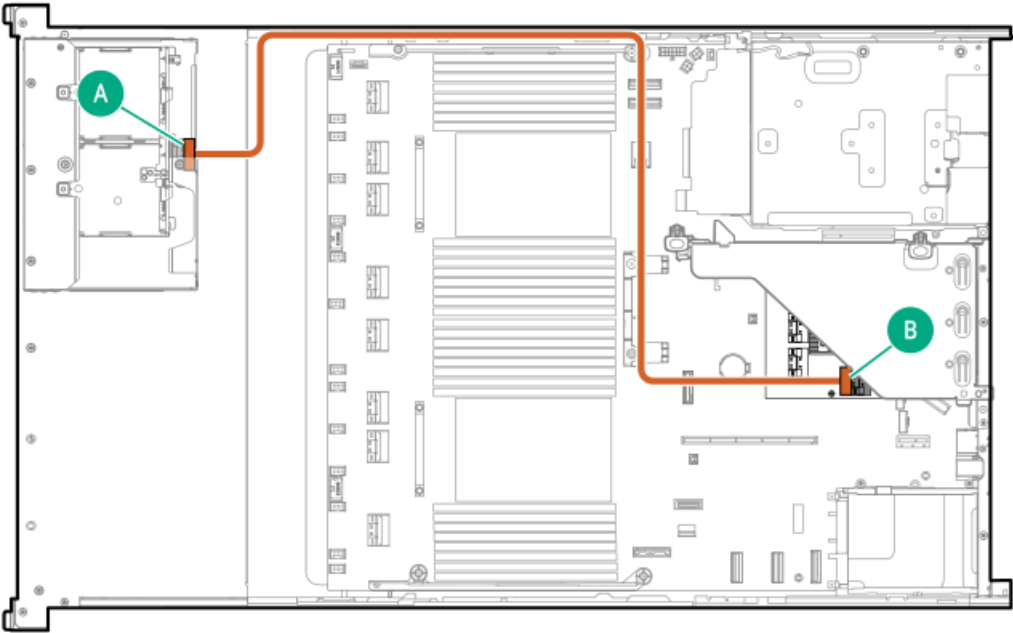

Cable part number	Color	From	To
P22905-001 ¹	Orange	Drive backplane	Secondary type-p controller

¹ Option kit: P54874-B21


2 SFF box 1: Primary type-p controller

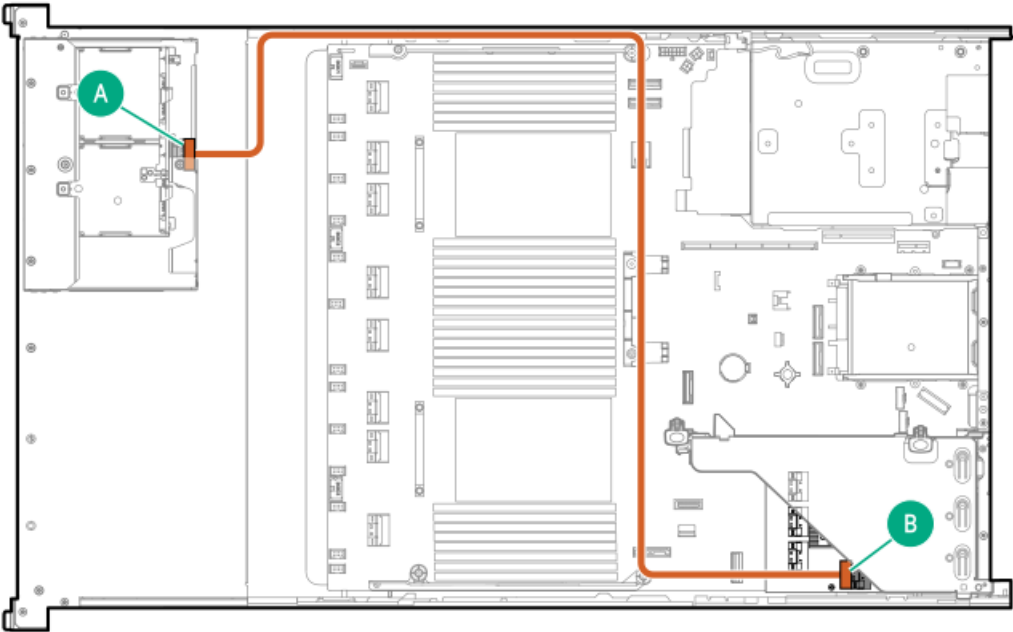

Cable part number	Color	From	To
P22905-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P54874-B21

2 SFF box 1: Secondary type-p controller

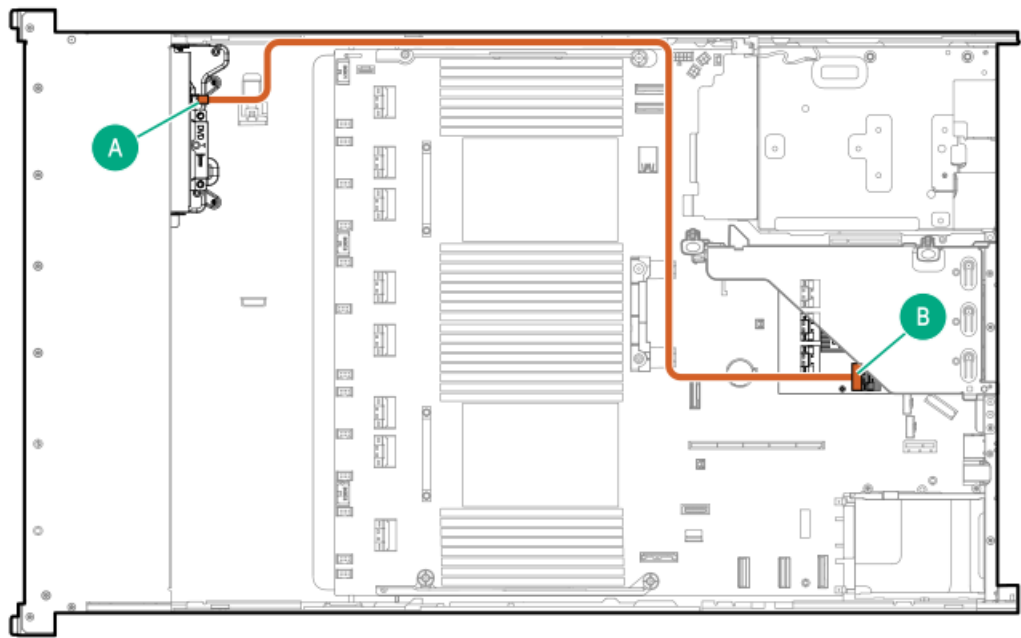


Cable part number	Color	From	To
P22905-001 ¹	Orange	Drive backplane	Secondary type-p controller

¹ Option kit: P54874-B21

2 SFF box 1: Primary type-p controller




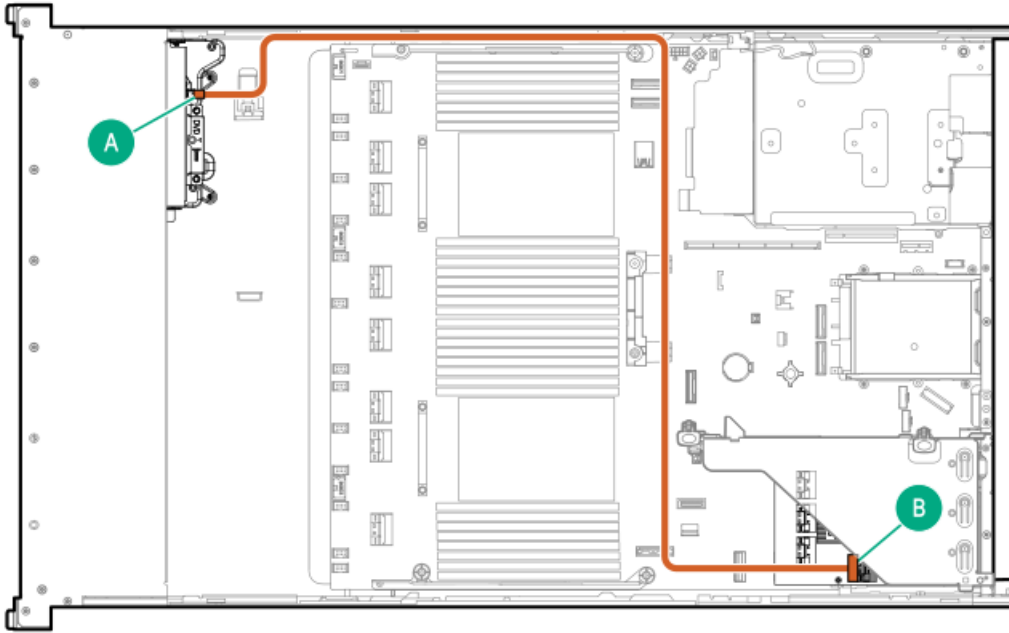

Cable part number	Color	From	To
P22905-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P54874-B21


2 SFF box 1: Primary type-o controller

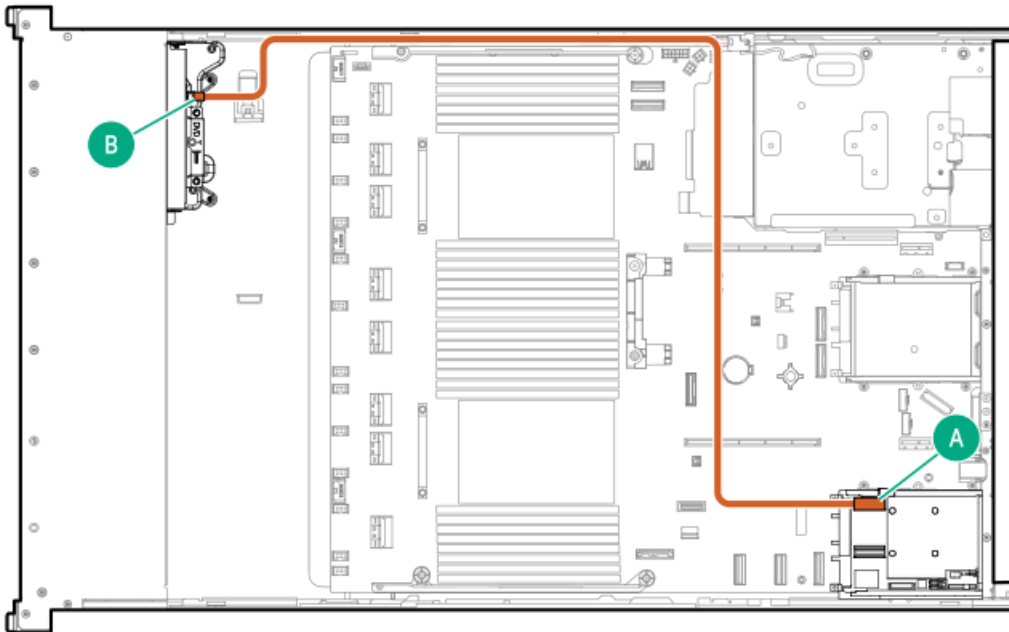

Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	Primary type-o controller

¹ Option kit: P48813-B21


2 SFF box 1: Secondary type-o controller

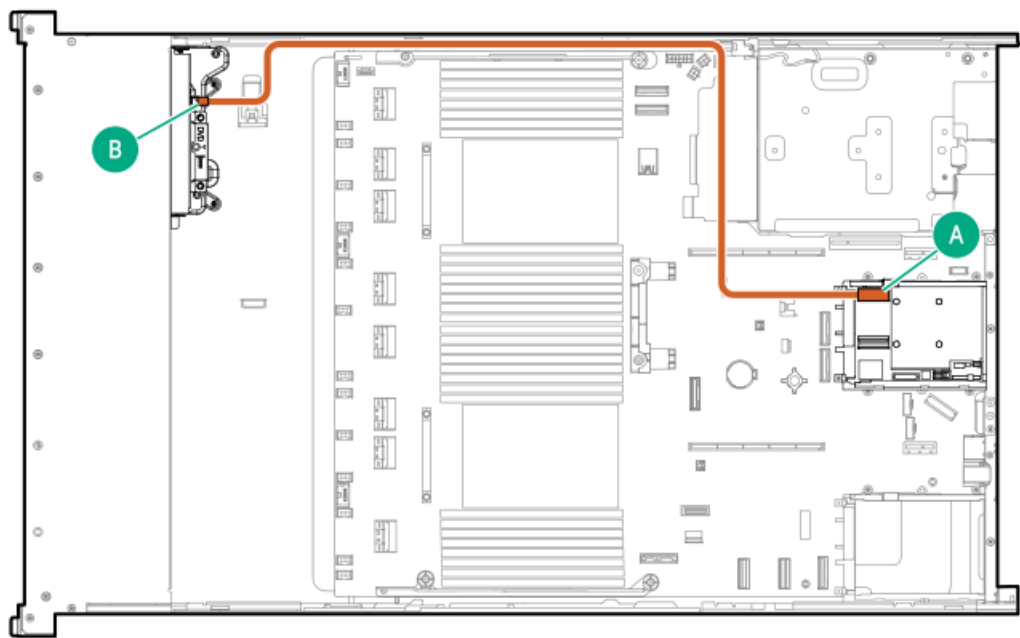

Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	Secondary type-o controller

¹ Option kit: P48813-B21


2 SFF box 1: Primary type-o controller

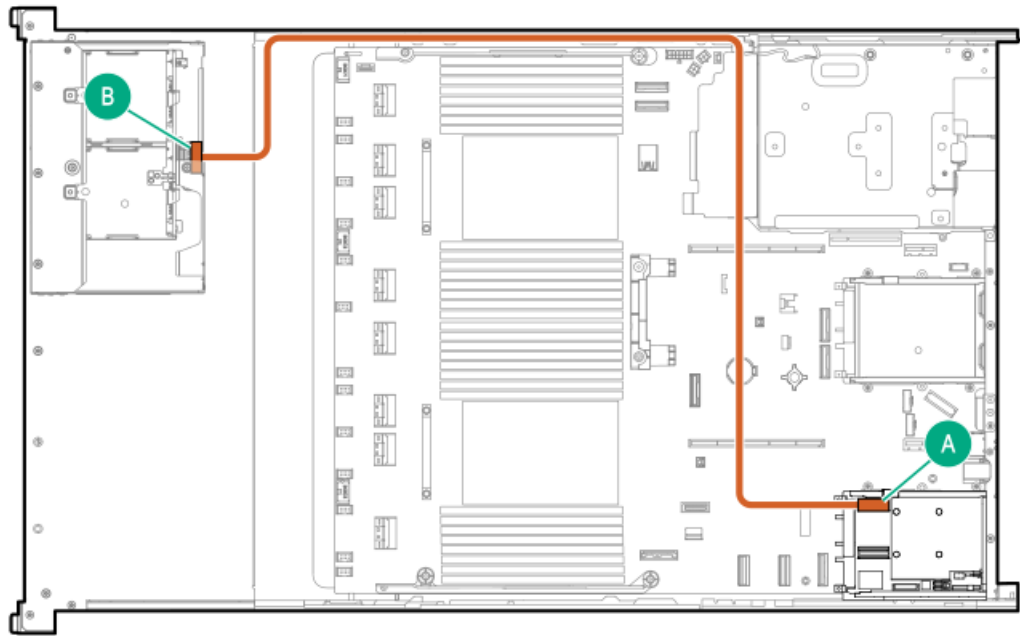

Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	Primary type-o controller

¹ Option kit: P48813-B21

2 SFF box 1: Secondary type-o controller

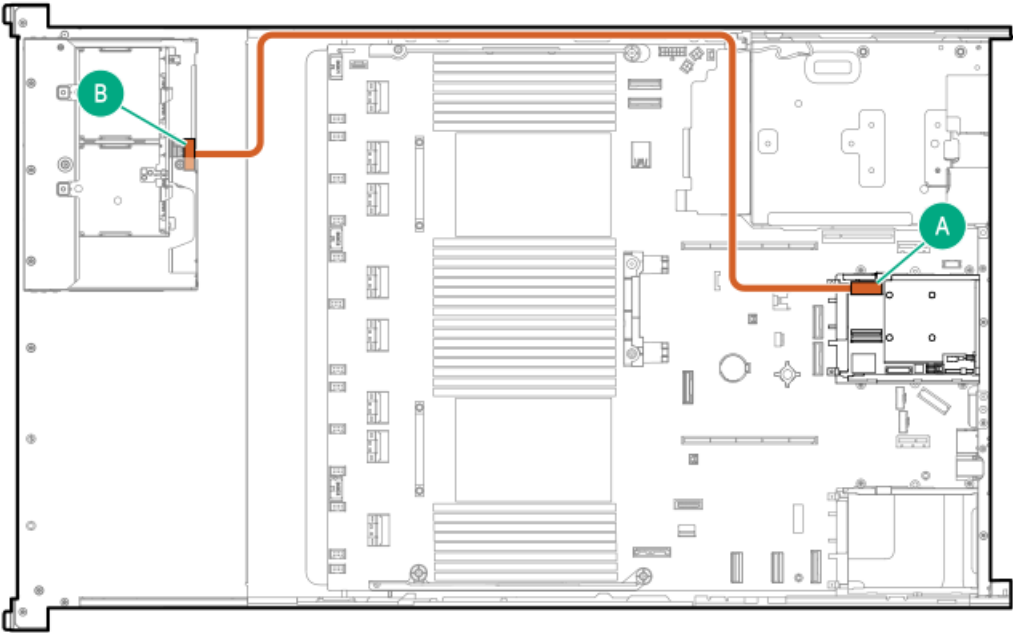


Cable part number	Color	From	To
P51545-001 ¹	Orange	Drive backplane	Secondary type-o controller

¹ Option kit: P48813-B21

Rear 2 SFF cabling

2 SFF box 6: Primary type-p controller




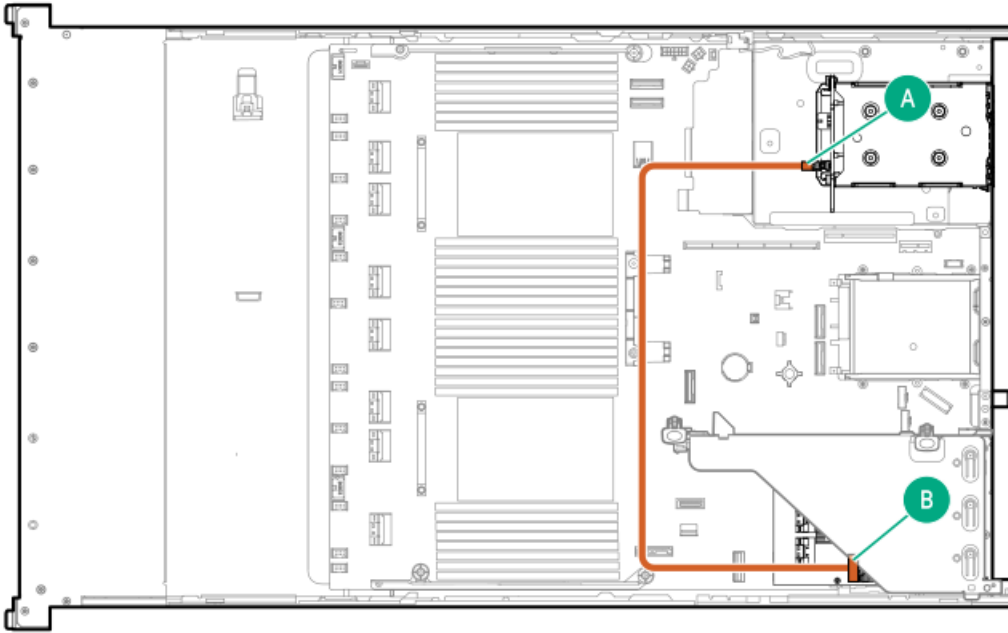

Cable part number	Color	From	To
P22903-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48816-B21


2 SFF box 5: Primary type-p controller

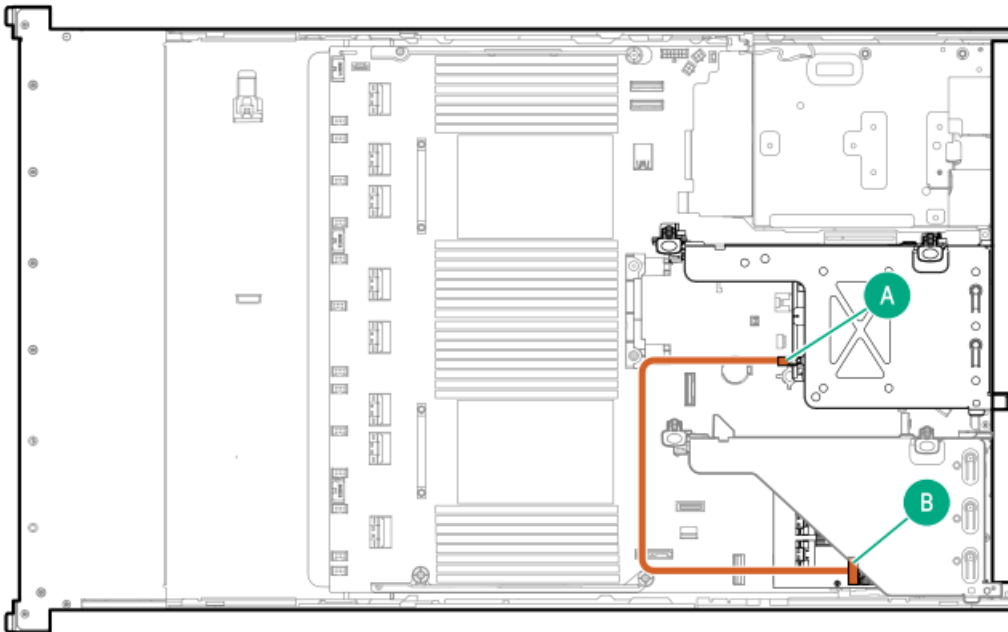

Cable part number	Color	From	To
P22903-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48816-B21


2 SFF box 5: Tertiary type-p controller

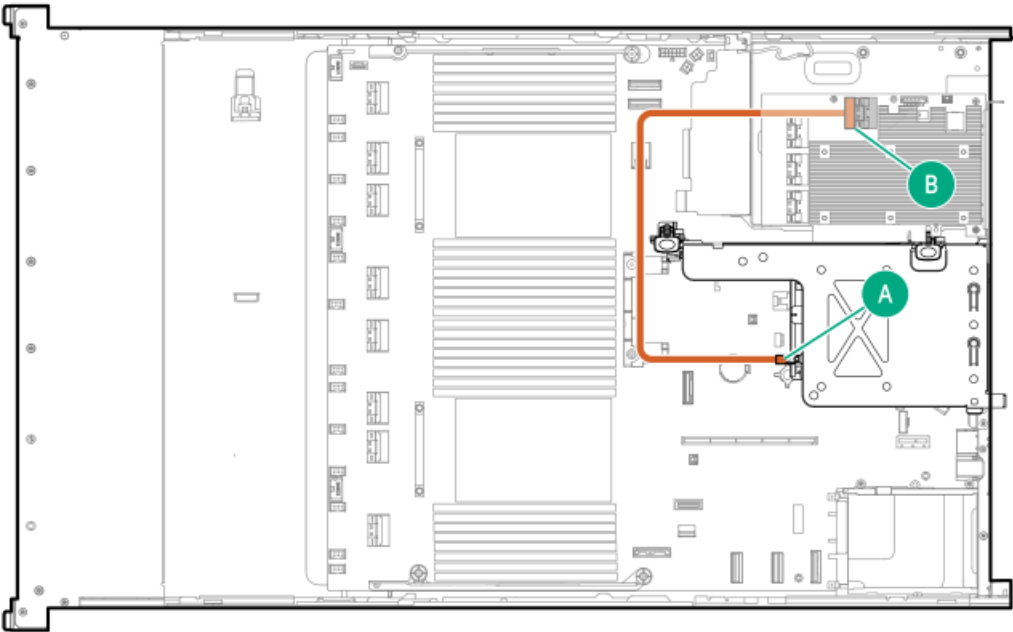

Cable part number	Color	From	To
P22903-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48816-B21


2 SFF box 4: Tertiary type-p controller

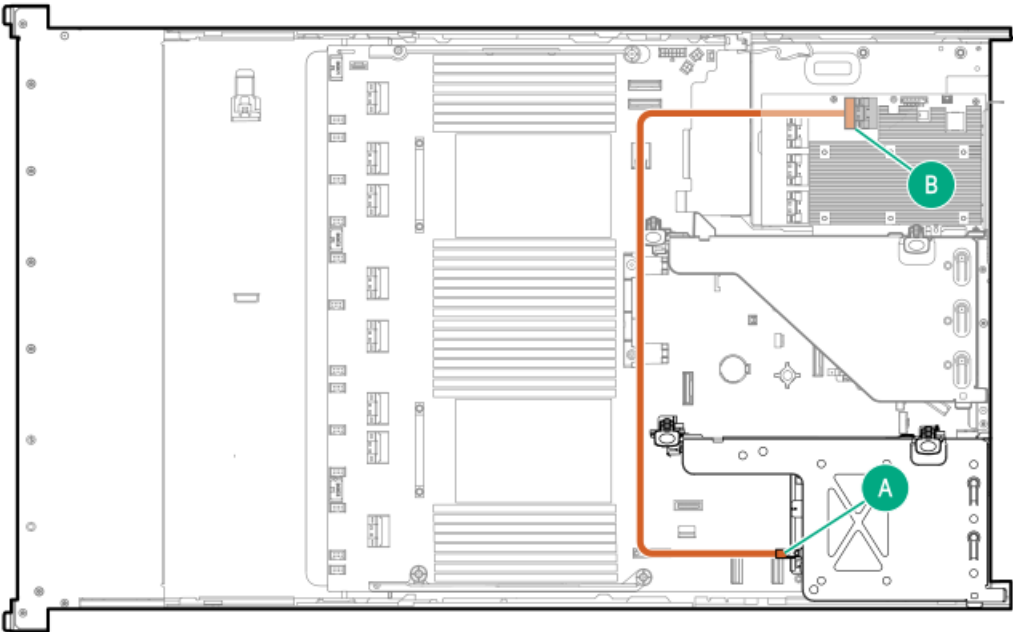

Cable part number	Color	From	To
P22903-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48816-B21


Secondary 2 SFF riser cage: Secondary Type-p controller

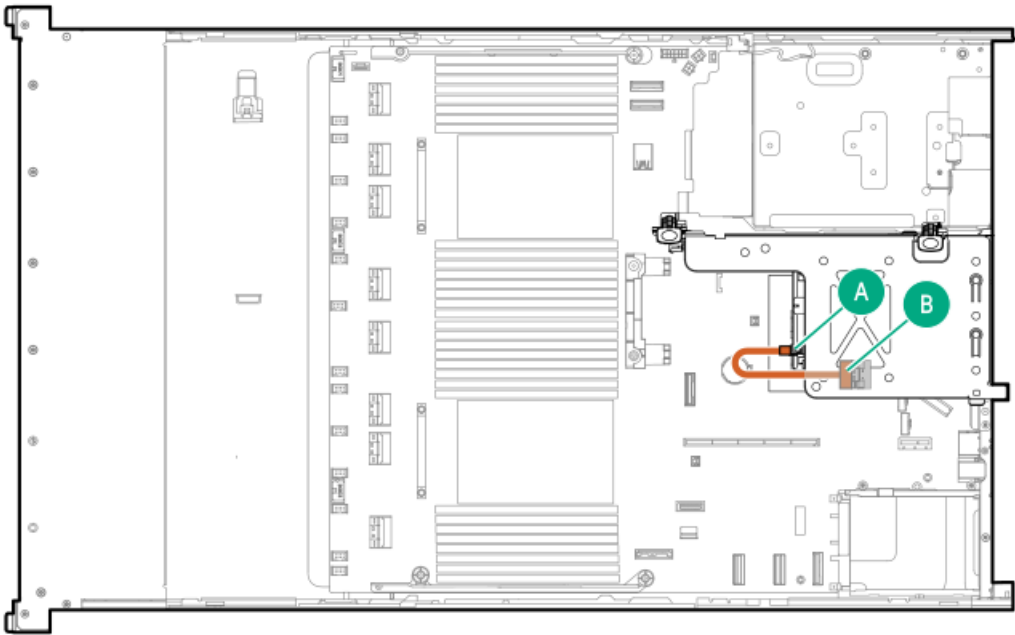

Cable part number	Color	From	To
P14329-001 ¹	Orange	Drive backplane	Secondary type-p controller

¹ Option kit: P48816-B21


Primary 2 SFF riser cage: Secondary type-p controller

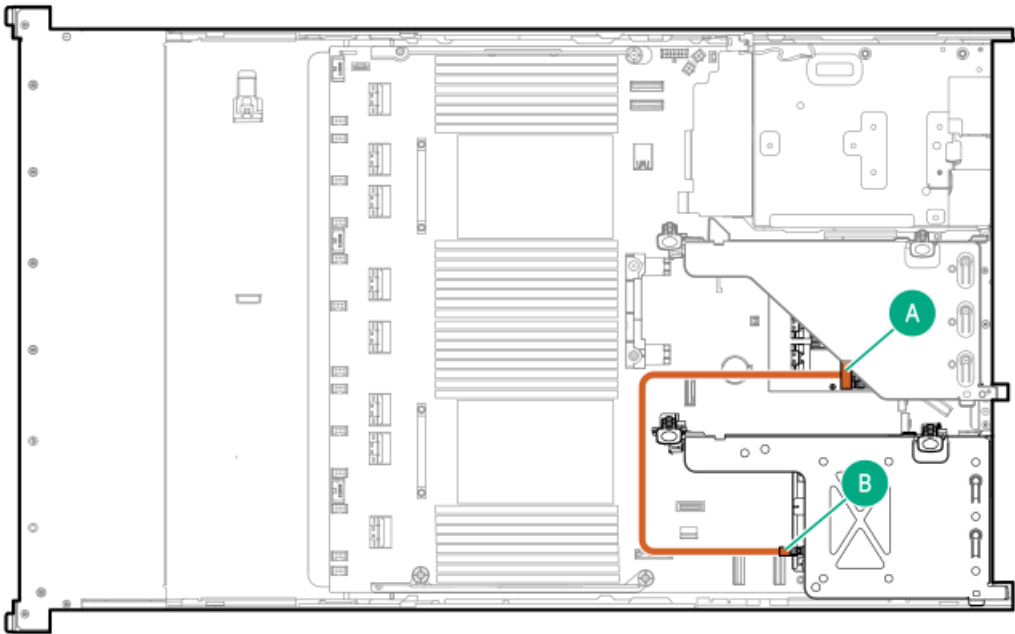

Cable part number	Color	From	To
P14329-001 ¹	Orange	Drive backplane	Secondary type-p controller

¹ Option kit: P48816-B21

Secondary 2 SFF riser cage: Primary type-p controller

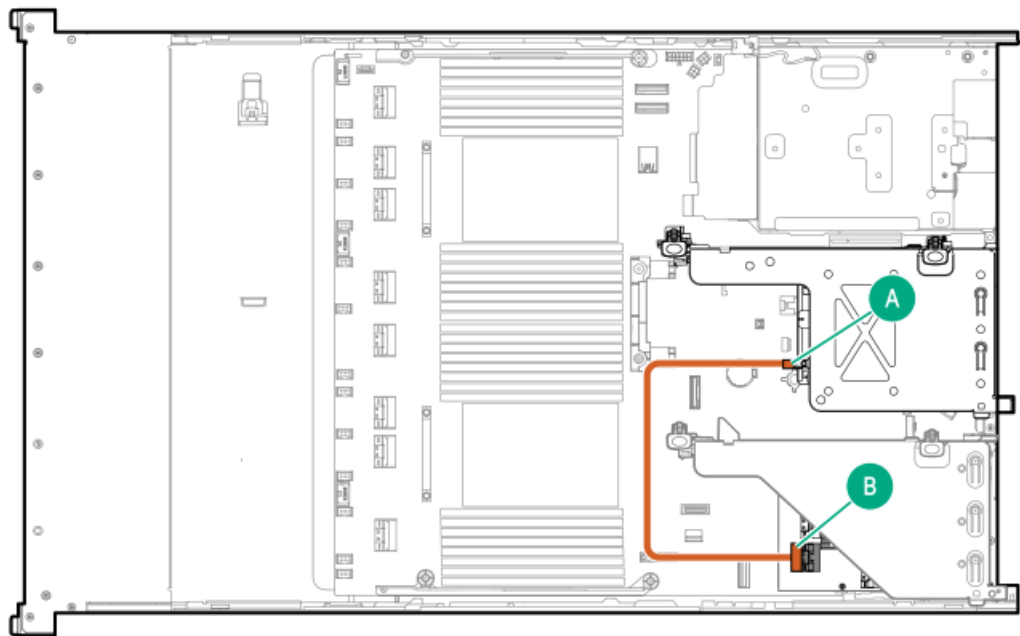


Cable part number	Color	From	To
P14329-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48816-B21

2 SFF box 6: Secondary type-o controller




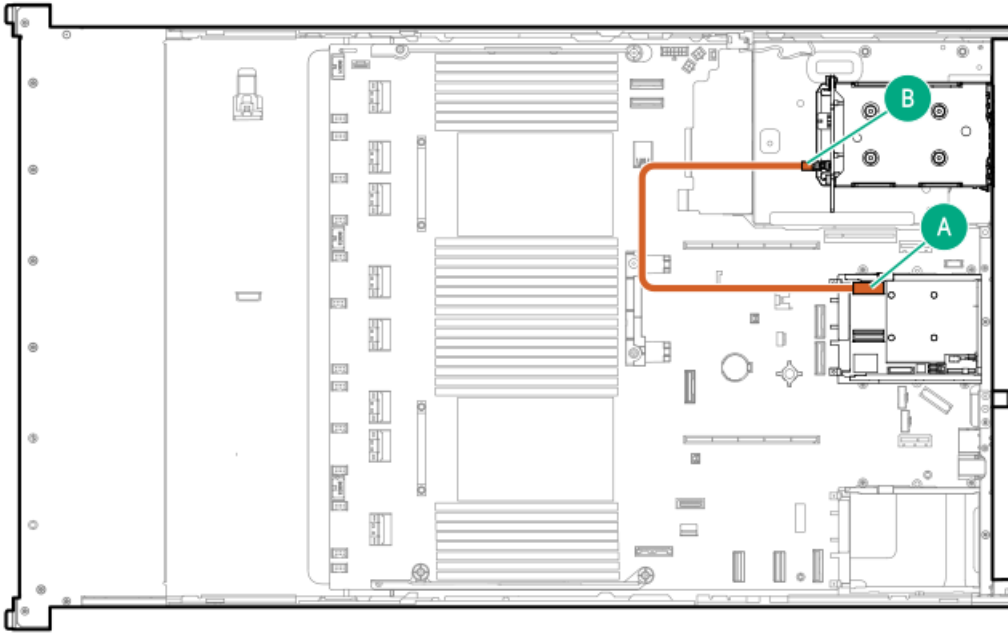

Cable part number	Color	From	To
P51554-001 ¹	Orange	Drive backplane	Type-o controller

¹ Option kit: P48811-B21


2 SFF box 5: Secondary type-o controller

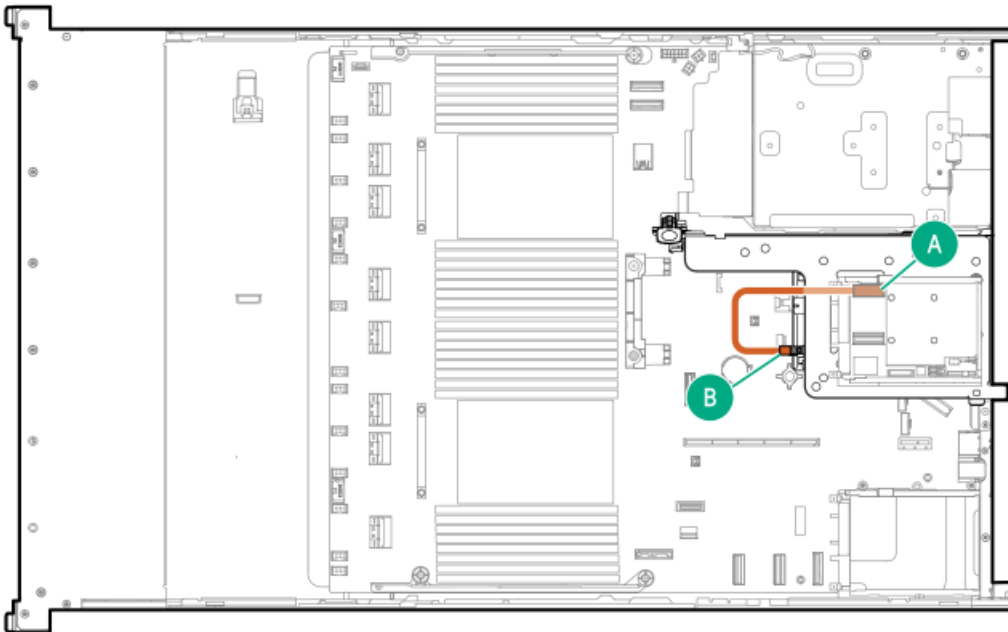

Cable part number	Color	From	To
P51554-001 ¹	Orange	Drive backplane	Type-o controller

¹ Option kit: P48811-B21


2 SFF box 4: Secondary type-o controller

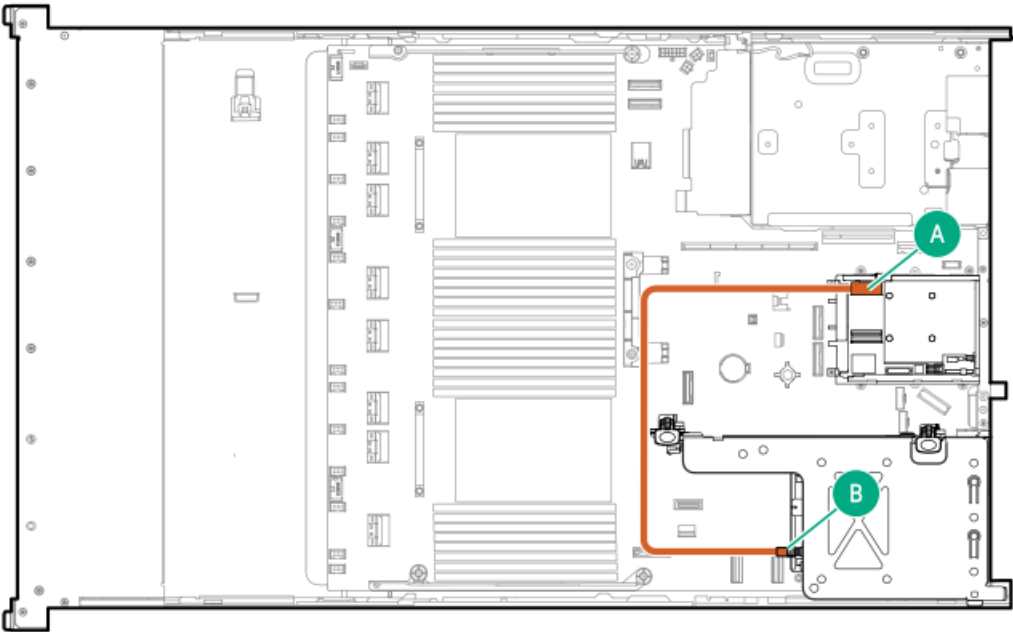

Cable part number	Color	From	To
P51554-001 ¹	Orange	Drive backplane	Type-o controller

¹ Option kit: P48811-B21


2 SFF box 5: Primary type-o controller

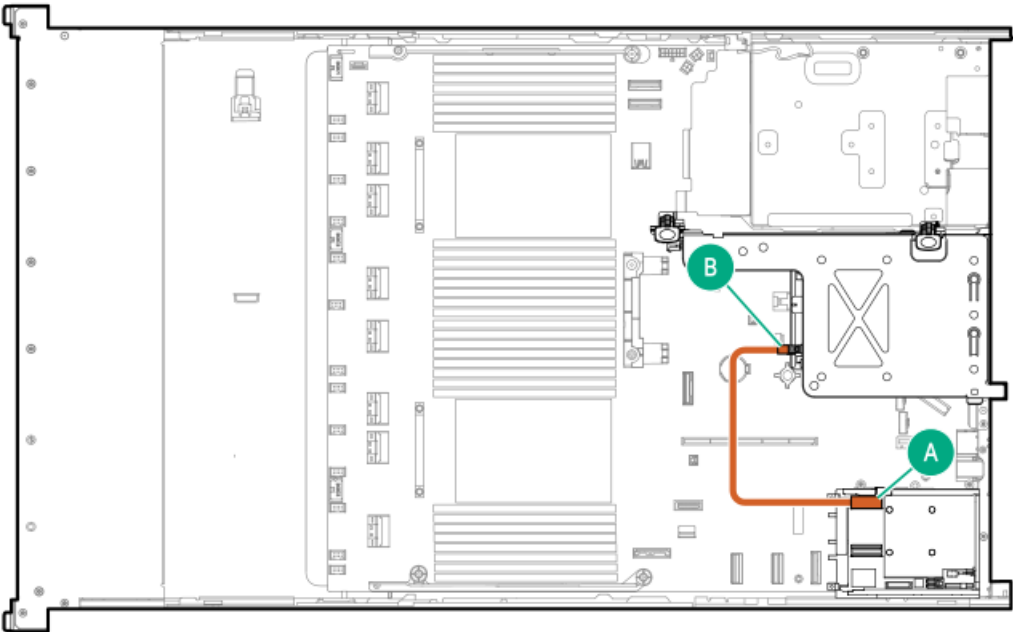

Cable part number	Color	From	To
P51554-001 ¹	Orange	Drive backplane	Type-o controller


¹ Option kit: P48811-B21

2 SFF box 4: Primary type-o controller

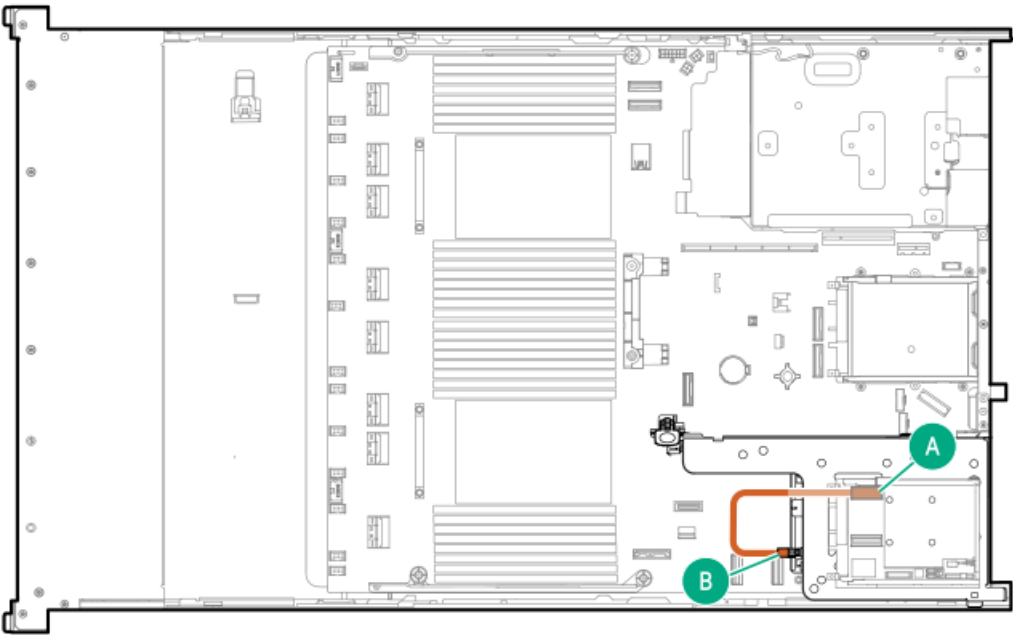

Cable part number	Color	From	To
P51554-001 ¹	Orange	Drive backplane	Primary type-o controller


¹ Option kit: P48811-B21

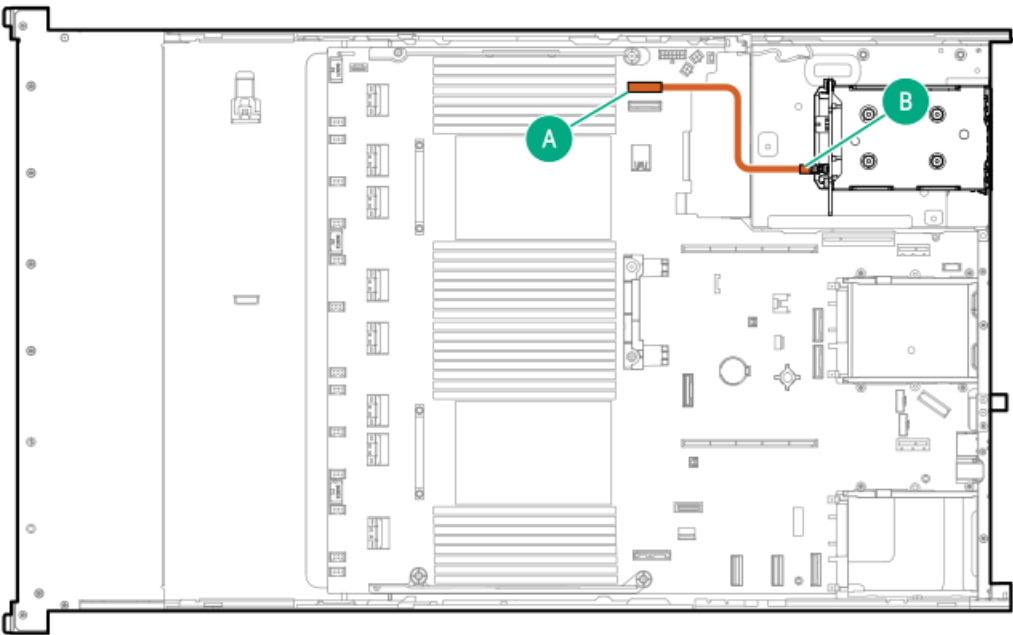

Cable part number	Color	From	To
P51557-001 ¹	Orange	Drive backplane	System board

LFF cabling

LFF box 2 or 3: System board

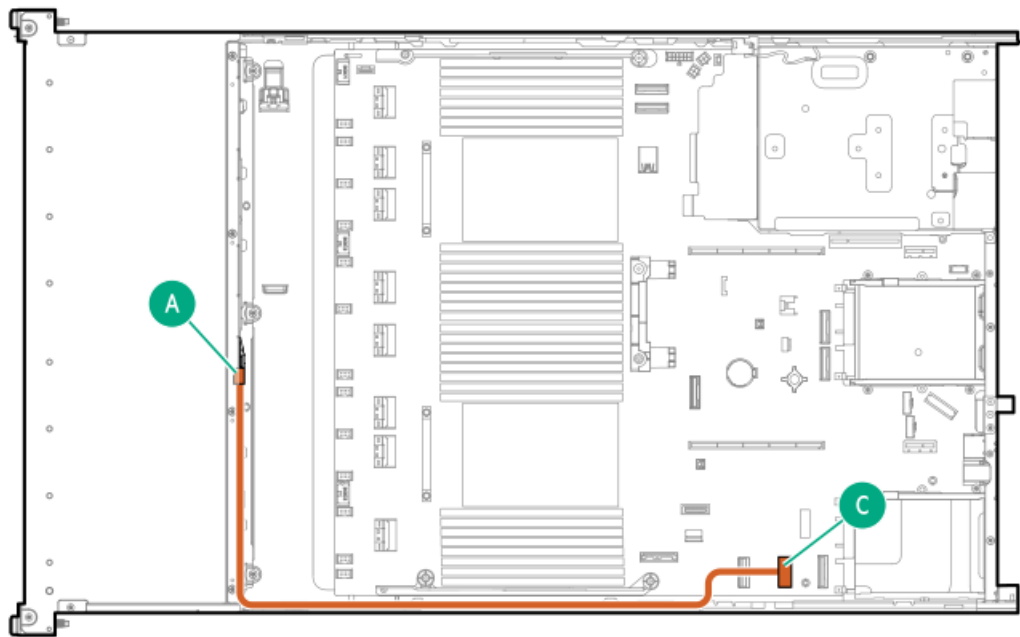


Cable part number	Color	From	To
P51559-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P76474-B21

LFF box 2 or 3: Primary type-o controller




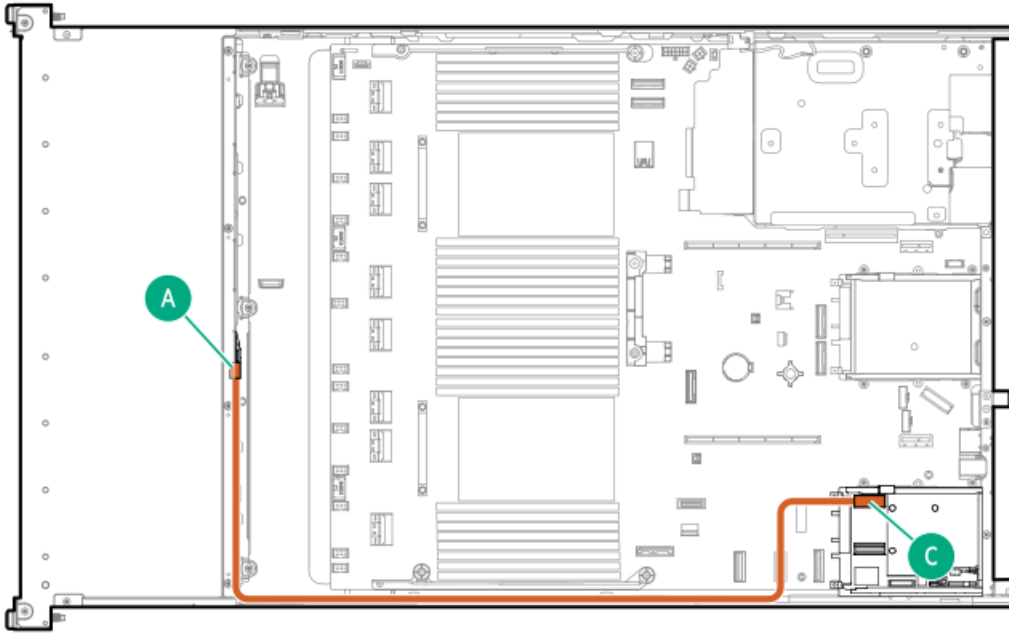

Cable part number	Color	From	To
P51559-001 ¹	Orange	LFF box 2 or 3	Primary type-o controller

¹ Option kit: P76474-B21

LFF box 1 and 7: Primary type-o controller

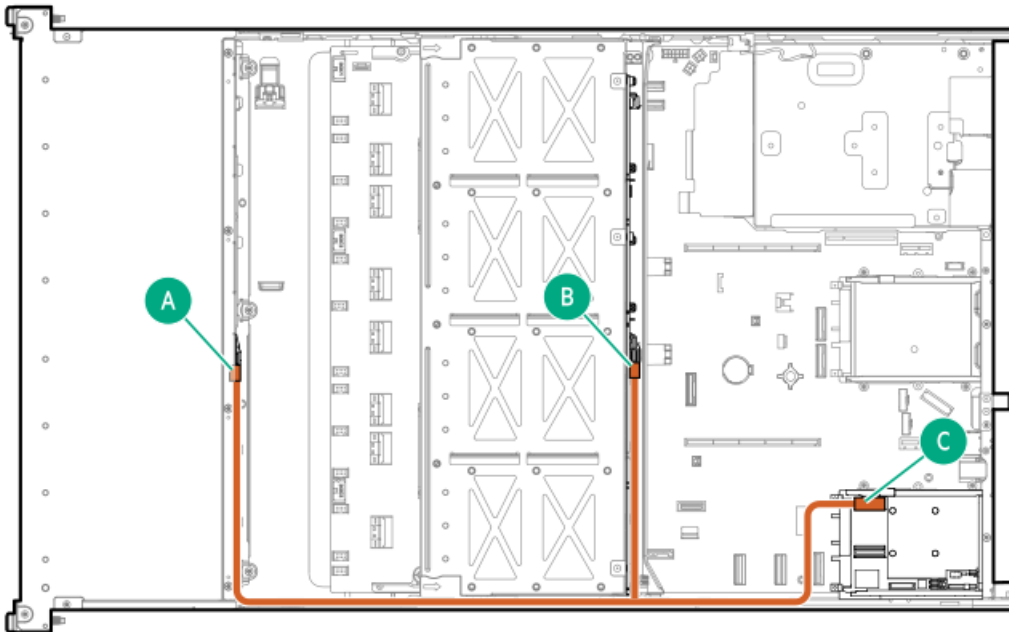


Cable part number	Color	From	To
P51560-001 ¹	Orange	LFF box 1 and 7*	Primary type-o controller

¹ Option kit: P56995-B21

*This is a Y-cable. If there is no box 7, then one end will remain loose.


LFF box 4 and 5: Primary type-o controller

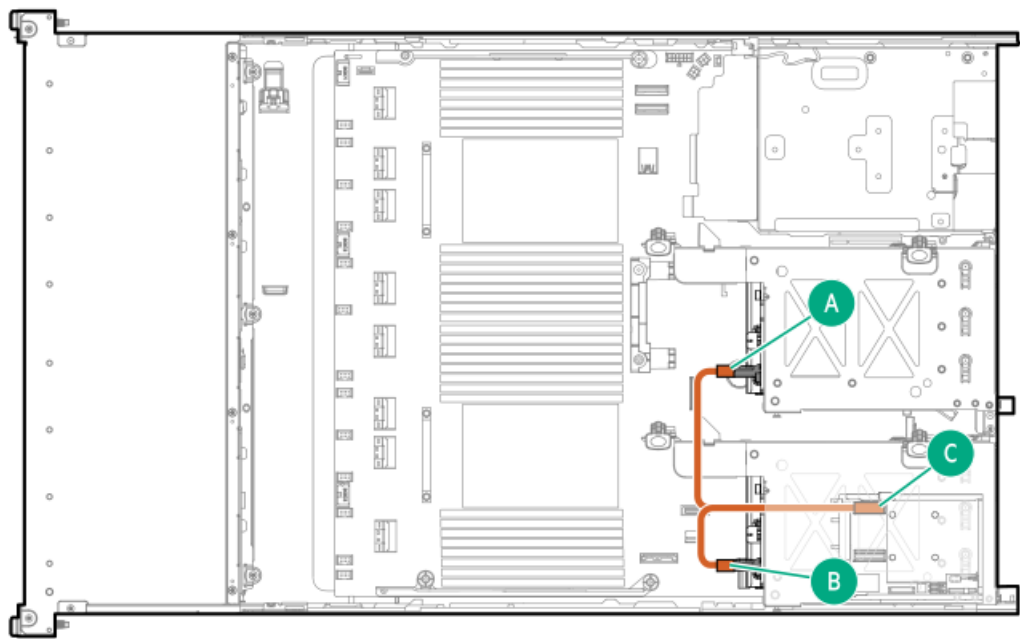

Cable part number	Color	From	To
P51561-001 ¹	Orange	LFF box 4 and 5	Primary type-o controller

¹ Option kit: P48823-B21


LFF box 2 and 3: Primary type-p controller

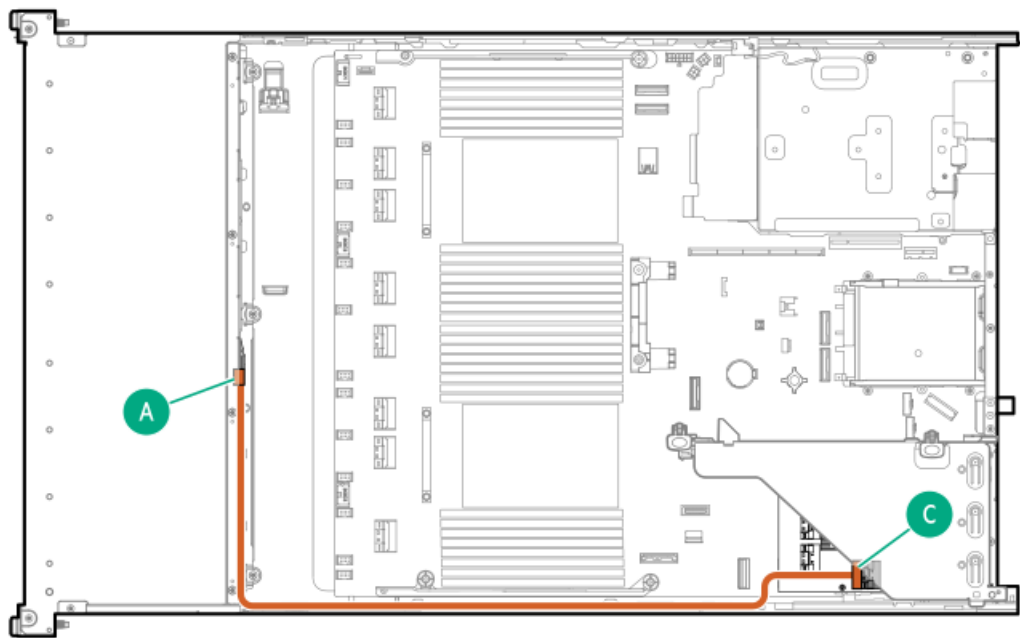

Cable part number	Color	From	To
P58791-001 ¹	Orange	LFF box 2 and 3	Primary type-p controller

¹ Option kit: P56995-B21


LFF box 1 and 4: Primary type-p controller

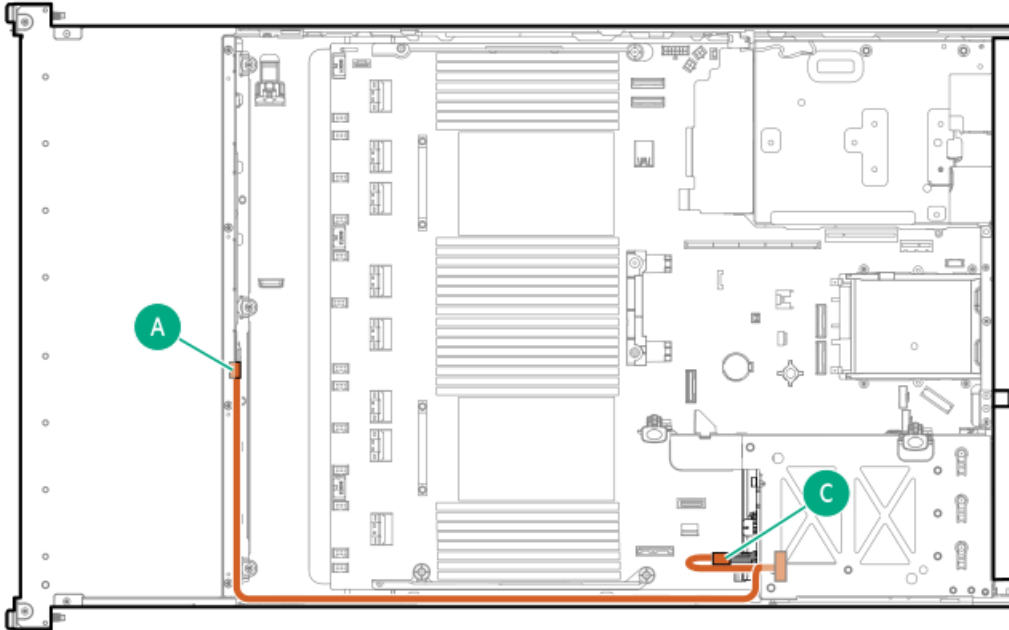

Cable part number	Color	From	To
P46047-001 ¹	Orange	LFF box 1 and 4	Primary type-p controller

¹ Option kit: P48823-B21


LFF box 1 and box 7: Primary type-p controller

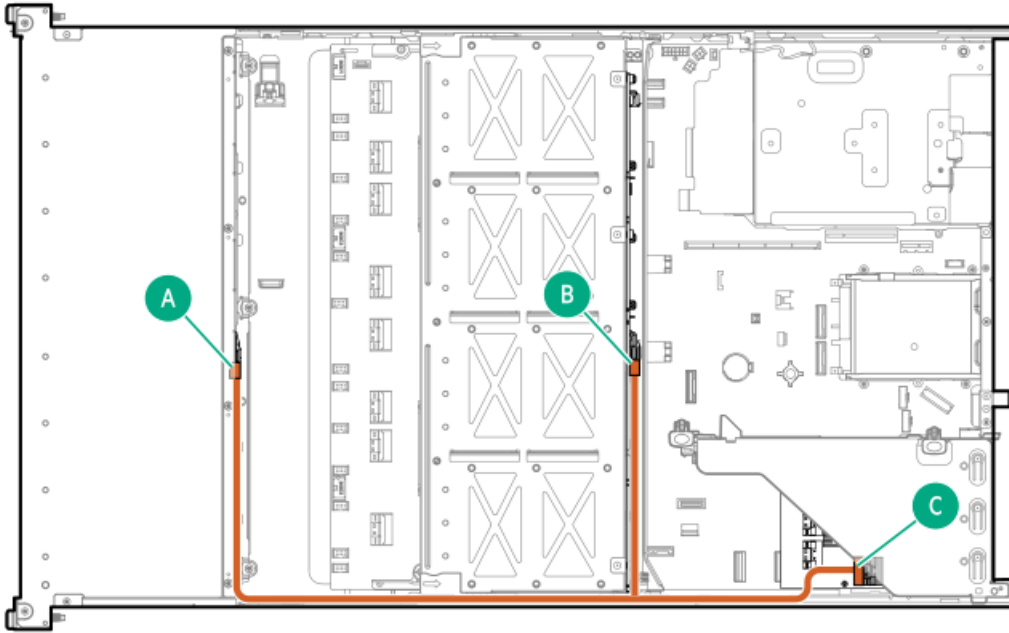

Cable part number	Color	From	To
P51563-001 ¹	Orange	LFF box 1 and box 7	Primary type-p controller

¹ Option kit: P56995-B21


2 LFF box 4 and 5: Tertiary type-p controller

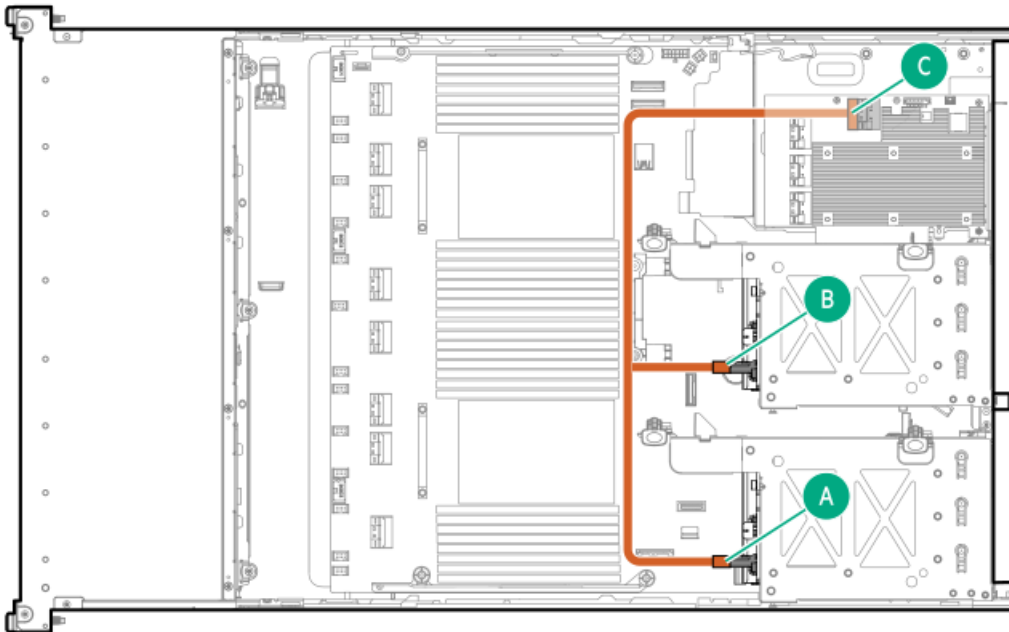

Cable part number	Color	From	To
P51558-001 ¹	Orange	Drive backplane	Tertiary type-p controller

¹ Option kit: P48823-B21


2 LFF box 5: Primary type-p controller

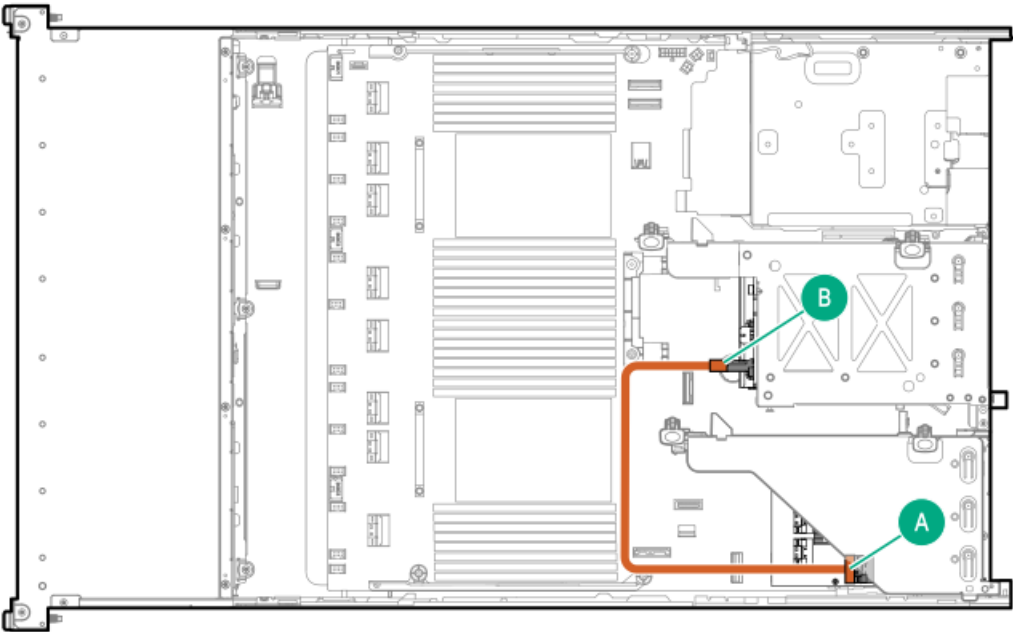

Cable part number	Color	From	To
P51558-001 ¹	Orange	Drive backplane	Primary type-p controller

¹ Option kit: P48823-B21


2 LFF box 4: Secondary type-p controller

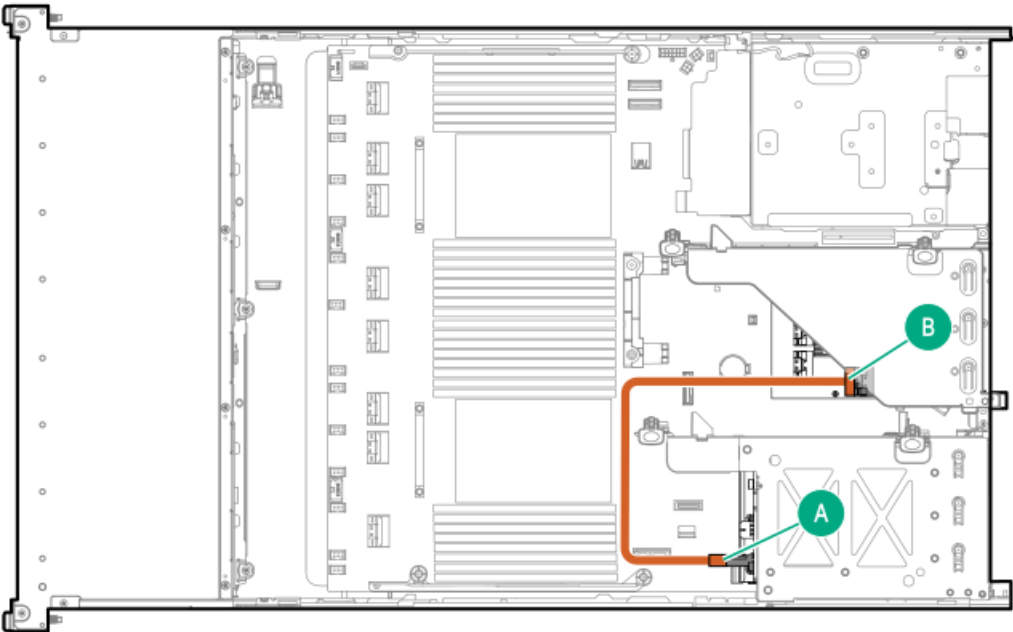

Cable part number	Color	From	To
P51558-001 ¹	Orange	Drive backplane	Secondary type-p controller


Riser enablement cabling

Primary riser

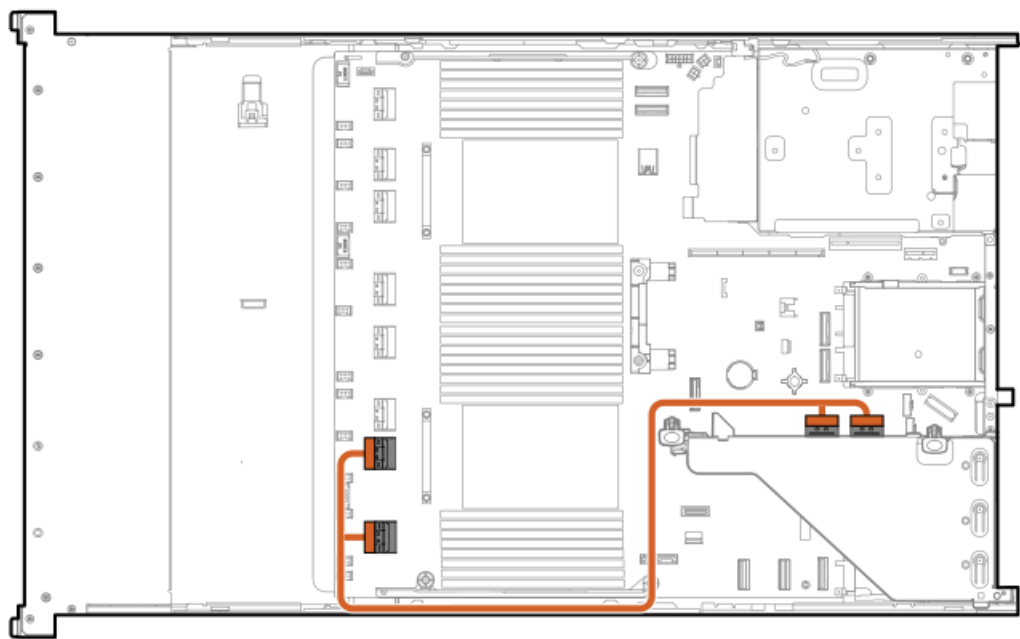

Cable part number	Color	From	To
P46031-001 ¹	Orange	Primary riser ports 1/2	System board ports 1/2


Primary riser

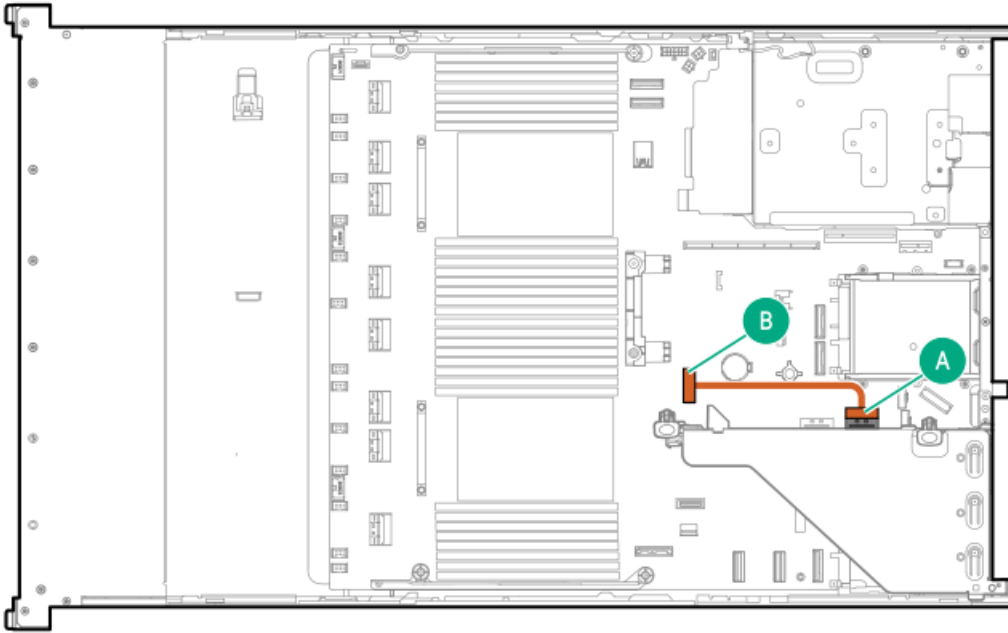

Cable part number	Color	From	To
P46034-001 ¹	Orange	Primary riser port 1	System board port 11

¹ Option kit: P56073-B21


Secondary riser

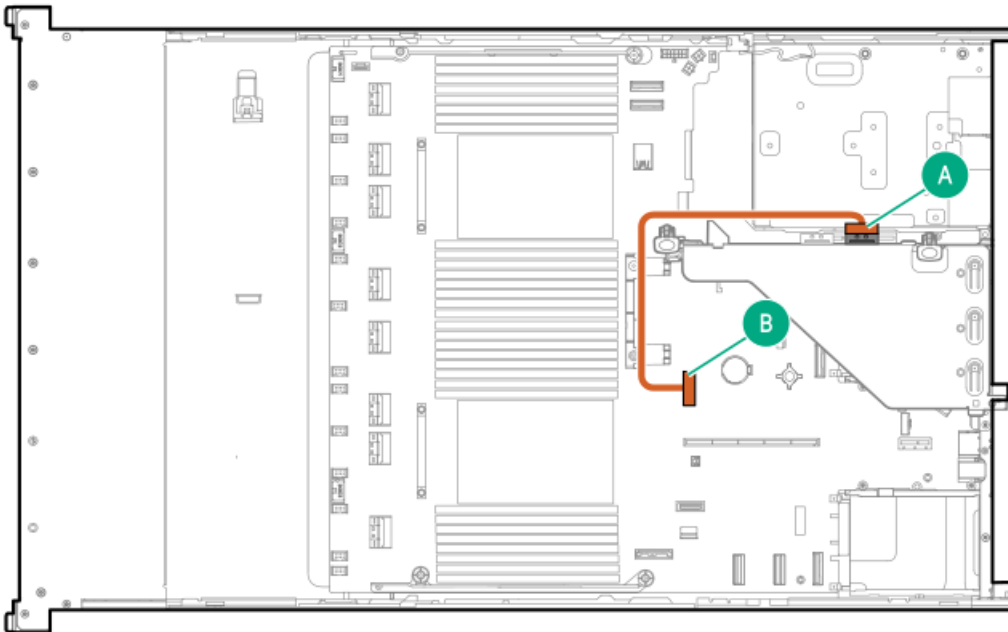

Cable part number	Color	From	To
P46034-001 ¹	Orange	Secondary riser port 1	System board port 11

¹ Option kit: P56074-B21


Secondary riser

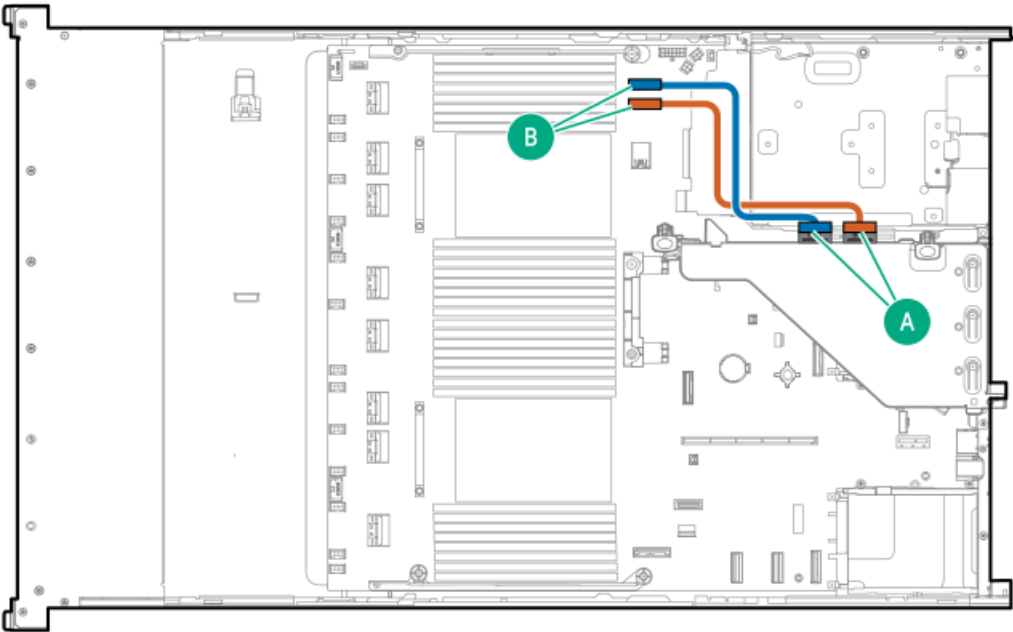

Cable part number	Color	From	To
P46034-001 ¹	Orange	Secondary riser port 1	System board port 9
	Blue	Secondary riser port 2	System board port 10

¹ Option kit: P56074-B21


Tertiary riser

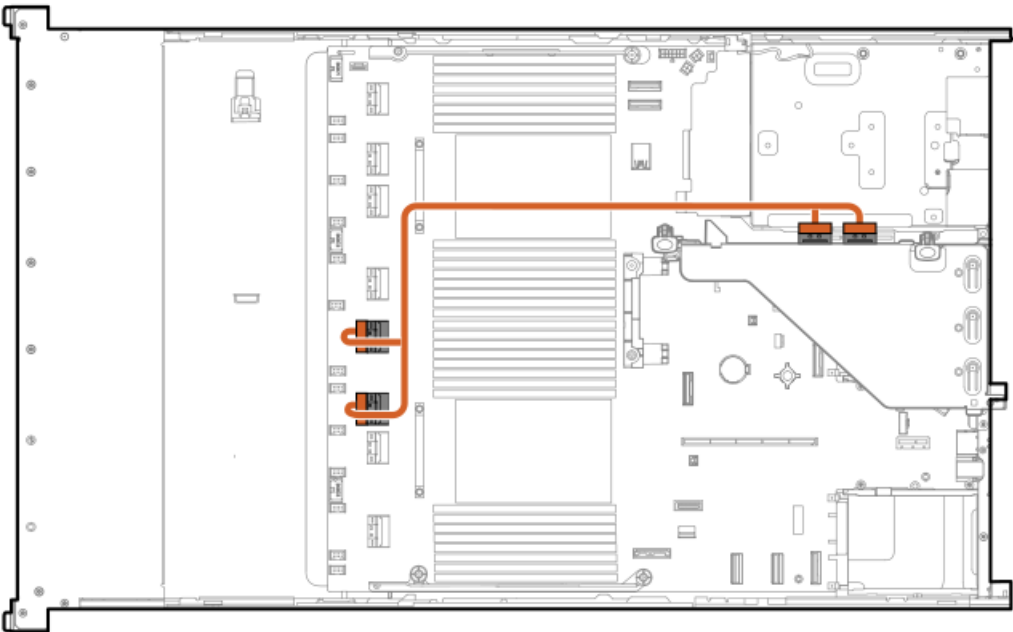

Cable part number	Color	From	To
P51571-001 ¹	Orange	Secondary riser ports 1/2	System board ports 3/4

¹ Option kit: P56074-B21

Secondary riser

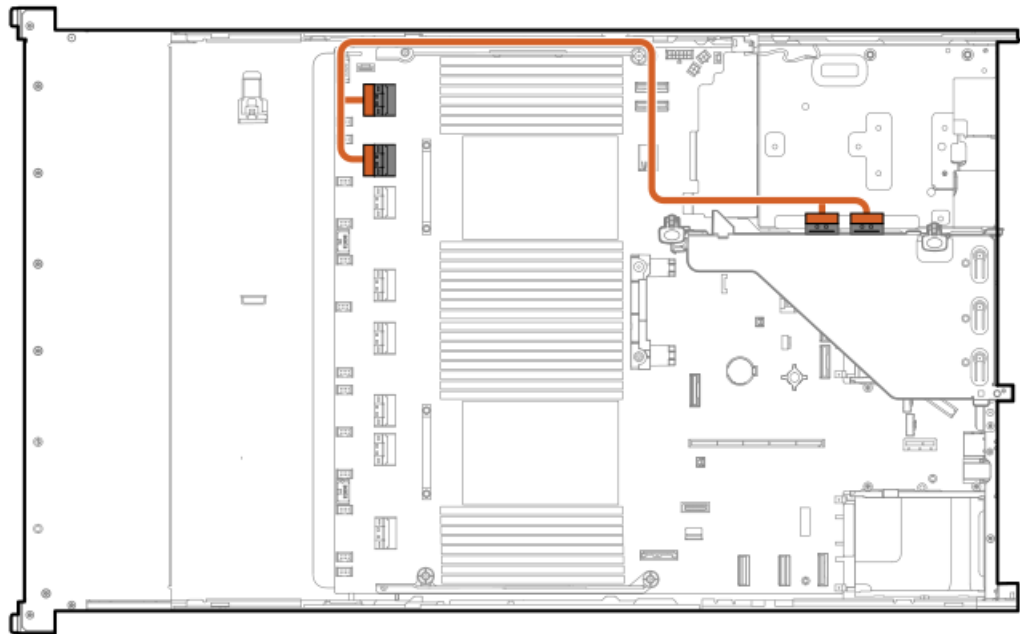


Cable part number	Color	From	To
P46032-001 ¹	Orange	Secondary riser ports 1/2	System board ports 7/8

¹ Option kit: P56074-B21

Tertiary riser x16




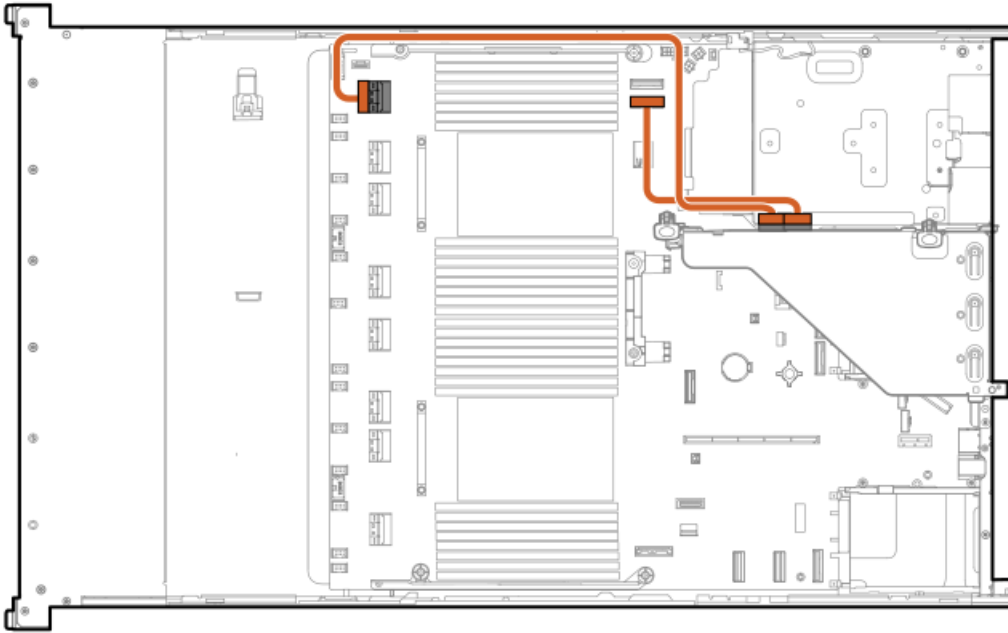

Cable part number	Color	From	To
P46026-001 ¹	Orange	Tertiary riser ports 1/3	System board ports 8/10

¹ Option kit: P48804-B21


Tertiary riser x8

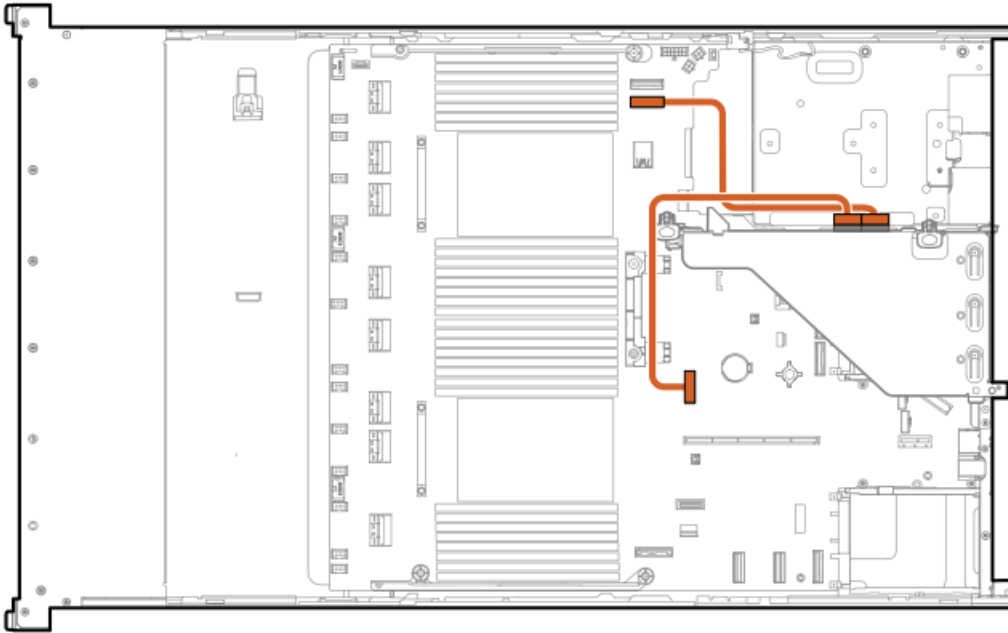

Cable part number	Color	From	To
P46030-001 ¹	Orange	Tertiary riser ports 1/3	System board ports 10/11

¹ Option kit: P48804-B21


Tertiary riser x8/x16

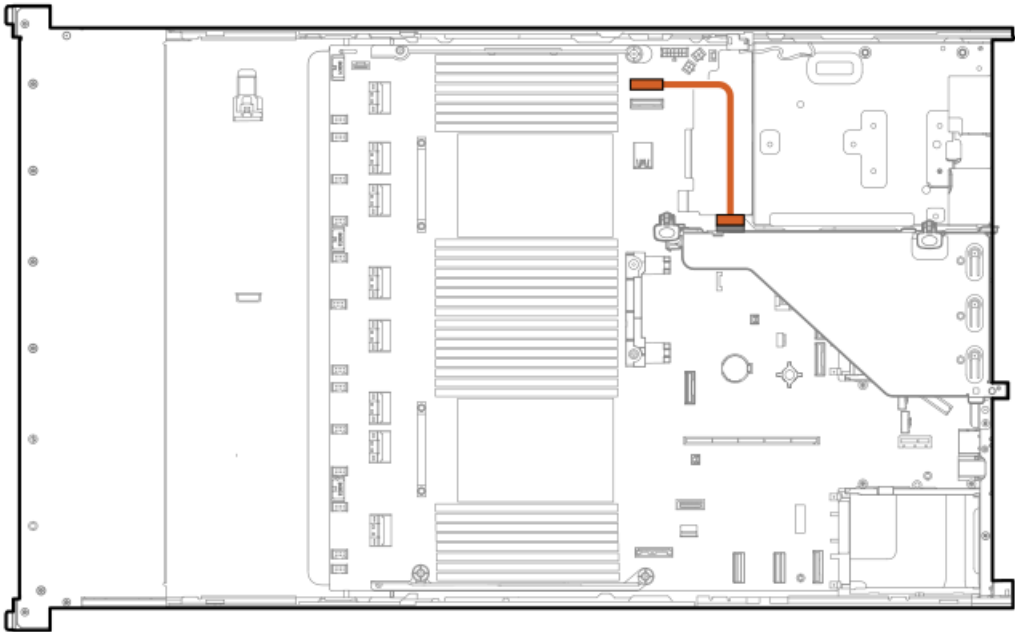

Cable part number	Color	From	To
P46029-001 ¹	Orange	Tertiary riser port 2	System board port 9

¹ Option kit: P48804-B21


Tertiary riser x16

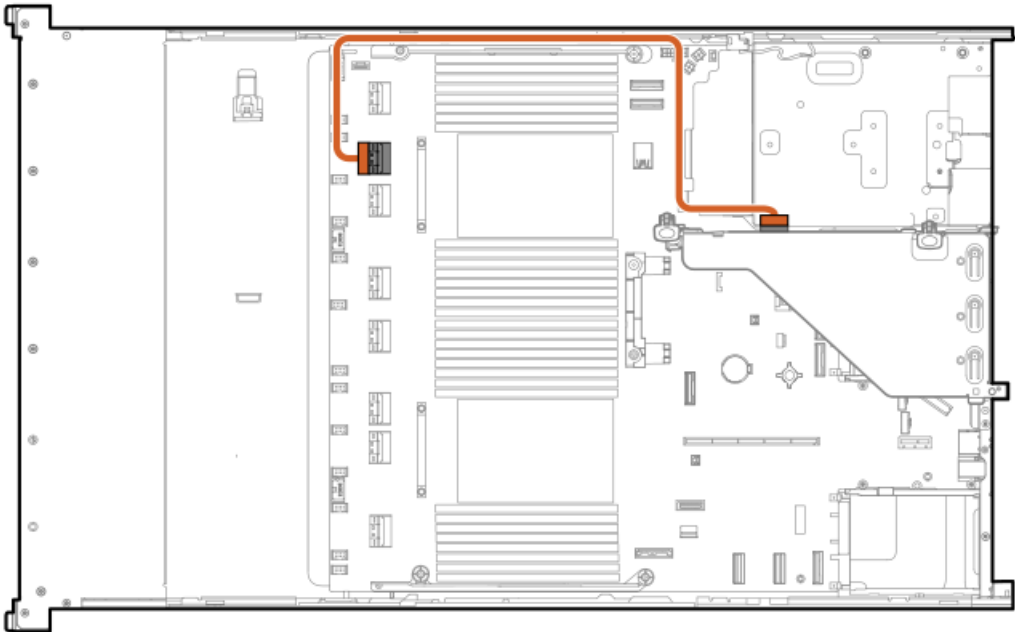

Cable part number	Color	From	To
P46028-001 ¹	Orange	Tertiary riser port 4	System board port 7


Power cabling

EDSFF box 1

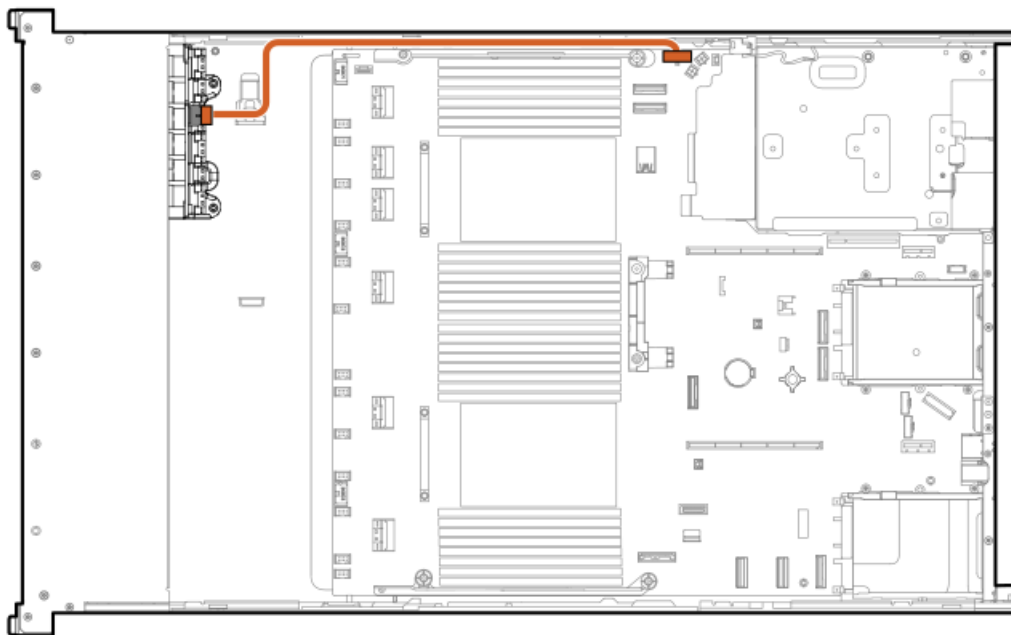


Cable part number	Color	From	To
P51577-001	Orange	Drive backplane	System board

EDSFF boxes 2 and 3

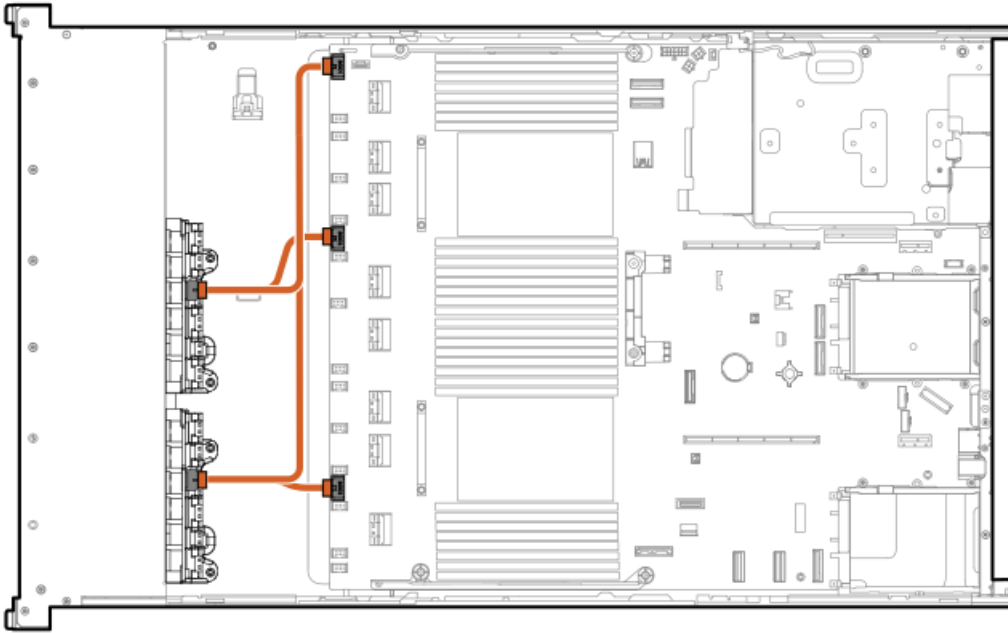

Cable part number	Color	From	To
P46048-001	Orange	Drive backplane	System board


8 SFF boxes 1-3

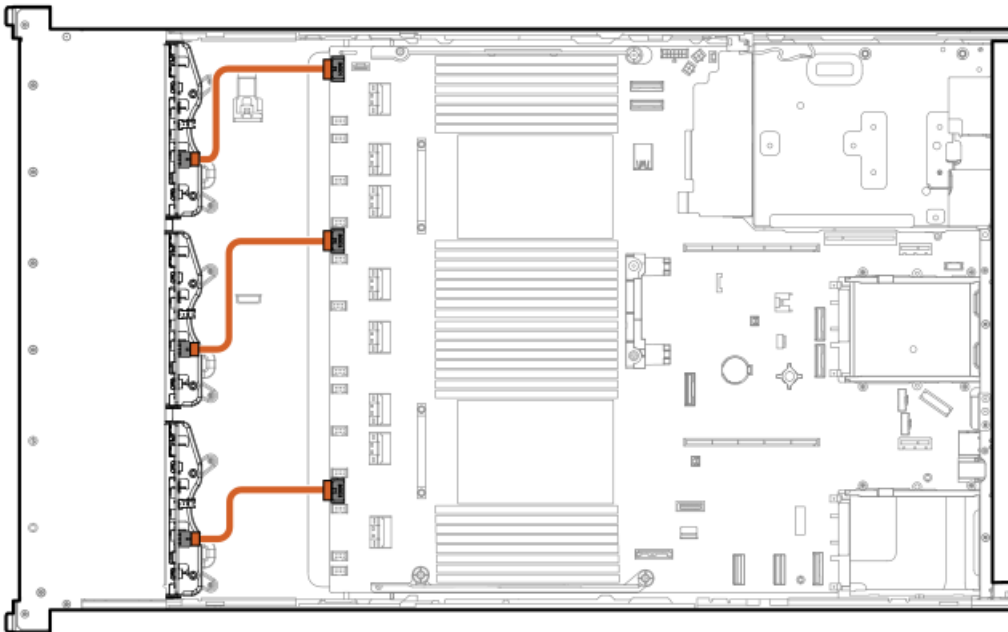

Cable part number	Color	From	To
869825-001 ¹	Orange	8 SFF backplane	System board


¹ Option kit: P50727-B21

4 LFF box 1

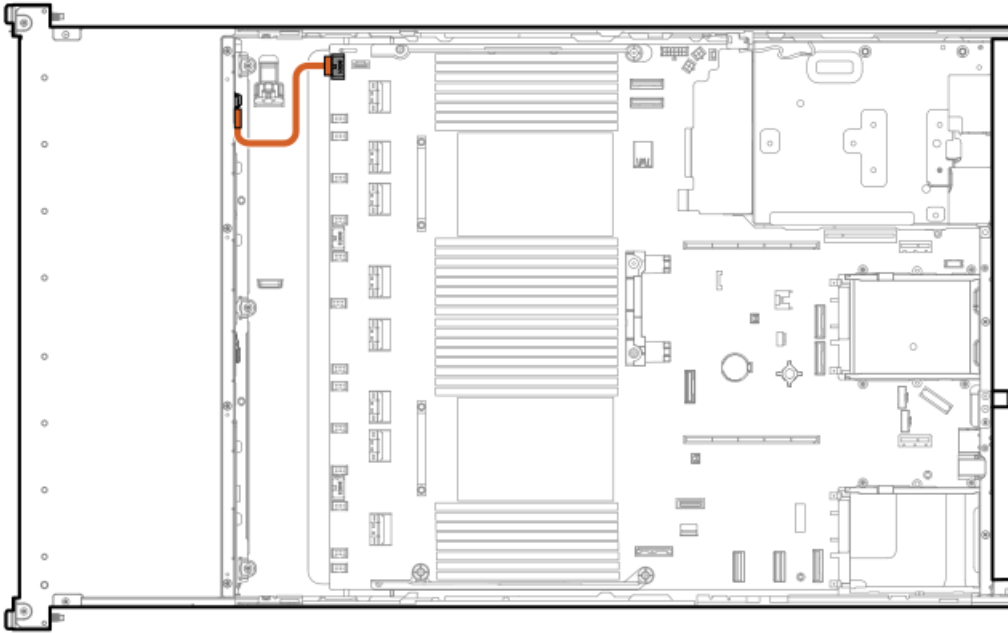


Cable part number	Color	From	To
P14341-001	Orange	4 LFF backplane box 1	System board

4 LFF box 2

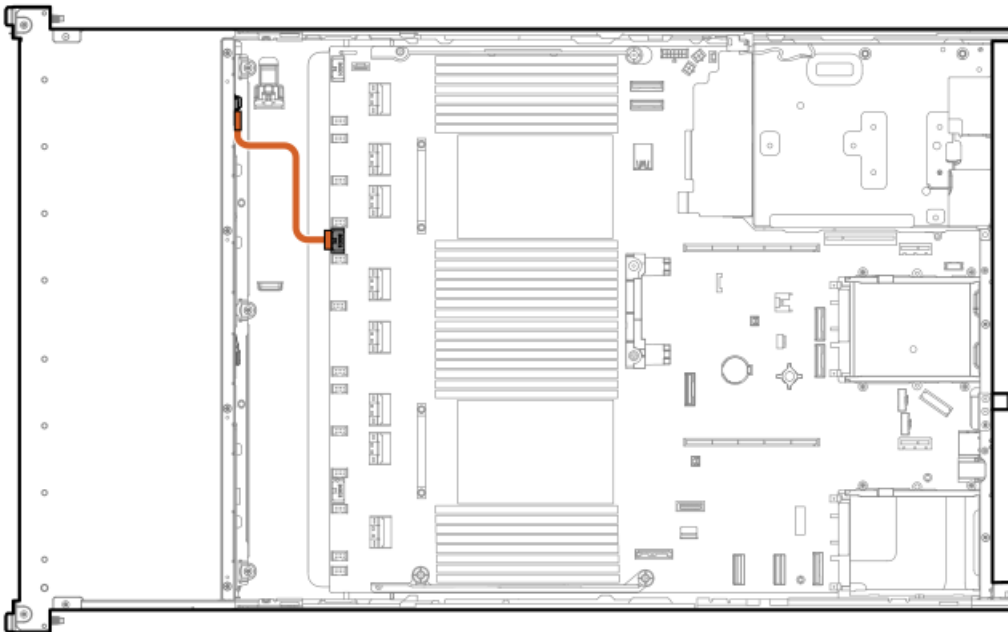


Cable part number	Color	From	To
P14342-001	Orange	4 LFF backplane box 2	System board

4 LFF box 3

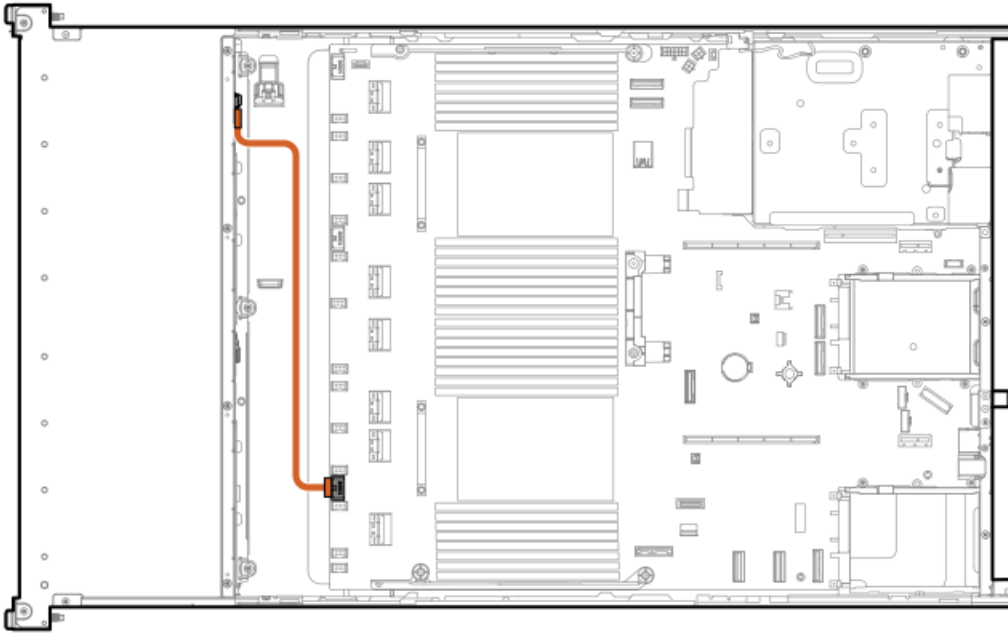

Cable part number	Color	From	To
P14342-001	Orange	4 LFF backplane box 3	System board


2 SFF side-by-side

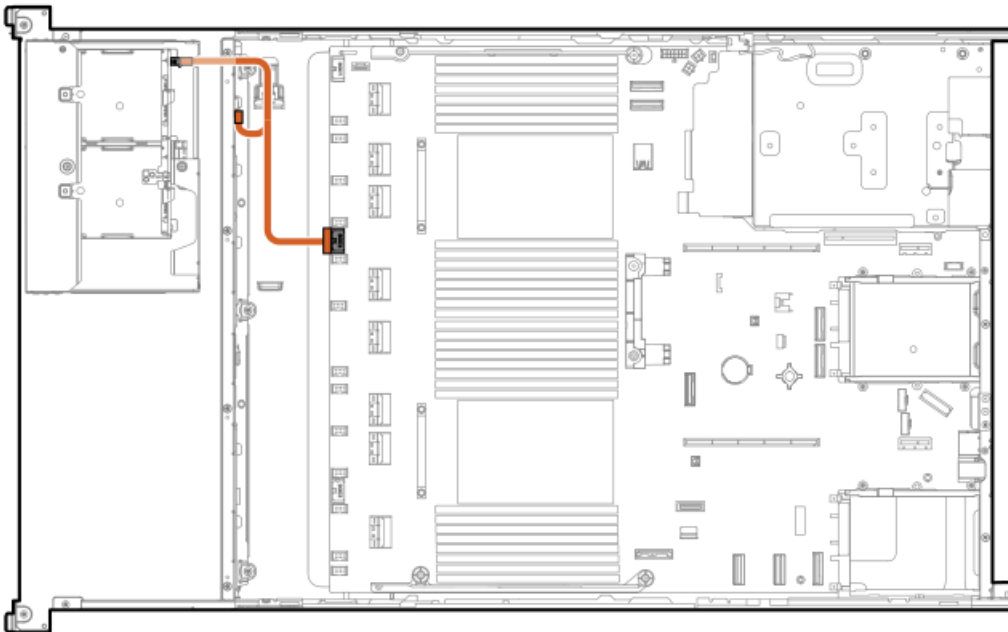

Cable part number	Color	From	To
P14343-001 ¹	Orange	Drive backplane	System board

¹ Option kit: P48812-B21


8 SFF midplane + 2 LFF riser cage + 2 SFF rear stacked power

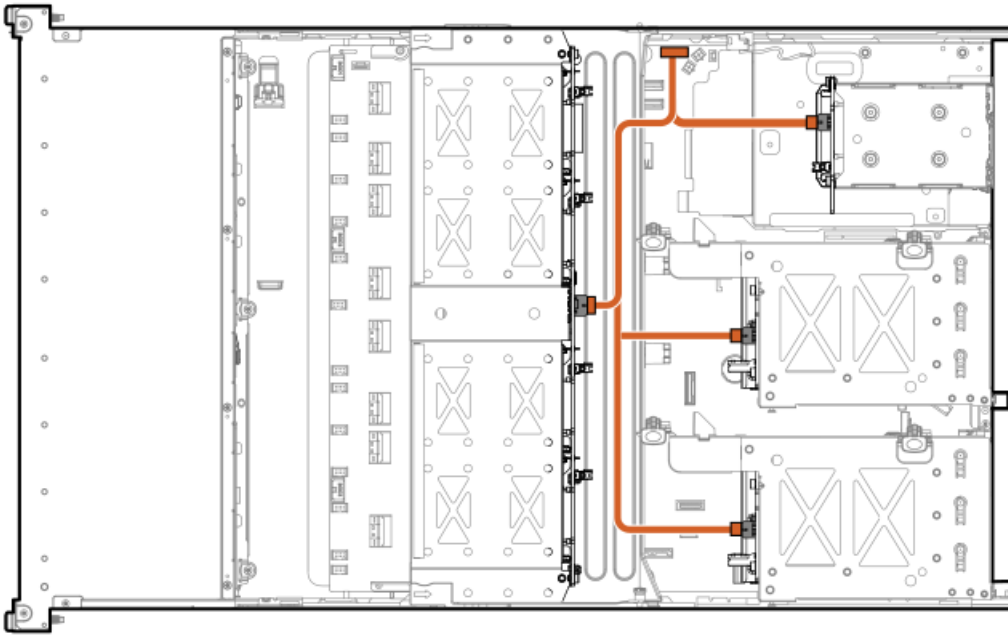

Cable part number	Color	From	To
P51575-001 ¹	Orange	Drive backplanes	System board


¹ Option kit: P48823-B21

2 SFF box 4 and 5

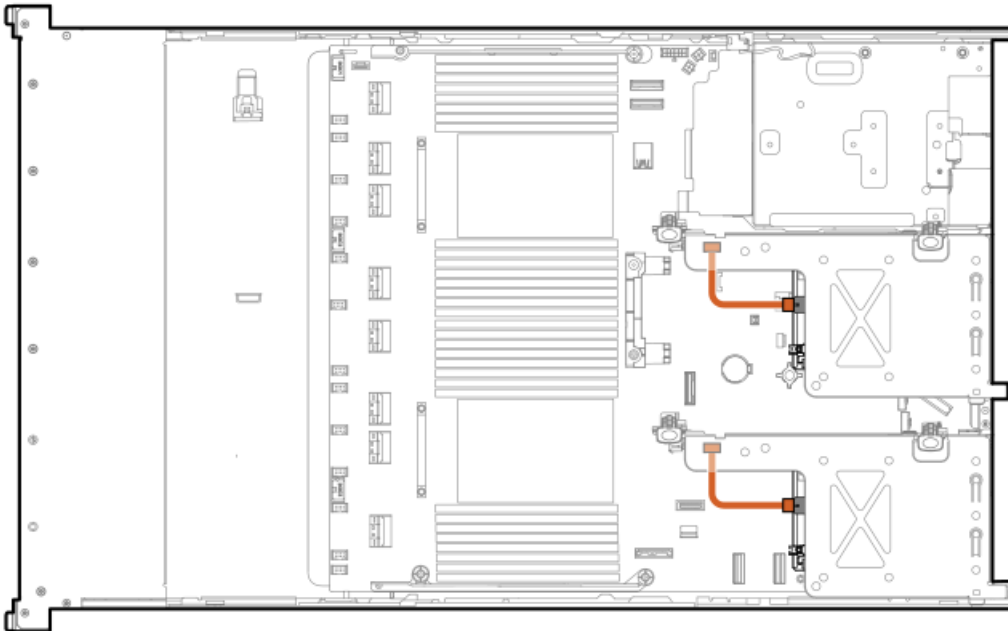

Cable part number	Color	From	To
P51574-001 ¹	Orange	2 SFF backplane	Riser power connector

Smart battery cabling

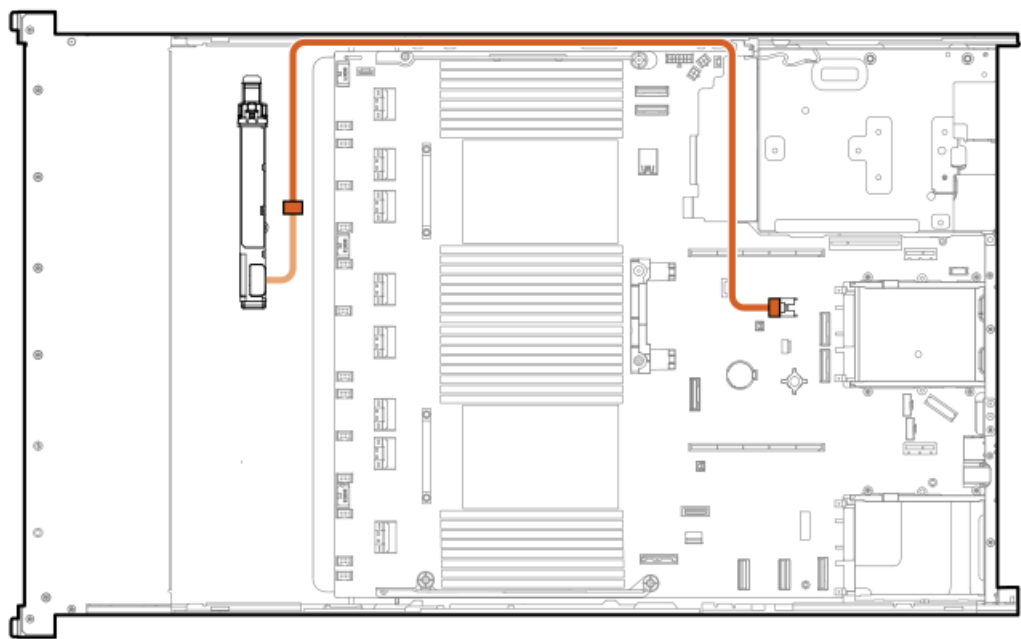


Cable part number	Color	From	To
P45618-001 ¹	Orange	Smart battery or hybrid capacitor cable	System board

¹ This is an extension cable and required to connect to the 145mm cable from the battery or capacitor.
Option kit: P48918-B21

GPU cabling


GPU power cabling

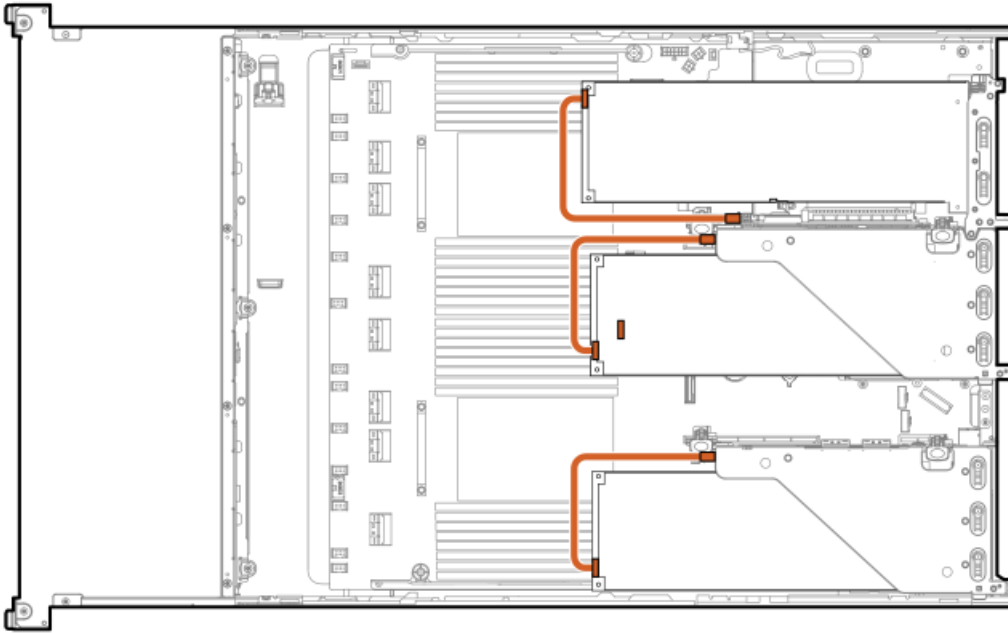

Cable part number	Color	From	To
869820-001 ¹	Orange	GPU	Riser

¹ Option kit: P39102-B21

GPU power + sideband cabling

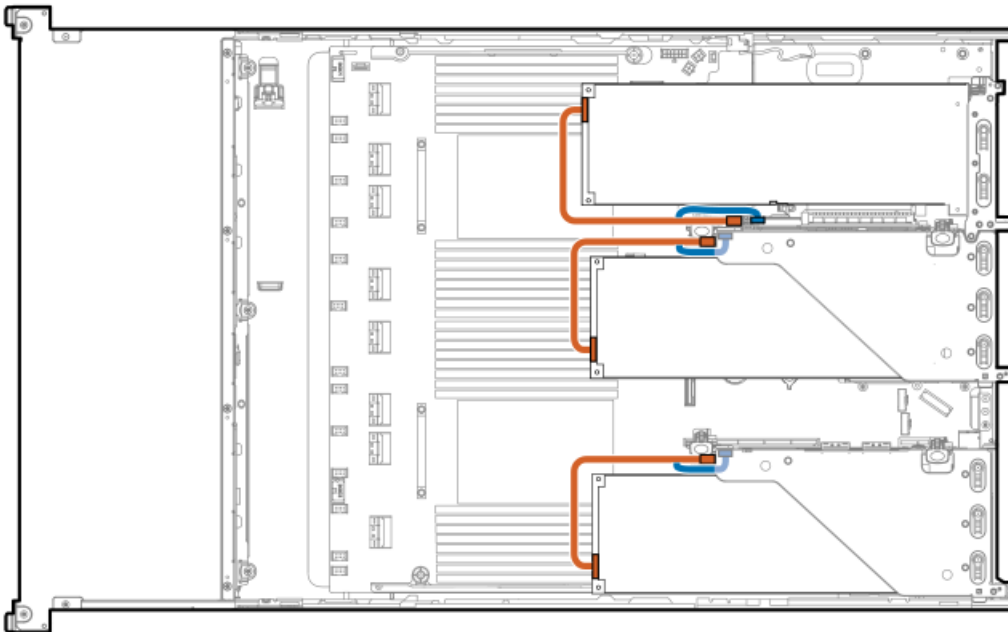


Cable part number	Color	From	To
P58422-001 ¹	Orange	GPU	Riser

¹ Option kit: P56072-B21

NS204i-u boot device cabling

Data for SFF chassis

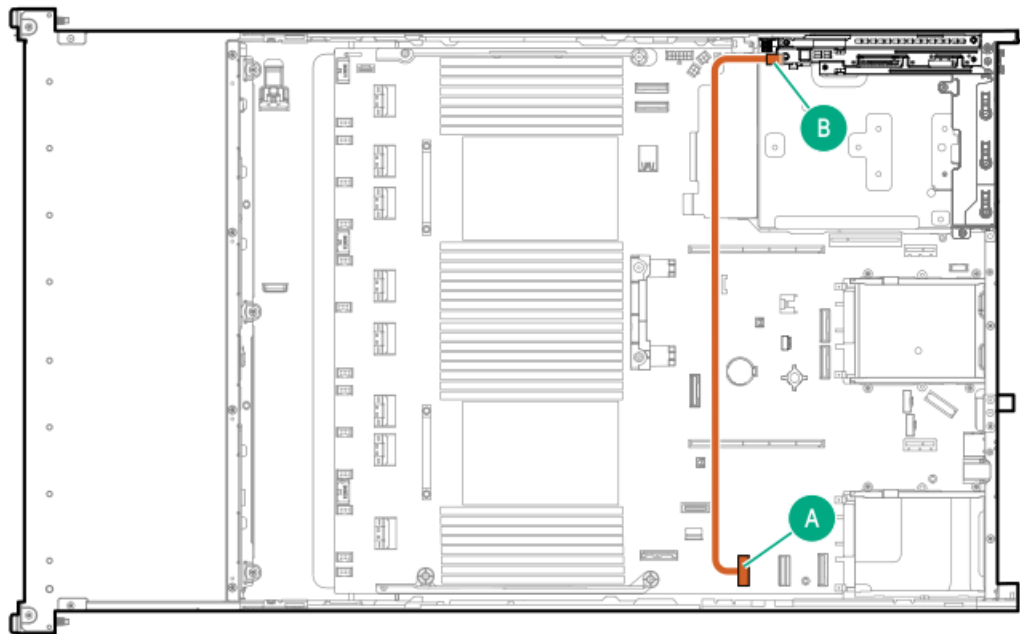


Cable part number	Color	From	To
P51579-001 ¹	Orange	NS204i-u boot device	System board

¹ Option kit: P52152-B21

Data for LFF chassis



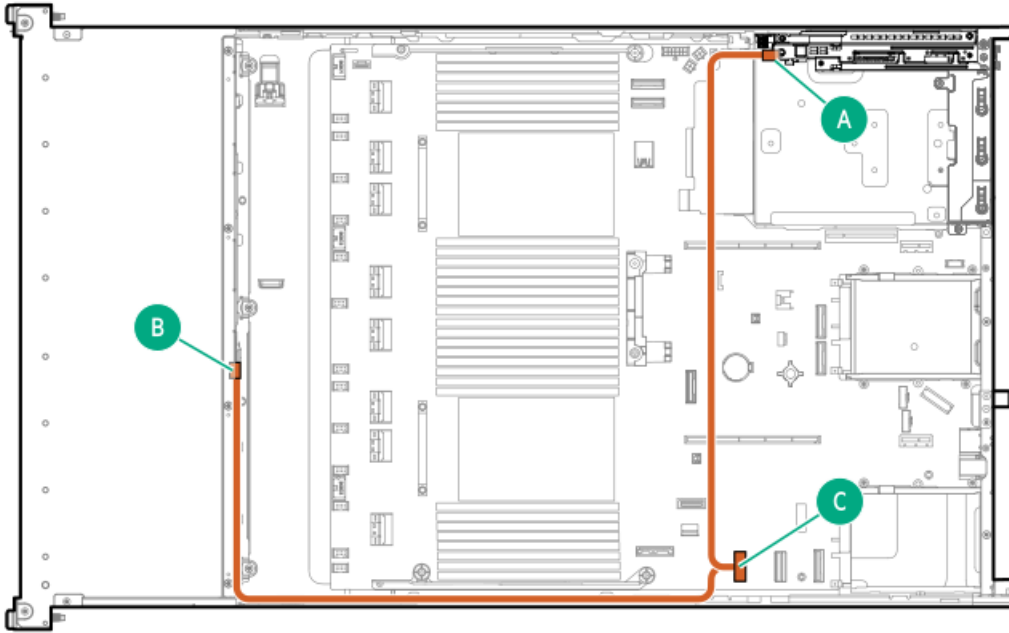


Cable part number	Color	From	To
P51578-001 ¹	Orange	NS204i-u boot device and box 1*	System board

¹ Option kit: P52152-B21

*This is a Y-cable. For 12LFF configurations that connect to an OCP controller, boxes 2 and 3 use cable P51559-001. Box 1 connects to the controller using cable P51560-001. One end will remain loose.

Power for SFF/LFF

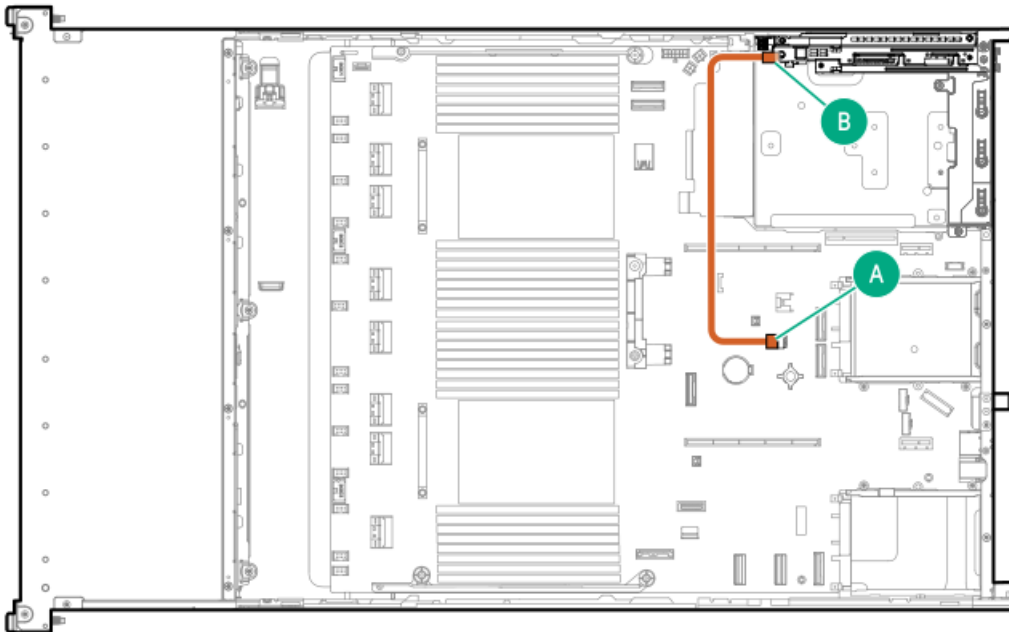


Cable part number	Color	From	To
P54089-001 ¹	Orange	NS204i-u boot device	System board

¹ Option kit: P52152-B21

OCP bandwidth enablement


CPU1 to OCP2 x8 enablement

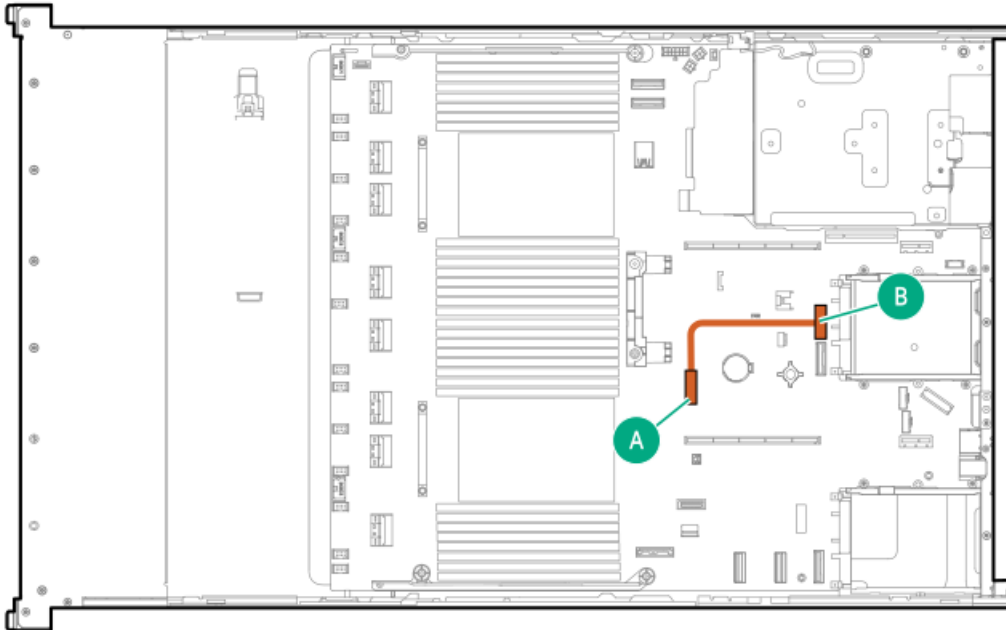

Cable part number	Color	From	To
P43735-001 ¹	Orange	OCP slot 15 port 1	Socket 1 MCIO port 1

¹ Option kit: P51911-B21


CPU2 to OCP2 x8 enablement

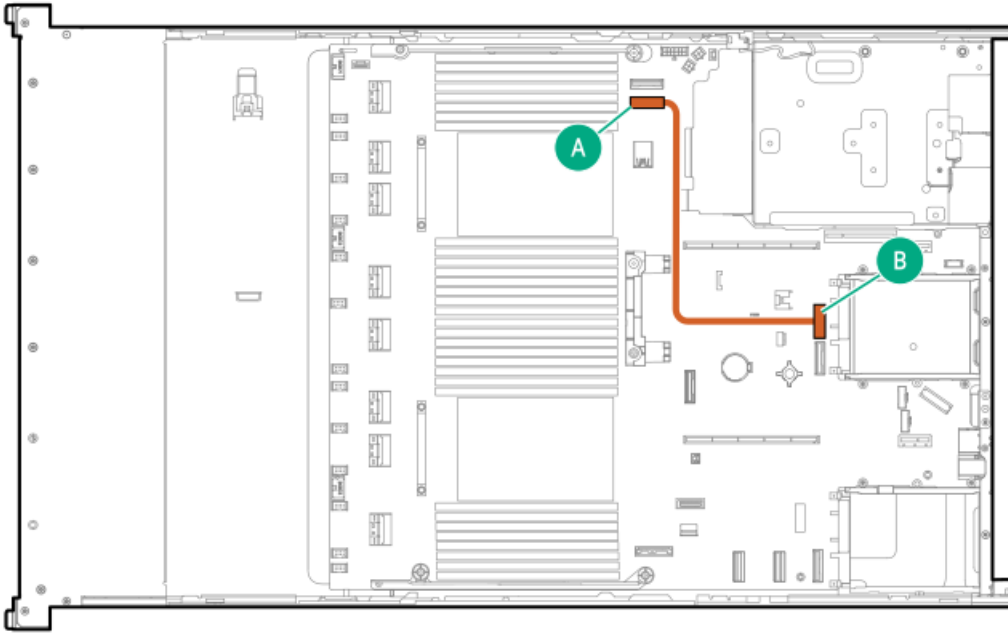

Cable part number	Color	From	To
P43734-001 ¹	Orange	OCP slot 15 port 1	Socket 2 MCIO port 1

¹ Option kit: P48830-B21


OCP1 x16 enablement

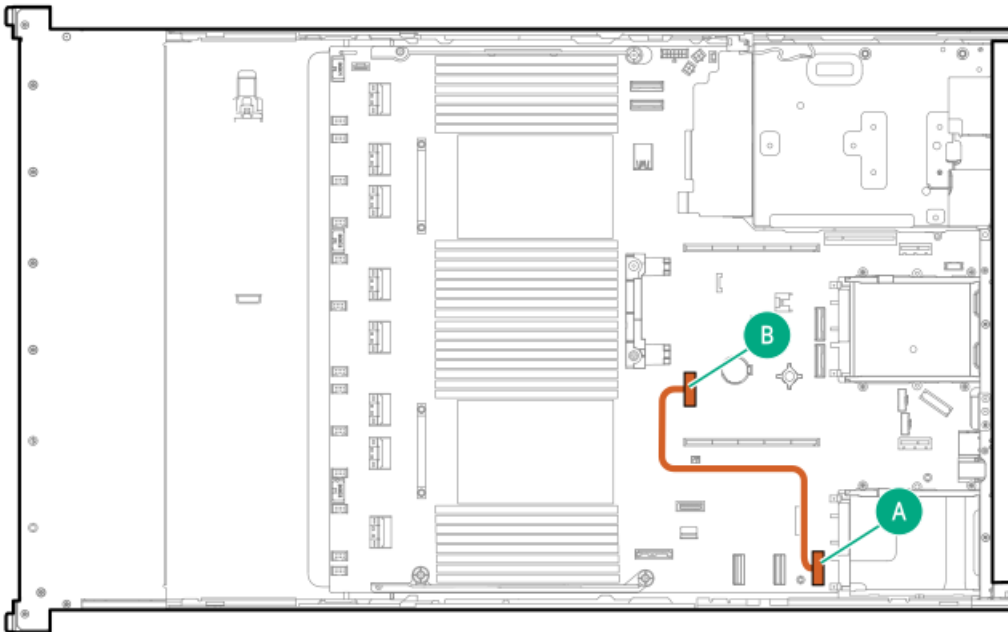

Cable part number	Color	From	To
P43736-001 ¹	Orange	OCP slot 14 port 2	Socket 1 MCIO port 1

¹ Option kit: P48827-B21


OCP2 x16 enablement

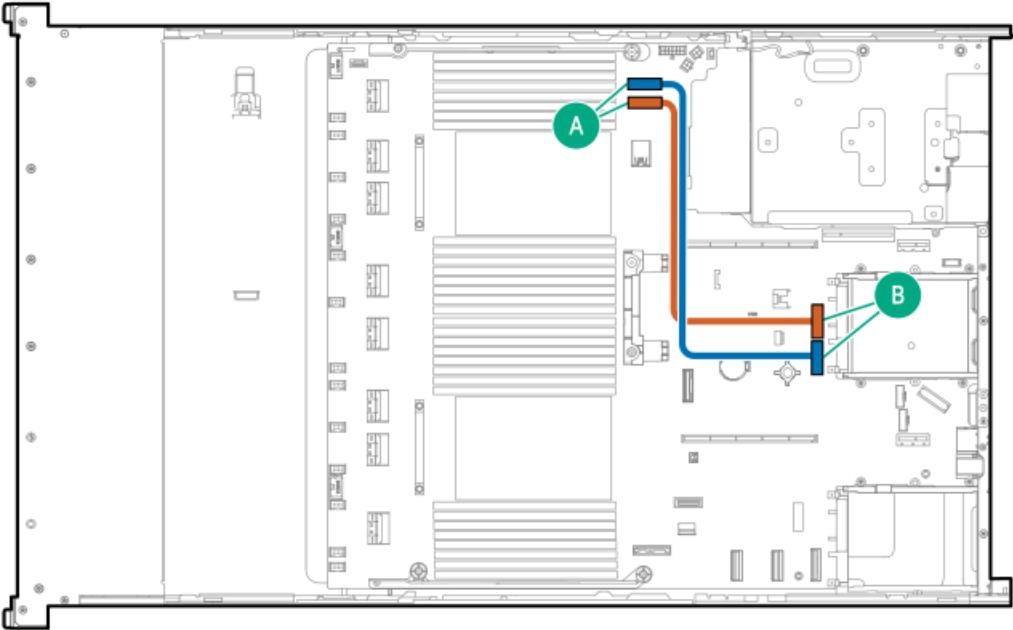

Cable part number	Color	From	To
P43734-001	Orange	OCP slot 15 port 1	Socket 2 MCIO port 1
P43734-001 ¹	Blue	OCP slot 15 port 2	Socket 2 MCIO port 2

¹ Option kit: P48830-B21

Systems Insight Display cabling

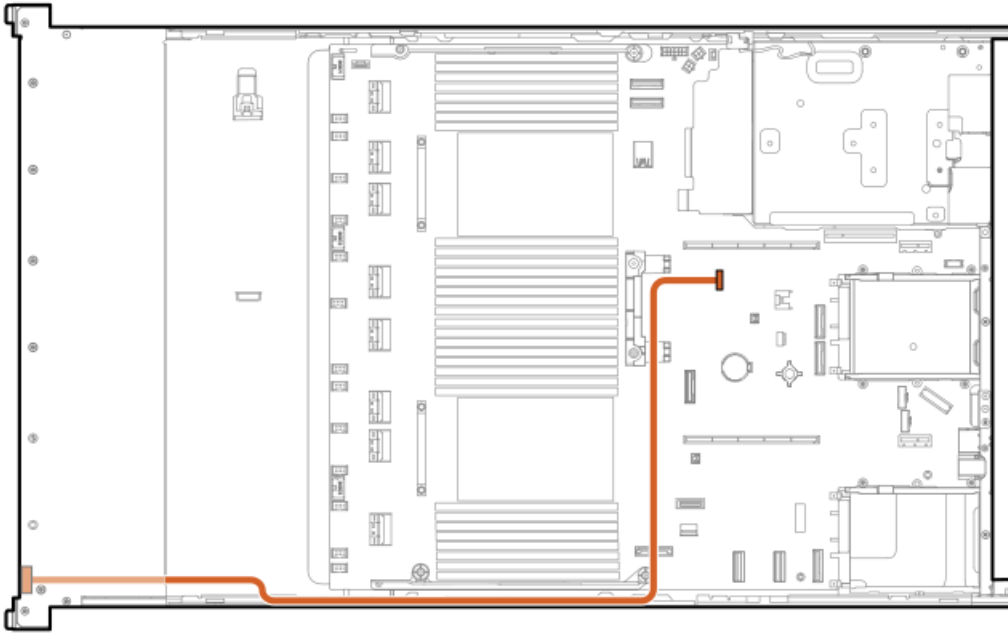


Cable part number	Color	From	To
P48971-001 ¹	Orange	Systems Insight Display	System board

¹ Option kit: P48819-B21

I/O cabling


SFF optical disk drive

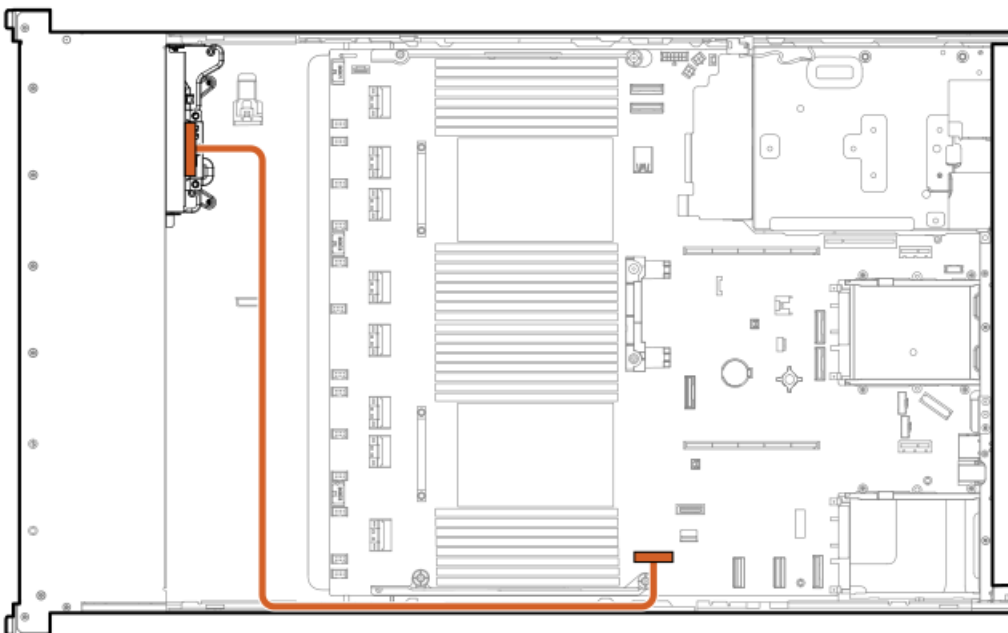

Cable part number	Color	From	To
756914-001 ¹	Orange	SFF ODD	System board

¹ Option kit: 726536-B21

LFF optical disk drive

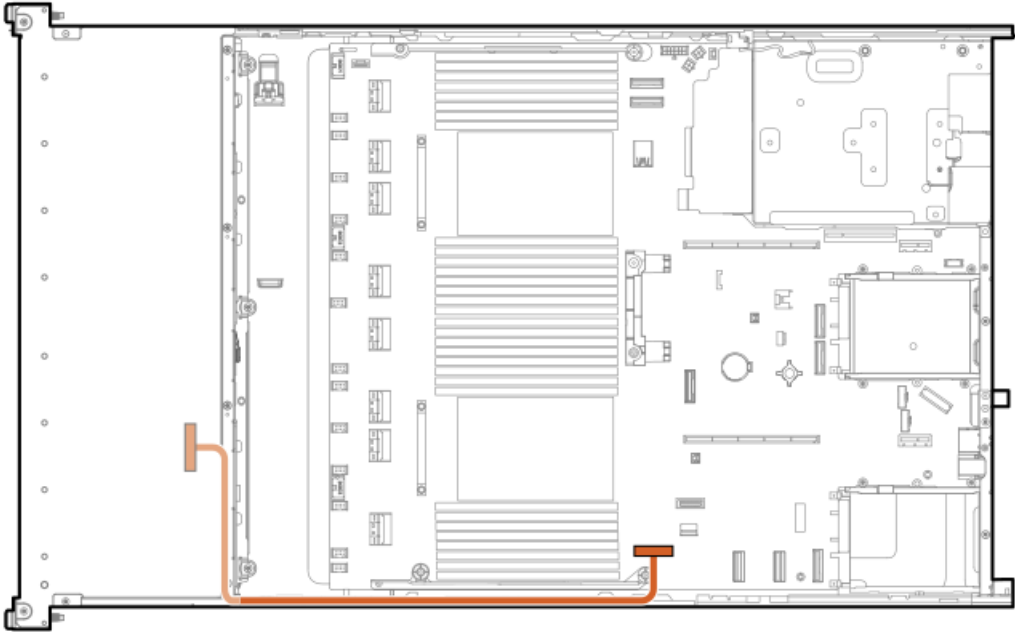


Cable part number	Color	From	To
756914-001 ¹	Orange	LFF ODD	System board

¹ Option kit: 726537-B21

LFF DisplayPort




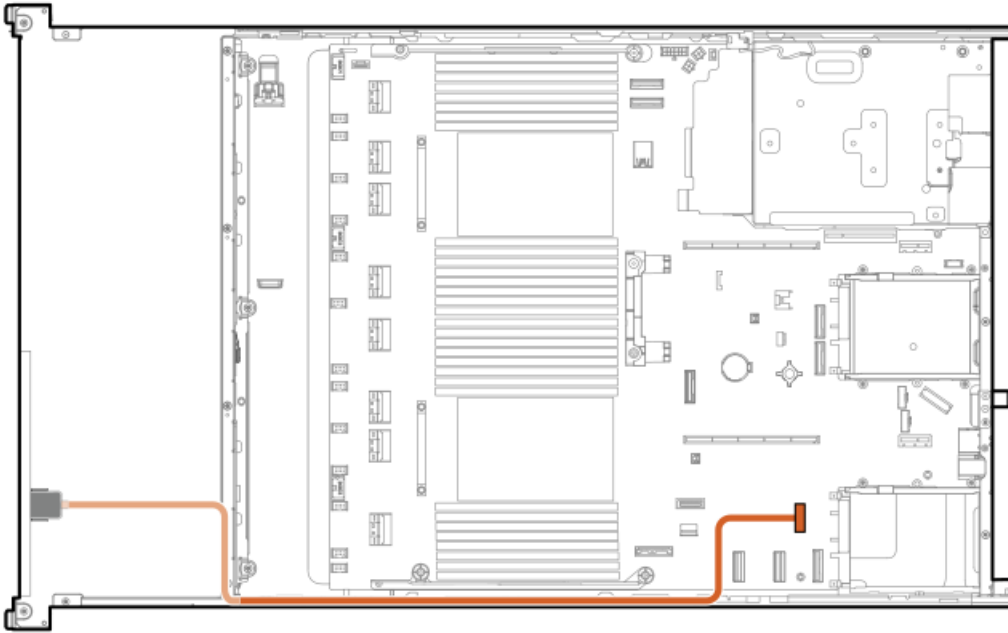

Cable part number	Color	From	To
869808-001 ¹	Orange	Front DisplayPort	System board

¹ Option kit: P52150-B21


SFF UMB USB cabling

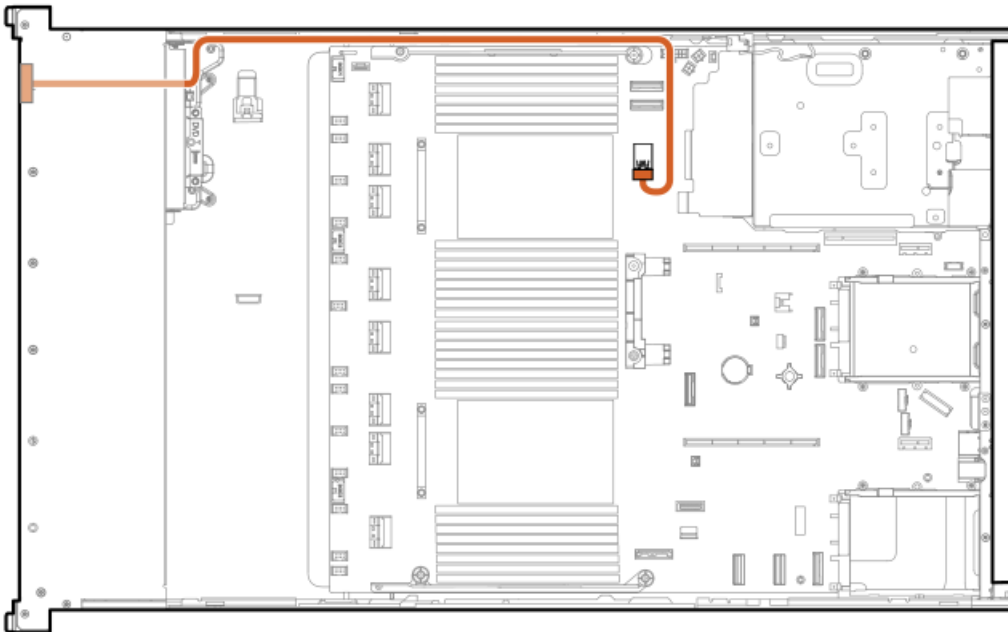

Cable part number	Color	From	To
P50731-001 ¹	Orange	Front USB port	System board

¹ Option kit: P50728-B21


SFF UMB DisplayPort/USB cabling

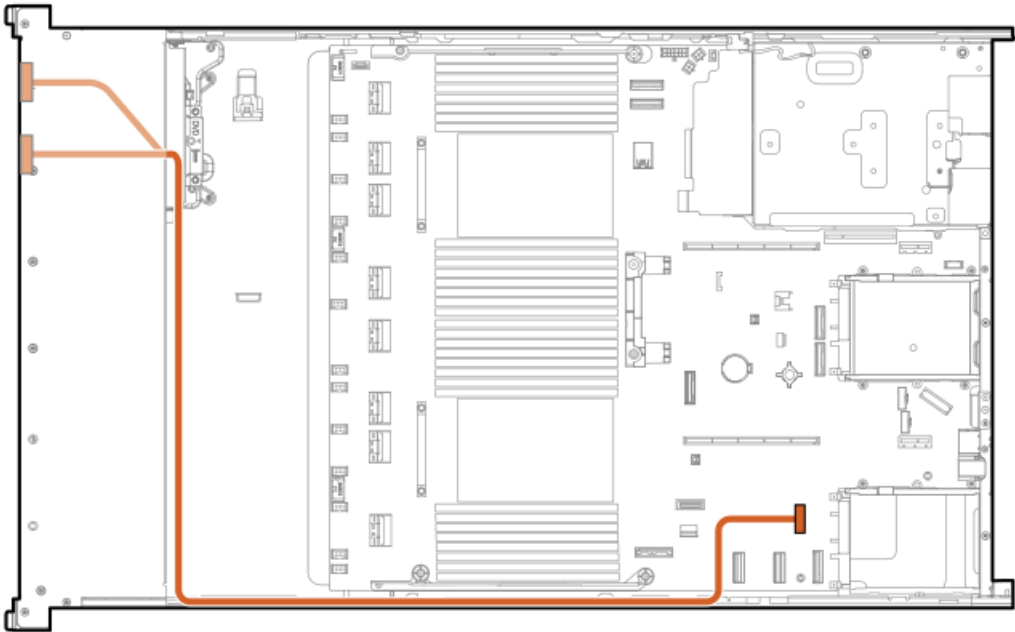

Cable part number	Color	From	To
P14314-001 ¹	Orange	Universal media bay	System board


¹ Option kit: P50728-B21

Front power switch cabling

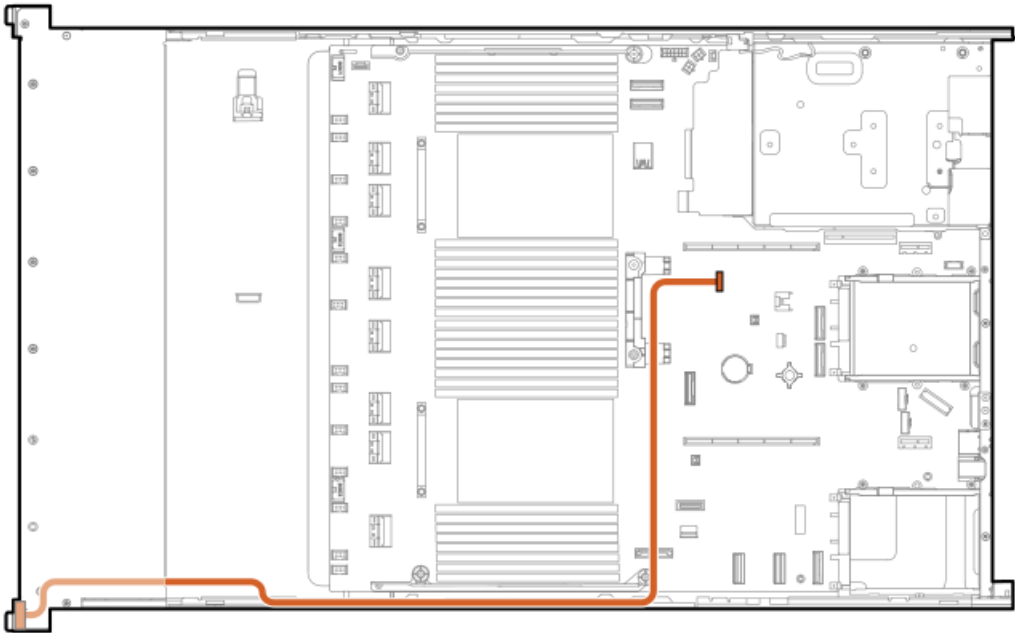

Cable part number	Color	From	To
P43727-001	Orange	Front power switch	System board

Serial port cabling

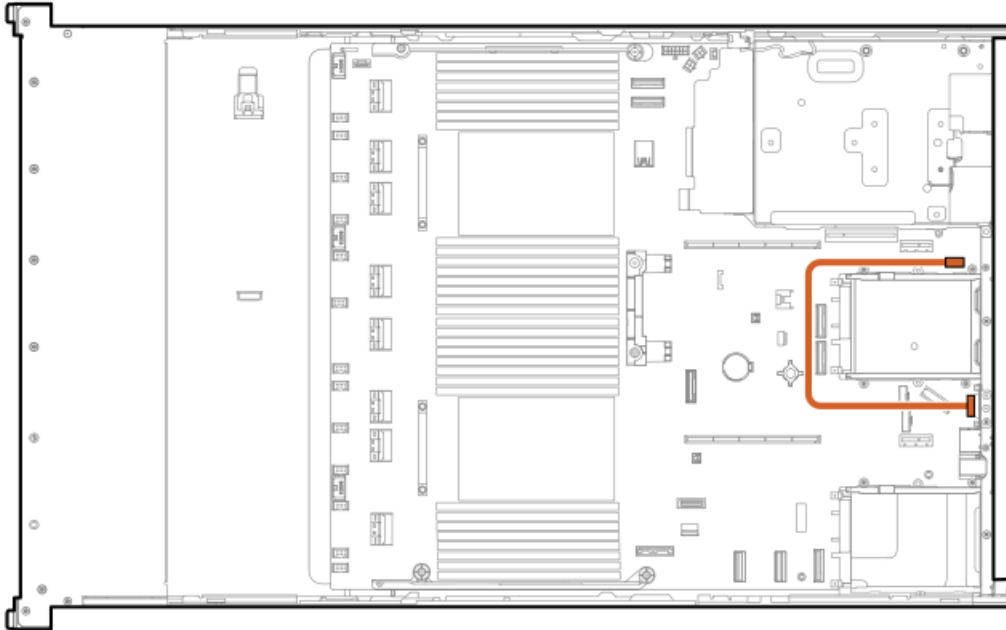

Cable part number	Color	From	To
P45623-001 ¹	Orange	Serial port	System board

¹ Option kit: P48824-B21

Component identification

Subtopics

[Front panel components](#)

[Front panel LEDs and buttons](#)

[Rear panel components](#)

[Rear panel LEDs](#)

[System board components](#)

[HPE Basic Drive LED definitions](#)

[EDSFF SSD LED definitions](#)

[Drive boxes and numbering](#)


[HPE NS204i-u Boot Device components](#)

[HPE NS204i-u Boot Device LED definitions](#)

[Riser board components](#)


Front panel components

SFF front panel components

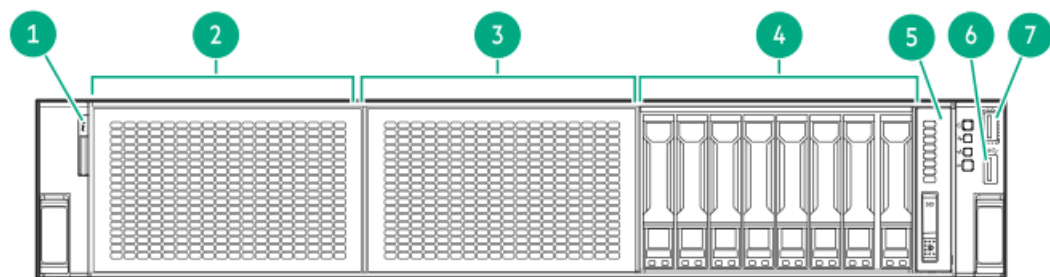


Item	Description
1	Serial number/iLO information pull tab
2	8 SFF drives or universal media bay (optional)
3	8 SFF drives (optional)
4	8 SFF drives
5	<u>Systems Insight Display</u> (optional)
6	USB 3.2 Gen 1 port
7	iLO Service Port

SFF media bay components

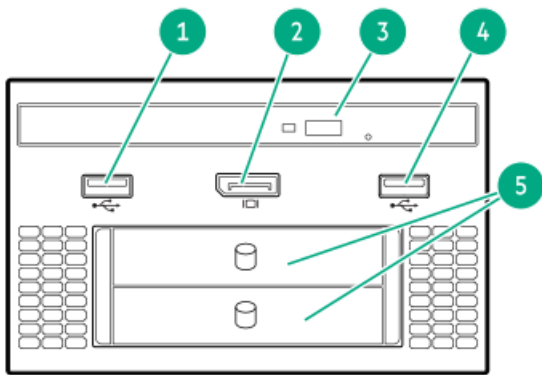


Item	Description
1	USB 2.0 port
2	DisplayPort 1.1a
3	Optical disc drive (optional)
4	USB 2.0 port
5	Front 2 SFF stacked drives (optional)

12 LFF front panel components

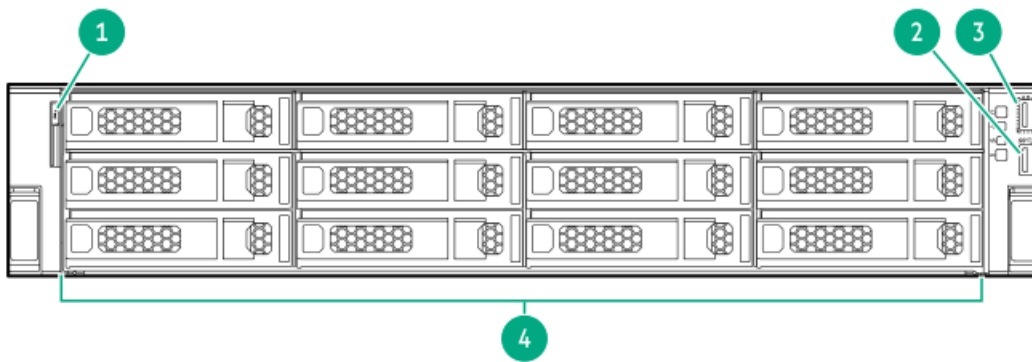


Item	Description
1	Serial number/iLO information pull tab
2	USB 3.2 Gen 1 port
3	iLO Service Port
4	LFF drives

8 LFF front panel components

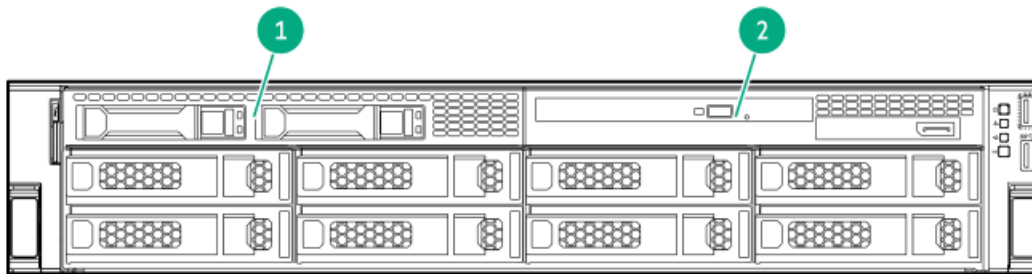

Item	Description
1	2 SFF side by side drives (optional)
2	LFF media bay


LFF media bay components

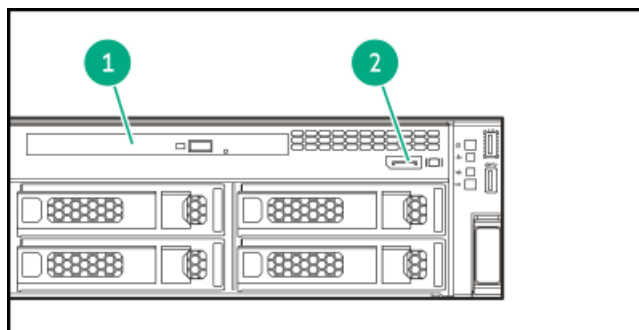

Item	Description
1	Optical disk drive
2	DisplayPort 1.1a

Front panel LEDs and buttons

SFF

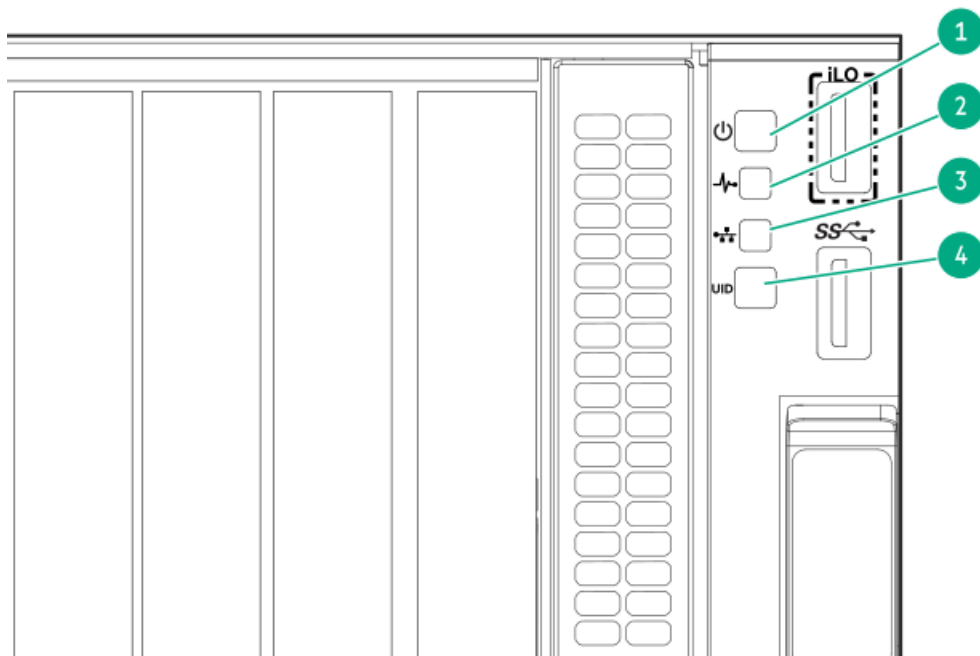


Item	Description	Status
1	Power On/Standby button and system power LED ¹	• Solid green = System on • Flashing green (1 Hz/cycle per sec) = Performing power on sequence • Solid amber = System in standby • Off = No power present ²
2	Health LED ¹	• Solid green = Normal • Flashing green (1 Hz/cycle per sec) = iLO is rebooting • Flashing amber = System degraded • Flashing red (1 Hz/cycle per sec) = System critical ³
3	NIC status LED ¹	• Solid green = Link to network • Flashing green (1 Hz/cycle per sec) = Network active • Off = No network activity
4	UID button/LED ¹	• Solid blue = Activated • Flashing blue: ◦ 1 Hz/cycle per sec = Remote management or firmware upgrade in progress ◦ 4 Hz/cycle per sec = iLO manual reboot sequence initiated ◦ 8 Hz/cycle per sec = iLO manual reboot sequence in progress ◦ Off = Deactivated

¹ When all four LEDs described in this table flash simultaneously, a power fault has occurred.

² Facility power is not present, the power cord is not attached, no power supplies are installed, power supply failure has occurred, or the power button cable is disconnected.

³ If the health LED indicates a degraded or critical state, review the system IML or use iLO to review the system health status.

LFF

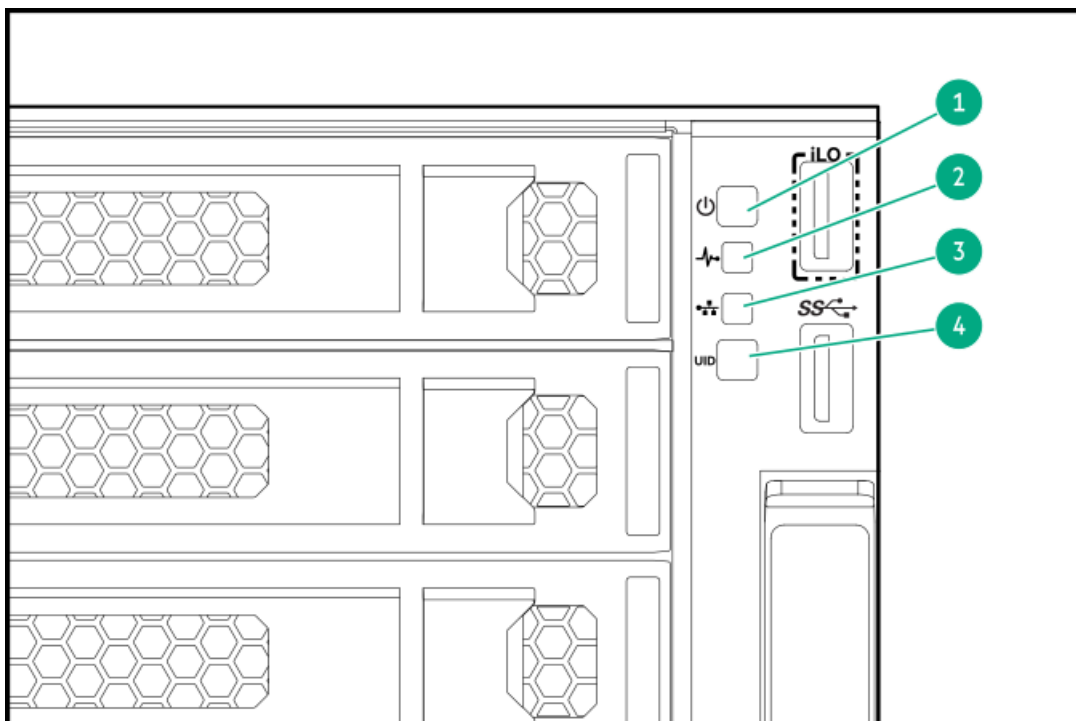

Item	Description	Status
1	Power On/Standby button and system power LED ¹	• Solid green = System on • Flashing green (1 Hz/cycle per sec) = Performing power on sequence • Solid amber = System in standby • Off = No power present ²
2	Health LED ¹	• Solid green = Normal • Flashing green (1 Hz/cycle per sec) = iLO is rebooting • Flashing amber = System degraded • Flashing red (1 Hz/cycle per sec) = System critical ³
3	NIC status LED ¹	• Solid green = Link to network • Flashing green (1 Hz/cycle per sec) = Network active • Off = No network activity
4	UID button/LED ¹	• Solid blue = Activated • Flashing blue: ◦ 1 Hz/cycle per sec = Remote management or firmware upgrade in progress ◦ 4 Hz/cycle per sec = iLO manual reboot sequence initiated ◦ 8 Hz/cycle per sec = iLO manual reboot sequence in progress ◦ Off = Deactivated

- ¹ When all four LEDs described in this table flash simultaneously, a power fault has occurred.
- ² Facility power is not present, the power cord is not attached, no power supplies are installed, power supply failure has occurred, or the power button cable is disconnected.
- ³ If the health LED indicates a degraded or critical state, review the system IML or use iLO to review the system health status.

Subtopics

[UID button functionality](#)

[Front panel LED power fault codes](#)

[Systems Insight Display LEDs](#)

[Systems Insight Display combined LED descriptions](#)

UID button functionality

The UID button can be used to identify a specific server in a rack or display the Server Health Summary when the server will not power on. For more information, see the latest HPE iLO User Guide on the [Hewlett Packard Enterprise website](#).


Front panel LED power fault codes

The following table provides a list of power fault codes, and the subsystems that are affected. Not all power faults are used by all servers.

Subsystem	LED behavior
System board	1 flash
Processor	2 flashes
Memory	3 flashes
Riser board PCIe slots	4 flashes
OCP adapter	5 flashes
Storage controller	6 flashes
System board PCIe slots	7 flashes
Power backplane	8 flashes
Storage backplane	9 flashes
Power supply	10 flashes
PCIe expansion cards installed in riser board	11 flashes
Chassis	12 flashes
GPU card	13 flashes

Systems Insight Display LEDs

The Systems Insight Display LEDs represent the system board layout. The display enables diagnosis with the access panel installed.

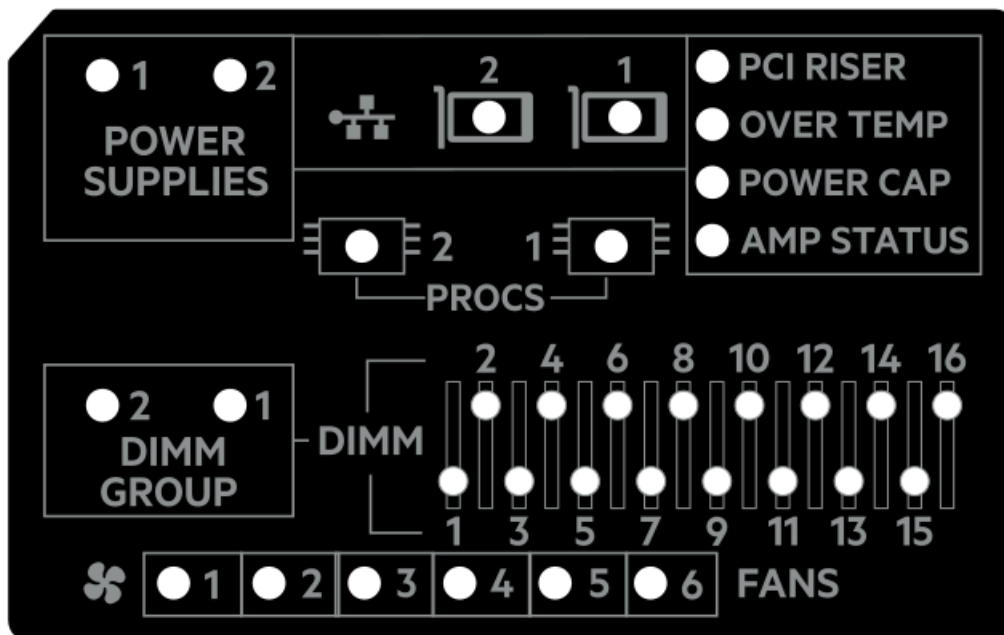

Description	Status
Processor LEDs	Off = Normal Amber = Failed processor
DIMM LEDs	Off = Normal Amber = Failed DIMM or configuration issue
DIMM group LEDs	Off = Normal Amber = Failed DIMM group or configuration issue
Fan LEDs	Off = Normal Amber = Failed fan or missing fan
NIC LEDs ¹	Off = No link to network Solid green = Network link Flashing green = Network link with activity If power is off, the front panel LED is not active. For status, see Rear panel LEDs .
Power supply LEDs	Off = Normal Solid amber = Power subsystem degraded, power supply failure, or input power lost.
PCI riser LED	Off = Normal Amber = Incorrectly installed PCI riser cage
Over temp LED	Off = Normal Amber = High system temperature detected
Power cap LED	Off = System is in standby, or no cap is set. Solid green = Power cap applied
AMP ² Status LED	Off = AMP modes disabled Solid green = AMP mode enabled Solid amber = Failover Flashing amber = Invalid configuration

¹ Embedded NIC ports are not equipped on the server. NIC LEDs on the Systems Insight Display will flash based on the network adapter port activity. In the case of a dual-port adapters, only NIC LED 1 and 2 will illuminate to correspond with the activity of the respective network ports.

² To configure Advanced Memory Protection, see the latest [UEFI System Utilities user guide](#).

When the health LED on the front panel illuminates either amber or red, the server is experiencing a health event. For more information on the combination of these LEDs, see [Systems Insight Display combined LED descriptions](#).

Systems Insight Display combined LED descriptions

The combined illumination of the following LEDs indicates a system condition:

- Systems Insight Display LEDs
- System power LED
- Health LED


Systems Insight Display LED and color	Health LED	System power LED	Status
Processor (amber)	Red	Amber	One or more of the following conditions might exist: - Processor in socket X has failed. - Processor X is not installed in the socket. - Processor X is unsupported. - ROM detects a failed processor during POST.
Processor (amber)	Amber	Green	Processor in socket X is in a pre-failure condition.
DIMM (amber)	Red	Green	One or more DIMMs have failed.
DIMM (amber)	Amber	Green	DIMM in slot X is in a pre-failure condition.
Over temp (amber)	Amber	Green	The Health Driver has detected a cautionary temperature level.
Over temp (amber)	Red	Amber	The server has detected a hardware critical temperature level.
PCI riser (amber)	Red	Green	The PCI riser cage is not seated properly.
Fan (amber)	Amber	Green	One fan has failed or has been removed.
Fan (amber)	Red	Green	Two or more fans have failed or been removed.
Power supply (amber)	Red	Amber	One or more of the following conditions might exist: - Only one power supply is installed and that power supply is in standby. - Power supply fault. - System board fault.
Power supply (amber)	Amber	Green	One or more of the following conditions might exist: - Redundant power supply is installed and only one power supply is functional. - AC power cord is not plugged into redundant power supply. - Redundant power supply fault. - Power supply mismatch at POST or power supply mismatch through hot-plug addition.
Power cap (off)	—	Amber	Standby.
Power cap (green)	—	Flashing green	Waiting for power.
Power cap (green)	—	Green	Power is available.
Power cap (flashing amber)	—	Amber	Power is not available.



IMPORTANT


If more than one DIMM slot LED is illuminated, further troubleshooting is required. Test each bank of DIMMs by removing all other DIMMs. Isolate the failed DIMM by replacing each DIMM in a bank with a known working DIMM.

Rear panel components

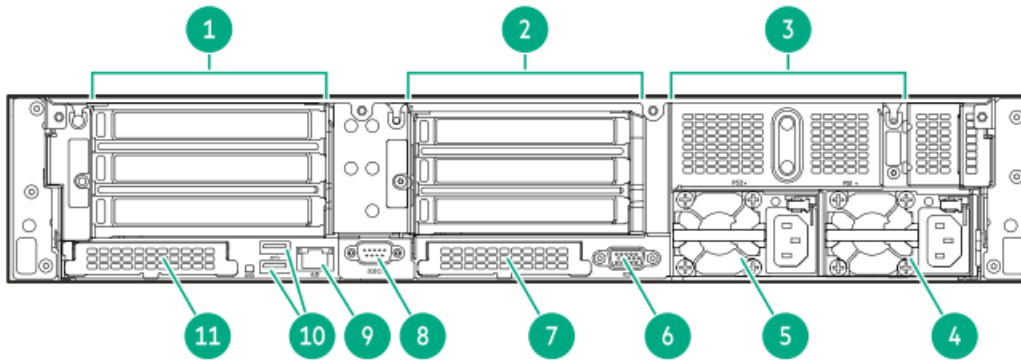


Item	Description
1	Primary riser slots 1–3 (optional drive cage)
2	Secondary riser slots 4–6 (optional drive cage)
3	Tertiary riser slots 7–8 (optional drive cage)
4	Power supply 1 (PS1)
5	Power supply 2 (PS2)
6	Video port (VGA)
7	OCP slot 15
8	Serial port (optional)
9	iLO Management Port
10	USB 3.2 Gen 1 ports
11	OCP slot 14

Rear panel LEDs

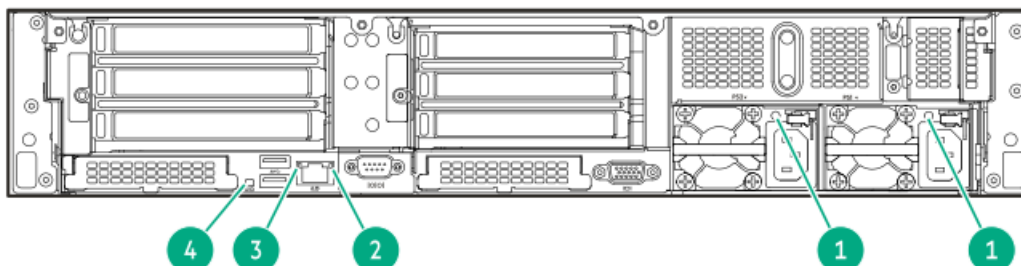

Item	Description	Status
1	Power supply LED	• Off = System is off or power supply has failed • Solid green = Normal
2	Status LED	• Off = No network activity • Solid green = Link to network • Flashing green = Network activity
3	Link LED	• Off = No network link • Green = Network link
4	UID LED	• Off = Deactivated • Solid blue = Activated • Flashing blue = System is being managed remotely

System board components

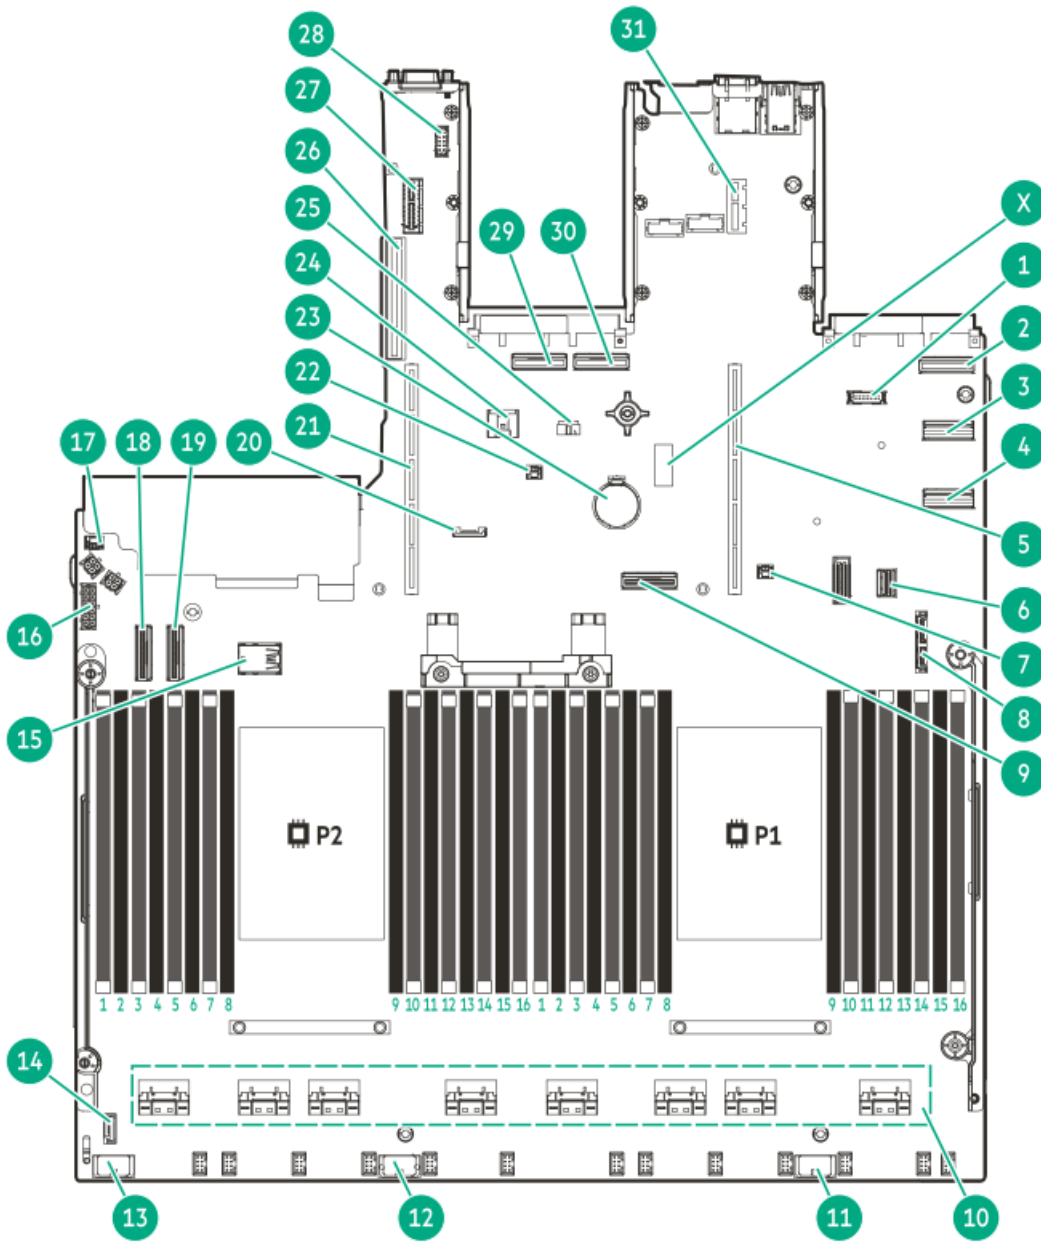

Item	Description
X	System maintenance switch
1	Front DisplayPort/USB 2.0 connector
2	OCP slot 14 port 2
3	LP SlimSAS port 2
4	LP SlimSAS port 1
5	Primary riser connector
6	Front I/O & USB 3.2 Gen 1 port connector
7	OCP slot 14 backup power connector
8	SATA optical port
9	Socket 1 MCIO port 1
10	x8 SlimSAS ports ¹
11	Drive box 3 power connector
12	Drive box 2 power connector
13	Drive box 1 power connector
14	Signal connector
15	Internal USB ports ²
16	Backplane power connector
17	Chassis Intrusion Detection switch connector
18	Socket 2 MCIO port 2
19	Socket 2 MCIO port 1
20	SID connector
21	Secondary riser connector
22	OCP slot 15 backup power connector
23	System battery
24	Energy pack connector
25	NS204i-u power connector
26	Tertiary riser connector
27	Auxiliary power connector for secondary riser
28	Serial port connector (optional)
29	OCP slot 15 port 1
30	OCP slot 15 port 2
31	Auxiliary power connector for primary riser

¹ The SlimSAS ports are numbered 1B-4B, 1A-4A from left to right. B is for processor 2 and A is for processor 1.

² Top = USB 3.2 Gen 1 port, Bottom = USB 2.0 port

Subtopics

[System maintenance switch descriptions](#)

[DIMM label identification](#)

[DIMM slot locations](#)

[Heatsink and processor socket components](#)

System maintenance switch descriptions

System maintenance switch descriptions

Position	Default	Function
S1 ¹	Off	- Off—iLO security is enabled. - On—iLO security is disabled.
S2	Off	Reserved
S3	Off	Reserved
S4	Off	Reserved
S5 ¹	Off	- Off—Power-on password is enabled. - On—Power-on password is disabled.
S6 ^{1, 2, 3}	Off	- Off—No function - On—Restore default manufacturing settings
S7	Off	Reserved
S8	Off	Reserved
S9	Off	Reserved
S10	Off	Reserved
S11	Off	Reserved
S12	Off	Reserved

- ¹ To access the redundant ROM, set S1, S5, and S6 to On.
- ² When the system maintenance switch position 6 is set to the On position, the system is prepared to restore all configuration settings to their manufacturing defaults.
- ³ When the system maintenance switch position 6 is set to the On position and Secure Boot is enabled, some configurations cannot be restored. For more information, see [Configuring the server](#).


DIMM label identification

The label contains information about the DIMM. For additional information about DIMMs, including:

- Memory speeds and server-specific DIMM population rules
- Product features, specifications, options, configurations, and compatibility

See the website:

<https://www.hpe.com/docs/server-memory>

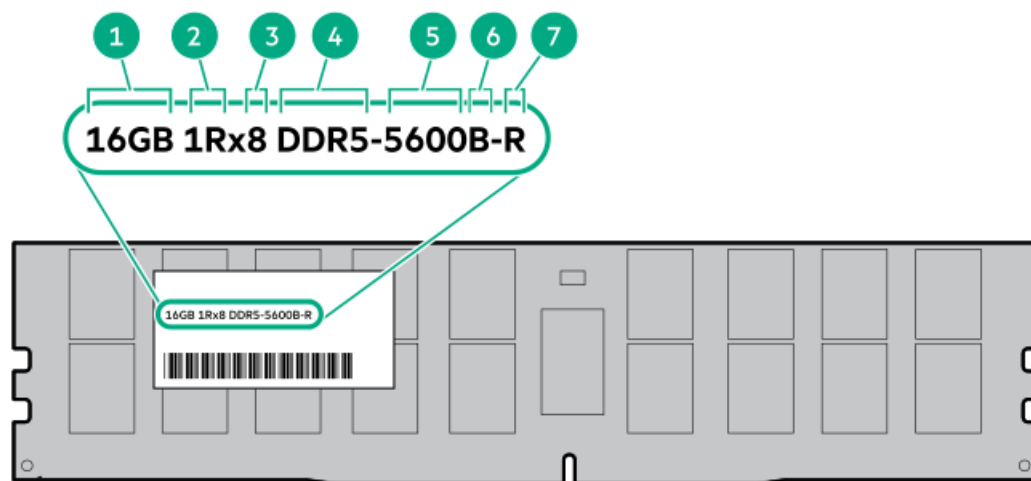


Item	Description	Example
1	Capacity ¹	16 GB
		32 GB
		64 GB
		96 GB
		128 GB
		256 GB
2	Rank	1R—Single rank
		2R—Dual rank
		4R—Quad rank
		8R—Octal rank
3	Data width on DRAM	x4—4-bit
		x8—8-bit
4	Memory generation	PC5—DDR5
5	Maximum memory speed ¹	4800 MT/s
		5600 MT/s
		6400 MT/s
6	CAS latency	B—42-42-42
		B—50-42-42 (for 128 GB and 256 GB capacities)
7	DIMM type	E—UDIMM (unbuffered with ECC)
		R—RDIMM (registered)

¹ The maximum memory speed and capacity is a function of the memory type, memory configuration, and processor model.


DIMM slot locations

DIMM slots are numbered sequentially (1 through 16) for each processor.

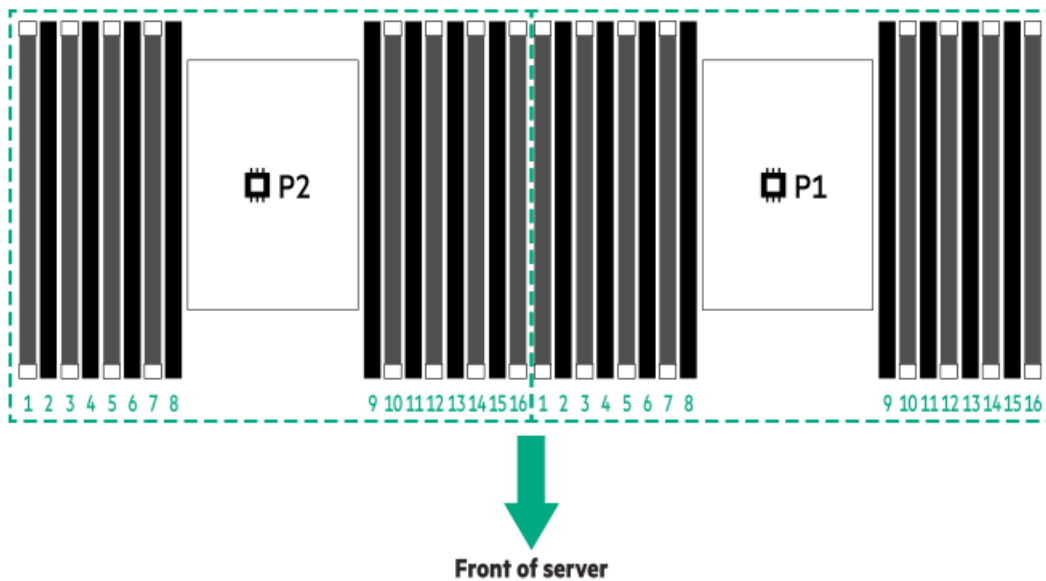

Heatsink and processor socket components

A high-performance heatsink is shown. Your heatsink might look different.

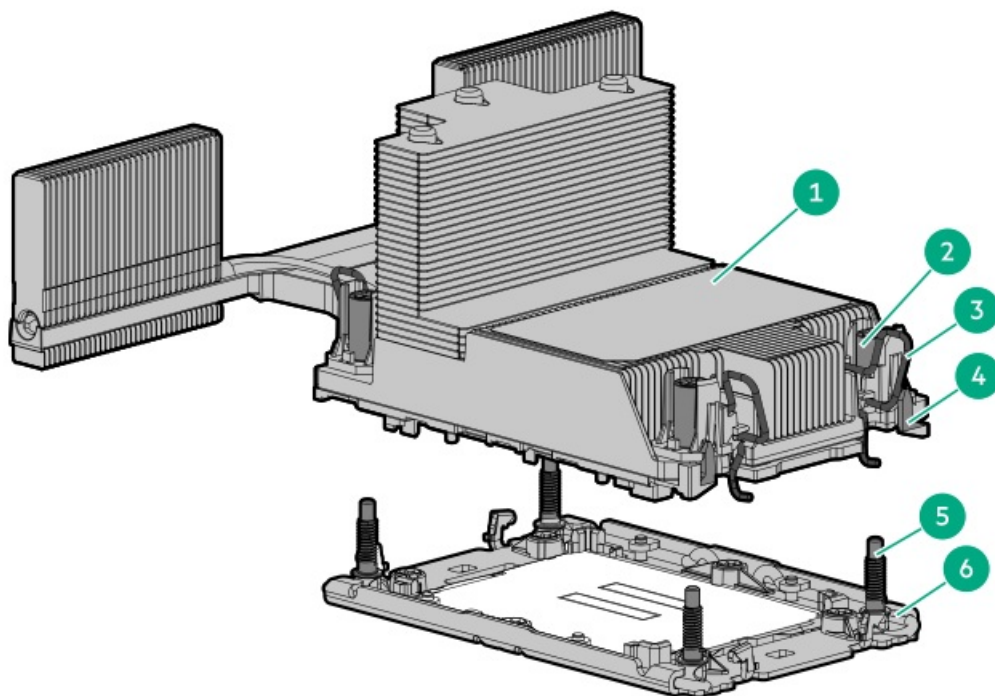

Item	Description
1	Processor-heatsink module ¹
2	Heatsink nuts
3	Heatsink latches
4	Processor carrier latches
5	Alignment screws
6	Bolster plate

¹ This module consists of the heatsink attached to the processor that is already secured in its carrier.


HPE Basic Drive LED definitions

The HPE Basic drive carrier has the following LEDs:

- Amber/blue LED—Managed by the drive backplane in conjunction with the storage controller and is used to indicate drive status.
- Green LED—Managed by the drive itself and indicates the drive activity.


LFF low-profile drive carrier

The LFF low-profile drive carrier supports hot-plug SAS or SATA.

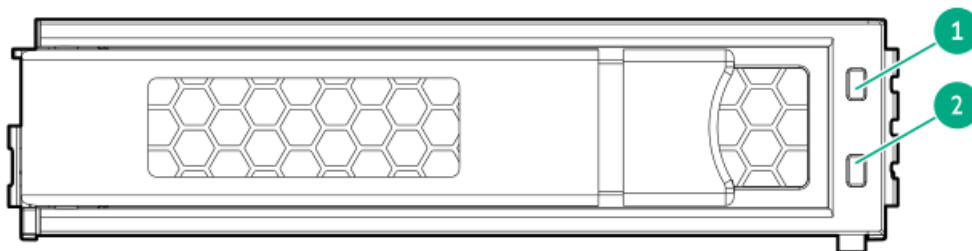

SFF basic drive carrier

The SFF basic drive carrier supports hot-plug SAS, SATA, or U.3 NVMe.

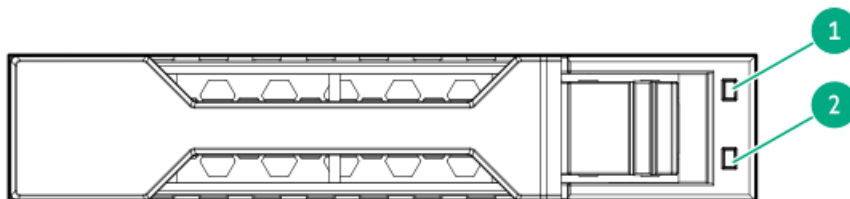

Item	LED	State	Definition
1	Fault/Locate	Solid amber	This drive has failed, is unsupported, or is invalid.
		Solid blue	The drive is operating normally and being identified by a management application.
		Flashing amber/blue (1 flash per second)	The drive has failed, or a predictive failure alert has been received for this drive. The drive has also been identified by a management application.
		Flashing amber (1 flash per second)	A predictive failure alert has been received for this drive. Replace the drive as soon as possible.
		Off	The drive is operating normally and not being identified by a management application.
2	Online/Activity	Solid green	The drive is online and has no activity.
		Flashing green (1 flash per second)	The drive is doing one of the following: - Rebuilding or performing a RAID - Performing a stripe size migration - Performing a capacity expansion - Performing a logical drive extension - Erasing - Spare part activation
		Flashing green (4 flashes per second)	The drive is operating normally and has activity.
		Off	The drive is not configured by a RAID controller or is a spare drive.

EDSFF SSD LED definitions

The EDSFF drive carrier has two LEDs:


- Amber/blue LED—Managed by the drive backplane in conjunction with the storage controller and is used to indicate drive status.
- Green LED—Managed by the drive itself and indicates the drive activity.






Item	LED	State	Definition
1	Fault/Locate	Solid amber	This drive has failed, is unsupported, or is invalid.
		Solid blue	The drive is operating normally and being identified by a management application.
		Flashing amber/blue (1 flash per second)	The drive has failed, or a predictive failure alert has been received for this drive. The drive has also been identified by a management application.
		Flashing amber (1 flash per second)	A predictive failure alert has been received for this drive. Replace the drive as soon as possible.
		Off	The drive is operating normally and not being identified by a management application.
2	Online/Activity	Solid green	The drive is online and has no activity.
		Flashing green (4 flashes per second)	The drive is operating normally and has activity.
		Off	No power present.


Drive boxes and numbering


Front boxes

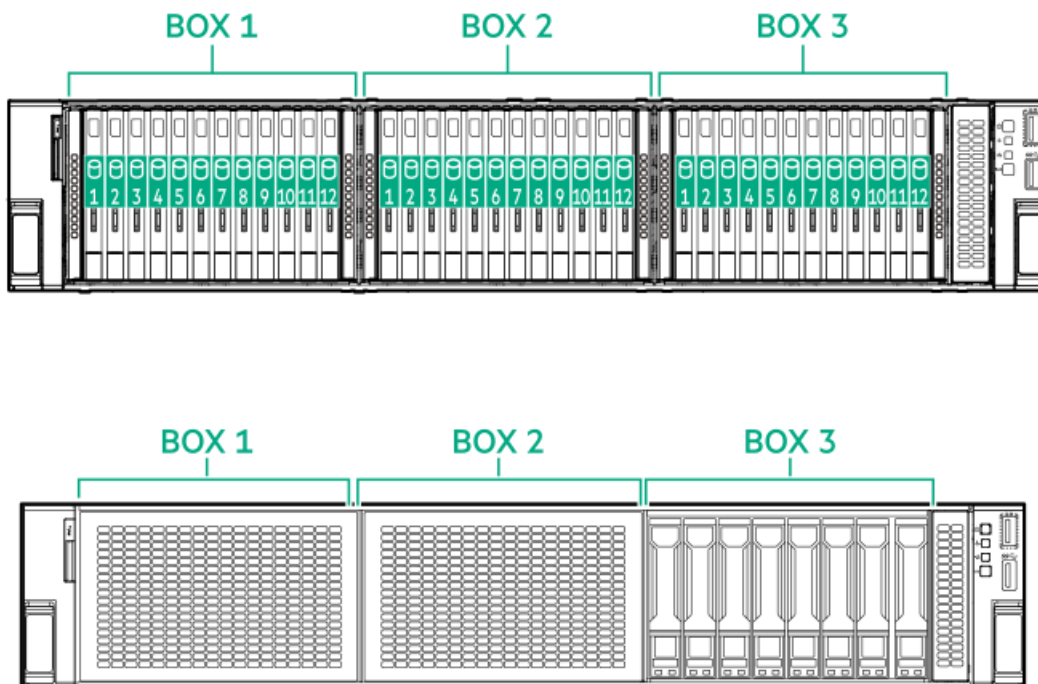

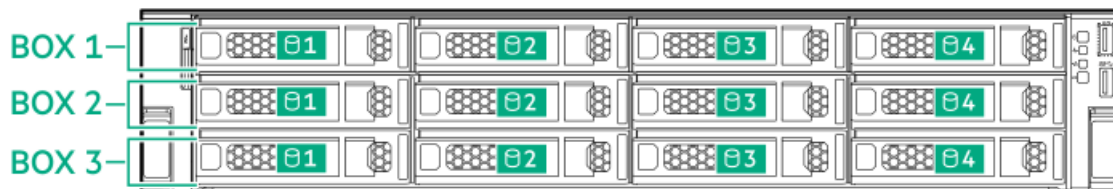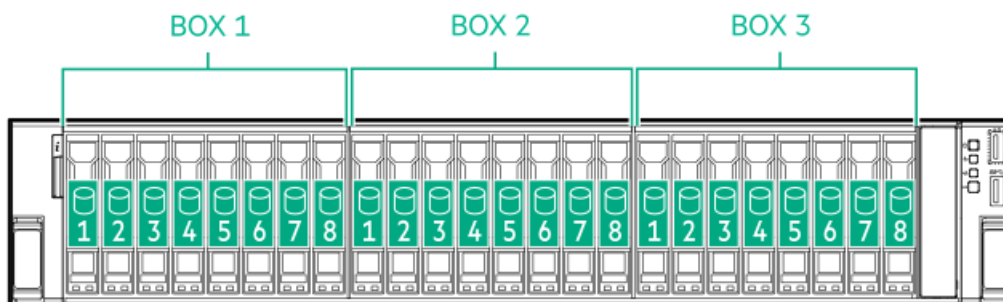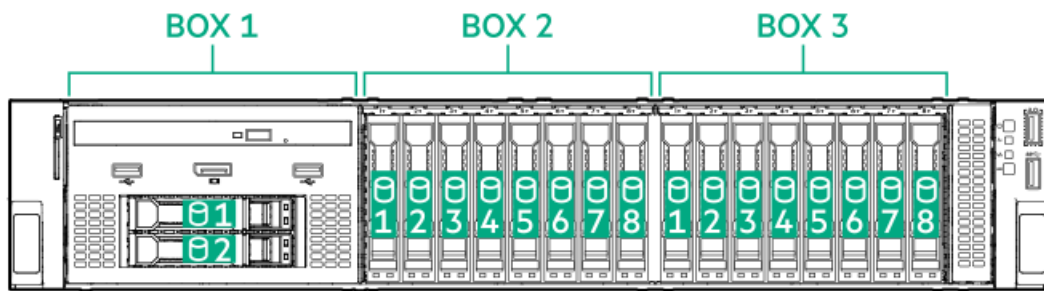


Rear boxes

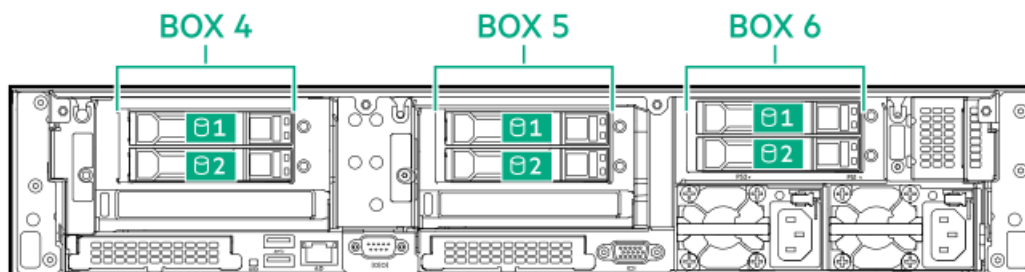


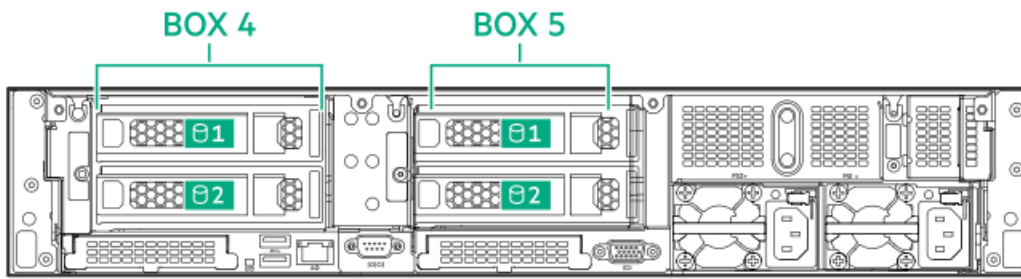


Midplane box (SFF)

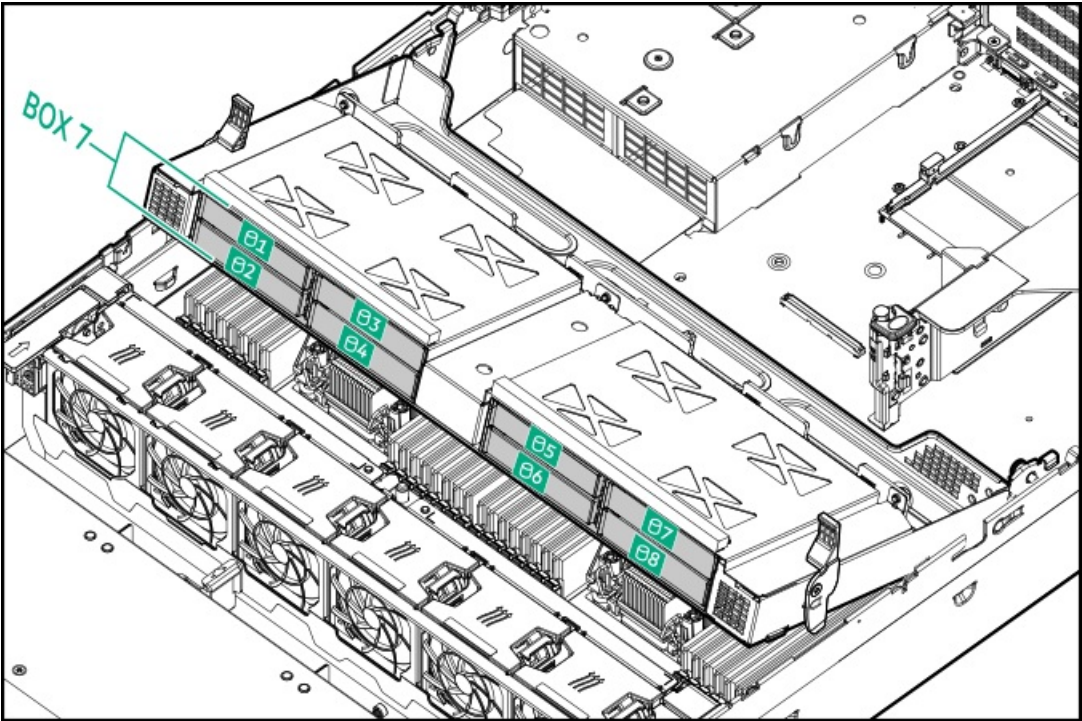

Midplane box (LFF)

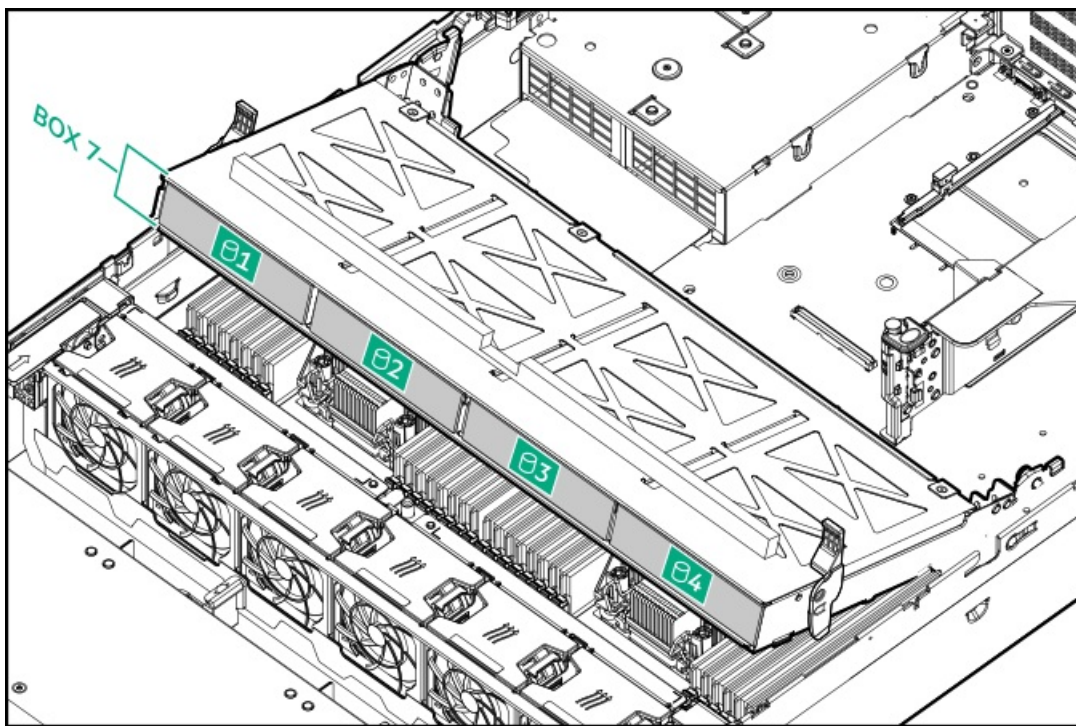


HPE NS204i-u Boot Device components

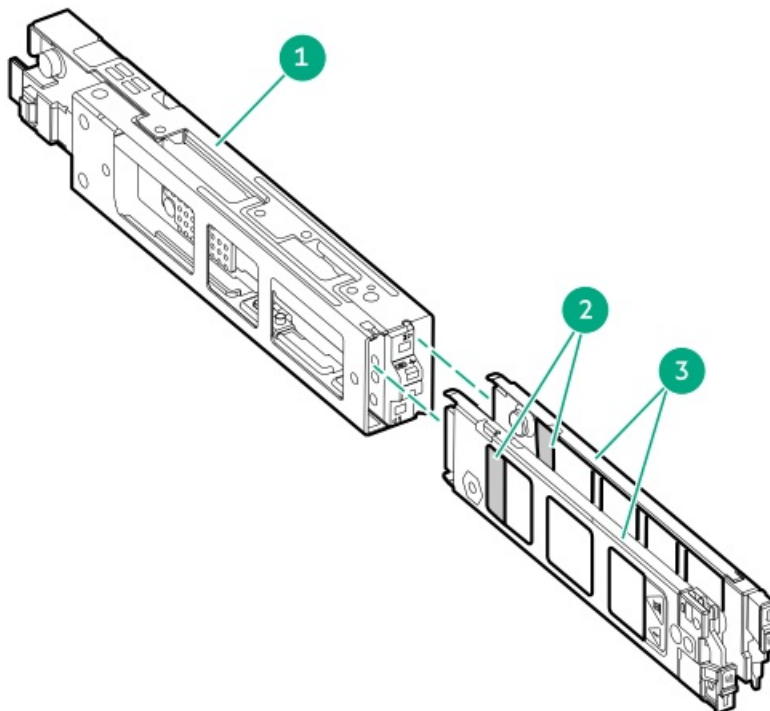

Item	Description
1	Boot device cage
2	M.2 slots
3	Boot device carriers

HPE NS204i-u Boot Device LED definitions

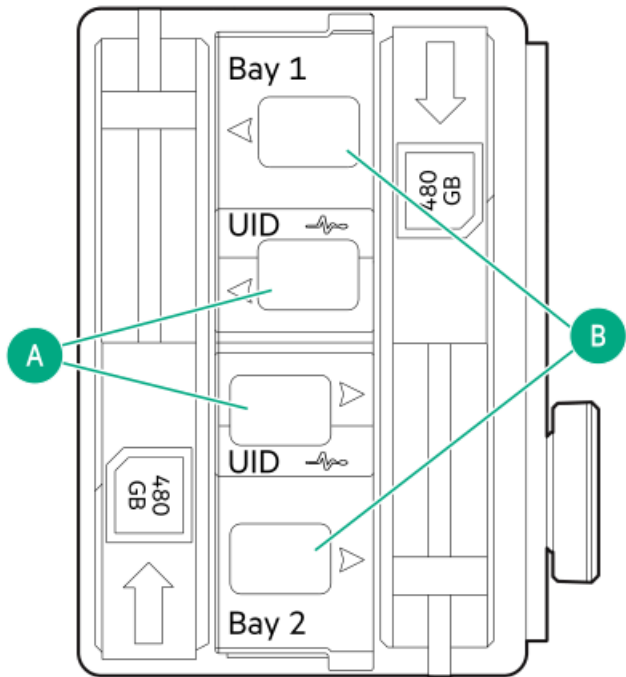


NOTE
The bay number can be found on the SSD carrier handle.

Item	LED	Status	Definition
A	Fault or Locate	Solid amber	Drive has failed, unsupported, or invalid.
		Solid blue	Drive is operating normally.
		Flashing amber or blue (one flash per second)	Drive has failed, or a predictive failure alert is received for the drive.
		Flashing amber (one flash per second)	Drive predictive failure alert is received. Replace the drive as soon as possible.
		Off	Drive is operating normally and is not identified by any application.
B	Online/Activity	Solid green	Drive is online and has no activity.
		Flashing green (one flash per second)	Drive is doing one of the following: - Rebuilding or performing a RAID - Erasing
		Flashing green (4 flashes per second)	Drive is operating normally and has activity.
		Off	Drive is not configured by a RAID controller.


Riser board components

PCIe5 x16/x16/x16 riser components

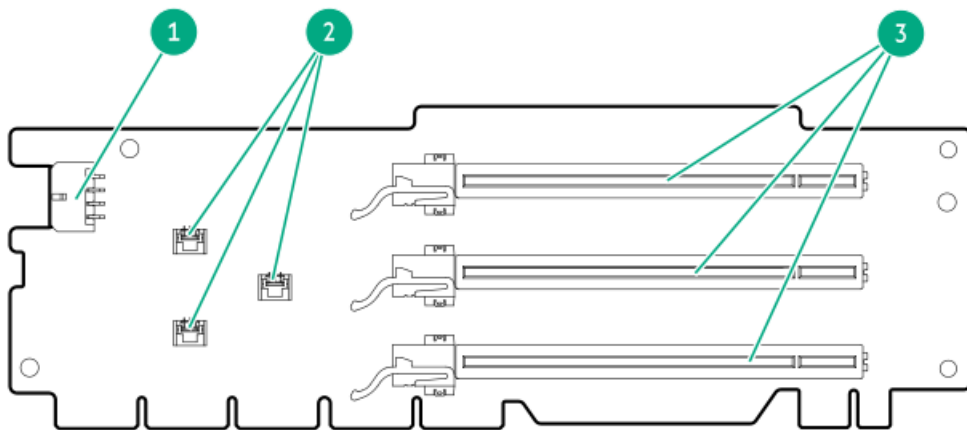

Item Description


- | | |
|---|---|
| 1 | 8-pin GPU power connector |
| 2 | Storage controller voltage back up (VBU) power connectors |
| 3 | x16 riser slots |

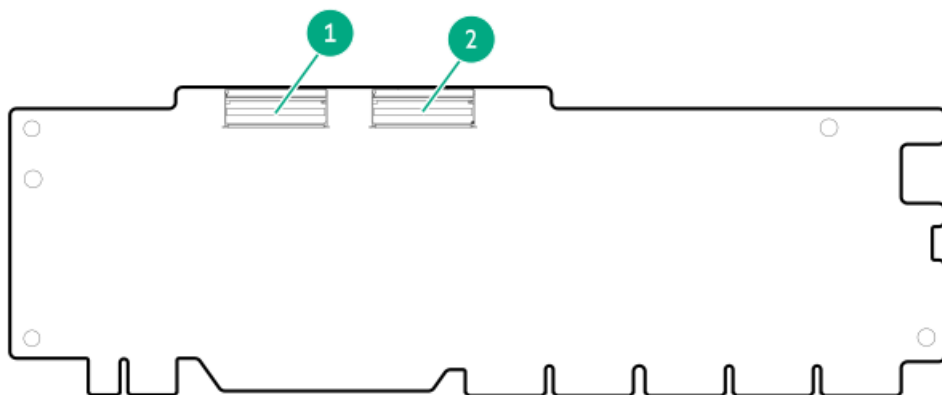

Item Description

- | | |
|---|------------------------|
| 1 | LP SlimSAS connector 1 |
| 2 | LP SlimSAS connector 2 |


PCIe5 x8/x16/x8 riser components

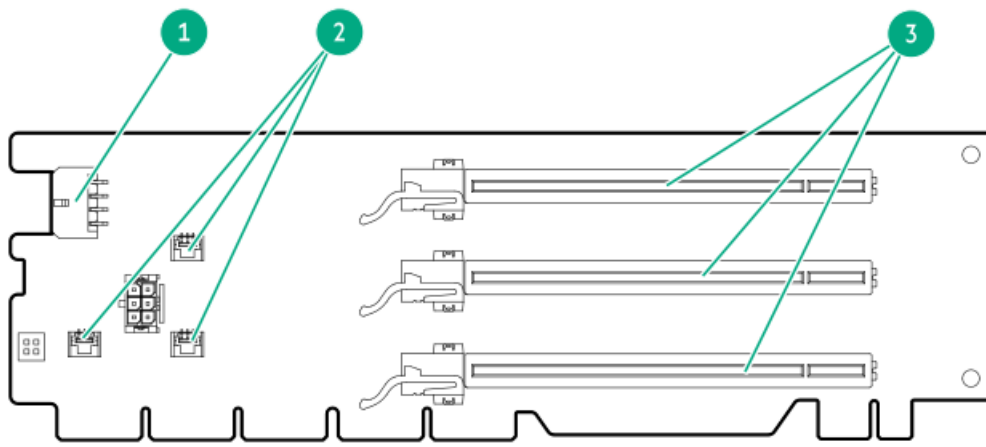

Item Description

- | | |
|---|---|
| 1 | 8-pin GPU power connector |
| 2 | Storage controller voltage back up (VBU) power connectors |
| 3 | Slot 1 is x8
Slot 2 is x16
Slot 3 is x8 |

PCIe5 x16/x16 tertiary riser components

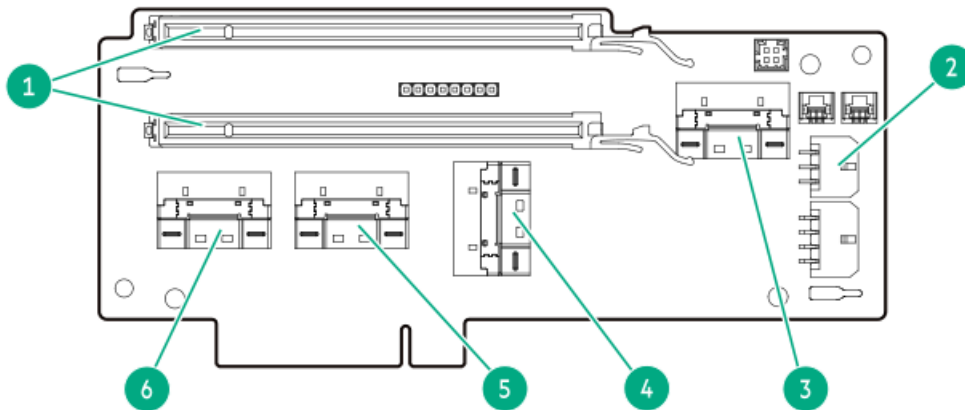

Item Description

- | | |
|---|---------------------------|
| 1 | PCIe5 x16 (8, 4, 1) slots |
| 2 | GPU power connector |
| 3 | PCIe SlimSAS port 2 |
| 4 | PCIe SlimSAS port 4 |
| 5 | PCIe SlimSAS port 3 |
| 6 | PCIe SlimSAS port 1 |

Configuration resources

Use the following resources to find documentation for configuring and managing your server.

- Some utilities might not apply to your server. For information about server compatibility with the products listed in this chapter, see the product QuickSpecs (<https://www.hpe.com/info/quickspecs>).
- Products ordered from HPE Factory Express might have already been configured with some or all the configurations in this chapter. To determine if any additional setup is required, see your HPE Factory Express order.
- For one-stop access to version-specific software and firmware documentation, including the latest product release notes, see this quick links page:
<https://www.hpe.com/support/hpeproductdocs-quicklinks>

Subtopics

[Updating firmware or system ROM](#)

[Configuring the server](#)

[Configuring storage controllers](#)

[Managing the HPE NS204i-u Boot Device](#)

[Deploying an OS](#)

[Configuring security](#)

[Server management](#)

[Managing Linux-based high performance compute clusters](#)

Updating firmware or system ROM

To	Use
Download service packs	• Service Pack for ProLiant (SPP) https://www.hpe.com/servers/spp/download • Get an overview of SPP and its ecosystem https://www.hpe.com/support/SPP-overview-videos-en
Deploy service packs to a single server	Smart Update Manager (SUM) https://www.hpe.com/support/hpesmartupdatemanager-quicklinks
Deploy service packs to multiple servers	HPE OneView https://www.hpe.com/support/hpeoneview-quicklinks
Updating iLO or system firmware in a single server or multiple servers	HPE iLO https://www.hpe.com/support/hpeilodocs-quicklinks
• Enable policy-based management of server or server group firmware for distributed server infrastructure • Monitor server compliance with a configured firmware baseline • Receive automatic iLO firmware updates • Receive baseline update alerts	HPE Compute Ops Management https://www.hpe.com/support/hpe-gl-com-quicklinks

Configuring the server

To configure	Use
Single server (GUI)	• Intelligent Provisioning https://www.hpe.com/support/hpeintelligentprovisioning-quicklinks • iLO remote console or web interface https://www.hpe.com/support/hpeilodocs-quicklinks • UEFI System Utilities https://www.hpe.com/support/hpeuefisystemutilities-quicklinks • HPE Compute Ops Management https://www.hpe.com/support/hpe-gl-com-quicklinks
Single server (scripting)	• RESTful Interface Tool https://www.hpe.com/support/restfulinterface/docs • Python iLO Redfish Library (python-ilorest-library) https://github.com/HewlettPackard/python-ilorest-library • Scripting Tools for Windows Powershell https://www.hpe.com/info/powershell/docs • iLO RESTful API https://servermanagementportal.ext.hpe.com/ • HPE Compute Ops Management API https://developer.greenlake.hpe.com/
Multiple servers (either UI or scripting)	• HPE OneView ¹ https://www.hpe.com/support/hpeoneview-quicklinks • HPE Compute Ops Management https://www.hpe.com/support/hpe-gl-com-quicklinks ◦ Server settings: Define server-specific parameters such as firmware baselines, and then apply them to server groups. ◦ Server groups: Organize servers into custom-defined sets with associated server settings, and then apply group-specific policies to create a consistent configuration across the servers in the group.

¹ For servers running HPE OneView, do not use another tool, such as iLO, to delete or change certain settings. For more information about using HPE OneView and iLO to manage the same server, see the iLO user guide at <https://www.hpe.com/support/hpeilodocs-quicklinks>.

Configuring storage controllers

Controller type	Documentation
HPE SR Gen10 controllers	• HPE Smart Array SR Controller Gen10 User Guide https://www.hpe.com/support/SR-Gen10-UG • SR Gen10 controller RAID creation: https://www.hpe.com/support/SR-RAID-creation
HPE SR Gen11 controllers	• HPE SR Gen11 Controller User Guide https://hpe.com/support/SR-Gen11-UG • SR Gen11 controller RAID creation: https://www.hpe.com/support/SR-RAID-creation Configuration guides: • HPE Smart Storage Administrator GUI User Guide https://www.hpe.com/support/SSA-UG • HPE Smart Storage Administrator CLI User Guide https://www.hpe.com/support/SSACLI-UG
HPE MR Gen11 controllers	• HPE MR Gen11 Controller User Guide https://hpe.com/support/MR-Gen11-UG • MR Gen11 controller configuration: https://www.hpe.com/support/MR-Gen11-configuration • MR Gen11 controller RAID creation: https://www.hpe.com/support/MR-Gen11-RAID-creation Configuration guides: • HPE MR Storage Administrator User Guide https://www.hpe.com/support/MRSA • HPE StorCLI User Guide https://www.hpe.com/support/StorCLI

Controller type	Documentation
Intel VROC for HPE Gen11	- Intel Virtual RAID on CPU for HPE User Guide https://hpe.com/support/VROC-Gen11-UG - Intel VROC SATA RAID quick installation: https://www.hpe.com/support/VROC-SATA-RAID-installation OS-specific configuration guides: - Intel Virtual RAID on CPU (Intel VROC) for Windows User Guide https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/338065_Intel_VROC_UserGuide_Windows.pdf - Intel Virtual RAID on CPU (Intel VROC) for Linux User Guide https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/linux-intel-vroc-userguide-333915.pdf - Intel Volume Management Device Driver for VMware ESXi User Guide https://www.intel.com/content/dam/support/us/en/documents/memory-and-storage/ESXi-Intel-VROC-UserGuide.pdf
Storage controller documents library	https://www.hpe.com/support/hpestoragecontrollerdocs-quicklinks

Managing the HPE NS204i-u Boot Device

For more information on supported features and maintenance information for the HPE NS204i-u Boot Device, see the HPE NS204i-u Boot Device User Guide:

<https://www.hpe.com/support/NS204-UG>

Deploying an OS

For a list of supported operating systems, see the HPE Servers Support & Certification Matrices:

<https://www.hpe.com/support/Servers-Certification-Matrices>

To	See
Deploy an OS using HPE Compute Ops Management	HPE Compute Ops Management User Guide https://www.hpe.com/support/hpe-gl-com-quicklinks
Deploy an OS using Intelligent Provisioning	Intelligent Provisioning user guide https://www.hpe.com/support/hpeintelligentprovisioning-quicklinks
Deploy an OS using iLO virtual media	iLO user guide https://www.hpe.com/support/hpeilodocs-quicklinks
Configure the server to boot from a PXE server	UEFI System Utilities User Guide for HPE ProLiant Gen11 Servers and HPE Synergy https://www.hpe.com/support/UEFIGen11-UG-en
Configure the server to boot from a SAN	HPE Boot from SAN Configuration Guide https://www.hpe.com/info/boot-from-san-config-guide

Configuring security

To	See
Implement server security best practices.	- HPE Compute Security Reference Guide https://www.hpe.com/info/server-security-reference-en - HPE iLO 6 Security Technology Brief https://www.hpe.com/support/ilo6-security-en
Configure and use the Server Configuration Lock feature on HPE Trusted Supply Chain servers and other servers that have the Server Configuration Lock feature enabled.	Server Configuration Lock User Guide for HPE ProLiant servers and HPE Synergy https://www.hpe.com/info/server-config-lock-UG-en

Server management

To monitor	See
Single server	HPE iLO https://www.hpe.com/support/hpeilodocs-quicklinks
Multiple servers	HPE OneView https://www.hpe.com/support/hpeoneview-quicklinks
Single or multiple servers	HPE Compute Ops Management https://www.hpe.com/support/hpe-gl-com-quicklinks

Managing Linux-based high performance compute clusters

To	Use
Provision, manage, and monitor clusters.	HPE Performance Cluster Manager https://www.hpe.com/support/hpcm_manuals
Optimize your applications.	HPE Performance Analysis Tools https://www.hpe.com/info/perftools
Optimize software library for low latency and high bandwidth, both on-node and off-node, for point-to-point and collective communications.	HPE Cray Programming Environment User Guide https://www.hpe.com/info/cray-pe-user-guides

Safety, warranty, and regulatory information

Subtopics

[Regulatory information](#)

[Warranty information](#)

Regulatory information

To view the regulatory information for your product, view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products, available at the Hewlett Packard Enterprise Support Center:

<https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

Additional regulatory information

Hewlett Packard Enterprise is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No 1907/2006 of the European Parliament and the Council). A chemical information report for this product can be found at:

<https://www.hpe.com/info/reach>

For Hewlett Packard Enterprise product environmental and safety information and compliance data, including RoHS and REACH, see:

<https://www.hpe.com/info/ecodata>

For Hewlett Packard Enterprise environmental information, including company programs, product recycling, and energy efficiency, see:

<https://www.hpe.com/info/environment>

Subtopics

[Notices for Eurasian Economic Union](#)

[Turkey RoHS material content declaration](#)

[Ukraine RoHS material content declaration](#)

Notices for Eurasian Economic Union



Manufacturer and Local Representative Information

Manufacturer information:

Hewlett Packard Enterprise Company, 1701 E Mossy Oaks Road, Spring, TX 77389 U.S.

Local representative information Russian:

- **Russia**
ООО "Хьюлетт Паккард Энтерпрайз", Российская Федерация, 125171, г. Москва, Ленинградское шоссе, 16А, стр.3, Телефон: +7 499 403 4248 Факс: +7 499 403 4677
- **Kazakhstan**
ТОО «Хьюлетт-Паккард (К)», Республика Казахстан, 050040, г. Алматы, Бостандыкский район, проспект Аль-Фараби, 77/7, Телефон/факс: + 7 727 355 35 50

Local representative information Kazakh:

- **Russia**
ЖШС "Хьюлетт Паккард Энтерпрайз", Ресей Федерациясы, 125171, Мәскеу, Ленинград тас жолы, 16А блок 3, Телефон: +7 499 403 4248 Факс: +7 499 403 4677
- **Kazakhstan**
ЖШС «Хьюлетт-Паккард (К)», Қазақстан Республикасы, 050040, Алматы к., Бостандық ауданы, Әл-Фараби даңғ ылы, 77/7, Телефон/факс: +7 727 355 35 50

Manufacturing date:

The manufacturing date is defined by the serial number.

CCSYWWZZZZ (product serial number format)

WW = Week of manufacture (calendar week)
Y = Year of manufacture (decade, year)

If you need help identifying the manufacturing date, contact tre@hpe.com.

Turkey RoHS material content declaration

Türkiye Cumhuriyeti: AEEE Yönetmeliğine Uygundur

Ukraine RoHS material content declaration

Обладнання відповідає вимогам Технічного регламенту щодо обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні, затвердженого постановою Кабінету Міністрів України від 3 грудня 2008 № 1057

Warranty information

To view the warranty information for your product, see the [warranty check tool](#).

Specifications

Subtopics

[Environmental specifications](#)

[Mechanical specifications](#)

[Rack rail specifications](#)

[Power supply specifications](#)

[Hot-plug power supply calculations](#)

Environmental specifications

Specification	Value
Temperature range ¹	—
Operating	10°C to 35°C (50°F to 95°F)
Non-operating	-30°C to 60°C (-22°F to 140°F)
Relative humidity (non-condensing)	—
Operating	Minimum to be the higher (more moisture) of -12°C (10.4°F) dew point or 8% relative humidity Maximum to be 24°C (75.2°F) dew point or 90% relative humidity
Non-operating	5% to 95% 38.7°C (101.7°F), maximum wet bulb temperature

¹ All temperature ratings shown are for sea level. An altitude derating of 1.0°C per 304.8 m (1.8°F per 1000 ft) to 3048 m (10,000 ft) is applicable. No direct sunlight allowed. Maximum rate of change is 20°C per hour (36°F per hour). The upper limit and rate of change might be limited by the type and number of options installed.

For certain approved hardware configurations, the supported system inlet temperature range is extended:

- 5°C to 10°C (41°F to 50°F) and 35°C to 40°C (95°F to 104°F) at sea level with an altitude derating of 1.0°C per every 175 m (1.8°F per every 574 ft) above 900 m (2953 ft) to a maximum of 3048 m (10,000 ft).
- 40°C to 45°C (104°F to 113°F) at sea level with an altitude derating of 1.0°C per every 125 m (1.8°F per every 410 ft) above 900 m (2953 ft) to a maximum of 3048 m (10,000 ft).

The approved hardware configurations for this system are listed on the [Hewlett Packard Enterprise website](#).

Mechanical specifications

Specification	Value
Height	8.75 cm (3.44 in)
Depth, SFF	72.70 cm (28.62 in)
Depth, LFF	73.25 cm (28.84 in)
Width	44.80 cm (17.64 in)
Weight, SFF minimum	16.00 kg (35.27 lbs)
Weight, SFF maximum	33.00 kg (72.75 lbs)
Weight, LFF minimum	18.00 kg (39.68 lbs)
Weight, LFF maximum	37.00 kg (81.57 lbs)

Rack rail specifications

Observe the following:

- Adjustable rail range is the distance between the front and rear rack posts.
- Minimum rail length is the distance from the front post to the rear of the rail.
- Total depth is the distance from the front post to the rear of the CMA.

Rail rail option	Adjustable rail range	Minimum rail length	Total depth with CMA
Rail option #3	60.96 cm - 91.81 cm (24 in - 36 in)	78.76 cm (31 in)	90.44 cm (35.61 in)

Power supply specifications

Depending on the installed options and the regional location where the server was purchased, the server can be configured with one of the following power supplies:

- [HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)
- [HPE 1000 W Flex Slot Titanium Hot-plug Power Supply](#)
- [HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)

For detailed power supply specifications, see the QuickSpecs on the Hewlett Packard Enterprise website (<https://www.hpe.com/info/proliant/powersupply>).

Subtopics

- [HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)
- [HPE 1000 W Flex Slot Titanium Hot-plug Power Supply](#)
- [HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply](#)

HPE 800 W Flex Slot Platinum Hot-plug Low Halogen Power Supply

Specification	Value
Input requirements	—
Rated input voltage	100 VAC to 127 VAC 200 VAC to 240 VAC 240 VDC for China only
Rated input frequency	50 Hz to 60 Hz Not applicable to 240 VDC
Rated input current	9.4 A at 100 VAC 4.5 A at 200 VAC 3.8 A at 240 VDC for China only
Maximum rated input power	940 W at 100 VAC 900 W at 200 VAC 897 W at 240 VDC for China only
BTUs per hour	3067 at 100 VAC 2958 at 200 VAC 2949 at 240 VAC for China only
Power supply output	—
Rated steady-state power	800 W at 100 VAC to 127 VAC input 800 W at 100 VAC to 240 VAC input 800 W at 240 VDC input for China only
Maximum peak power	800 W at 100 VAC to 127 VAC input 800 W at 100 VAC to 240 VAC input 800 W at 240 VDC input for China only

HPE 1000 W Flex Slot Titanium Hot-plug Power Supply

Specification	Value
Input requirements	—
Rated input voltage	100 VAC to 127 VAC 200 VAC to 240 VAC 240 VDC for China
Rated input frequency	50 Hz to 60 Hz
Rated input current	11.3 A at 100 VAC 6.1 A at 200 VAC
Maximum rated input power	1130 W at 100 VAC 1090 W at 200 VAC
BTUs per hour	3764 at 100 VAC 3629 at 200 VAC
Power supply output	—
Rated steady-state power	1000 W at 100 VAC to 127 VAC 1000 W at 200 VAC to 240 VAC input
Maximum peak power	1000 W at 100 VAC to 127 VAC 1000 W at 200 VAC to 240 VAC

HPE 1600 W Flex Slot Platinum Hot-plug Low Halogen Power Supply

Specification	Value
Input requirements	—
Rated input voltage	200 VAC to 240 VAC 240 VDC for China only
Rated input frequency	50 Hz to 60 Hz
Rated input current	8.7 A at 200 VAC 7.5 A at 230 VAC 7.2 A at 240 VDC
Maximum rated input power	1734 W at 200 VAC 1720 W at 240 VAC
BTUs per hour	5918 at 200 VAC 5891 at 230 VAC
Power supply output	—
Rated steady-state power	1600 W at 200 VAC to 240 VAC input 1600 W at 240 VDC input
Maximum peak power	1600 W for 1 ms (turbo mode) at 200 VAC to 240 VAC input

Hot-plug power supply calculations

For hot-plug power supply specifications and calculators to determine electrical and heat loading for the server, see the Hewlett Packard Enterprise Power Advisor website (<https://www.hpe.com/info/poweradvisor/online>).

Websites

General websites

Single Point of Connectivity Knowledge (SPOCK) Storage compatibility matrix

<https://www.hpe.com/storage/spock>

Storage white papers and analyst reports

<https://www.hpe.com/storage/whitepapers>

For additional websites, see [Support and other resources](#).

Storage websites

Support and other resources

Subtopics

[Accessing Hewlett Packard Enterprise Support](#)

[HPE product registration](#)

[Accessing updates](#)

[Remote support](#)

[Warranty information](#)

[Regulatory information](#)

[Documentation feedback](#)

Accessing Hewlett Packard Enterprise Support

- For live assistance, go to the Contact Hewlett Packard Enterprise Worldwide website:
<https://www.hpe.com/info/assistance>
- To access documentation and support services, go to the Hewlett Packard Enterprise Support Center website:
<https://www.hpe.com/support/hpesc>

Information to collect

- Technical support registration number (if applicable)
- Product name, model or version, and serial number
- Operating system name and version
- Firmware version

- Error messages
- Product-specific reports and logs
- Add-on products or components
- Third-party products or components

HPE product registration

To gain the full benefits of the Hewlett Packard Enterprise Support Center and your purchased support services, add your contracts and products to your account on the HPESC.

- When you add your contracts and products, you receive enhanced personalization, workspace alerts, insights through the dashboards, and easier management of your environment.
- You will also receive recommendations and tailored product knowledge to self-solve any issues, as well as streamlined case creation for faster time to resolution when you must create a case.

To learn how to add your contracts and products, see <https://www.hpe.com/info/add-products-contracts>.

Accessing updates

- Some software products provide a mechanism for accessing software updates through the product interface. Review your product documentation to identify the recommended software update method.

- To download product updates:

Hewlett Packard Enterprise Support Center

<https://www.hpe.com/support/hpesc>

My HPE Software Center

<https://www.hpe.com/software/hpesoftwarecenter>

- To subscribe to eNewsletters and alerts:

<https://www.hpe.com/support/e-updates>

- To view and update your entitlements, and to link your contracts and warranties with your profile, go to the Hewlett Packard Enterprise Support Center More Information on Access to Support Materials page:

<https://www.hpe.com/support/AccessToSupportMaterials>



IMPORTANT

Access to some updates might require product entitlement when accessed through the Hewlett Packard Enterprise Support Center. You must have an HPE Account set up with relevant entitlements.

Remote support

Remote support is available with supported devices as part of your warranty or contractual support agreement. It provides intelligent event diagnosis, and automatic, secure submission of hardware event notifications to Hewlett Packard Enterprise, which initiates a fast and accurate resolution based on the service level of your product. Hewlett Packard Enterprise strongly recommends that you register your

device for remote support.

If your product includes additional remote support details, use search to locate that information.

HPE Get Connected

<https://www.hpe.com/services/getconnected>

HPE Tech Care Service

<https://www.hpe.com/services/techcare>

HPE Complete Care Service

<https://www.hpe.com/services/completecure>

Warranty information

To view the warranty information for your product, see the [warranty check tool](#).

Regulatory information

To view the regulatory information for your product, view the Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products, available at the Hewlett Packard Enterprise Support Center:

<https://www.hpe.com/support/Safety-Compliance-EnterpriseProducts>

Additional regulatory information

Hewlett Packard Enterprise is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No 1907/2006 of the European Parliament and the Council). A chemical information report for this product can be found at:

<https://www.hpe.com/info/reach>

For Hewlett Packard Enterprise product environmental and safety information and compliance data, including RoHS and REACH, see:

<https://www.hpe.com/info/ecodata>

For Hewlett Packard Enterprise environmental information, including company programs, product recycling, and energy efficiency, see:

<https://www.hpe.com/info/environment>

Documentation feedback

Hewlett Packard Enterprise is committed to providing documentation that meets your needs. To help us improve the documentation, use the Feedback button and icons (at the bottom of an opened document) on the Hewlett Packard Enterprise Support Center portal (<https://www.hpe.com/support/hpesc>) to send any errors, suggestions, or comments. This process captures all document information.