



Maintenance and Service Guide

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2023 HP Development Company, L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Chrome is a trademark of Google LLC. The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Intel, Core, and Iris are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. NVMe is a registered trademark of NVM Express. PCIe is a US registered trademark and/or service mark of PCI-SIG. Realtek™ is a trademark of Realtek Semiconductor Corporation. microSD is a trademark or registered trademarks of SD-3C LLC. USB Type-C and USB-C are registered trademarks of USB Implementers Forum. DisplayPort™ and the DisplayPort™ logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: March 2023

Document Part Number: N36283-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.microsoft.com>.

If your product ships with Windows in S

Mode: Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Table of contents

1 Product description.....	1
2 Components.....	3
Locating hardware	3
Locating software.....	3
Right side	3
Left side.....	4
Display	5
Low blue light mode (select products only).....	5
Wake-on-voice (select products only).....	6
Keyboard area	7
Touchpad	7
Touchpad settings	7
Adjusting touchpad settings.....	7
Turning on the touchpad	7
Touchpad components	7
Lights	8
Power button and fingerprint reader	9
Special keys	11
HP Hubs Launcher (select products only)	12
Bottom	12
Labels	13
3 Illustrated parts catalog	16
Computer major components.....	16
Display assembly subcomponents.....	19
Miscellaneous parts.....	20
4 Removal and replacement procedures preliminary requirements.....	21
Tools required	21
Service considerations.....	21
Plastic parts.....	21
Cables and connectors.....	21
Drive handling	21

Electrostatic discharge information.....	22
Generating static electricity.....	22
Preventing electrostatic damage to equipment.....	23
Personal grounding methods and equipment.....	23
Grounding the work area.....	24
Recommended materials and equipment.....	24
Cleaning your computer.....	25
Enabling HP Easy Clean (select products only).....	25
Removing dirt and debris from your computer.....	25
Cleaning your computer with a disinfectant.....	26
Caring for wood veneer (select products only).....	27
Packaging and transporting guidelines.....	27
Accessing support information.....	28
5 Removal and replacement procedures for authorized service provider parts.....	30
Component replacement procedures.....	30
Preparation for disassembly.....	30
Bottom cover.....	30
Battery.....	31
Speakers.....	32
Power connector cable.....	33
WLAN module.....	34
Solid-state drive.....	36
Fan.....	38
Display assembly.....	38
System board.....	45
Heat sink.....	47
Fingerprint reader.....	49
Fingerprint reader cable.....	50
Touchpad cable.....	50
Touchpad.....	51
Audio jack board cable.....	52
Audio jack board.....	53
Top cover with keyboard.....	54
6 Using Setup Utility (BIOS).....	55
Starting Setup Utility (BIOS).....	55
Updating Setup Utility (BIOS).....	55
Determining the BIOS version.....	55
Preparing for a BIOS update.....	56
Downloading a BIOS update.....	56
Installing a BIOS update.....	57
7 Backing up, restoring, and recovering.....	58
Backing up information and creating recovery media.....	58
Using Windows tools for backing up.....	58
Using the HP Cloud Recovery Download Tool to create recovery media (select products only).....	58
Restoring and recovering your system.....	59

Creating a system restore	59
Restoring and recovery methods	59
Recovering using HP Recovery media	59
Changing the computer boot order	60
Using HP Sure Recover (select products only).....	60
8 Using HP PC Hardware Diagnostics	61
Using HP PC Hardware Diagnostics Windows (select products only)	61
Using an HP PC Hardware Diagnostics Windows hardware failure ID code.....	61
Accessing HP PC Hardware Diagnostics Windows	61
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant.....	61
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only).....	62
Downloading HP PC Hardware Diagnostics Windows.....	62
Downloading the latest HP PC Hardware Diagnostics Windows version from HP.....	62
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store.....	62
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	63
Installing HP PC Hardware Diagnostics Windows.....	63
Using HP PC Hardware Diagnostics UEFI	63
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code.....	63
Starting HP PC Hardware Diagnostics UEFI	63
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only).....	64
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive.....	64
Downloading the latest HP PC Hardware Diagnostics UEFI version	64
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	65
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only).....	65
Downloading Remote HP PC Hardware Diagnostics UEFI.....	65
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	65
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number.....	65
Customizing Remote HP PC Hardware Diagnostics UEFI settings.....	66
9 Specifications	67
Computer specifications.....	67
Display specifications.....	68
Solid-state drive specifications	68
10 Statement of memory volatility.....	70
Current BIOS steps	70
Nonvolatile memory usage	72
Questions and answers	73
Using HP Sure Start (select products only).....	74
11 Power cord set requirements.....	75
Requirements for all countries	75
Requirements for specific countries and regions.....	75

12 Recycling.....78

Index.....79

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP ENVY x360 14 inch 2-in-1 Laptop PC
Processor	Intel™ Core® i7-1355U 1.7 GHz processor (10 cores, 12 MB L3 cache, 15 W)
	Intel Core i5-1335U 1.3 GHz processor (10 cores, 12 MB L3 cache, 15 W)
Chipset	Intel integrated soldered-on-chip (SoC)
Graphics	Intel Iris® Xe
Display	35.6 cm (14.0 in), liquid crystal display (LCD), full high-definition (FHD) (1920 × 1080), antiglare, light-emitting diode (LED), ultra wide viewing area (UWVA), NTSC, 45% character generation (CG), embedded DisplayPort® (eDP) 1.2 without panel self-refresh (PSR), low power (LP) touchscreen display panel with bent narrow bezel; typical brightness: 250 nits
Media card reader	HP MultiFormat microSD®
Memory	Integrated system memory supporting 8 GB (only on computer models equipped with an Intel Core i5-1335U processor) or 16 GB (only on computer models equipped with an Intel Core i7-1355U processor) of 3200-double data rate 4 (DDR4) v. 1.2 RAM
Storage: solid-state drive	Support for 1 TB, 512 GB, or 256 GB peripheral component interconnect express (PCIe®), nonvolatile memory express (NVMe®), value solid-state drive system storage
	Support for 256 GB PCIe-4 × 4, NVMe, solid-state drive with triple level cell (TLC) system storage
Audio and video	Support for the following: • Alexa • Bang and Olufsen • Dual speakers • Far Field Cortana • HP Audio Boost • Speaker Swap
	Support for integrated, USB 2.0, fixed, 5 mp, narrow field of vision (NFOV) webcam
	Dual-array microphone integrated with webcam

Table 1-1 Product components and their descriptions (continued)

Category	Description
Wireless	Wireless Local Area Network (WLAN)
	Intel AX211 Wi-Fi® 6E + Bluetooth® 5.3 M.2 2230 160 MHz CNVi worldwide (WW) WLAN module
	Realtek™ 8852CE Wi-Fi 6E + Bluetooth 5.3 M.2 2230 PCI-e + USB WW WLAN module
Ports	Hot plug/unplug and autodetect for correct output to wide-aspect vs. standard-aspect video
	Audio-out (headphone)/Audio-in (microphone) combo jack
	High-definition multimedia interface (HDMI®) port
	Power connector
	USB 5 Gbps port
	USB Type-C® power connector and 5 Gbps port with DisplayPort™ output
Keyboard/pointing devices	Keyboard: Island-style, backlit, standard notebook keyboard with touchpad in natural silver finish
	Touchpad:
	Touchpad with image sensor
	Multitouch gestures enabled
	Precision touchpad support
Digital pen	Taps enabled as default
	HP slim rechargeable digital pen
Power requirements	Battery: 3 cell, 43 Whr, Long Life, polymer battery
	AC adapter: 65 W AC adapter (non-PFC, straight, 3-prong, 4.5 mm)
	Power cord: C5, 1.0 m (3.3 ft), conventional with sticker and C5, 1.0 m (3.3 ft), premium with sticker
Security	Fingerprint reader
	Trusted Platform Module (TPM) 2.0 firmware
Sensors	Accelerometer and Accelerometer + Gyroscope
Operating system	FreeDOS
	Windows® 11 Home
	Windows 11 Home 64 Plus
	Windows 11 Pro
	Windows 11 Pro (preinstalled with Windows 10 Pro Downgrade)
	Windows 11 Pro (Windows 11 Enterprise or Windows 10 Enterprise available with a Volume Licensing Agreement)
	Windows 11 Pro Education
Serviceability	End user replaceable parts: AC adapter and power cord

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Locating hardware

To find out what hardware is installed on your computer, select the **Search** icon in the taskbar, type `device manager` in the search box, and then select the **Device Manager** app. For information about system hardware components and the system BIOS version number, press `fn+esc` (select products only).

Locating software

To find out what software is installed on your computer, right-click the **Start** button, and then select **Apps and Features**.

Right side

Identify the components on the right side of the computer.

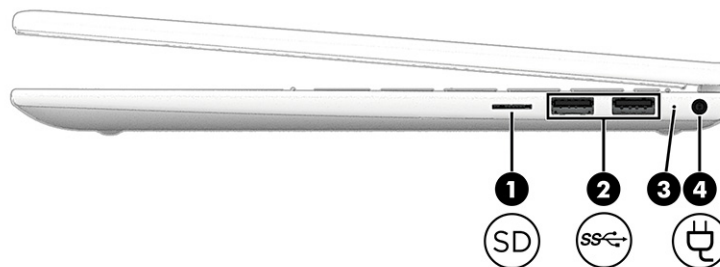


Table 2-1 Right-side components and their descriptions

Component	Description
(1)  microSD™ memory card reader	Reads optional memory cards that enable you to store, manage, share, or access information. To insert a card: 1. Hold the card label-side up, with connectors facing the computer. 2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. To remove a card: ■ Press in on the card, and then remove it from the memory card reader.
(2)  USB 5 Gbps ports (2)	Connect USB devices, provide high-speed data transfer, and (for select products) charge small devices (such as a smartphone) when the computer is on or in Sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(3) AC adapter and battery light	• White: The AC adapter is connected and the battery is fully charged. • Blinking amber: The AC adapter is disconnected and the battery has reached a low battery level. • Amber: The AC adapter is connected and the battery is charging. • Off: The battery is not charging.
(4)  Power connector	Connects an AC adapter.

Left side

Identify the components on the left side of the computer.

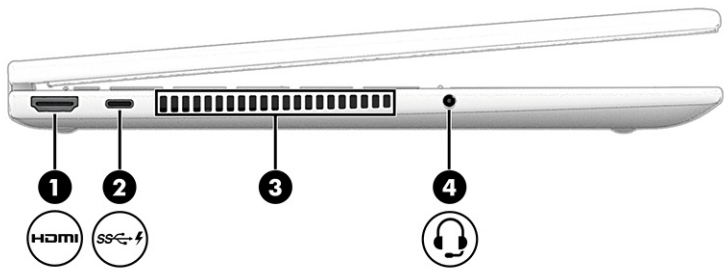


Table 2-2 Left-side components and their descriptions

Component	Description
(1)  HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device.
(2)  USB Type-C power connector and 5 Gbps port with sleep and charge	Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort™ output.
(3) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4)  Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide: ■ Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

Wake-on-voice (select products only)

Use the wake-on-voice feature to bring the computer out of the Sleep state quickly.

To access the wake-on-voice settings, follow these steps:

1. Select the **Search** icon in the taskbar, type `XiaoWei` in the search box, and then select **XiaoWei**.
2. When the tool opens, scan the QR code with your mobile device, which takes you to the settings page, where you can select your wake-on-voice features.
3. Follow the on-screen instructions.



NOTE: Allow the XiaoWei app to continue running on the computer.

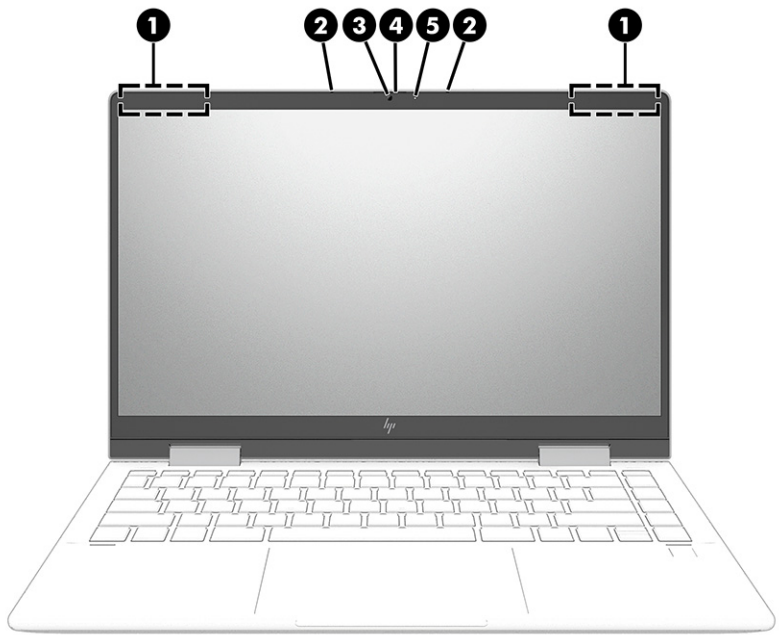


Table 2-3 Display components and their descriptions

Component		Description
(1)	WLAN antennas* (2)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2)	Internal microphones (2)	Record sound.
(3)	Camera	Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(4)	Camera privacy cover	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens.
(5)	Camera light	On: The camera is in use.

Table 2-3 Display components and their descriptions (continued)

Component	Description
*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the <i>Regulatory, Safety, and Environmental Notices</i> that applies to your country or region. To access this guide: ■ Select the Search icon in the taskbar, type <code>HP Documentation</code> in the search box, and then select HP Documentation.	

Keyboard area

Keyboards can vary by language.

Touchpad

The touchpad settings and components are described here.

Touchpad settings

You learn how to adjust the touchpad settings and components here.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Using an external mouse, click the **Touchpad** button.

If you are not using an external mouse, press the `Tab` key repeatedly until the pointer rests on the **touchpad** button. Then press the `spacebar` to select the button.

Touchpad components

Identify the touchpad components.

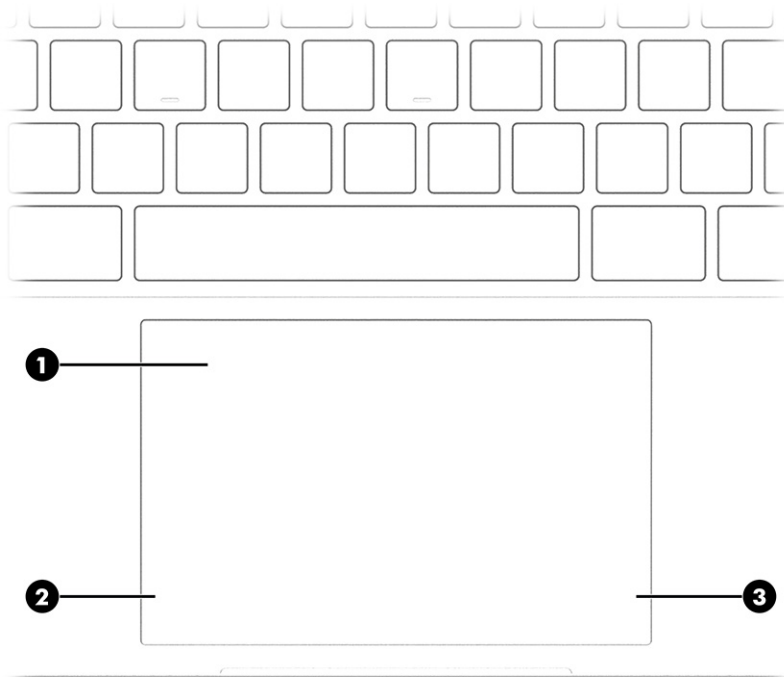


Table 2-4 Touchpad components and their descriptions

Component		Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left touchpad button	Functions like the left button on an external mouse.
(3)	Right touchpad button	Functions like the right button on an external mouse.

Lights

Identify the lights on the computer.


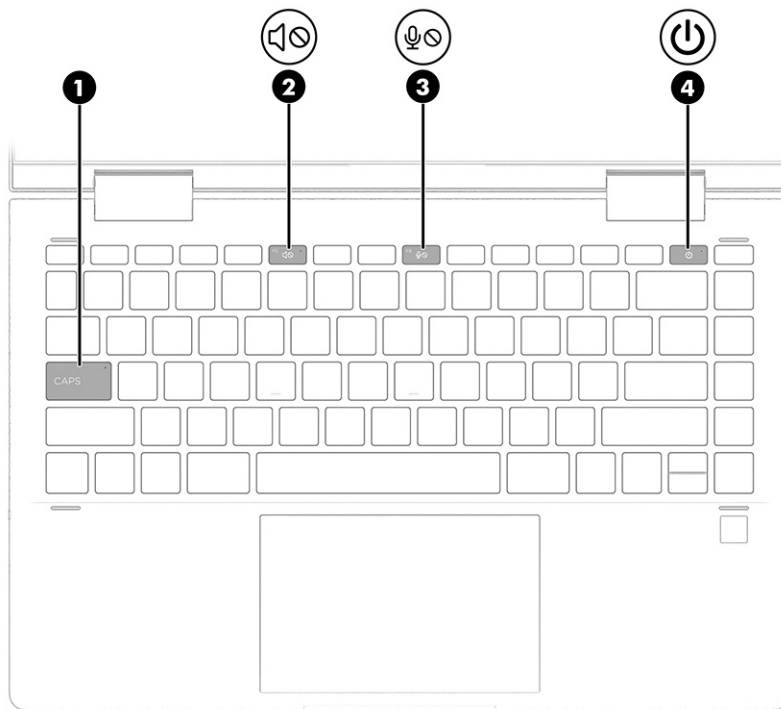


Table 2-5 Lights and their descriptions

Component		Description
(1)	Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)	 Mute light	- On: Computer sound is off. - Off: Computer sound is on.
(3)	 Microphone mute light	- On: Microphone is off. - Off: Microphone is on.
(4)	 Power light	- On: The computer is on. - Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. - Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.

Power button and fingerprint reader

Identify the power button and fingerprint reader.

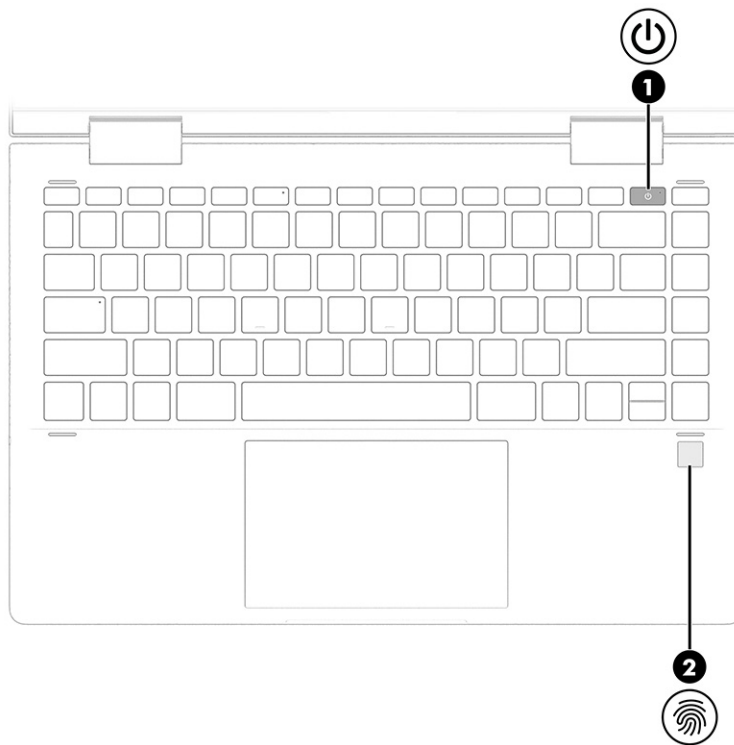

Fingerprint readers, which enable a fingerprint logon, can be located on the touchpad, on a side panel of the computer, or on the top cover below the keyboard.

Table 2-6 Power button and fingerprint reader and their descriptions

Component	Description
(1)  Power button	• When the computer is off, press the button briefly to turn on the computer. • When the computer is on, press the button briefly to initiate Sleep. • When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). • When the computer is in Hibernation, press the button briefly to exit Hibernation. IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information. If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer. To learn more about your power and sleep settings: ■ Right-click the Power icon , and then select Power and sleep settings.

Table 2-6 Power button and fingerprint reader and their descriptions (continued)

Component	Description
(2)  Fingerprint reader	Allows a fingerprint logon to Windows, instead of a password logon. ■ Touch your finger to the fingerprint reader. IMPORTANT: To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.

Special keys

Identify the special keys.

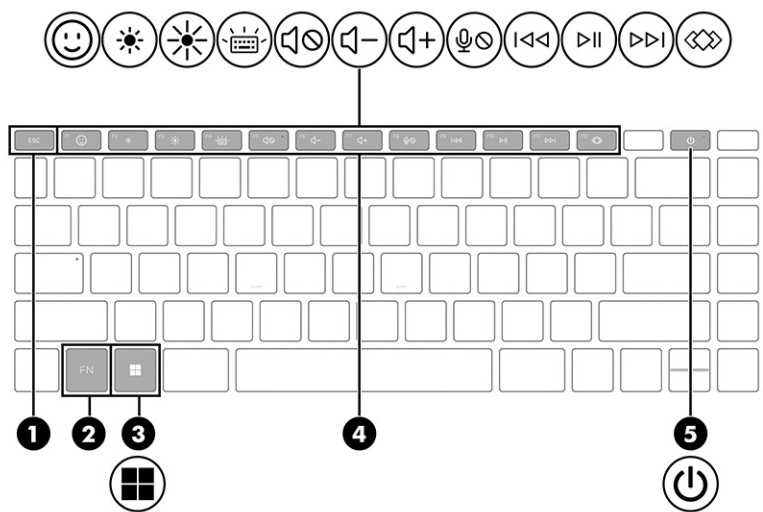


Table 2-7 Special keys and their descriptions

Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes specific functions when pressed in combination with another key.
(3)  Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4) Action keys	Execute frequently used system functions as defined by the icon symbols on f1 through f12 function keys.

Table 2-7 Special keys and their descriptions (continued)

Component		Description
(5)	 Power button	- When the computer is off, press the button briefly to turn on the computer. - When the computer is on, press the button briefly to initiate Sleep. - When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). - When the computer is in Hibernation, press the button briefly to exit Hibernation. IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information. If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer. To learn more about your power and sleep settings: - Right-click the Power icon , and then select Power and sleep settings.

HP Hubs Launcher (select products only)

Press or hold **f12** to open the HP Hubs Launcher. From the HP Hubs Launcher, you can open HP apps such as HP Command Center, OMEN Gaming Hub, and myHP.

- Press **f12** briefly to open the HP Hubs Launcher. Then use the mouse pointer to select an app to open.

-or-

Hold **f12** to change the selected apps and then automatically open them.

Depending on your model, the following apps can be included in the HP Hubs Launcher:

- HP Command Center, where you can select **System Control** to adjust the temperature or cooling preference on your computer.
- OMEN Gaming Hub, where you can customize your computer for your specific gaming needs.
- myHP, where you can learn more about your PC and the utilities that HP offers.

Bottom

Identify the bottom components.

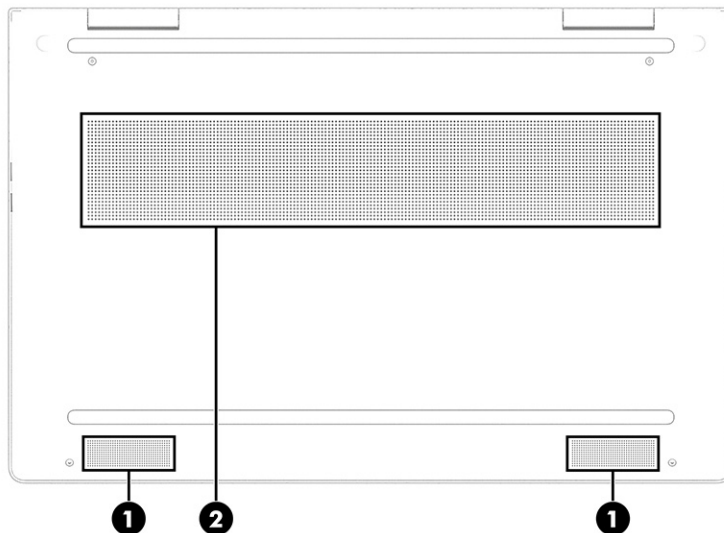


Table 2-8 Bottom components and their descriptions

Component		Description
(1)	Speakers (2)	Produce sound.
(2)	Vent	Enables airflow to cool internal components.

NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.



IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you may be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the following examples. Refer to the illustration that most closely matches the service label on your computer.

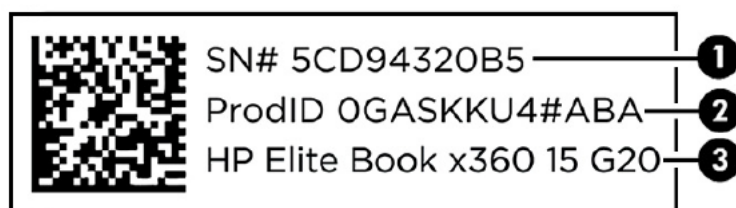


Table 2-9 Service label components and their descriptions

Component	
(1)	Serial number
(2)	Product ID
(3)	HP product name

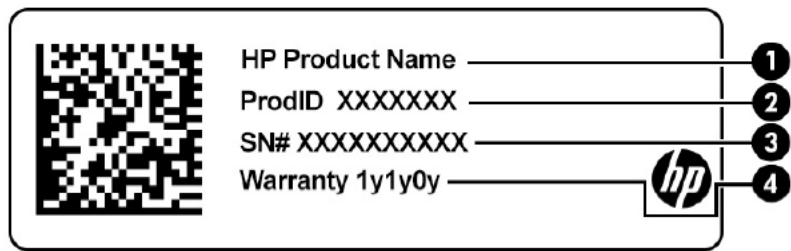


Table 2-10 Service label components and their descriptions

Component	
(1)	HP product name
(2)	Product ID
(3)	Serial number
(4)	Warranty period

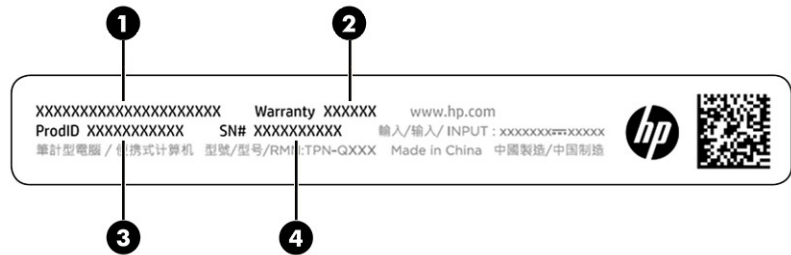


Table 2-11 Service label components and their descriptions

Component	
(1)	HP product name
(2)	Warranty period
(3)	Product ID
(4)	Serial number

- Regulatory labels—Provide regulatory information about the computer.

- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Use this table to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.



NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.



NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

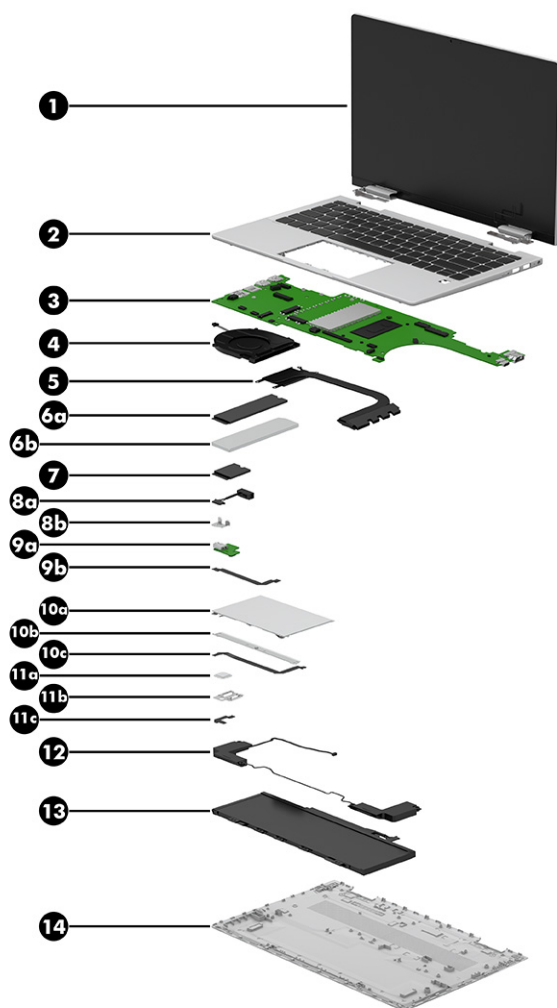


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly: Display spare parts are available as subcomponents, not as whole units. Display subcomponent spare parts are available. For spare part information, see Preparation for disassembly on page 30 .	
(2)	Top cover with keyboard with backlight in natural silver finish (includes backlight cable and keyboard cable):	
	For use in French Canada	N41026-DB1
	For use in the United States	N41026-001
(3)	System board (includes integrated processor, UMA graphics subsystem memory, integrated system memory, and replacement thermal material):	
	Equipped with an Intel Core i7-1355U 1.7 GHz processor (10 cores, 12 MB L3 cache, 15 W), 16 GB of system memory, and the Windows 11 operating system	N41024-601
	Equipped with an Intel Core i5-1335U 1.3 GHz processor (10 cores, 12 MB L3 cache, 15 W), 8 GB of system memory, and the Windows 11 operating system	N41023-601
(4)	Fan (includes captive screws and cable)	N41019-001
(5)	Heat sink (includes captive screws and replacement thermal material)	N41020-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(6a)	Solid-state drive: NOTE: The solid-state drive spare part kit does not include the solid-state drive shield. The solid-state drive shield is not available as a spare part.	
	1 TB, M.2 2280, PCIe-NVMe, value solid-state drive	L85370-005
	512 GB, M.2 2280, PCIe, NVMe, value solid-state drive	L85364-005
	512 GB, 2280, PCIe-4 × 4, NVMe, solid-state drive with TLC	M17436-005
(6b)	Solid-state drive shield: The solid-state drive shield is not available as a spare part. Solid-state drive thermal pad (not illustrated)	N41048-001
(7)	WLAN module: NOTE: The WLAN module spare part kit does not include the WLAN module antenna cover. The WLAN module antenna cover is available using spare part number N45022-001.	
	Intel AX211 Wi-Fi 6E + Bluetooth 5.3 M.2 2230 160 MHz CNVi worldwide (WW) WLAN module	M53366-005
	Realtek 8852CE Wi-Fi 6E + Bluetooth 5.3 M.2 2230 PCI-e+USB WW WLAN module	M19618-005
	WLAN module antenna cover (not illustrated)	N41046-001
(8a)	Power connector cable (includes cable and connector) NOTE: The power connector cable spare part kit does not include the power connector cable bracket. The power connector cable bracket is not available as a spare part.	M45022-001
(8b)	Power connector cable bracket: The power connector cable bracket is not available as a spare part.	
(9a)	Audio jack board (includes audio jack) NOTE: The audio jack board spare part kit does not include the audio jack board cable. The audio jack board cable is available using spare part number N41012-001.	N41016-001
(9b)	Audio jack board cable: The audio jack board cable is available using spare part number N41012-001 (includes double-sided tape).	
(10a)	Touchpad NOTE: The touchpad spare part kit does not include the touchpad bracket or touchpad cable. The touchpad bracket is not available as a spare part. The touchpad cable is available using spare part part number N09466-001.	N41017-001
(10b)	Touchpad bracket: The touchpad bracket is not available as a spare part.	
(10c)	Touchpad cable: The touchpad cable is available using spare part number N09466-001 (includes double-sided tape).	
(11a)	Fingerprint reader NOTE: The fingerprint reader spare part kit does not include the fingerprint reader bracket or fingerprint readerfingerprint reader cable. The fingerprint reader bracket is not available as a spare part. The fingerprint reader cable is available using spare part part number N41013-001.	N09455-001
(11b)	Fingerprint reader bracket: The fingerprint reader bracket is not available as a spare part.	
(11c)	Fingerprint reader cable: The fingerprint reader cable is available using spare part number N41013-001 (includes double-sided tape).	
(12)	Speakers (includes left and right speakers, cables, and four rubber isolators)	N41021-001
(13)	3 cell, 43 Whr, LI-Ion battery (includes cable)	M24648-011

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(14)	Bottom cover	N41011-001

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

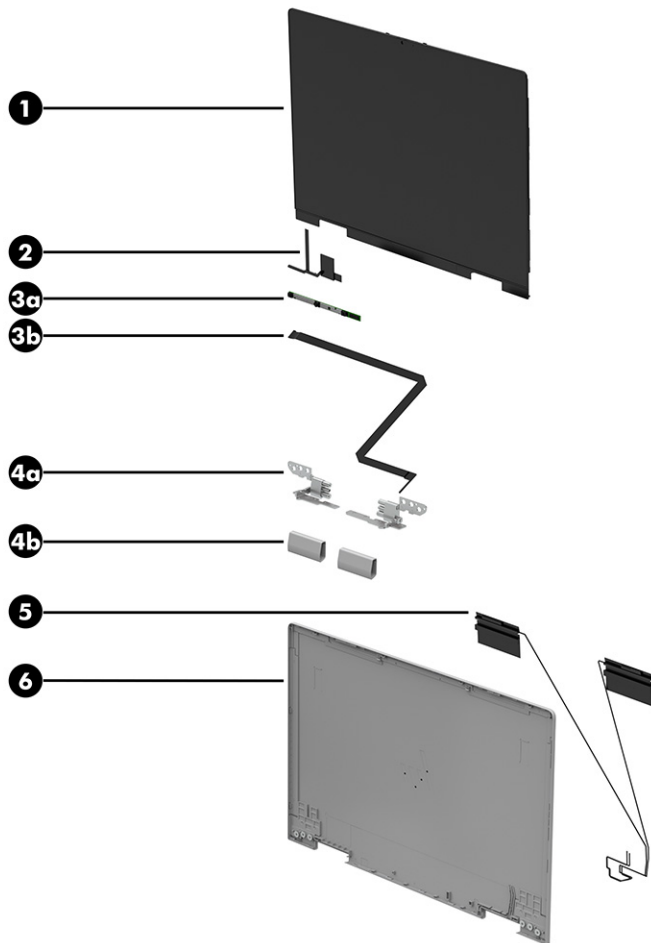


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Display Panel Kit (35.6 cm [14.0 in], FHD, antiglare, touchscreen display panel; typical brightness: 250 nits; includes display bezel and display panel)	N41025-001
	Display Adhesive Kit (not illustrated)	N09481-001
(2)	Display panel cable	N09458-001
(3a)	Camera module (includes double-sided tape)	N09471-001
(3b)	Camera module cable (includes double-sided tape)	N09460-001

Table 3-2 Display component descriptions and part numbers (continued)

Item	Component	Spare part number
(4a)	Hinges (left and right)	N41014-001
(4b)	Hinge caps (left and right)	N41015-001
(5)	WLAN antenna (include cables and transceivers and (includes double-sided tape))	N41009-001
(6)	Display back cover (includes antenna)	N41010-001

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-3 Miscellaneous part descriptions and part numbers

Component	Spare part number
65 W AC adapter (non-PFC, straight, 3-prong, 4.5 mm)	710412-001
Adapter:	
HP HDMI-to-VGA adapter	701943-001
HP USB Type-C-to-HDMI 2.0 adapter	935325-001
HP USB Type-C-to-USB 3.0 adapter	814618-001
HP USB Type-C-to-VGA adapter	831751-001
HP USB external DVD-RW Drive	747080-001
Hub:	
HP Elite USB Type-C MultiPort hub	L39572-001
HP USB Type-C-to-USB-A hub	916838-001
Tilt G1 pen in natural silver finish (includes cable)	N44378-001
Power cord (C5, 1.0 m [3.3 ft], conventional with sticker) for use in North America	L19367-001
Screw Kit	N41022-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

Handle cables with extreme care to avoid damage.



IMPORTANT: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.



IMPORTANT: Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
 - Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 23](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-

Generating static electricity

Follow these static electricity guidelines:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	Relative humidity		
	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V
Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.			



NOTE: As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions:

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages

- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.

1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - or -
 - Select the **HP Easy Clean** icon in the taskbar.
 - or -
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 25](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 26](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 27](#).

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.



IMPORTANT: To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 26](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 25](#), [Caring for wood veneer \(select products only\) on page 27](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.



CAUTION: To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.



CAUTION: Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.



IMPORTANT: To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 25](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 26](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.

- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

To find the HP support that you need, use this information.

Table 4-3 Support information locations

Service consideration	Path to access information
Records of reported failure incidents stored on the computer	Windows®: Preoperating system failures are logged in the BIOS Event Log. To view the BIOS Event Log: 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility. 3. Press f10 to enter the BIOS setup. 4. (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. - or - (On consumer products) Under the Main tab, select System Log. Post-operating system failures are logged in the Event Viewer. 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. Chrome™: 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>.
Technical bulletins	To locate technical bulletins: 1. Go to www.hp.com. 2. Place the cursor over Problem solving to display more options. 3. Select Support & Troubleshooting. 4. Type the serial number, product number, or product name to go to the product support page. 5. Select Advisories to view technical bulletins.

Table 4-3 Support information locations (continued)

Service consideration	Path to access information
Repair professionals	To locate repair professionals: 1. Go to www.hp.com. 2. Place the cursor over Support resources to display more options. 3. Select Authorized service providers.
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: 1. Go to http://www.hp.com/go/techcenter/pcdiags. 2. Select Get Support. 3. Near the bottom of the window, select Notebook PCs, and then select your location.

5 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

Component replacement procedures

To remove and replace computer components, use the procedures described in this section.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures:

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 21](#).

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover and rubber feet, use this procedure and illustration.


Table 5-1 Bottom cover description and part number

Description	Spare part number
Bottom cover	N41011-001

Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).

Remove the bottom cover:

1. Close the computer and rest it upside down on a flat work surface with the front toward you.
2. Remove the four Torx6 M2.0 × 6.3 screws (1) that secure the bottom cover to the computer.
3. Insert a thin, plastic tool, such as a case utility tool (2), into the display hinge areas and release the rear edge of the bottom cover from the computer.
4. Slide the rear edge of the bottom cover (3) up and away from the computer, and then remove the bottom cover.

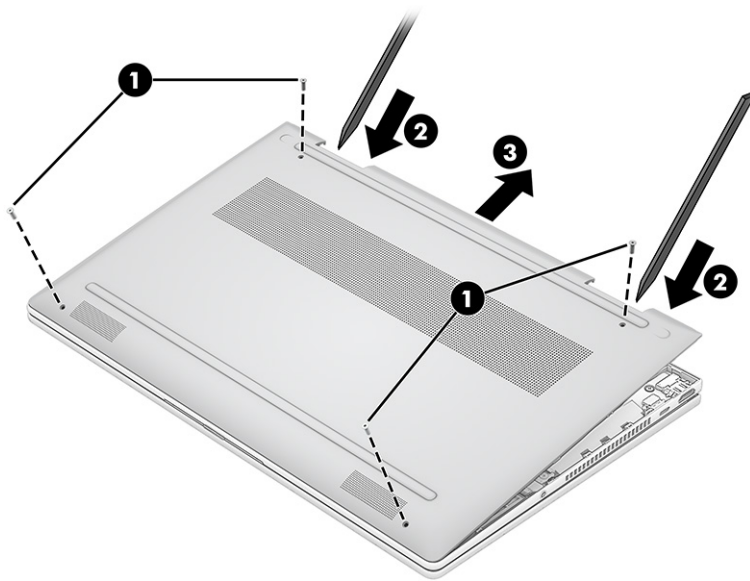

To replace the bottom cover, reverse the removal procedures.

Battery

To remove the battery, use this procedure and illustration.

Table 5-2 Battery description and part number

Description	Spare part number
3 cell, 43 Whr, Li-ion battery (includes cable)	M24648-011

⚠ WARNING! To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery. They can cause a short inside the battery, which can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.

- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).

⚠ WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

📌 IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Disconnect the battery cable **(1)** from the system board.
2. Remove the four Phillips M2.0 × 3.2 screws **(2)** that secure the battery to the computer.
3. Release the speaker cable from the retention clips **(3)** that are built in to the front edge of the battery.
4. Remove the the battery **(4)**.

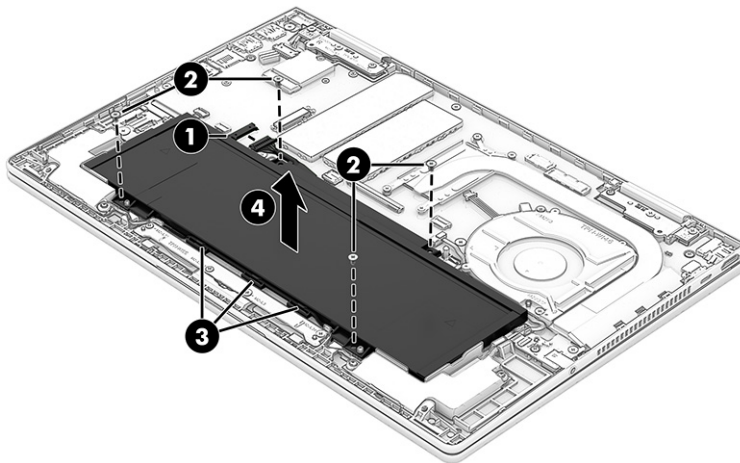

To replace the battery, reverse the removal procedures.

Speakers

To remove the speakers, use this procedure and illustration.

Table 5-3 Speaker description and part number

Description	Spare part number
Speakers (includes left and right speakers, cables, and four rubber isolators)	N41021-001


Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 31](#)).

Remove the speakers:

1. Disconnect the speaker cable (1) from the system board.
2. Release the speaker cables from the retention clips (2) that are built into the battery and the computer.
3. Remove the speakers (3) from the computer.

 **NOTE:** When removing the speakers, make note of the location of the four rubber isolator (4). The absence of or damage to these isolators can result in degraded speaker performance.

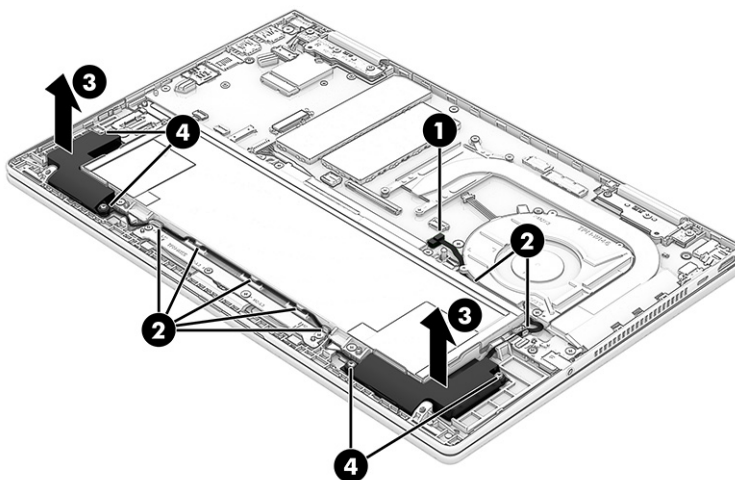

To replace the speakers, reverse the removal procedures.

Power connector cable

To remove the power connector cable, use this procedure and illustration.

Table 5-4 Power connector cable description and part number


Description	Spare part number
Power connector cable (includes cable and connector):	N45022-001
NOTE: The power connector cable spare part kit does not include the power connector cable bracket. The power connector cable bracket is not available as a spare part.	

Before removing the power connector cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 31](#)).

Remove the power connector cable:

1. Disconnect the power connector cable (1) from the system board.
 2. Remove the Phillips M2.0 × 3.7 screw (2) that secures the power connector cable and bracket to the computer.
 3. Remove the power connector cable bracket (3).
- The power connector cable bracket is not available as a spare part.
4. Remove the power connector cable (4) from the computer.

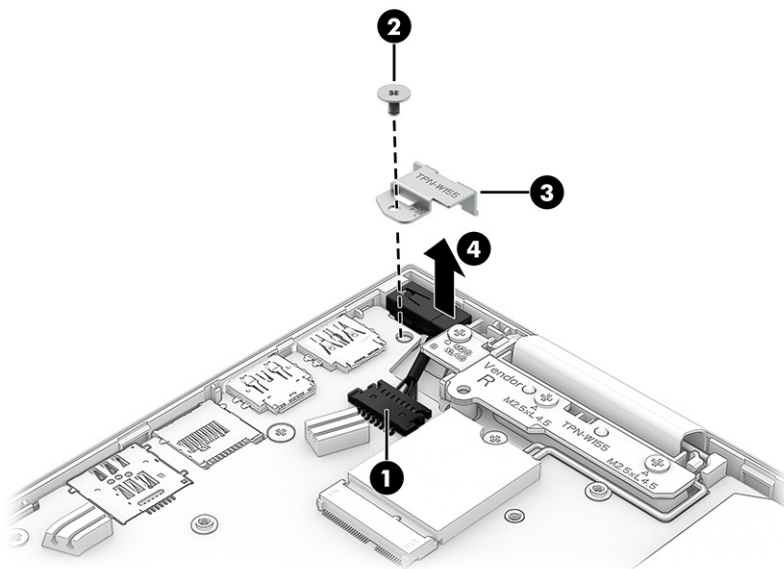

To replace the power connector cable and bracket, reverse the removal procedures.

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 5-5 WLAN module descriptions and part numbers

Description	Spare part number
Intel AX211 Wi-Fi 6E + Bluetooth 5.3 M.2 2230 160 MHz CNVi worldwide (WW) WLAN module	M53366-005
Realtek 8852CE Wi-Fi 6E + Bluetooth 5.3 M.2 2230 PCI-e+USB WW WLAN module	M19618-005

IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless

devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 31](#)).

Remove the WLAN module:

1. Remove the shield material **(1)** that covers the WLAN module.
2. Remove the WLAN module antenna cover **(2)** that secures the WLAN antenna cables to the WLAN module.

The WLAN module antenna cover is available using spare part number N41046-001.


3. Carefully disconnect the two WLAN antenna cables **(3)** from the terminals on the WLAN module.

Computer models have either one or two WLAN antennas. On models with two antennas, the #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.


4. Remove the Phillips M2.0 × 3.2 screw **(4)** that secures the WLAN module to the system board.

The WLAN module tilts up.

5. Remove the WLAN module **(5)** by pulling the module away from the slot at an angle.

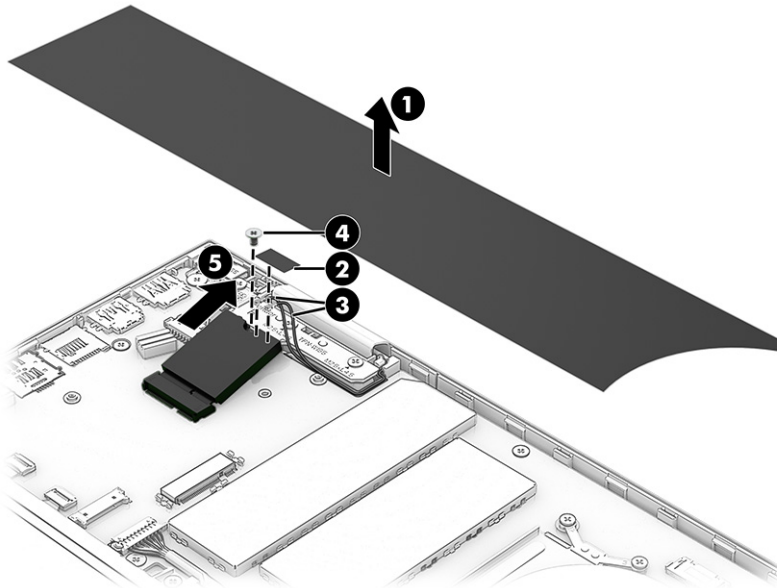

6. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

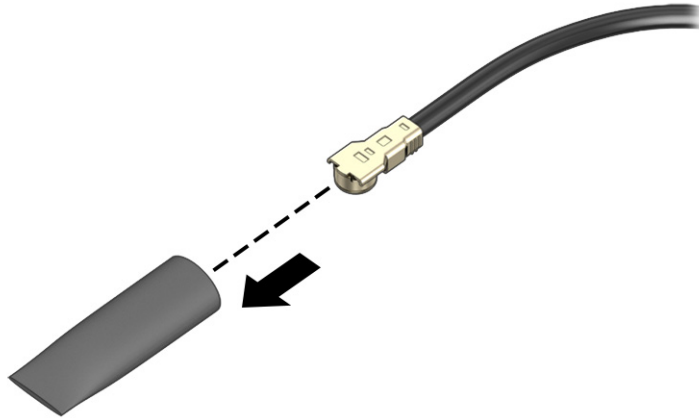

To replace the WLAN module, reverse the removal procedures.



NOTE: The WLAN module is designed with a notch to prevent incorrect insertion.

Solid-state drive

To remove the solid-state drive, use this procedure and illustration.

Table 5-6 Solid-state drive descriptions and part numbers

Description	Spare part number
1 TB, M.2 2280, PCIe-NVMe, value solid-state drive	L85370-005
512 GB, M.2 2280, PCIe, NVMe, value solid-state drive	L85364-005
512 GB, 2280, PCIe-4 × 4, NVMe, solid-state drive with TLC	M17436-005

Before removing the solid-state drive, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 31](#)).

Remove the solid-state drive:

1. Remove the shield material **(1)** that covers the solid-state drive and solid-state drive shield.
2. Remove the solid-state drive shield **(2)** from the system board.


The solid-state drive shield is not available as a spare part.

3. Remove the Phillips M2.0 × 3.2 screw (3) that secures the solid-state drive to the system board.
The solid-state drive tilts up.
4. Slide the solid-state drive (4) away from the slot and remove it.

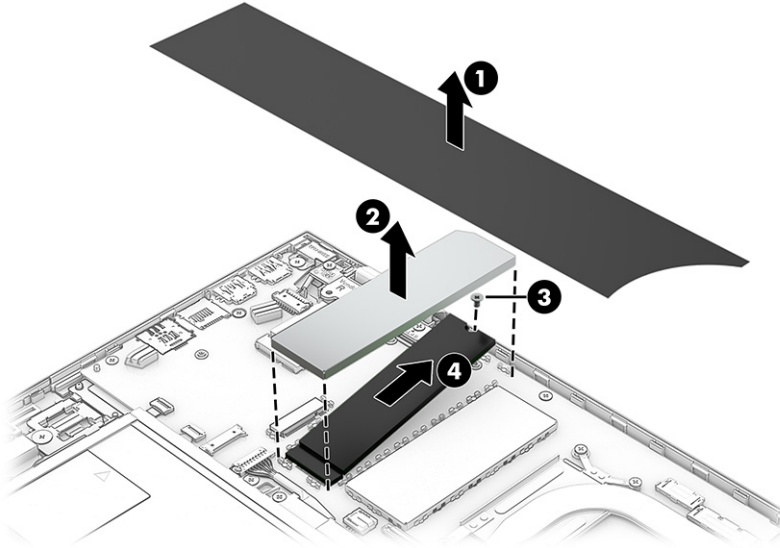

5. Thoroughly inspect and clean (if necessary) the thermal pad material from the surfaces of the solid-state drive and the solid-state drive shield each time the solid-state drive is removed. Replacement solid-state drive thermal pad material is available using spare part number N41048-001. The following illustrations show the replacement thermal material locations.

A thermal pad is used on the solid-state drive (1) and on the solid-state drive shield (2).

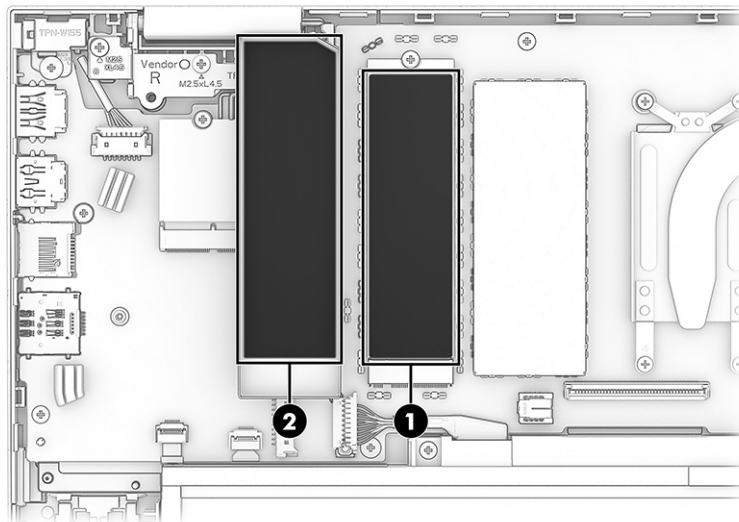

To replace the solid-state drive, reverse the removal procedures.

Fan

To remove the fan, use this procedure and illustration.

Table 5-7 Fan description and part number


Description	Spare part number
Fan (includes cable)	N41019-001

Before removing the fan, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 31](#)).

Remove the fan:

1. Remove the shield material **(1)** that covers the fan.
2. Disconnect the fan cable **(2)** from the system board.
3. Remove the two Phillips M2.0 × 3.2 screws **(3)** that secure the fan to the computer.
4. Remove the fan **(4)**.

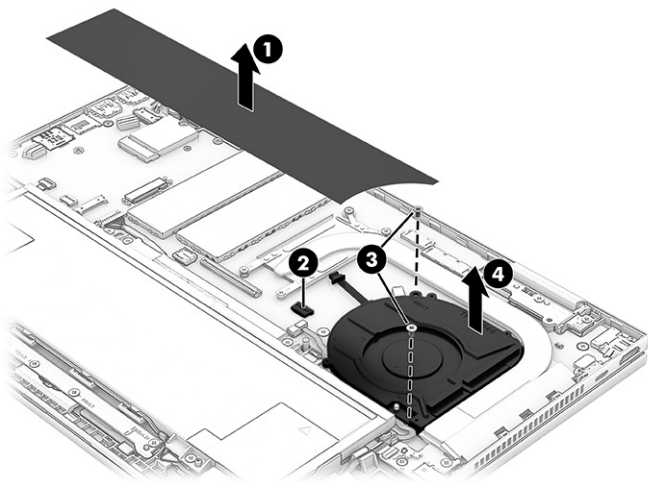

To replace the fan, reverse the removal procedures.

Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.

The display assembly is available only at the the subcomponent level. Subcomponent level spare part information is available in the subcomponent level disassembly subsection.

Before removing the display assembly, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).

2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 31](#)).

Remove the display assembly:


1. Remove the WLAN module antenna cover **(1)** that secures the WLAN antenna cables to the WLAN module.

The WLAN module antenna cover is available using spare part number N41046-001.

2. Carefully disconnect the two WLAN antenna cables **(2)** from the terminals on the WLAN module.


Computer models have either one or two WLAN antennas. On models with two antennas, the #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.

3. Release the WLAN antenna cables from the retention clip **(3)** that is built into the computer.

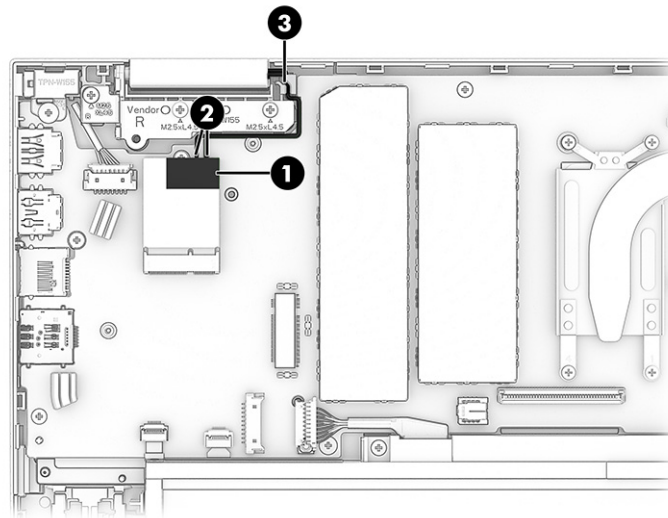


4. Disconnect the camera module cable **(1)** from the system board.
5. Disconnect the display panel module cable **(2)** from the system board.

6. Release the camera module cable and the display panel cable from the retention clip (3) that is built into the computer.

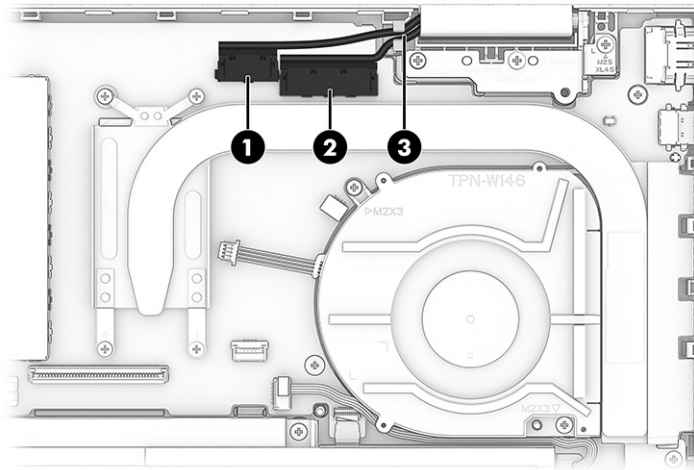


7. Remove the six Phillips M2.5 × 4.2 screws (1) that secure the display assembly to the computer.
8. Swing the top edge of the display assembly (2) away from the computer as far as it will open.
9. Remove the display assembly (3) from the computer.

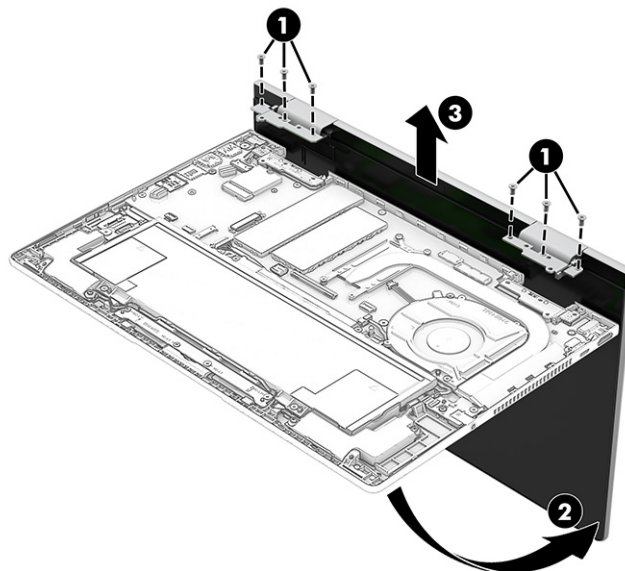


10. To remove the display panel assembly and access the display assembly internal components:
 - a. Insert a plastic, non-conductive tool, such as a case utility tool (1), into the upper left and right corners of the display panel assembly and slightly separate the display panel assembly from the display back cover.
 - b. Firmly grasp the pull-to-release tape (2) located in the upper corners of the display panel assembly with a pair of tweezers.

- c. Slowly and firmly twist the tape (3) while pulling it (4) away from the display panel assembly until it is fully released.

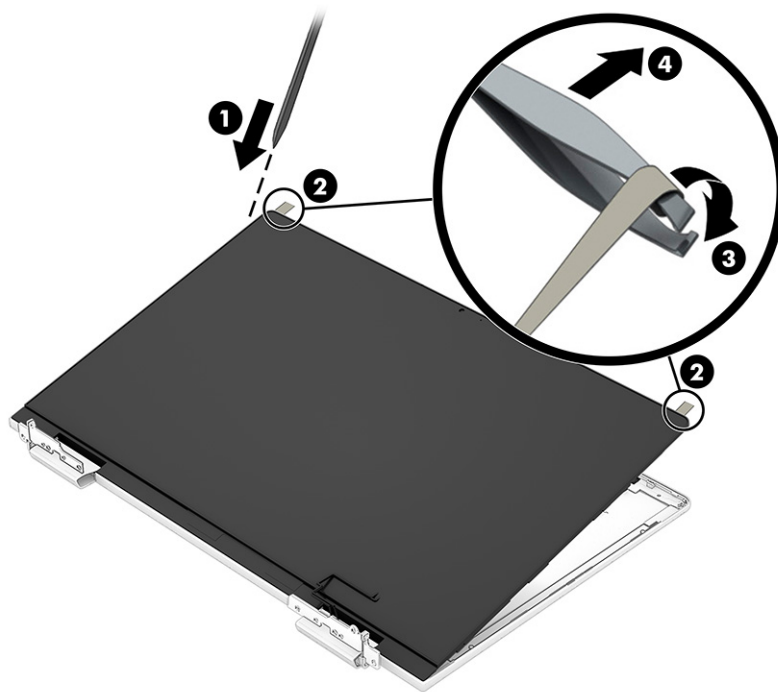


- d. Swing the top edge of the display panel assembly (1) up and away from the display back cover until it rests behind the display back cover.
- e. Release the adhesive support strip (2) that secures the display panel cable to the display panel assembly.
- f. Release the retention bar (3) that secures the display panel cable to the display panel assembly.
- g. Disconnect the display panel cable (4) from the display panel assembly.

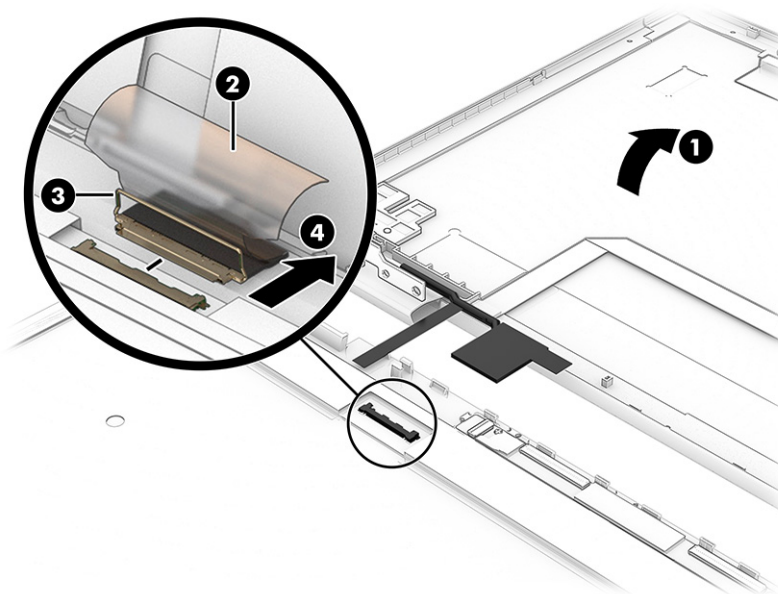

- The display panel assembly is available using spare part number N41025-001.

- a.** Remove the display panel assembly.


- The display panel cable is available using spare part number N09458-001.

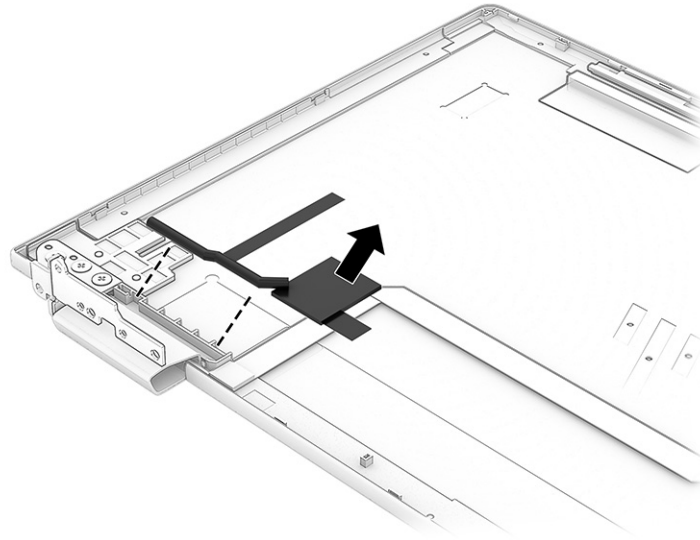

- a.** Remove the display panel assembly.

- c. Detach the camera module cable **(2)** from the display back cover. The camera module cable is attached to the display back cover with double-sided tape.

- d. Detach the camera module **(3)** from the display back cover. The camera module is attached to the display back cover with double-sided tape.

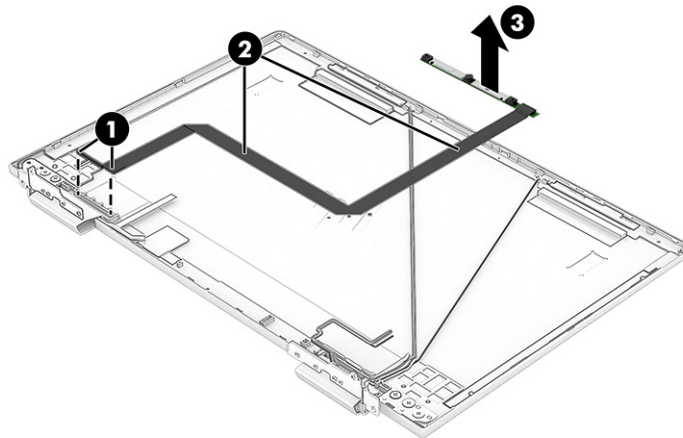

- e. Release the ZIF connector **(1)** the camera module cable is connected to, and then disconnect the camera module cable **(2)** from the camera module.


The camera module is available using spare part number N09471-001 and includes double-sided tape. The camera module cable is available using spare part number N09460-001 and includes double-sided tape.



13. To remove the wireless antennas:

- a. Remove the display panel assembly.
- b. Release the wireless antenna cables from the retention channels **(1)** and **(2)** that are built into the display back cover.
- c. Detach the wireless antenna transceivers **(3)** from the display back cover. The wireless antenna transceivers are attached to the display back cover with double-sided tape.
- d. Remove the wireless antennas **(4)**.


The wireless antennas are available using spare part number N41009-001 and includes double-sided tape.

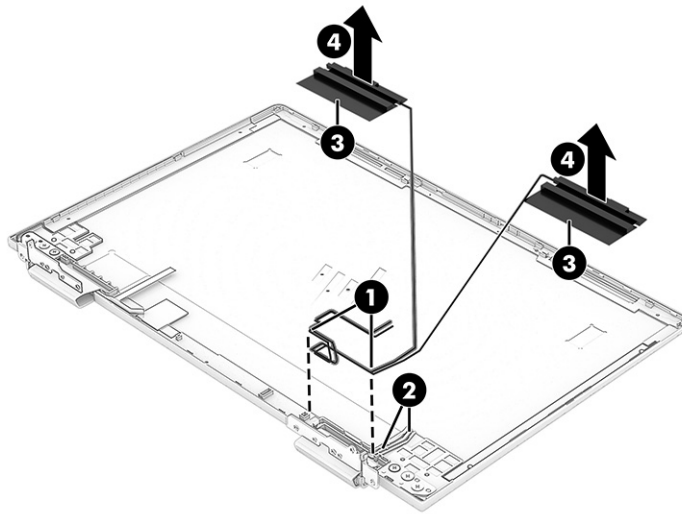

14. To remove the hinges and hinge caps:


- a.** Remove the display panel assembly.
- b.** Release the display panel cable (1) and the camera module cable from the left hinge area.
- c.** Release the wireless antenna cables (2) from the right hinge area.
- d.** Remove the six M2.5 × 3.3 screws (3) that secure the hinges to the display back cover.
- e.** Remove the hinges (4).

The hinges are available using spare part number N41014-001.

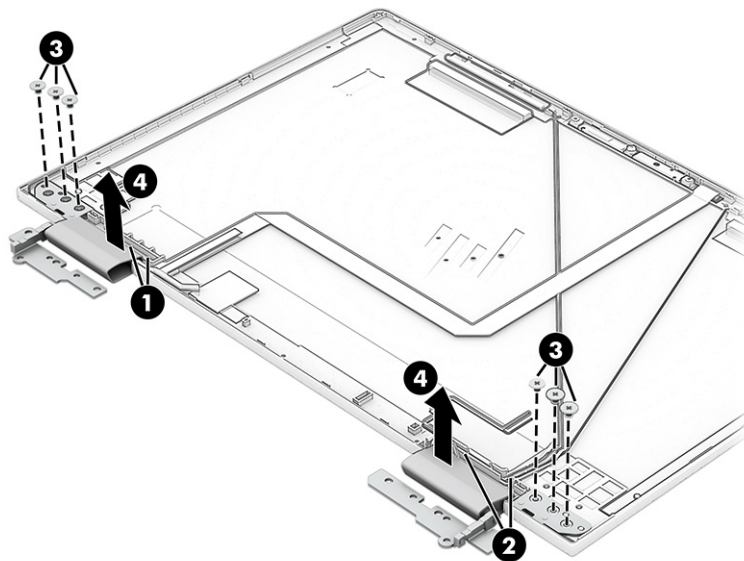

- f.** Remove the M2.0 × 3.3 screw (1) that secures the hinge cap to each hinge.
- g.** Remove the hinge caps (2).

The hinge caps are available using spare part number N41015-001.

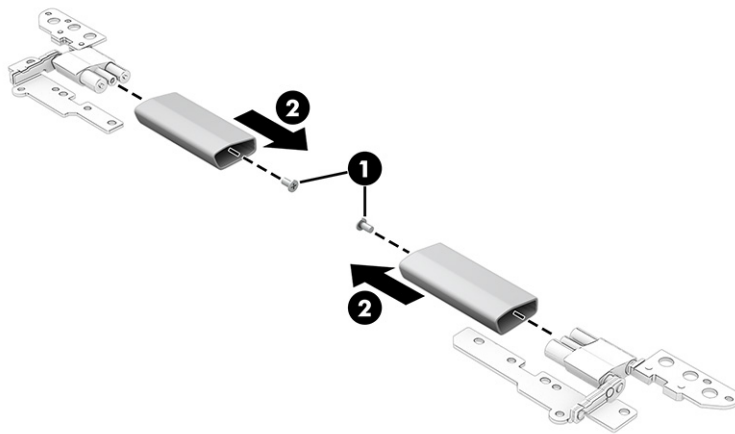

To reassemble and replace the display assembly, reverse the removal procedures.

System board

To remove the system board, use these procedures and illustrations.

Table 5-8 System board descriptions and part numbers

Description	Spare part number
All system board spare part kits include an integrated processor, UMA graphics subsystem memory, integrated system memory, and replacement thermal material.	
Equipped with an Intel Core i7-1355U 1.7 GHz processor (10 cores, 12 MB L3 cache, 15 W), 16 GB of system memory, and the Windows 11 operating system	N41024-601
Equipped with an Intel Core i5-1335U 1.3 GHz processor (10 cores, 12 MB L3 cache, 15 W), 8 GB of system memory, and the Windows 11 operating system	N41023-601

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 31](#)).
4. Remove the shield material that covers the WLAN module (see [WLAN module on page 34](#)).
5. Remove the fan (see [Fan on page 38](#)).

When you replace the system board, be sure to remove the WLAN module (see [WLAN module on page 34](#)) and heat sink (see [Heat sink on page 47](#)) from the defective system board and install them on the replacement system board.


Remove the system board:

1. Disconnect the power connector cable (1) from the system board.
2. Remove the WLAN module antenna cover (2) that secures the WLAN antenna cables to the WLAN module.

The WLAN module antenna cover is available using spare part number N41046-001.


3. Carefully disconnect the two WLAN antenna cables **(3)** from the terminals on the WLAN module.

Computer models have either one or two WLAN antennas. On models with two antennas, the #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.
4. Disconnect the webcam module cable **(4)** from the system board.
5. Disconnect the display panel cable **(5)** from the system board.
6. Release the ZIF connector **(6)** the audio jack board cable is connected to, and then disconnect the audio jack board cable from the system board.
7. Disconnect the speaker cable **(7)** from the system board.
8. Release the ZIF connector **(8)** the backlight cable is connected to, and then disconnect the backlight cable from the system board.
9. Release the ZIF connector **(9)** the keyboard cable is connected to, and then disconnect the keyboard cable from the system board.
10. Release the ZIF connector **(10)** the touchpad cable is connected to, and then disconnect the touchpad cable from the system board.
11. Release the ZIF connector **(11)** the fingerprint reader cable is connected to, and then disconnect the fingerprint reader cable from the system board.

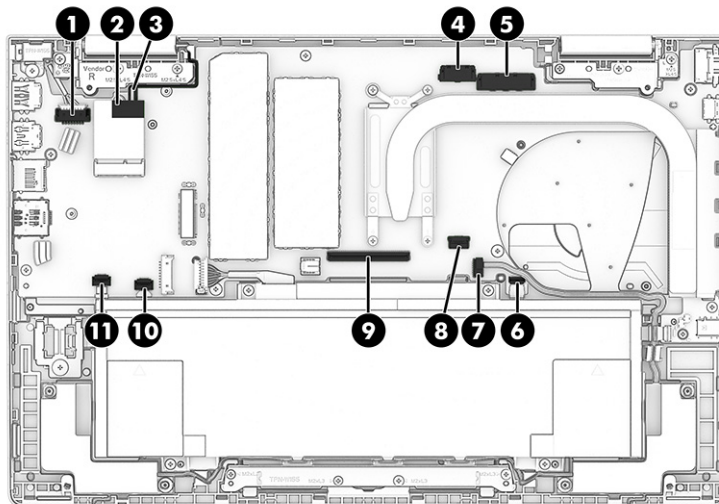


12. Remove the two Phillips M2.0 × 2.7 screws **(1)** that secure the system board to the computer.

13. Remove four Phillips M2.0 × 2.0 screws (2) that secure the system board to the computer.

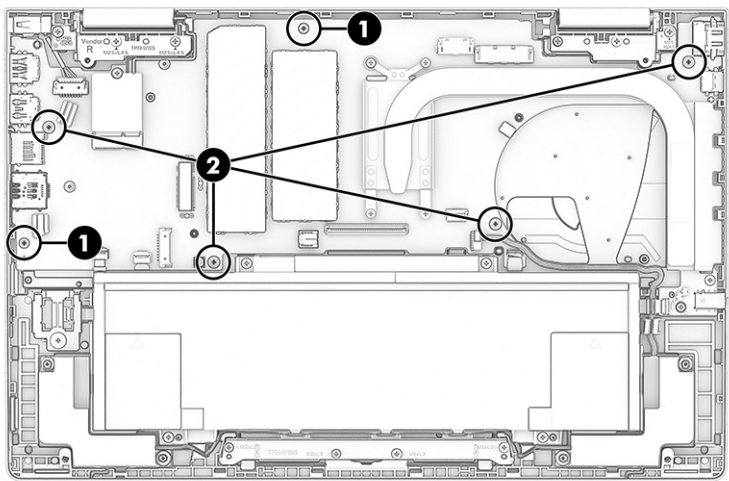

14. Lift the left edge of the system board (1) until it rests at an angle.
15. Remove the system board (2) by sliding it up and to the left at an angle.

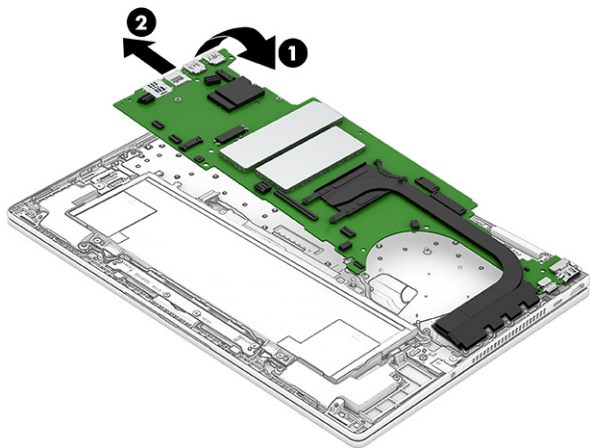

To install the system board, reverse the removal procedures.

Heat sink

To remove the heat sink, use these procedures and illustrations.

Table 5-9 Heat sink description and part number

Description	Spare part number
Heat sink (includes captive screws and replacement thermal material)	N41020-001


Before removing the heat sink, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).

2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 31](#)).
4. Remove the shield material that covers the WLAN module (see [WLAN module on page 34](#)).
5. Remove the fan (see [Fan on page 38](#)).
6. Remove the system board (see [System board on page 45](#)).


Remove the heat sink:

1. Remove the four Phillips M2.0 × 3.3 screws (1) that secure the heat sink to the system board.
2. Remove the heat sink (2).

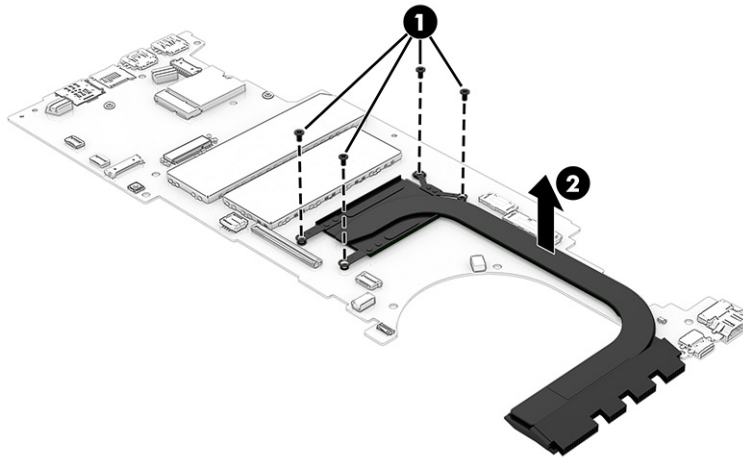

3. Thoroughly inspect and clean (if necessary) the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits. The following illustrations show the replacement thermal material locations.

Thermal paste is used on the processor (1) and on the heat sink area (2) that services the processor.

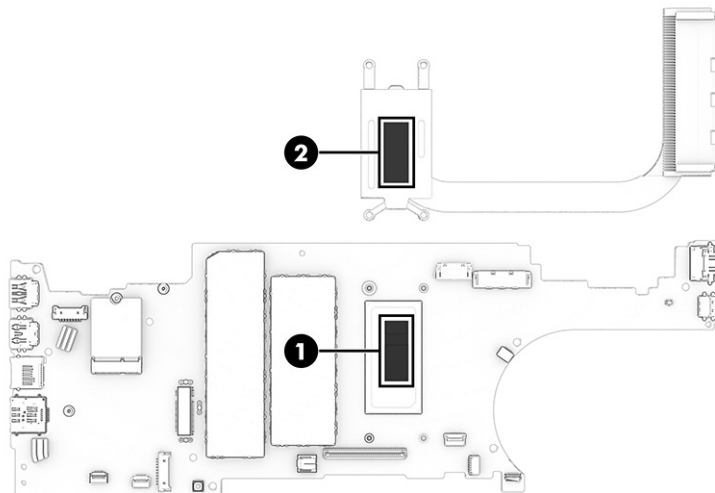

To replace the heat sink, reverse the removal procedures.

Fingerprint reader

To remove the fingerprint reader, use this procedure and illustration.

Table 5-10 Fingerprint reader description and part number

Description	Spare part number
Fingerprint reader	N09455-001
NOTE: The fingerprint reader spare part kit does not include the fingerprint reader bracket or fingerprint reader cable. The fingerprint reader bracket is not available as a spare part. The fingerprint reader cable is available using spare part part number N41013-001.	
NOTE: The fingerprint reader spare part kit does not include the fingerprint reader cable. The fingerprint reader cable is available using spare part number N41013-001.	

Before removing the fingerprint reader, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the fingerprint reader:

1. Release the ZIF connector (1) the fingerprint reader cable is connected to, and then disconnect the fingerprint reader cable from the system board.
2. Remove the Phillips M2.0 × 2.3 screw (2) that secures the fingerprint reader and fingerprint reader bracket to the computer.
3. Remove the fingerprint reader bracket (3).

The fingerprint reader bracket is not available as a spare part.

4. Remove the fingerprint reader (4).

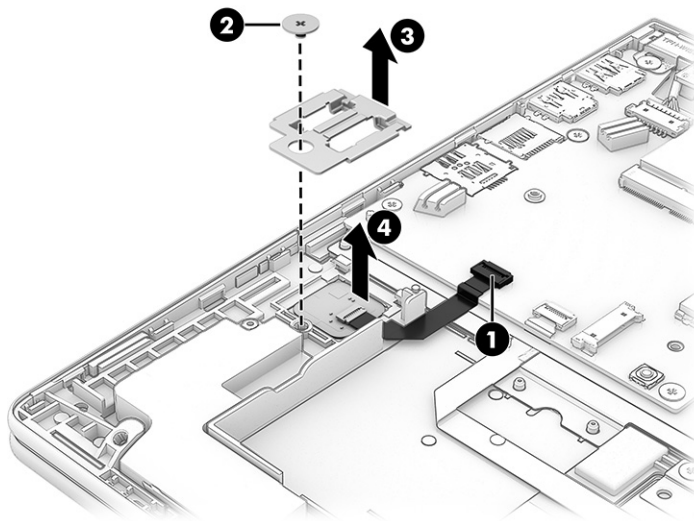

To replace the fingerprint reader and bracket, reverse the removal procedures.

Fingerprint reader cable

To remove the fingerprint reader cable, use this procedure and illustration.


The fingerprint reader cable is available using spare part number N41013-001.

Before removing the fingerprint reader cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Remove the battery (see [Battery on page 31](#)).
4. Remove the fingerprint reader (see [Fingerprint reader on page 49](#)).

Remove the fingerprint reader cable:

1. Release the ZIF connector (1) the fingerprint reader cable is connected to, and then disconnect the fingerprint reader cable from the fingerprint reader.
2. Remove the fingerprint reader cable (2).

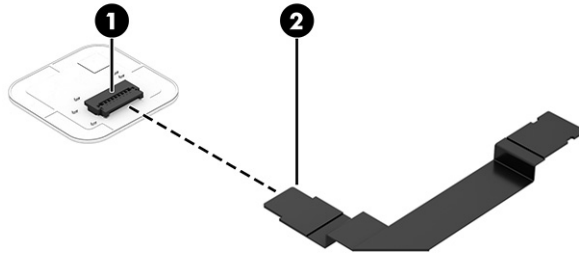

3. Remove the fingerprint reader cable.

To replace the fingerprint reader cable, reverse the removal procedures.

Touchpad cable

To remove the touchpad cable, use this procedure and illustration.

The touchpad cable is available using spare part number N09466-001.


Before removing the touchpad cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the touchpad cable:

1. Release the ZIF connector (1) the touchpad cable is connected to, and then disconnect the touchpad cable from the system board.

2. Release the ZIF connector (2) the touchpad cable is connected to, and then disconnect the touchpad cable from the touchpad.
3. Detach the touchpad cable (3) from the computer. The touchpad cable is attached to the computer with double-sided tape.

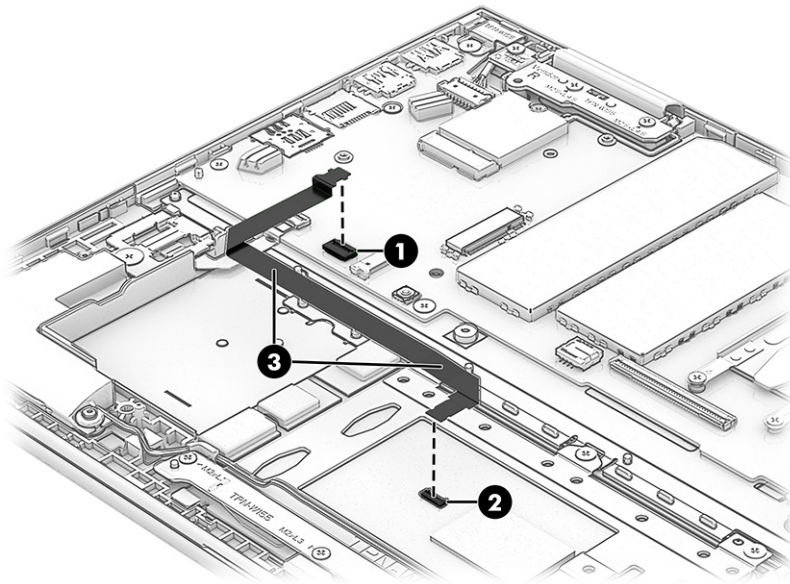

4. Remove the touchpad cable.

To replace the touchpad cable, reverse the removal procedures.

Touchpad

To remove the touchpad, use this procedure and illustration.

Table 5-11 Touchpad description and part number

Description	Spare part number
Touchpad:	N41017-001
NOTE: The touchpad spare part kit does not include the touchpad bracket or touchpad cable. The touchpad bracket is not available as a spare part. The touchpad cable is available using spare part part number N09466-001.	


Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Remove the battery (see [Battery on page 31](#)).
4. Remove the touchpad cable (see [Touchpad cable on page 50](#)).

Remove the touchpad:

1. Remove the three Phillips M2.0 × 2.2 screws (2) that secure the touchpad to the computer on the top edge of the touchpad.

2. Remove the four Phillips M2.0 × 3.2 screws (2) that secure the touchpad to the computer on the bottom edge of the touchpad.
3. Remove the touchpad bracket (3).
The touchpad bracket is not available as a spare part.
4. Lift the rear edge of the touchpad (4) until it rests at an angle.
5. Remove the touchpad (5) by sliding it up and away from the computer at an angle.

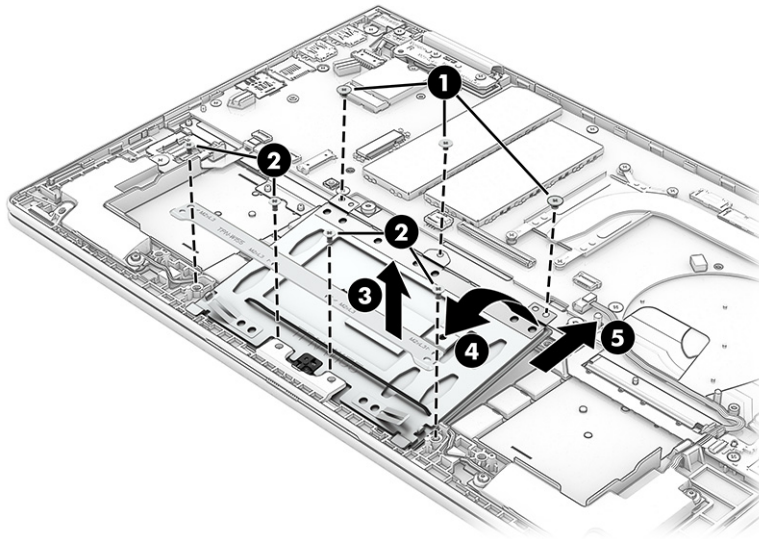

To replace the touchpad and bracket, reverse the removal procedures.

Audio jack board cable

To remove the audio jack board cable, use this procedure and illustration.



NOTE: The audio jack board cable is available using spare part number N41012-001.


Before removing the audio jack board cables, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the audio jack board cable:

1. Release the ZIF connector (1) the audio jack board cable is connected to, and then disconnect the audio jack board cable from the system board.
2. Release the ZIF connector (2) the audio jack board cable is connected to, and then disconnect the audio jack cable from the audio jack board.

3. Detach the audio jack board cable (3) from the computer. The audio jack board cable is attached to the computer with double-sided tape.

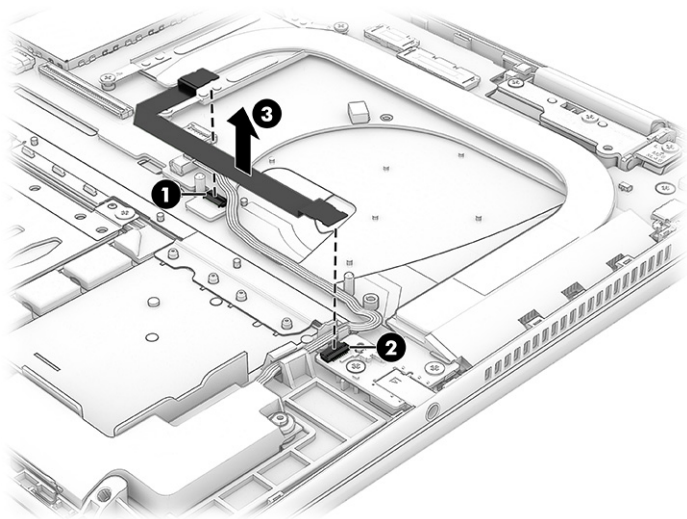

4. Remove the audio jack board cable.

To replace the audio jack board cable, reverse the removal procedures.

Audio jack board

To remove the audio jack board, use this procedure and illustration.

Table 5-12 Audio jack board description and part number

Description	Spare part number
Audio jack board (includes audio jack)	N41016-001
NOTE: The audio jack board spare part kit does not include the audio jack board cable. The audio jack board cable is available using spare part number N41012-001.	


Before removing the audio jack board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 30](#)).
2. Remove the bottom cover (see [Bottom cover on page 30](#)).
3. Remove the battery (see [Battery on page 31](#)).
4. Remove the audio jack board cable (see [Audio jack board cable on page 52](#)).

Remove the audio jack board:

1. Remove the two Phillips M2.0 × 2.7 screws (1) that secure the audio jack board to the computer.

2. Lift the left side of the audio jack board (2) until it rests at an angle, and then remove the audio jack board by sliding it up and to the left.

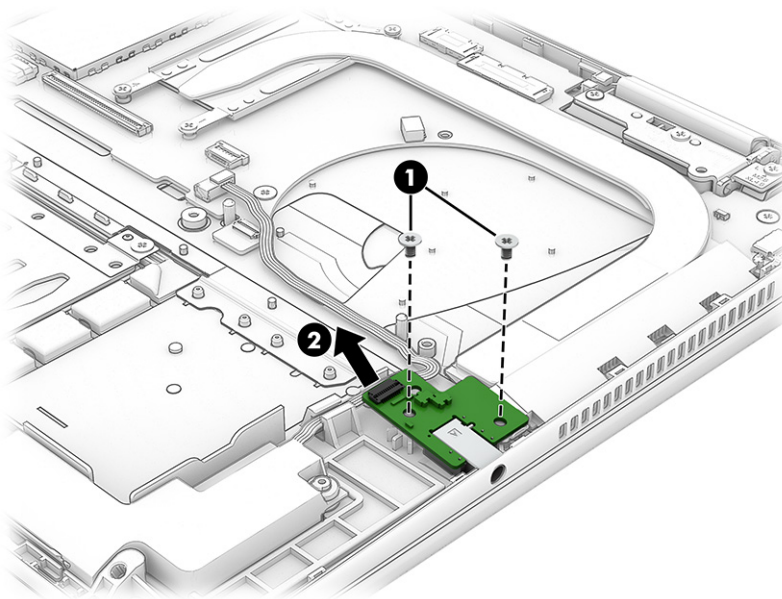

To replace the audio jack board, reverse the removal procedures.

Top cover with keyboard

To remove the top cover with keyboard, use this procedure and illustration.

Table 5-13 Top cover with keyboard part descriptions and part numbers

Description	Spare part number
Top cover with keyboard with backlight in natural silver finish for use in French Canada (includes backlight cable and keyboard cable)	N41026-DB1
Top cover with keyboard with backlight in natural silver finish for use in the United States (includes backlight cable and keyboard cable)	N41026-001

6 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.



NOTE: To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

You have several ways to access the Setup Utility (BIOS).



IMPORTANT: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

- Turn on or restart the computer and quickly press **F10**.

– or –

Turn on or restart the computer, quickly press **ESC**, and then press **F10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*. Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- HP Support Assistant

1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.

– or –

Select the question mark icon in the taskbar.

2. Under **My notebook**, select **Specifications**.

- Setup Utility (BIOS)
 1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 55](#)).
 2. Select **Main**, and then make note of the BIOS version.
 3. Select **Exit**, select one of the options, and then follow the on-screen instructions.
- In Windows, press **ctrl+alt+s**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 56](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.



IMPORTANT: To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.



NOTE: If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.

- or -

Select the question mark icon in the taskbar.
2. Select **Updates**. The **Checking for Updates** window opens, and Windows checks for updates.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).

The BIOS installation begins.

5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

7 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.

 **NOTE:** If computer storage is 32 GB or less, Microsoft® System Restore is disabled by default.

Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 59](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 59](#).

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.



NOTE: The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using HP Recovery media. For more information, see [Recovering using HP Recovery media on page 59](#).

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.



NOTE: You must be connected to the internet to access the Get Help app.

Recovering using HP Recovery media

You can use HP Recovery media to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 58](#).



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery media, and then restart the computer.



NOTE: HP recommends that you follow the [Restoring and recovery methods on page 59](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order, which is the order of devices listed in BIOS for startup information. You can select an optical drive or a USB flash drive, depending on the location of your HP Recovery media.



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, quickly press and hold the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly press and hold the volume down button, and then select **f9**.
3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

8 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 62](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

- You have several options after you receive a failure ID:
 - Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
 - Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
 - Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant:

1. Complete one of the following tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
2. Select **Fixes & Diagnostics**.
3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu:

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select the specific Windows diagnostics version to download to your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store:

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 64](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 64](#).

- b. Hard drive

- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure.

1. From the **Start** menu, open the HP System Information Application or press **Fn+Esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.



NOTE: When the restart is complete, the computer will boot to HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

HP Remote PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download HP Remote PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a hard drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Exit**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

9 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 9-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	222.9 mm	8.8 in
Depth	324.0 mm	12.8 in
Height (front to back)	19.7 mm	0.8 in
Weight:		
1 spindle	1.7 kg	3.7 lb
0 spindles	1.6 kg	3.5 lb
Input power		
Operating voltage and current	19.5 V DC @ 2.31 A - 45 W	
	19.5 V DC @ 3.33 A - 65 W	
	19.5 V DC @ 4.62 A - 90 W	
	19.5 V DC @ 7.70 A - 150 W	
	19.5 V DC @ 10.3 A - 200 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		

Table 9-1 Computer specifications (continued)

	Metric	U.S.
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft

NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

Display specifications

This section provides specifications for your display.

Table 9-2 Display specifications

	Metric	U.S.
Active diagonal size	35.6 cm	14.0 in
Resolution	1920 × 1080 (FHD)	
Surface treatment	Antiglare (FHD panel)	
Brightness	250 nits (FHD, 45% NTSC panel)	
Viewing angle	UWVA	
Backlight	WLED	
Display panel interface	eDP 1.2 without PSR	

Solid-state drive specifications

This section provides specifications for your solid-state drives.

Table 9-3 Solid-state drive specifications

	256 GB*	512 GB*	1 TB*
Dimensions			
Height	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Interface type			
Ready time, maximum (to not busy)	1.0 ms	< 1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms
Transfer rate			
Sequential read	up to 2150 MBps	up to 2150 MBps	up to 2150 MBps
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1550 MBps	up to 1550 MBps	up to 1550 MBps

Table 9-3 Solid-state drive specifications (continued)

	256 GB*	512 GB*	1 TB*
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs
Total logical sectors	468,883,296	1,000,215,216	1,500,336,388
Operating temperature	0°C to 70°C (32°F to 158°F)		
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications might differ slightly.			
NOTE: Certain restrictions and exclusions apply. Contact support for details.			

10 Statement of memory volatility

For general information regarding nonvolatile memory in HP business computers, and to restore nonvolatile memory that can contain personal data after the system has been turned off and the hard drive has been removed, use these instructions.

HP business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, with the following assumptions:

- No subsequent modifications were made to the system.
- No applications, features, or functionality were added to or installed on the system.

Following system shutdown and removal of all power sources from an HP business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and also remains in nonvolatile memory. Use the following steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.



NOTE: If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

Current BIOS steps

Use these instructions to restore nonvolatile memory.

1. Follow these steps to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.

- a. Turn on or restart the computer, and then quickly press **esc**.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults. The computer restarts.
- c. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults. The computer restarts.
- e. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.
- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, and then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Select **Yes** at the warning message. The computer restarts.
- i. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - k. Restart the system. If the system has a Trusted Platform Module (TPM), fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
 - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following:
- Remove and retain the storage drive.
- or -
 - Clear the drive contents by using a third-party utility designed to erase data from an SSD.
- or -
 - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:



NOTE: If you clear data using Secure Erase, you cannot recover it.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu and scroll down to the **esc** menu.
- c. Select **Hard Drive Utilities**.
- d. Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.
- or -

Clear the contents of the drive using the following Disk Sanitizer commands steps:

- i. Turn on or restart the computer, and then quickly press **esc**.
- ii. Select the **Security** menu and scroll down to the **Utilities** menu.
- iii. Select **Hard Drive Utilities**.
- iv. Under **Utilities**, select **Disk Sanitizer**, select the hard drive with the data that you want to clear, and then follow the on-screen instructions to continue.



NOTE: The amount of time it takes for Disk Sanitizer to run can take several hours. Plug the computer into an AC outlet before starting.

Nonvolatile memory usage

Use this table to troubleshoot nonvolatile memory usage.

Table 10-1 Troubleshooting steps for nonvolatile memory usage

Description	Volatility description	Storage user data	How to erase
Primary storage device, holds the OS, applications, and application settings	Non-volatile, 8-256 GB of eMMC or NVMe SSD storage, removable	Yes ¹	Follow instructions below under “Erase the Primary Storage Device”
System memory (RAM), holds transient data during system operation	Volatile, SODIMM socket. Removable (4 GB/8 GB/16 GB)	Yes	Unplug unit from power
Permanent system BIOS settings*	Non-volatile; ?? KB; stored <<where>>,	No ²	Follow instructions below under “Clearing BIOS Settings”
System boot ROM (BIOS)	Non-volatile memory, 128 Mbit (16 MB) socketed, removable	No	Download the latest BIOS for your model from the HP website and follow the instructions to flash the BIOS that are on the website
RTC (CMOS) RAM	Volatile memory, 256 bytes located in AMD embedded System on Chip (SoC)	No	Unplug unit from main power, remove top cover and press Clear CMOS button
Keyboard/mouse (ROM)	Non-volatile, 2 KB embedded in the super I/O controller (SIO2)	Yes	N/A
Keyboard/mouse (RAM)	Volatile, 256 bytes embedded in the super I/O controller (SIO2)	No	Unplug unit from main power
LOM EEPROM	Non-volatile, 2 MB embedded in LAN controller	No	N/A
Trusted Platform Module (TPM)	Non-volatile; 51 KB ROM for firmware and 38 KB system parametric data	No ³	Follow instructions below under “Clearing TPM”

¹ Under typical operation, the only user data stored on the primary storage device are preferences for device configuration and settings for connections. However, the administrator can configure the system to allow users to store data locally.

² Only user data potentially stored in BIOS Settings are the ownership and asset tags, administrator password, and startup password.

³ The Trusted Platform Module may contain encrypted passwords or certificates generated from user or administrator input.

Questions and answers

Use this section to answer your questions about nonvolatile memory.

1. How can the BIOS settings be restored (returned to factory settings)?



IMPORTANT: The restore defaults feature does not securely erase any information on your hard drive. See question and answer 6 for steps to securely erase information.

The restore defaults feature does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- Turn on or restart the computer, and then quickly press **esc**.
- Select **Main**, and then select **Apply Factory Defaults and Exit**.
- Follow the on-screen instructions.
- Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS, and how is it different from a legacy BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It replaces the older BIOS architecture but supports much of the legacy BIOS functionality.

Like the legacy BIOS, the UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure runtime environment that supports a Graphic User Interface (GUI). In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

The UEFI BIOS provides functionality beyond that of the legacy BIOS. In addition, the UEFI BIOS works to initialize the computer's hardware before loading and executing the OS; the runtime environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

HP has provided options in Computer Setup (BIOS) to allow you to run in legacy BIOS, if required by the operating system. Examples of this requirement would be if you upgrade or downgrade the OS.

3. Where is the UEFI BIOS located?

The UEFI BIOS is located on a flash memory chip. You must use a utility to write to the chip.

4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed and timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. You cannot write to this EEPROM when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

5. What is meant by "Restore the nonvolatile memory found in Intel-based system boards"?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

6. How can the BIOS security be reset to factory defaults and erase the data?



IMPORTANT: Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure that you used to create the Custom Secure Boot Keys, but select to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors your computer's BIOS for attacks or corruption.

If the BIOS becomes corrupted or is attacked, HP Sure Start restores the BIOS to its previously safe state, without user intervention. Those select computer models ship with HP Sure Start configured and enabled. HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>.

11 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 11-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2

Table 11-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

Table 11-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
		1. The flexible cord must be Type HO5VV-F, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used. 2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element. 3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration. 4. The flexible cord must be Type RVV, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark. 5. The flexible cord must be Type HO5VV-F three-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label. 6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark. 7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type HO5VV-F three-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

12 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

- AC adapter
 - product description 2
 - spare part number 20
- AC adapter and battery light, identifying 4
- action key, identifying 11
- adapter, spare part numbers 20
- antenna
 - removal 43
- antennna
 - spare part number 43
- audio jack board
 - illustrated 18, 53
 - removal 53
 - spare part number 18, 53
- audio jack board cable
 - removal 52
 - spare part number 52
- audio-out (headphone)/audio-in (microphone) combo jack, identifying 5
- audio, product description 1

B

- backup, creating 58
- backups 58
- battery
 - illustrated 18
 - removal 31
 - spare part number 18, 31
- BIOS
 - determining version 55
 - downloading an update 56, 57
 - starting the Setup Utility 55
 - updating 55
- boot order, changing 60
- bottom components 12
- bottom cover
 - illustrated 19
 - removal 30
 - spare part number 19, 30

- buttons
 - left touchpad 8
 - power 10, 12
 - right touchpad 8

C

- camera
 - identifying 6
- camera light, identifying 6
- camera module
 - illustrated 19
 - removal 42
 - spare part number 43
 - spare part numbers 19
- camera module cable
 - illustrated 19
 - removal 43
 - spare part number 43
 - spare part numbers 19
- camera privacy cover, identifying 6
- caps lock light 9
- caring for your computer 25
- cautions
 - electrostatic discharge 21, 22
- chipset, product description 1
- cleaning your computer 25
 - caring for wood veneer 27
 - disinfecting 26
 - HP Easy Clean 25
 - removing dirt and debris 25
- components
 - bottom 12
 - display 5, 6
 - keyboard area 7
 - left side 4
 - lights 8
 - right side 3
 - touchpad 7
- computer specifications 67
- connector board cable
 - illustrated 18

- spare part number 18
- connectors
 - power 4

D

- display
 - specifications 67, 68
- Display Adhesive Kit, spare part number 19
- display assembly
 - illustrated 17
 - removal 38
 - spare part numbers 17, 38
 - subcomponents 19
- display back cover
 - illustrated 20
 - spare part number 20
- display components 5, 6
- display panel
 - illustrated 19
 - product description 1
 - spare part number 19
- display panel assembly
 - removal 41
 - spare part number 42
- display panel cable
 - illustrated 19
 - removal 42
 - spare part number 42
 - spare part numbers 19

E

- electrostatic discharge (ESD) 21, 22
 - preventing damage 21-23
- esc key, identifying 11

F

- fan
 - illustrated 17
 - removal 38
 - spare part number 17, 38

- fingerprint reader 11
 - illustrated 18
 - removal 49
 - spare part number 18
 - spare part numbers 49
- fingerprint reader bracket
 - illustrated 18
 - removal 49
- fingerprint reader cable
 - illustrated 18
 - removal 50
 - spare part number 18, 50
- fn key, identifying 11

G

- graphics, product description 1
- grounding methods 21-23
- guidelines
 - packaging 21, 27
 - transporting 21, 27
 - workstation 21

H

- hard drive
 - specifications 67
- hardware, locating 3
- HDMI port
 - identifying 5
- heat sink
 - illustrated 17
 - removal 47
 - spare part number 17, 47
- hinge
 - illustrated 20
 - removal 44
 - spare part number 20, 44
- hinge cap
 - illustrated 20
 - removal 44
 - spare part number 20, 44
- HP Hubs Launcher app key,
 - identifying 12
- HP PC Hardware Diagnostics UEFI
 - downloading 64
 - failure ID code 63
 - HP Hotkey Support
 - software 64
 - starting 63, 64
 - using 63
- HP PC Hardware Diagnostics
 - Windows
 - accessing 61, 62
 - downloading 62
 - failure ID code 61

- installing 63
 - using 61
- HP Recovery media
 - recovery 59
- HP Sure Recover 60
- HP Sure Start 70, 74
- hub, spare part numbers 20

I

- illustrated parts catalog 16
- internal microphones,
 - identifying 6

J

- jacks
 - audio-out (headphone)/audio-in
 - (microphone) 5

K

- keyboard, product description 2
- keys
 - action 11
 - esc 11
 - fn 11
 - Windows 11

L

- labels
 - contents 13
 - locations 13
- left side components 4
- lights
 - AC adapter and battery 4
 - camera 6
 - caps lock 9
 - microphone mute 9
 - mute 9
 - power 9
- low blue light mode 5

M

- media card reader
 - product description 1
- memory
 - nonvolatile 70
 - volatile 70
- memory module
 - product description 1
- microphone mute light,
 - identifying 9
- microphone, product
 - description 1

- model name 1
- mute light, identifying 9

N

- nonvolatile memory 70

O

- operating system, product
 - description 2
- optical drive, spare part
 - number 20

P

- packaging guidelines 21, 27
- pen, product description 2
- pen, spare part number 20
- pointing device, product
 - description 2
- ports
 - HDMI 5
 - product description 2
 - USB 5 Gbps 4
 - USB Type-C power connector
 - and 5 Gbps port with sleep
 - and charge 5
- power button, identifying 10, 12
- power connector
 - identifying 4
- power connector cable
 - illustrated 18
 - removal 33
 - spare part number 18, 33
- power connector cable bracket
 - removal 34
- power connector cable cable
 - illustrated 18
- power cord
 - requirements for all
 - countries 75
 - requirements for specific
 - countries and regions 75
 - set requirements 75
 - spare part number 20
- power light, identifying 9
- power requirements, product
 - description 2
- processor, product description 1
- product description
 - audio 1
 - chipset 1
 - display panel 1
 - graphics 1
 - keyboard 2

- media card reader 1
- memory module 1
- microphone 1
- operating system 2
- pen 2
- pointing device 2
- ports 2
- power requirements 2
- processors 1
- product name 1
- security 2
- sensor 2
- serviceability 2
- storage 1
- video 1
- wireless 2
- product name 1

R

- recovery 58, 59
 - discs 59
 - media 59
 - USB flash drive 59
- recovery media 58
 - creating using HP Cloud Recovery Download Tool 58
 - creating using Windows tools 58
- Remote HP PC Hardware Diagnostics UEFI settings
 - customizing 66
 - using 65
- removal and replacement procedures 30
- removing personal data from volatile system memory 70
- restoring 58
- restoring and recovery methods 59
- right side components 3

S

- Screw Kit, spare part number 20
- security, product description 2
- sensor, product description 2
- serviceability, product description 2
- SIM slot, identifying 4
- slots
 - SIM card 4
- software, locating 3
- solid-state drive
 - illustrated 18

- removal 36
 - spare part number 36
 - spare part numbers 18
 - specifications 68
- solid-state drive cable
 - illustrated 18
- solid-state drive shield
 - removal 36
- solid-state drive thermal pad
 - installation 37
 - spare part number 18, 37
- spare part country codes 54
- speakers 13
 - illustrated 18
 - removal 32
 - spare part number 18, 32
- special keys
 - identifying 11
 - using 11
- specifications
 - computer 67
 - display 67, 68
 - hard drive 67
 - solid-state drive 68
- static electricity 21, 22
- storage, product description 1
- support information 28
- system board
 - illustrated 17
 - removal 45
 - spare part numbers 17, 45
- system memory, removing
 - personal data from volatile 70
- system restore 59
- system restore point, creating 58

T

- top cover with keyboard
 - illustrated 17
 - spare part numbers 17, 54
- touchpad
 - illustrated 18, 51
 - removal 51
 - settings 7
 - spare part number 18, 51
- touchpad bracket
 - illustrated 18
 - removal 52
- touchpad buttons
 - identifying 8
- touchpad cable
 - illustrated 18
 - removal 50
 - spare part number 18, 50

- touchpad zone, identifying 8
- transporting guidelines 21, 27

U

- USB 5 Gbps port, identifying 4
- USB Type-C power connector and 5 Gbps port with sleep and charge, identifying 5

V

- vents, identifying 5, 13
- video, product description 1

W

- wake-on-voice 6
- Windows
 - backup 58
 - recovery media 58
 - system restore point 58
- Windows key, identifying 11
- Windows tools, using 58
- wireless antenna
 - illustrated 20
 - removal 43
 - spare part numbers 20
- wireless antennas, identifying 6
- wireless antennna
 - spare part number 43
- wireless, product description 2
- WLAN antenna
 - removal 43
- WLAN antennas, identifying 6
- WLAN antennna
 - spare part number 43
- WLAN module
 - illustrated 18
 - removal 34
 - spare part numbers 18, 34
- WLAN module antenna cover
 - removal 35, 39, 45
 - spare part number 18, 35, 39, 45
- workstation guidelines 21