



Voyager 5200 Office Bluetooth headset
system for computer and desk phone
User Guide


Table of contents

Hook up system	1
Desk phone setup details	1
Position Your Base	3
Overview	5
Headset overview	5
Be safe	5
Base overview	6
Accessories	7
Pair	8
Pair headset to base	8
Pair to mobile device	8
Pair mode	9
Fit and charge	10
Fit	10
Change eartip size	10
Switch ears	10
Charge	11
Low battery warnings	11
Load software	12
Update firmware	12
Basics	14
Power on/off	14
Adjust volume	14
Adjust headset microphone volume (softphone)	14
Make, answer, end calls	14
Make a call (computer or desk phone)	15
Answer or end a call	15
Mute	15
Hold a call	15
Switch between calls (flash)	15
Launch Microsoft Teams (Teams model only)	16
Use sensors	16
Reset sensors	16
Disable sensors	17
More Features	18

Play or pause audio	18
Voice assistant (smartphone feature)	18
Change your default line	18
Enable and use Amazon Alexa (smartphone feature)	18
Enable Tile	19
Troubleshooting	20
Headset	20
Desk phone	21
Softphone	22
Support	24

Hook up system

- Using the diagram, connect your headset system.

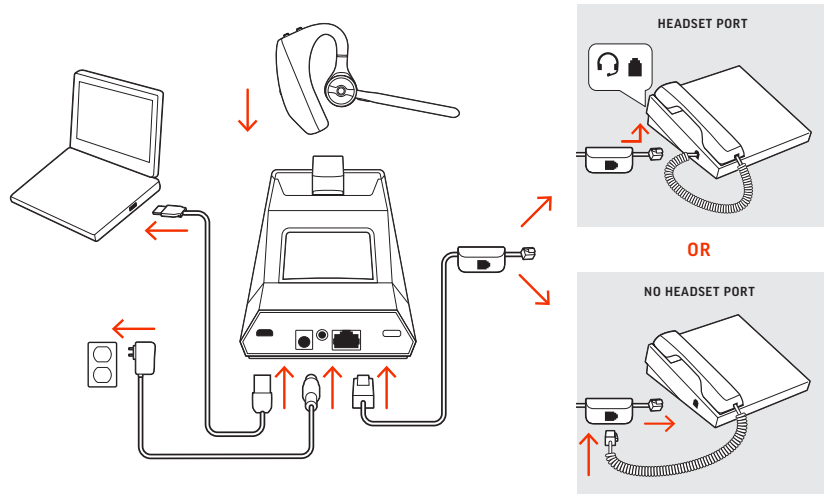


NOTE: Base configuration settings


Desk phone	Setting (on bottom of base)
Most phones	A
Cisco phones	D
Cisco phones with EHS cable	A

Desk phone setup details

- Choose a desk phone setup **A, B, C** or **D** and connect cables.
 - Desk phone with dedicated headset port

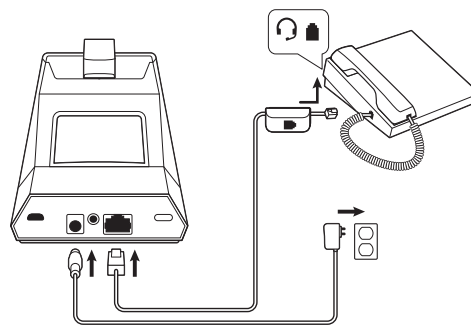

USE




- Connect one end of the telephone interface cable to the back of the base
- Connect the other end of the telephone interface cable into the dedicated headset port on the desk phone


IMPORTANT: Cisco phones use configuration **D** on the bottom of the base. Most other phones use default configuration **A**.

NOTE: Use this setup if you are not using the HL10 lifter or EHS cable. In this configuration, press both the headset button on your desk phone and the call control button on the headset to answer or end calls.

b. Desk phone (standard)

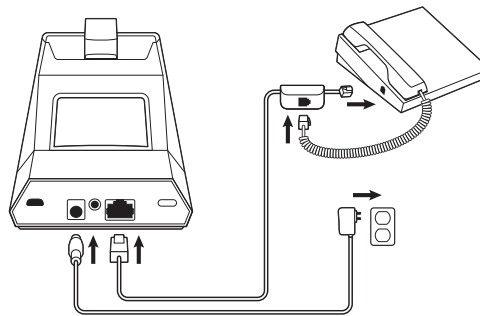

USE




- Connect one end of the telephone interface cable to the back of the base
- Disconnect the handset coil cord from the base of the desk phone and re-connect it to the telephone interface cable junction box
- Finally connect the remaining end of the telephone interface cable into the open handset port on the desk phone


IMPORTANT: Cisco phones use configuration **D** on the bottom of the base. Most other phones use default configuration **A**.


NOTE: Use this setup if you are not using the HL10 lifter or EHS cable and your desk phone does not have a dedicated headset port. In this configuration, manually remove the handset on your desk phone and press the call control button on the headset to answer or end calls.

- c. Desk phone + EHS cable (sold separately)

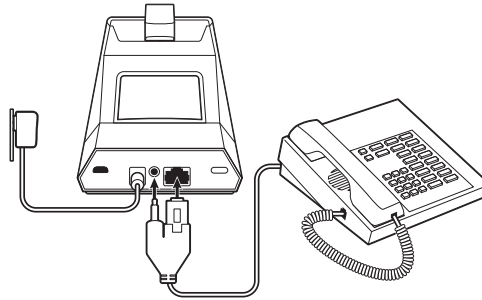


USE

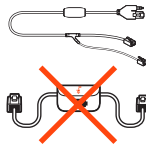



 **IMPORTANT:** Use configuration **A** on the bottom of the base, which works for most phones including Cisco phones.

- d. Desk phone + HL10 lifter (sold separately)

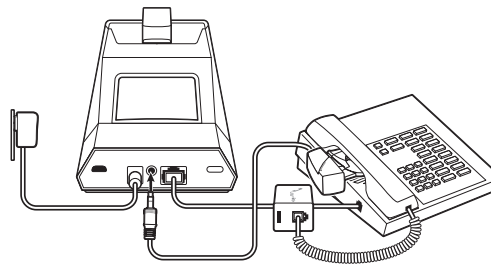

USE

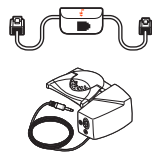


 **IMPORTANT:** **Cisco** phones use configuration **D** on the bottom of the base. Most other phones use default configuration **A**.

Position Your Base

The minimum recommended separation between your desk phone and the base is 6 inches.


The minimum recommended separation between the base and computer is 12 inches. Incorrect position can cause noise and interference problems.

 **NOTE:** Headset cradle may vary, but function is the same.

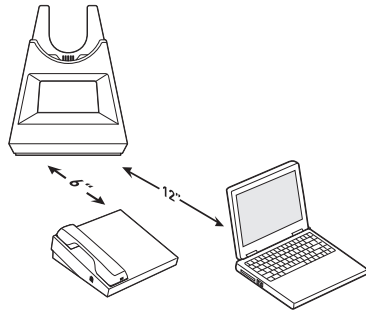

Overview

Headset overview

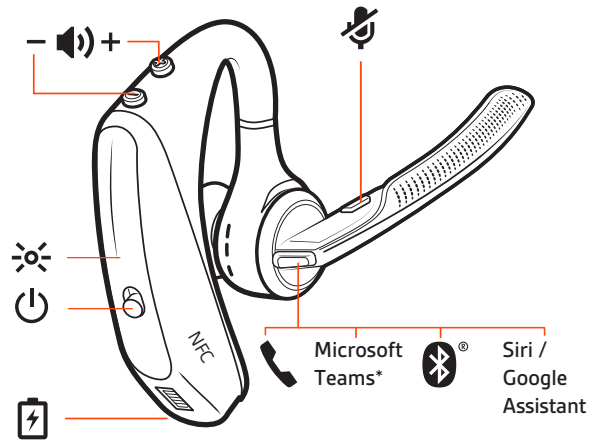


Icon	Headset control
	Volume
	Mute
	Call
	Microsoft Teams (requires Teams desktop app)
	Bluetooth pairing
	Default voice assistant
	Near Field Communication (Not offered on new product)
	Charge port
	Power
	Indicator light

Be safe


Please read the safety guide for important safety and regulatory information before using your new device.

Base overview

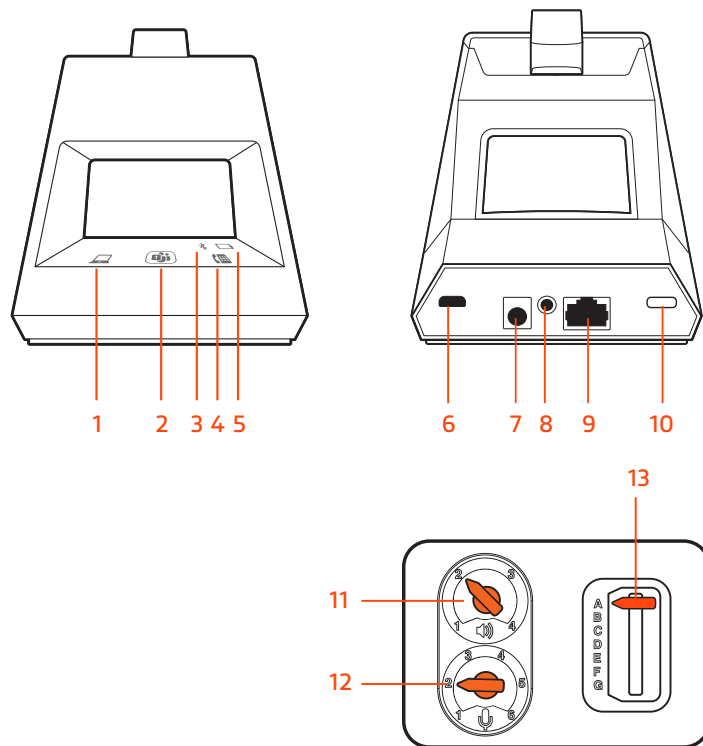

1. Computer button
2. Microsoft Teams button (Teams model only)
3. Bluetooth LED
4. Desk phone button
5. Charging LED
6. USB port
7. Power jack
8. Handset lifter jack
9. Telephone interface cable jack
10. Bluetooth pairing button
11. Desk phone listening volume
12. Desk phone speaking volume
13. Desk phone configuration switch

Accessories

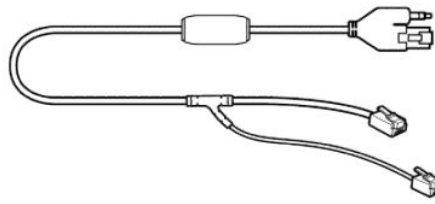

1



2



- 1. Electronic hookswitch cable (EHS cable)** Electronically and automatically answers/ends a desk phone call. Enables remote call control with your headset.
- 2. HL10 lifter** Automatically lifts handset and returns it to the cradle. Enables remote call control with your headset.

Pair


Pair headset to base


Your system has a base and compatible Bluetooth headset.

Your headset comes pre-paired to the base. To pair again:

1. Press the headset Call button until you hear "pairing" and the headset LEDs flash blue and red.
2. Put your base into pair mode by pressing and holding the Bluetooth pairing  button on the back of your base for 2 seconds until the display panel's Bluetooth  icon flashes blue and red.



Pairing is successful when you hear "pairing successful" and "base connected" and the display panel's Bluetooth  icon turns solid blue.



NOTE: Your headset can pair with up to 8 devices but only maintain 2 connections simultaneously; this includes the base.

Pair to mobile device

1. To put your headset in pair mode, press the Call button until you hear "pairing" and the headset LEDs flash blue and red.
2. Activate Bluetooth on your phone and set it to search for new devices.
 - *iPhone* **Settings** > **Bluetooth** > **On***
 - *Android* **Settings** > **Bluetooth On** > **Scan for devices***



NOTE: *Menus may vary by device.

3. Select "PLT V5200 Series."

Once successfully paired, you hear "pairing successful" and the headset LEDs stop flashing.




NOTE: Your headset can pair with up to 8 devices but only maintain 2 connections simultaneously; this includes the base.

Pair mode

Put your headset in pair mode to connect to a new device or to pair again.

- With your headset powered on, press the Call button until you hear "pairing."

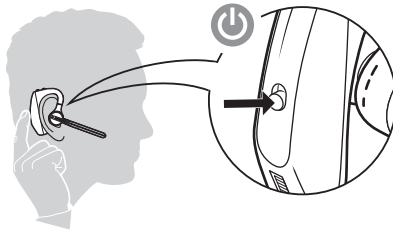

Fit and charge


Fit

1. Slide headset over and behind your ear, then press gently toward your ear.



NOTE: Remove your eyeglasses before donning the headset for best fit.


2. Rotate microphone boom until it is pointed toward your mouth.
3. Mic boom moves up and down for a better fit.

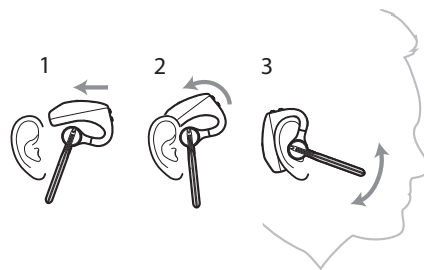


Change eartip size

Change the eartip for a better fit.

1. Push in eartip and rotate to the left to unlock it.

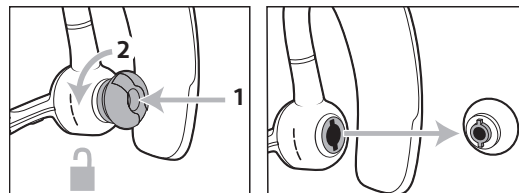


2. Align new eartip into slot; push, rotate to the right and lock into place.

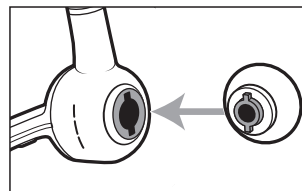



Switch ears

- To wear the headset on your other ear, rotate the boom upwards then twist it around so the eartip is on the other side before lowering the mic boom.

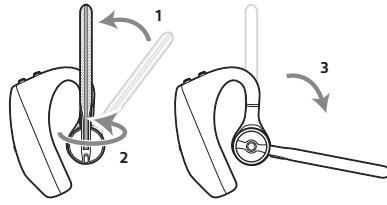

Charge

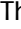Before first use, charge your headset for a minimum of 20 minutes by placing it in the cradle. The base display's battery  icon turns solid blue when charging and turns off when charge is complete. A full charge takes approximately 90 minutes.

 **NOTE:** You may also charge your headset using a micro-USB cable connected to a power source.

Low battery warnings

Battery Level	Voice Prompt
30 minutes of talk time remaining	"Battery Low" repeats every 15 minutes
10 minutes of talk time remaining	"Recharge Headset" every 5 minutes

Load software

Download Poly Lens App to get the most out of your device. Some softphones require the installation of Poly software to enable device call control(answer/end and mute) functionality.

- Download Poly Lens Desktop App at poly.com/lens.
- Download Poly Lens Mobile App at poly.com/lens, the App Store or Google Play.



	Poly Lens Mobile App	Poly Lens Desktop App
Configure call control for softphones	available for some softphones	✓
Change headset language	✓	✓
Enable features	✓	✓
Battery meter	✓	✓
Update device firmware	✓	✓
Manage notifications and alerts	✓	✓
Schedule health and wellness reminders	✓	✓
View user guide	✓	✓
FindMyHeadset	✓	

Update firmware

Keep your firmware up-to-date to improve performance and add new features to your Poly device.


Update your firmware using your computer with Poly Lens Desktop App . Download at poly.com/lens.

While updating firmware:

- Do not use your Poly device until the update is complete.
- **Disconnect your Poly device from paired devices such as phones, tablets and computers.**
- Do not start a second update from a second device.
- Do not stream media.

- Do not answer or place a call.

Basics

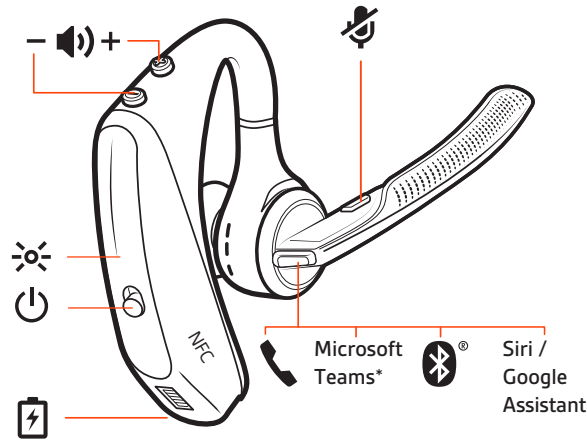



Power on/off

Power on your headset.

- Slide the Power  switch to power on the headset.

Adjust volume



- **Headset volume** Fine-tune your headset volume by adjusting the headset's volume up (+) and down (-) controls.
- **Desk phone volume** When you are on a desk phone call and your voice is too quiet/loud, adjust the speaking  volume on the bottom of the base. If your caller's voice is too loud/quiet on a desk phone call, adjust the listening  volume.
- **Base ringtone volume** Adjust the base ringtone volume setting in Poly Lens Desktop App . This ringtone alerts you if you are not wearing your headset and a call comes in.

Adjust headset microphone volume (softphone)


Adjust your headset volume for softphone calls.

- Place a test softphone call and adjust softphone volume and PC sound volume accordingly.


Make, answer, end calls

On the base there are 2 Audio buttons: computer  and desk phone . These buttons allow you to switch to a different audio source.

Make a call (computer or desk phone)

1. Tap an Audio button  on your base display. You hear a dial tone.



NOTE: Desk phone only: Press the phone's Headset  button or manually remove the handset if you don't have an HL10 lifter or EHS cable.




TIP: If you do not hear a dial tone, turn over the base and adjust the switch (A-G). "A" works for the majority of desk phones. "D" works for Cisco phones.


2. Dial from your softphone or desk phone.

Answer or end a call


To answer or end a call, choose:

- Tap the headset Call  button.

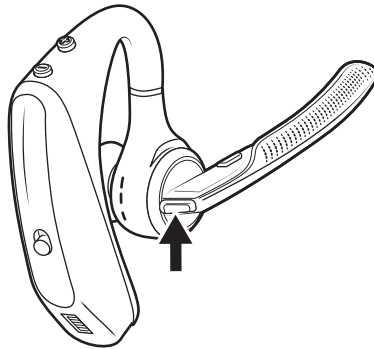

- **Computer or desk phone:** Tap the corresponding Audio button .





NOTE: Desk phone only: If you don't have an HL10 lifter or EHS cable, Press the phone's Headset  button or manually remove the handset when answering a call or hang up the handset when ending a call.

Mute

- During an active call, tap the Mute  button to mute or unmute your headset.

Hold a call



- To hold an active call or resume a held call:
 - Headset: Double-press the Call .
 - Base: Tap the corresponding Computer or Desk phone Audio  button. The button flashes red when a call is on hold.




NOTE: Two desk phone calls can be put on hold only from your desk phone. Check your desk phone user guide.

Switch between calls (flash)


Switch between two calls on your headset. This feature is not available for mobile phone calls.

- To switch between calls:
 - Headset: Double-press the Call .
 - Base: Tap the corresponding Computer or Desk phone Audio  button. The button flashes red when a call is on hold.


 **NOTE:** Switching 2 desk phone calls can be done only from your desk phone. Check your desk phone user guide.

Launch Microsoft Teams (Teams model only)

You can easily open and use your Teams desktop application with your Microsoft Teams-certified headset system.

Your base and headset each have a Teams  button to quickly open and use the Microsoft Teams desktop app. The base Teams button illuminates when you have a meeting or notification.

 **TIP:** Your headset's Call  button is also a Teams button.

- When not on a call, tap the Teams  button to view Microsoft Teams app on your computer.
- When the base's Teams button LED pulses purple, tap to join your meeting.
- When the base's Teams button LED is solid purple, tap to view your Teams notifications.

 **NOTE:** Teams model and Teams desktop application required. Teams mobile application is not supported.

Use sensors


Smart sensors respond when you put on or take off your headset. Customize in Poly Lens App . Below describes default settings.


With active sensors	putting on the headset will:	taking off the headset will:
Mobile/softphone call	answer the call	keep call in headset
Music/media	resume music/media (if playing previous to taking off)*	pause music/media (if playing)*
Lock headset	unlock the Call button	lock the Call button to avoid accidental calls

 **NOTE:** *Functionality varies by application. May not function with web-based apps.


Reset sensors

You may need to reset the sensors if they are not working as expected.

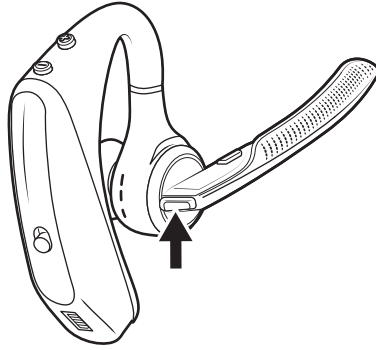

- Wearing the headset, tap the Call  button to test sensors. A talk time voice alert means sensors are working. A tone or lack of voice prompts means sensors need to be reset.

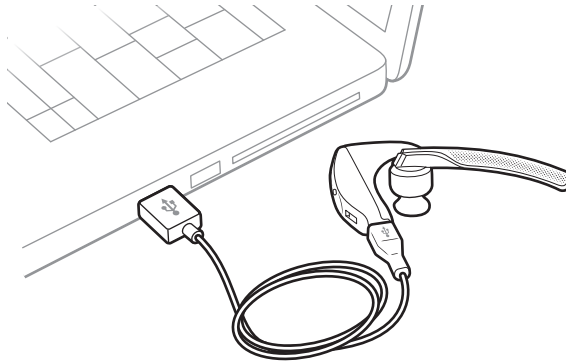

- To reset the sensors, power on the headset, connect the headset to a USB cable and plug the cable into your computer's USB port or an AC wall adapter (not included). Then place the headset on a flat, non-metallic surface for more than 10 seconds.




Disable sensors

- You can disable your headset smart sensors in Poly Lens App or by using a button press while your headset is idle. Simultaneously press and hold the Call  and Mute  buttons for 5 seconds. You hear "smart sensors off."

More Features

Configure and use additional earbud features.

Play or pause audio

- Tap the Call  button to pause or resume streaming audio.



NOTE: Functionality varies by application. May not function with web-based apps.

Voice assistant (smartphone feature)

- **Siri, Google Assistant™, Cortana** Press and hold the Call button for 2 seconds to activate your smartphone's default voice assistant. Wait for the phone prompt to activate voice dialing, search, and other smartphone voice controls.

Voice assistant is only active when your headset is out of base range and paired to a smartphone.

Change your default line

Change the default outbound phone line/audio channel.

- With the system idle, do one of the following:
 - On your base, press the desired audio button for 4 seconds until it flashes 4 times.
 - Download and open Poly Lens Desktop App on your computer, go to **Device Name > Settings > General > Default Phone Line** and choose the desired audio line.

Enable and use Amazon Alexa (smartphone feature)

With Alexa enabled on your headset, you can ask for directions, call friends, access Alexa Skills and more.



NOTE: Amazon Alexa isn't available in all languages and countries.

1. Enable Alexa
 - a. Pair the headset to your mobile device
 - b. Download or update your Poly Lens App (software) if necessary. Download: poly.com/software

- c. Launch Poly Lens App and ensure that your headset (firmware) is up-to-date
 - d. From Poly Lens App main menu, choose **Apps > Amazon Alexa > Enable**
 - e. Launch the Amazon Alexa app and follow the instructions to set up your headset
2. Use Alexa
 - To use Alexa, tap the Mute button (when not on a call) and ask a question. You hear a tone when Alexa is activated.

Enable Tile

With the Tile app enabled on your mobile device, you can ring your lost headset or locate it on a map and ask the Tile community for help.

1. Pair the headset to your mobile device
2. Download or update your Poly Lens App (software) if necessary. Download: poly.com/software
3. Launch Poly Lens App and ensure that your headset (firmware) is up-to-date
4. From Poly Lens App main menu, choose **Apps > Tile > Enable**
5. Launch the Tile app and follow the instructions to connect your headset

Troubleshooting

Headset


Issue	Resolutions
I can't hear a dial tone in the headset.	<ul style="list-style-type: none">• Make sure your headset is charged.• Make sure your headset is paired to base. See Pair headset to base on page 8.• Adjust the configuration switch (A-F) on the bottom of the base until a dial tone is heard. The default A works for most phones. Use configuration D for Cisco phones. Cisco phones connected with EHS cable use configuration A.• Make sure your desk phone is connected correctly to your base. See Desk phone setup details on page 1.• If your base is connected to your desk phone's dedicated headset port, press the desk phone's headset button to hear a dial tone.• If your base is connected to your desk phone's dedicated headset port, press the desk phone's headset button and base's desk phone button to hear a dial tone.• If your base is connected to your handset port, manually remove the handset to hear a dial tone (if you do not have an EHS cable or HL10 lifter).• Make sure your HL10 lifter is lifting the handset high enough to operate the hookswitch; set to a higher setting if necessary.• Adjust the headset's listening volume. See Adjust volume on page 14.• If the volume is still too low, adjust the desk phone listening volume on the base. See Adjust volume on page 14.
Can I connect my headset to a mobile phone and the base at the same time?	Yes, your headset remembers up to 8 devices, but connect to up to 2 devices at a time. That includes your base.
I hear static.	<ul style="list-style-type: none">• Make sure there is at least 12 inches between your base and your computer, and 6 inches between your base and your telephone. If adjusting the distance doesn't help, your headset is going out of range, move closer to the base. See Position Your Base on page 3


Issue	Resolutions
The sound is distorted.	<ul style="list-style-type: none"> Lower the desk phone speaking volume and/or desk phone listening volume on the base. For most telephones the correct setting is position 2. See Adjust volume on page 14. If your desk phone has a volume control, lower until the distortion disappears. If the distortion is still present, adjust the headset volume control to lower the headset speaker volume. See Adjust volume on page 14. Make sure there is 12 inches between your base and your computer, and 6 inches between your base and your telephone. See Position Your Base on page 3.
I hear echo in the headset.	<ul style="list-style-type: none"> Lower the desk phone speaking volume and/or desk phone listening volume on the base. For most telephones the correct setting is position 2. See Adjust volume on page 14. If the audio level is too low in this position, increase the headset volume. See Adjust volume on page 14. If your speaking volume is too low for your listener in this position, adjust the position of the headset to make sure the microphone is as close as possible to your mouth.
People I talk to can hear a buzz in the background.	<ul style="list-style-type: none"> Move the base further away from your phone. See Position Your Base on page 3. If the base power supply is plugged into a power strip, plug it into the wall directly.
I can't activate Siri or Google Now on my headset.	<p>Your smartphone's default voice assistant is a mobile-only feature and is not active when your headset is in range of your base.</p> <ul style="list-style-type: none"> Ensure that your headset is out of base range Ensure that the headset is paired to your smartphone See Voice assistant (smartphone feature) on page 18

Desk phone

Issue	Resolutions
The handset lifter is installed but does not lift the handset.	<ul style="list-style-type: none"> Be sure the handset lifter power cord is firmly pushed into the handset lifter jack on the base.

Softphone

Issue	Resolutions
When I dial from my softphone application, nothing happens.	<ul style="list-style-type: none">• Ensure your headset is charged.• Ensure your headset is paired to the base. See Pair headset to base on page 8.• Ensure that Poly Lens Desktop App is installed. Download: poly.com/lens.• If Poly Lens Desktop App is not installed and you do not have a compatible softphone, you must first press the base's Audio button and then use the softphone interface to place/answer/end calls.• Ensure that the headset is the default sound device by going to your Sound Control Panel (Windows) or your Sound System Preferences (Mac).• Restart your computer.
Speaking and/or listening volume is too low or too high.	<ul style="list-style-type: none">• Adjust headset listening volume with volume button.• Adjust listening/speaking volumes in the computer's sound control panel/system preferences.• Adjust listening/speaking volumes in the softphone application.
The sound is distorted or I hear an echo in the headset.	<ul style="list-style-type: none">• Reduce speaking and/or listening volume on the computer using your softphone application.• Point microphone towards your chin.• If the distortion is still present, lower the volume on the headset.
I can no longer hear any audio through my PC Speakers.	<p>For Windows 10 and Windows 8 systems</p> <ul style="list-style-type: none">• Go to Start > Control Panel > Sounds and Audio Devices > Audio > Sound Playback and change the default setting from your headset to your PC speakers. Click "OK" to confirm your change. <p>For Windows Vista and Windows 7 systems</p> <ul style="list-style-type: none">• Go to Start > Control Panel > Sounds > Playback and change the default setting from your headset to your PC speakers. Click "OK" to confirm your change. <p>For Mac OS X</p> <ul style="list-style-type: none">• Choose Apple menu > System Preferences and click Sound.• Click Output, and then select "Internal Speakers" or your speaker choice.
(Teams model only) How do I interact with Microsoft Teams?	<ul style="list-style-type: none">• Tap the headset Call  button or your base's Teams  button to quickly open and use Microsoft Teams. See Launch Microsoft Teams.• Set your target softphone in Poly Lens Desktop App

Issue	Resolutions
(Teams model only) Does my Microsoft Teams-enabled headset work with other softphones?	<p data-bbox="874 226 1461 300">Yes, while your headset is optimized for Microsoft Teams, it can be configured to use with other supported softphones. Set your target phone by going to Poly Lens Desktop App .</p> <p data-bbox="874 327 1409 352">When you configure another softphone, the Call  button:</p> <ul data-bbox="874 380 1233 499" style="list-style-type: none"><li data-bbox="874 380 1177 405">● doesn't interact with Teams<li data-bbox="874 428 1233 453">● doesn't go to Teams notifications<li data-bbox="874 476 1137 499">● will not launch Cortana

Support

NEED MORE HELP?

poly.com/support

HP Inc.

1501 Page Mill Road
Palo Alto, CA 94304, U.S.A.
650-857-1501

HP REG 23010, 08028

Barcelona, Spain

HP Inc UK Ltd

Regulatory Enquiries, Earley West
300 Thames Valley Park Drive
Reading, RG6 1PT
United Kingdom

台灣惠普資訊科技股份有限公司

臺北市南港區經貿二路 66 號 10 樓
電話: 02-37899900

© 2024 Poly. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All trademarks are the property of their respective owners.

RMN (Regulatory Model Number): Headset: POTE16, base: CB5232(-M) CD.