All pictures in this manual are for reference only. Please refer to the actual product

USB Camera | User Manual

❖ Safety Warnings

Before using and operating the camera, please read and carefully follow all precautions to avoid any dangerous and/or illegal use.

✧ Placement

1) DO NOT expose the camera to heat sources (such as a portable heater).
2) Normal operating temperature is 0-40°C (32-104°F) and normal operating humidity is 10% - 90% RH.
3) To avoid internal circuit or other component failure, DO NOT store or use in dusty and humid environments.
4) The camera is NOT water-proof, nor is it dust-proof. DO NOT expose the camera to direct sunlight as high temperatures could impact its operability.

✧ Child Safety

1) The camera and included accessories may contain small parts not suitable for children; please place out of the reach of children.

✧ Power Supply

1) Please use the standard cable supplied with the camera

✧ Water Precaution

1) The camera is not waterproof. Please keep it dry and away from liquids.

✧ Maintenance

1) Please contact the customer service department for maintenance.
2) If the camera is damaged, please do not disassemble or attempt to repair. Please call customer service to request any repairs.
3) DO NOT insert any sharp or pointed objects into the camera or accessories.
4) To avoid damage to the camera, please DO NOT drop or hit it.
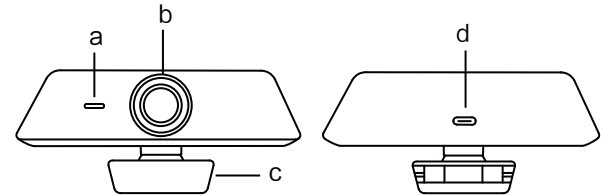
USB Camera

❖ Statement

1) Intellectual property right statement: The hardware design and software of this product are covered by patents. Anyone who reproduces this product or the content of the instruction without proper prior authorization shall assume any legal liability.
2) This manual is for reference only. The actual function and appearance of the final product received by the customer may vary from the reference models depicted in these instructions.
3) The pictures herein are for reference only. Please refer to the actual product received. We reserve the right to improve and change the appearance and design of the product without notice.

❖ Accessories

USB-C to USB-A cable ×1

1. Introduction

Please familiarize yourself with the camera's interface before use.

a.Indicator Light   b.Camera

c.Camera Bracket   d.USB Type-C

2. Connecting

Step 1：Please rotate the camera's bracket to face the back, as illustrated.

Step 2：Please use the supplied USB-C cable to connect the camera to the display.