

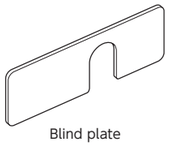
80871954

Buzzer Unit BU01 Installation Guide

Check the supplied accessories

Check the following table to see which parts are needed for each model, then follow the procedures to install the buzzer.
If parts are missing or damaged, please contact the retailer.

Supplied accessories	 Bracket	 Buzzer unit	 M2.6 screws x 2	 M3 screws x 2	 Blind plate	 Ferrite core
TSP100/Ⅱ/Ⅲ Series	Used	Used	Used	Only 1 required	Not Used	Not used except for TSP100GT Used with TSP100GT only
TSP650Ⅱ Series	Used	Used	Used	Only 1 required	Not Used	Not Used
TSP700Ⅱ Series	Not Used	Used	Not Used	Not Used	Used	Not Used
SP700 Series	Not Used	Used	Not Used	Used	Not Used	Not Used


Installing the buzzer on the printer

The following explains the buzzer installation procedure for the TSP100 Series, TSP650II, TSP700II, and SP700.
For printers other than those listed above, scan the QR code at right and select the printer that you are using from the page that is displayed. Then follow the procedure in the online manual to install the buzzer.


Note : To ensure safety, be sure to turn OFF the power and disconnect the printer power plug from the electric outlet before beginning installation.

● For TSP100/Ⅱ/Ⅲ/650Ⅱseries


1. Remove the ground fitting by sliding it in the direction of the arrow.

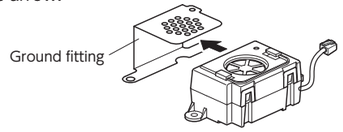


2. Pull the 4 hooks on the lower case outwards, and remove the upper case. Remove the 2 screws, and remove the buzzer from the lower case. [See Fig. 1]
3. Install the buzzer onto the bracket, and secure the buzzer using the 2 included M2.6 screws. [See Fig. 2]
4. Stow the buzzer cable between the buzzer and the side of the bracket. [See Fig. 3]
5. Insert the hook of the bracket (A in Fig. 4) on the notch (B in Fig. 4) of the printer to attach it, and fix it with one M3 screw included in the package. [See Fig. 4]
6. Connect the connector of the buzzer cable to the external device port on the back of the printer to complete the installation. [See Fig. 5]
Note: When using a TSP100GT, install the provided ferrite core.

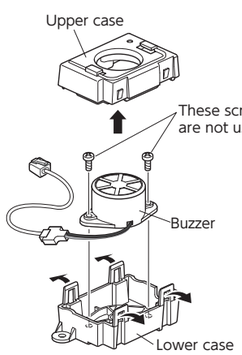


[Fig.1]

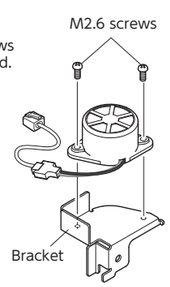

[Fig. 2]

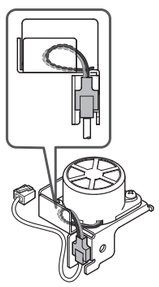

[Fig. 3]

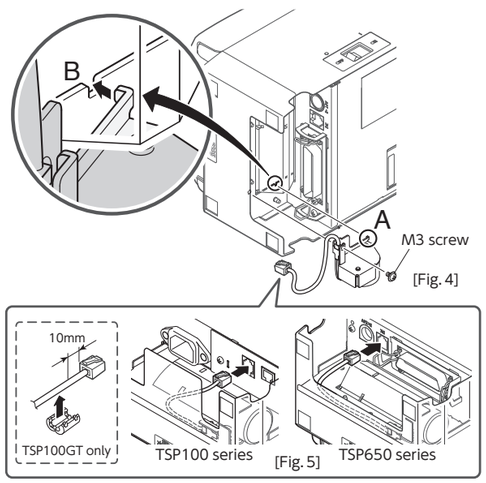


[Fig. 4]
[Fig. 5]

● For TSP700II


1. Remove the ground fitting by sliding it in the direction of the arrow.

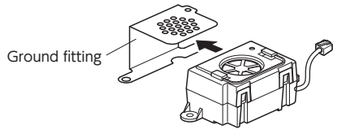


2. Pull the 4 hooks on the lower case outwards, and remove the upper case. Remove the 2 screws, and remove the buzzer from the lower case. [See Fig. 1]
3. Install the buzzer onto the cable cover, and secure the buzzer using the screws removed in step 2. [See Fig. 2]
4. Connect the connector of the buzzer cable to the external device port on the back of the printer. [See Fig. 3]

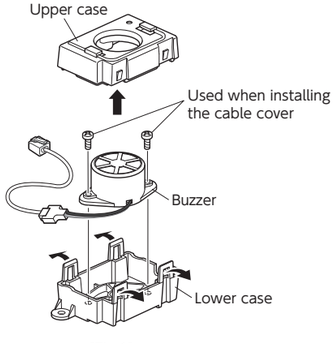


[Fig.1]

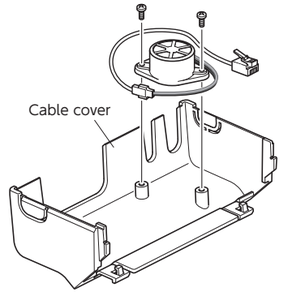


[Fig. 2]

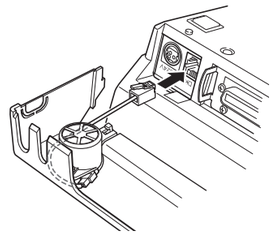
[Fig. 3]

5. Install the cable cover onto the printer. [See Fig. 4]
6. Affix the blind plate to the cable cover to complete the installation. [See Fig. 5]

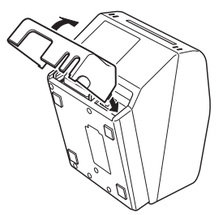

[Fig. 4]

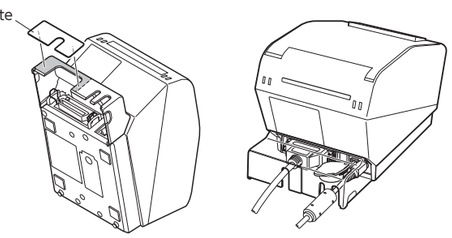

[Fig. 5]

● For SP700

1. Install the buzzer on the bottom surface of the printer, and secure it using the 2 included M3 screws.
2. Connect the connector of the buzzer cable to the external device driver port on the printer to complete the installation.

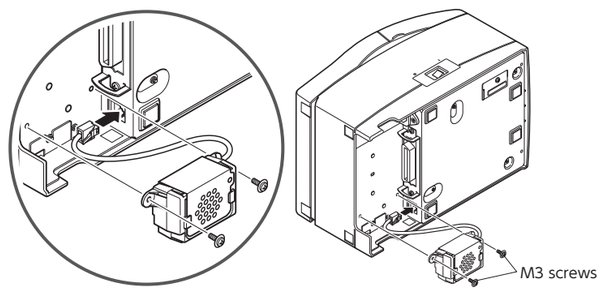

© 2007-2022 Star Micronics Co., Ltd.