
POLY EDGE E400 SERIES

ENGLISH
Poly Edge E400 Series Product Specifications
Screen: 3.5" color IPS LCD screen
Power: Built-in auto sensing IEEE 802.3af Power- over-Ethernet (Class 4) 13 W (max)
Frequency response: 150 Hz-14 kHz
Codecs: G.711 (A-law and µ-law), G.729AB, G.722 (HD Voice), G.722.1, iLBC, OPUS
Hearing aid compatibility: ITU-T P.370 and TIA 504A standards
Operating Temperature: 0 to 40°C (+32 to 104°F)

BAHASA INDONESIA
Spesifikasi Produk Seri Poly Edge E400
Layar: Layar IPS LCD berwarna 3,5 inci
Daya: Sensor otomatis internal IEEE 802.3af Power-over-Ethernet (Kelas 4) 13 W (maks)
Respon frekuensi: 150 Hz-14 kHz
Codec: G.711 (A-law dan µ-law), G.729AB, G.722 (HD Voice), G.722.1, iLBC, OPUS
Kompatibilitas alat bantu dengar: Standar ITU-T P.370 dan TIA 504A
Suhu Pengoperasian: 0 hingga 40°C (+32 hingga 104°F)


ENGLISH
LED Status Indicators
Breathing green - Incoming call
Solid green - Active call
Breathing red - Held call; new voicemail messages
Breathing yellow - Off-hours mode
Chasing blue - Bluetooth discovery in progress

BAHASA INDONESIA
Indikator Status LED
Hijau putus-putus - Panggilan masuk
Hijau solid - Panggilan aktif
Merah putus-putus - Panggilan ditahan; ada pesan suara baru
Kuning putus-putus - Mode Off-hours (di luar jam kerja)
Biru berkejaran - Penemuan Bluetooth sedang berlangsung

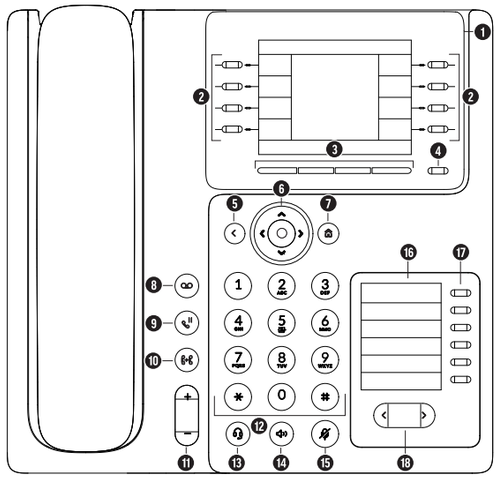

ENGLISH
Poly Edge E400 Series Hardware
1. LED bar
2. Line keys
3. Softkeys
4. Pagination key
5. Back key
6. Navigation keys / Select key
7. Home key
8. Messages key
9. Hold key
10. Forward / Transfer key
11. Volume keys
12. Dialpad
13. Headset key
14. Speakerphone key
15. Mute key
16. Secondary screen
17. Secondary screen line keys
18. Secondary screen pagination keys

BAHASA INDONESIA
Perangkat Keras Seri Poly Edge E400
1. Bilah LED
2. Tombol Line (Saluran)
3. Softkey (Tombol Lunak)
4. Tombol Pagination (Paginasi)
5. Tombol Back (Kembali)
6. Tombol Navigation (Navigasi) / Tombol Select (Pilih)
7. Tombol Home (Beranda)
8. Tombol Message (Pesan)
9. Tombol Hold (Tahan)
10. Tombol Forward (Teruskan) / Transfer
11. Tombol Volume
12. Dialpad (Papan Angka)
13. Tombol Headset
14. Tombol Speakerphone (Pengeras Suara Telepon)
15. Tombol Mute (Bisu/Senyap)
16. Layar Sekunder
17. Tombol saluran layar sekunder
18. Tombol pagination (paginasi) layar sekunder

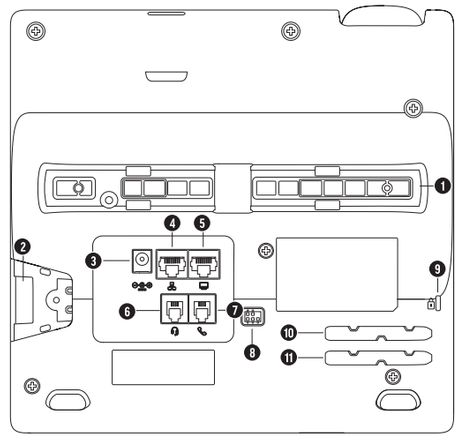

ENGLISH
Poly Edge E400 Series Ports
1. Stand connection slots
2. USB ports
3. Power port
4. Network port
5. Computer connection network port
6. Headset port
7. Handset port
8. Electronic Hookswitch (EHS)
9. Security slot
10. Handset cable slot
11. Headset cable slot

BAHASA INDONESIA
Port Seri Poly Edge E400
1. Slot sambungan dudukan
2. Port USB
3. Port Daya
4. Port Jaringan
5. Port jaringan koneksi komputer
6. Port Headset
7. Port Handset (Gagang Telepon)
8. Electronic Hookswitch (EHS)
9. Slot Keamanan
10. Slot kabel Handset (Gagang Telepon)
11. Slot kabel Headset

ENGLISH
Maintenance Instructions

When cleaning desk phones with keypads or phone accessories, be careful to not let any of the disinfecting solution seep into the phone or accessory. To effectively clean your Poly phones and accessories, you need cotton balls and cotton swabs.

1. Unplug all cables from the phone and accessories.
2. Dip a cotton ball into a medicinal isopropyl alcohol and water solution of 70:30, making sure to squeeze out any excess liquid.
3. Wipe all hardware surfaces and be careful not to wipe ports or cable connections.
4. Dip a cotton swab into the alcohol/water solution and clean around the buttons.
5. Let the phone and accessories air-dry completely before reconnecting any cables.

BAHASA INDONESIA
Petunjuk Pemeliharaan

Saat membersihkan desk phone (telepon meja) dengan keypad (papan tombol) atau aksesori telepon, berhati-hatilah agar larutan disinfektan tidak meresap ke dalam telepon atau aksesori. Untuk membersihkan telepon dan aksesori Poly secara efektif, Anda memerlukan bola kapas dan penyeka kapas.

1. Lepaskan semua kabel dari telepon dan aksesorinya.
2. Celupkan bola kapas ke dalam larutan obat isopropil alkohol dan air dengan perbandingan 70:30, pastikan untuk memeras sisa cairan.
3. Seka semua permukaan perangkat keras dengan hati-hati agar tidak menyeka port atau sambungan kabel.
4. Celupkan kapas ke dalam larutan alkohol/air dan bersihkan di sekitar tombol.
5. Biarkan telepon dan aksesorinya benar-benar kering sebelum menghubungkan kembali semua kabel.

support.hp.com/poly

Poly Edge E400

Nomor Registrasi di Kementerian Perdagangan: IMKG.206.01.2024

Importir: PT. Hewlett-Packard Indonesia
Alamat: Gedung Perkantoran Prudential Centre.Kota Kasablanka Lantai 9, JL. Casablanca Kav. 88 Menteng Dalam, Tebet .12870 Jakarta Selatan, Indonesia

© 2024 Poly. All trademarks are the property of their respective owners.

P00113-001A 01.24
RMN/型號/型号: POLY EDGE E400; POLY EDGE E450

ENGLISH
Instructions for Use

Use the Handset, Headset, or Speakerphone
You can place and answer calls on your phone using the handset, headset, or speakerphone, and you can alternate among the three modes during calls, if available.

When using the speakerphone, the Speakerphone key glows green. When using the headset, the Headset key glows green if an analog headset is connected or blue if a USB headset is connected.

During a call, pick up the handset, press the Headset key, or press the Speakerphone key.

BAHASA INDONESIA
Petunjuk Penggunaan

Menggunakan Handset (Gagang Telepon), Headset, atau Speakerphone (Pengeras Suara Telepon)
Anda dapat melakukan dan menjawab panggilan di telepon menggunakan handset (gagang telepon), headset, atau speakerphone (pengeras suara telepon), dan bisa bergantian di antara ketiga mode tersebut selama panggilan, jika tersedia.

Saat menggunakan speakerphone (pengeras suara telepon), tombol Speakerphone (pengeras suara telepon) akan menyala hijau. Saat menggunakan headset, tombol Headset akan menyala hijau jika headset analog terhubung atau biru jika headset USB terhubung.

Saat panggilan berlangsung, angkat handset (gagang telepon), tekan tombol Headset, atau tekan tombol Speakerphone (pengeras suara telepon).