


ONE X2's Waterproofing: What to Know

English / 简体中文 / 日本語

V2.1


English

1. Before use, make sure the USB lock cover, battery lock cover and the battery's rubber seal are intact and functioning properly. If there are any issues or you are unsure, please contact Insta360 Support. *Note:* Strong vibrations, shocks, or pressure to the camera may compromise the waterproofing performance.

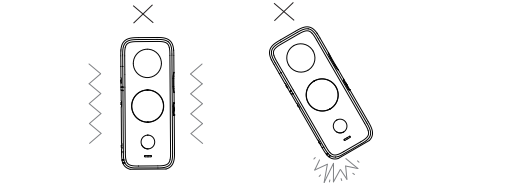


2. When using in or around water, dirt or sand, make sure to properly **close the battery lock cover and USB lock cover** ((the


yellow indication marks should not be visible and you should hear a clicking sound when they are closed correctly).




3. When using ONE X2 in water, please lock the touch screen to avoid accidental button presses. After locking the touch screen, you can use the Power / Function Button to change modes.

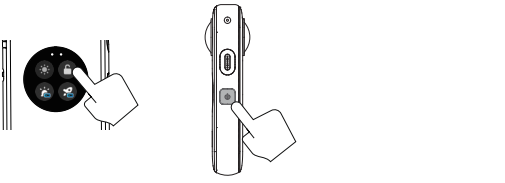


4. Always ensure that the battery lock cover and USB lock cover are free from any foreign objects before closing. If necessary, clean with a soft, dust-free cloth.

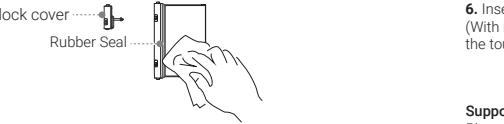

5. To close the USB lock cover: ① Push the thin cord of the cover back into the slot, taking care not to bend it. ② Insert the top part of the cover. ③ Press the rest of the cover into place, then slide the lock buckle down until it clicks. ④ When the yellow indication mark is covered, this indicates that the USB lock cover has been properly closed.

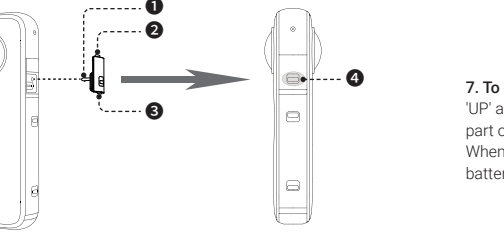


6. Insert a Micro SD card (With its label facing outward towards the touch screen)

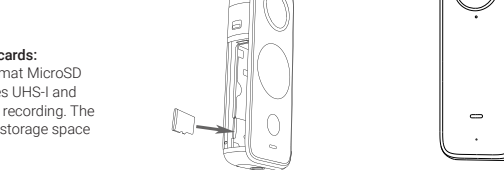

Supported Micro SD cards: Please use exFAT Format MicroSD cards of speed classes UHS-I and V30 to ensure normal recording. The maximum supported storage space is 1TB.

7. To close the battery lock cover: ① Insert the battery with the 'UP' arrow pointing towards the camera lens. ② Press the middle part of the battery lock cover (not the lock buckles) until it clicks. When the yellow indication marks are covered, this indicates the battery lock cover has been closed completely.

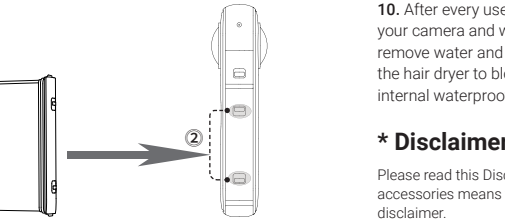

8. Please use our official Dive Case or other official accessories for underwater shooting with ONE X2. While ONE X2 is waterproof without a case, stitching and image quality underwater will be affected.

9. After every use in water, clean and dry ONE X2 with a soft cloth. Failure to properly dry ONE X2 might result in damage to the camera. If using in salt water, soak the camera in fresh water for 15 minutes and rinse with fresh water before drying. Make sure your camera is clean and dry before opening the battery lock cover and USB lock cover.

10. After every use in water, for the best audio performance, shake your camera and wait until it dries naturally or blow on the mic to remove water and debris from the microphone holes. Do not use the hair dryer to blow into the mic holes. This could damage the internal waterproof membranes.

* Disclaimer

Please read this Disclaimer carefully. Using the camera and its relevant accessories means that you acknowledge and accept the terms of this disclaimer. By using this camera, you hereby acknowledge and agree that you are solely responsible for your own conduct when using this camera and any consequences thereof. You agree to use this camera only for proper and lawful purposes. You understand and agree that Arashi Vision Inc. (hereinafter referred to as 'Insta360') accepts no liability for any and all misuse, consequences, damages, injuries, penalties, or any other legal responsibility directly or indirectly incurred by your using this camera and associated accessories. Before every use, make sure that your accessories are functioning properly. If there's any damage or irregularity, stop using them immediately. Within the scope of state laws and regulations, Insta360 reserves the right of final explanation and revision for the commitment.

中文

1、使用前, 请检查 USB 盖、电池卡扣、防水胶圈是否完整, 如发现破损, 请联系 Insta360 官方技术支持。对相机施加剧烈的震动、冲击或压力可能会影响相机的防水性能。



2、当相机在水下、近水、潮湿、多尘、多沙等环境中使用时, 请**确保电池盖和 USB 盖已完全锁紧** (黄色标识显示不可见), 否则将影响整机的防水性能。



3、当相机在水下使用时, 请使用锁屏功能, 将屏幕锁定, 以防误触屏。此时, 使用机身电源 / 功能键可切换拍摄模式。



4、关闭电池盖和 USB 盖之前, 确保电池盖防水胶圈和 USB 盖组件无灰尘和异物。如有需要, 用无尘布清洁密封件。




USB 盖, 直至发出咔哒声; ④ 拨钮处的黄色标示显示不可见时, 表明 USB 盖已完全锁紧。



6. 插入 Micro SD 卡 (标签朝向相机有屏幕的一侧)

支持的 Micro SD 卡: 请使用 UHS-I、V30 及以上和 exFAT 格式的 Micro SD/TF 存储卡, 速度过低可能导致无法正常录像; Micro SD 卡最大内存可支持 1TB。

7、**電池蓋鎖合步骤**：① 根据电池“UP” 标示置入电池；② 按压电池盖中部（请勿按压两侧拨扭），直至发出咔哒声。拨扭处的黄色标示显示不可见时，表明电池盖已完全锁紧。

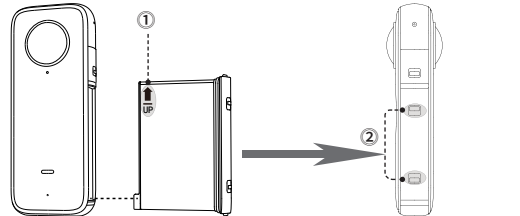

8、ONE X2 裸机下水之后无法对焦拍摄，为保证拍摄效果，请购买官方专用潜水保护镜或潜水壳进行拍摄。

9、水下使用后，为避免机身残留水滴损坏相机（每次在海水中使用后，先将相机放入清水中浸泡 15 分钟，然后用水彻底冲洗干净），务必用软布将相机充分擦干。打开电池盖和 USB 盖前，请确保相机洁净干燥。

10、水下使用后，为获得最佳音频效果，用力甩干并自然晾干相机或向麦克风吹气，以清除麦克风小孔中的水或碎屑。请勿使用吹风机吹扫麦克风小孔。这会损坏内部防水膜。

* 免责声明


请仔细阅读本声明，一旦使用相机及其相关配件，即视为对本声明的全部认可和接受。

每次使用前，请仔细检查相机及其相关配件，若出现破损、变形，请勿使用。使用本相机，就意味着您认可并同意，您将对本相机的行为和可能产生的后果负全部责任。您承诺仅会出于正当合法的目的使用本相机。您理解并同意，对于直接或间接因使用本相机而造成的滥用、不利影响、损害、伤害、惩罚或者其他法律后果，影石创新科技股份有限公司（以下简称“Insta360”）将不承担任何责任。用户应遵循包括但不限于本文提及的使用注意事项。

在国家法律法规范围内，本承诺解释权、修改权归 Insta360 所有。


日本語

1、使用前に、USB ロックカバー、バッテリーロックカバー、バッテリーのゴムパッキンが正常な状態かつ機能していることを確認してください。問題がある場合、もしくは不確かな場合は Insta360 サポート service.jp@insta360.com にご連絡ください。注意：本製品に強い振動や衝撃、圧力を加えると防水性能が劣化する可能性があります。

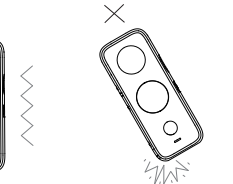


2、水中もしくは水回り、埃っぽい場所や砂の上で使用する際は、バッテリーロックカバーおよび USB ロックカバーを正しく閉め、防水性能に影響がないようにしてください。USB ロックカバーは


黄色いマークが見えない状態にします。



3、水中で使用する際、誤って押さないようにタッチスクリーンはロックしてください。タッチスクリーンをロックした後は電源 / ファンクションボタンでモード変更できます。

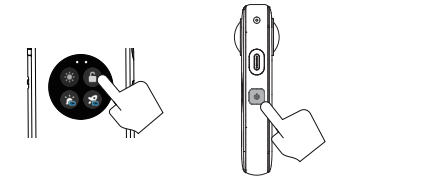


4、バッテリーロックカバーおよび USB ロックカバーには異物が混入していないことを常に確認してください。必要に応じて、柔らかくて清潔な布で拭いてください。

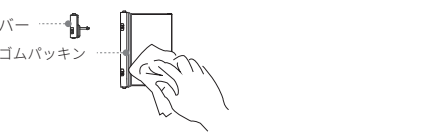


5、**USB ロックカバーの閉じ方**：① カバーの細いコードを、曲げないようにしながら接続口に入れます。② カバー上部を挿入します。③ カバーの残りの部分を押し込み、ロックバックルを下にスライドさせます。クリック音がすることを確認してください。④ 黄色いマークが見えない状態であれば、USB ロックカバーは正しく閉じられています。

6. **MicroSD カードを挿入します**
(ラベル面がタッチスクリーン側になる向きで挿入します)

対応 **MicroSD カード**：
MicroSD カードはスピードクラス UHS-1 V30 対応で exFAT フォーマット済みのものをご使用ください。サポートする最大容量は 1TB です。

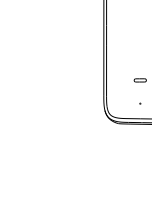

7、**バッテリーロックカバーの閉じ方**：① 「UP」と書かれた矢印がカメラレンズを向くよう、バッテリーを挿入します。② バッテリーロックカバーの真ん中を押します (ロックバックルは押さないでください)。クリック音がすることを確認してください。黄色いマークが見えない状態であれば、バッテリーロックカバーは正しく閉じられています。

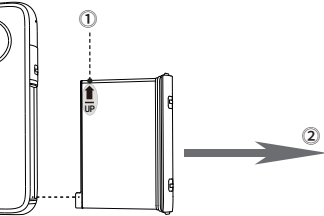

8、ONE X2 を水中撮影で使用する際は、公式の潜水ケースもしくは他の公式アクセサリをご利用ください。ONE X2 の本体は防水ですが、水中で使用した場合はスティッチングや画質に影響が出ます。

9、ONE X2 を水中で使用した後、柔らかい布で水滴を拭き取ってください。海で使用した後は、必ず水道水で優しく洗い流してから乾燥させてください。バッテリーロックカバーと USB ロックカバーを開ける前に、カメラが清潔かつ乾燥していることを確認してください。

10、オーディオパフォーマンスを最大限発揮するために、水中での使用後は必ずカメラを振って自然に乾燥するまで待つか、マイク穴に風を吹き付けて水分や異物を除去してください。マイク穴には圧縮空気は吹き込まないでください。カメラ内部の防水膜を損傷するおそれがあります。

* 免責事項

本免責事項をよくお読みください。本カメラと関連アクセサリを使用することで、お客様は本免責事項の規約を承認し同意したことになります。

本カメラを使用することにより、本カメラ使用時のユーザーの行為およびその結果について、ユーザーが単独で責任を負うことを認め、同意したことになります。ユーザーは本カメラを適切かつ合法的な目的にのみ使用することに同意するものとします。本カメラおよび関連アクセサリの使用により直接的または間接的に生じた、あらゆる誤用、影響、損害、傷害、罰則、またはその他の法的責任について、ユーザーは Arashi Vision Inc. (以下「Insta360」とします) が一切の責任を負わないことを理解し、同意するものとします。

使用する前に必ず、アクセサリが正しく機能していることを確認してください。損傷や異常がある場合は直ちに使用を中止してください。Insta360 は、国の法律および規制の範囲内で、本免責事項の最終的な説明及び改訂の権利を留保します。