Quick Reference Guide
Guía de referencia rápida
Guia de referência rápida

FLUKE®

FLUKE CONNECT®


1587 FC/1587/1577
Insulation Tester

Go to www.fluke.com to register your Product, read the Users Manual and find more information.

Vaya a www.fluke.com para registrar el producto, descargar manuales y obtener más información.

Acesse www.fluke.com.br para registrar seu Produto, ler o Manual do Usuário e obter mais informações.

Voltage V̈ V̄ mV̄

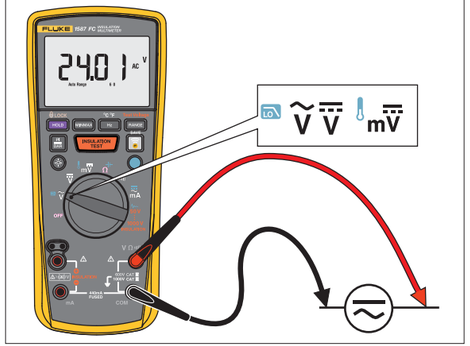

Fluke Connect




1. Download the Fluke Connect app.
2. Turn on the phone's Bluetooth.
3. Turn on the Tester and push to activate the radio.
4. Make sure that the radio is active.
5. Go to the phone and start the Fluke Connect app.
6. Tap **Capture Measurements**.
7. Tap **Fluke 1587 FC** to connect the Tester to the phone by Bluetooth.
8. The live display from the Tester shows on the phone app.


For more instructions about how to use the Fluke Connect app, go to www.flukeconnect.com.

PN 2405362 April 2005 Rev. 3, 7/18 ©2005-2018 Fluke Corporation. All rights reserved.


Temperature

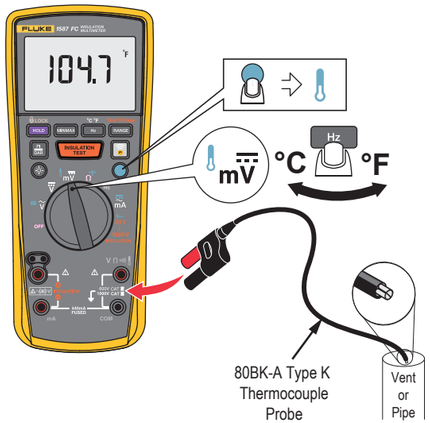


Continuity

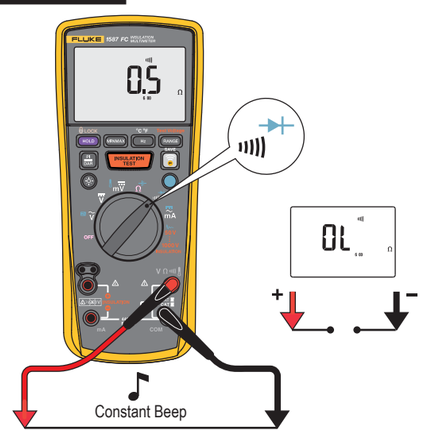


Testing Insulation

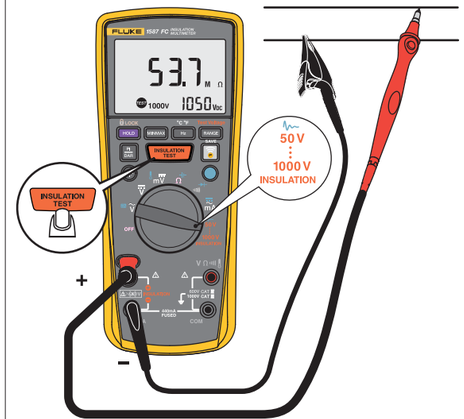


PI / DAR

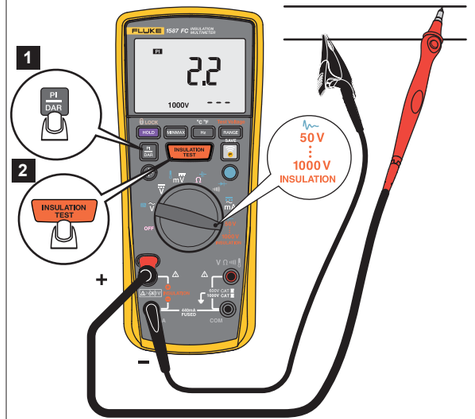


Current mA, mA

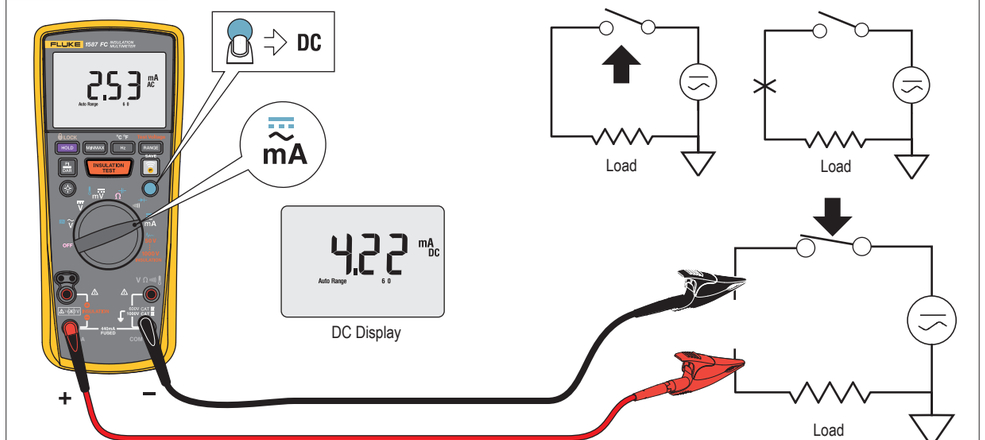


Diode Test

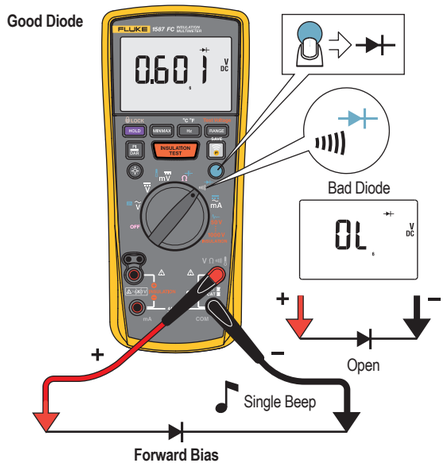


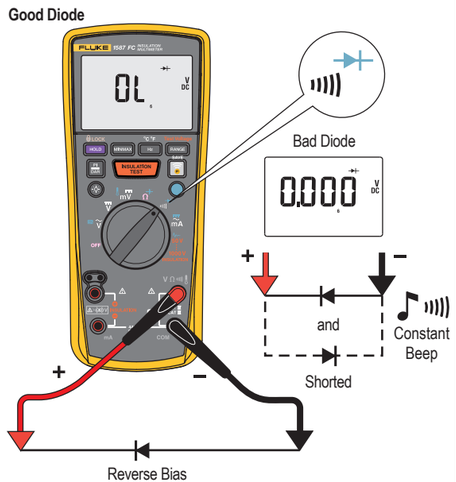


Resistance Ω

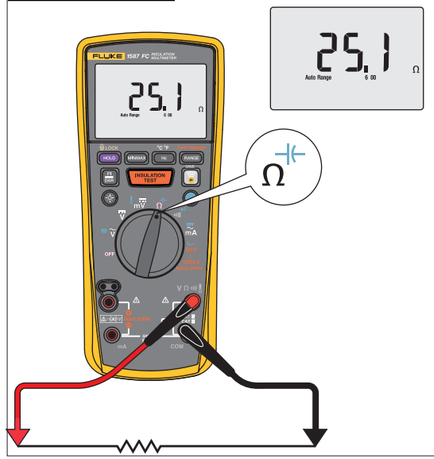


Capacitance

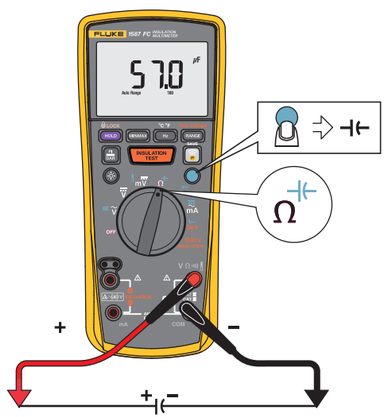


Frequency (Hz)

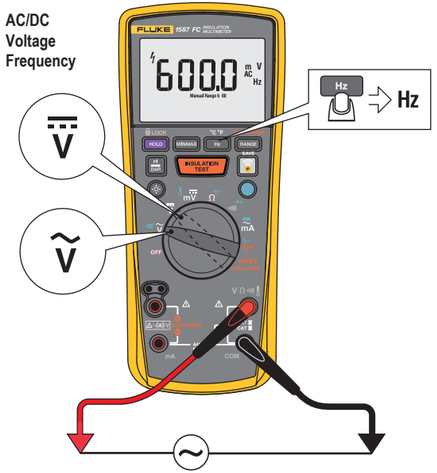


AC/DC Current Frequency

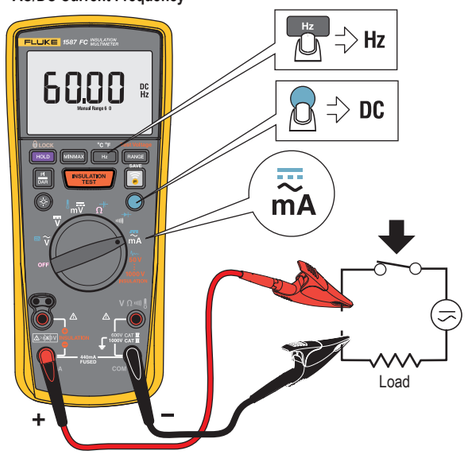


Low Pass (VFD) Filter (Model 1587)

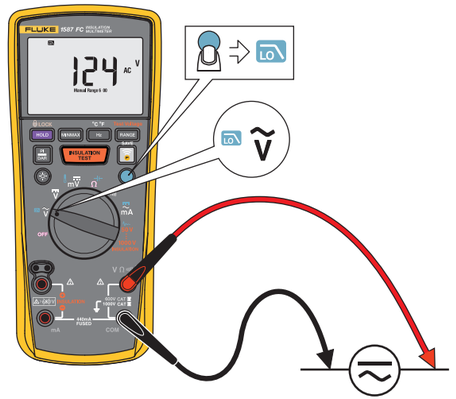

Smoothing (Power Up Option)

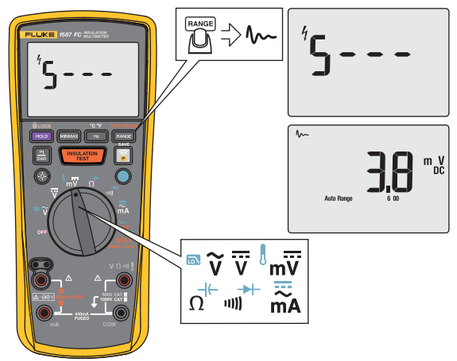

Fuse Test

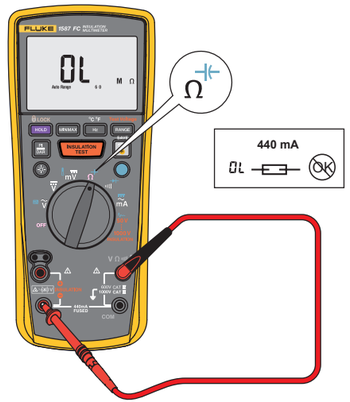

Battery / Fuse Replacement

