Printer, Option, and Stand Compatibility Guide

Laser Printers

April 2023

www.lexmark.com

Contents

Supported maximum configurations.....4

Lexmark C2335, CS531, CS632, CS639.....4
Lexmark CX532, CX635, XC2335.....6
Lexmark MS531, MS631, MS632, MS639, M3350.....8
Lexmark MX532, MX632, XM3350.....10
Lexmark CX730, CX735, CX737, XC4342, XC4352.....13
Lexmark C4342, C4352, CS730, CS735, CS737.....14
Lexmark MX331, MX431, MX432, MB3442, XM1342, XM3142.....16
Lexmark CS943.....17
Lexmark CX942, CX943, CX944, XC9445, XC9455, XC9465.....20
Lexmark CX930, CX931, MX931, XC9325, XC9335.....23
Lexmark B3340, B3442, M1342, MS331, MS431, MS439.....26
Lexmark C2326, C3224, C3326, C3426, CS331, CS431, CS439.....27
Lexmark CX331, CX431, MC3224, MC3326, MC3426, XC2326.....28
Lexmark C2240, C2325, C2425, C2535, CS421, CS521, CS622.....29
Lexmark CX421, CX522, CX622, CX625, MC2325, MC2425, MC2535, MC2640, XC2235, XC4240.....31
Lexmark B2865, M5255, M5270, MS725, MS821, MS822, MS823, MS825, MS826.....33
Lexmark MB2770, MX721, MX722, MX725, XM5365, XM5370.....37
Lexmark MX822, MX826, XM7355, XM7370.....40
Lexmark B2338, B2442, B2546, B2650, M1242, M1246, M3250, MS321, MS421, MS521, MS621, MS622.....42
Lexmark MB2338, MB2442, MB2546, MX321, MX421, MX521, MX522, XM1242, XM1246.....43
Lexmark MB2650, MX622, XM3250.....45
Lexmark C9235, CS921, CS923, CS927.....46
Lexmark CX921, CX922, CX923, CX924, CX927, XC9235, XC9245, XC9255, XC9265.....48
Lexmark C4150, CS720, CS725, CS727, CS728.....50
Lexmark CX725, CX727, XC4140, XC4143, XC4150, XC4153.....52
Lexmark C6160, CS820, CS827.....53
Lexmark CX820, CX827, XC6152, XC6153.....55
Lexmark CX825, CX860, XC8155, XC8160, XC8163.....56
Lexmark MS911 and MX910 series.....58
Lexmark M5155, M5163, M5170, MS710, MS711, MS810, MS811, MS812, MS817, MS818.....61
Lexmark MX710, MX711, MX717, MX718, XM5163, XM5170.....66

Lexmark MX810 Series 68
Lexmark CX310, CX317, CX410, CX417, CX510, CX517, XC2132 69
Lexmark C2132, CS310, CS317, CS410, CS417, CS510, CS517 70
Lexmark MX610, MX611, MX617, XM3150 72
Lexmark MX310, MX317, MX410, MX417, MX510, MX511, MX517, XM1145 73
Lexmark M1145, M3150, M1140+, MS310, MS312, MS317, MS410, MS415, MS417, MS510, MS517, MS610, MS617 75
Lexmark C546dtn and X546dtn 76
Lexmark C730 Series 77
Lexmark C740 Series 78
Lexmark C792 79
Lexmark C925 80
Lexmark C950 Series 82
Lexmark T650 Series 85
Lexmark W850 and X860de 87
Lexmark X650 Series 88
Lexmark X658e 90
Lexmark X730 Series 90
Lexmark X740 Series 92
Lexmark X792 93
Lexmark X925 94
Lexmark X950 Series 95
Printer stand 98
Caster base 102

Notices **104**
Edition notice 104


Index **105**

Supported maximum configurations

The following tables provide information about the maximum possible configurations for each printer, option, and stand.

Each row represents a supported maximum configuration. If an option is removed, then the information still indicates an acceptable configuration.

Lexmark C2335, CS531, CS632, CS639

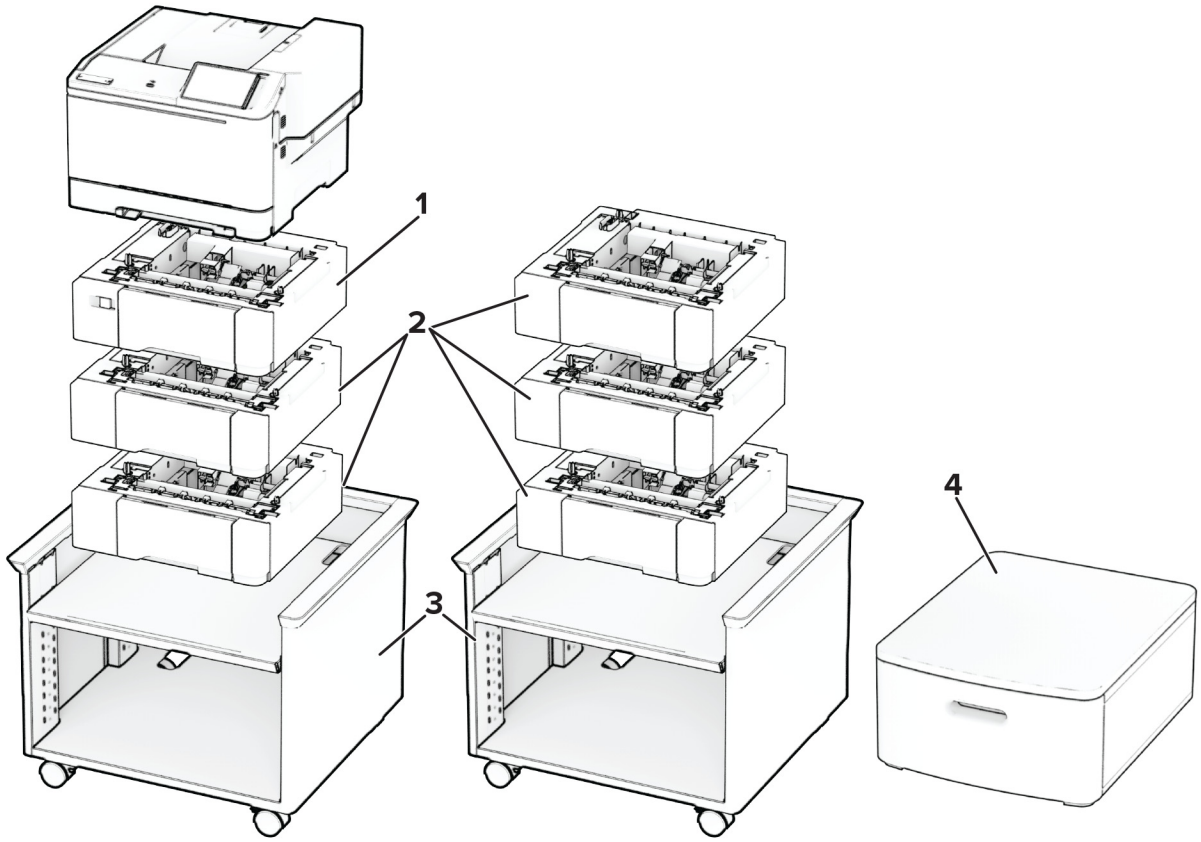

	Option	Placement				Part number
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet	
1	650-sheet duo tray[1]	1	1	1	1	50M7650
2	550-sheet tray[2, 3]	3	3	3	3	50M7550
3	Adjustable printer stand[4]	N/A	1	N/A	N/A	40C2300
4	Swivel cabinet	1	1	N/A	N/A	3073173

[1] When installed with the 550-sheet tray, place this tray below the printer.

[2] When installed with the 650-sheet duo tray, place this tray at the bottom of the configuration.


[3] When installed with the 650-sheet duo tray, you can add a maximum of two of this tray.

[4] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

Printer model	Dimensions (height, width, and depth)
All models	318.3 x 422.5 x 455 mm (12.5 x 16.6 x 17.9 in.)

Printer option	Dimensions (height, width, and depth)
650-sheet duo tray	132.1 x 424.2 x 416.6 mm (5.2 x 16.7 x 16.4 in.)
550-sheet tray	132.1 x 424.2 x 416.6 mm (5.2 x 16.7 x 16.4 in.)
Adjustable printer stand	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)
Swivel cabinet	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

Lexmark CX532, CX635, XC2335

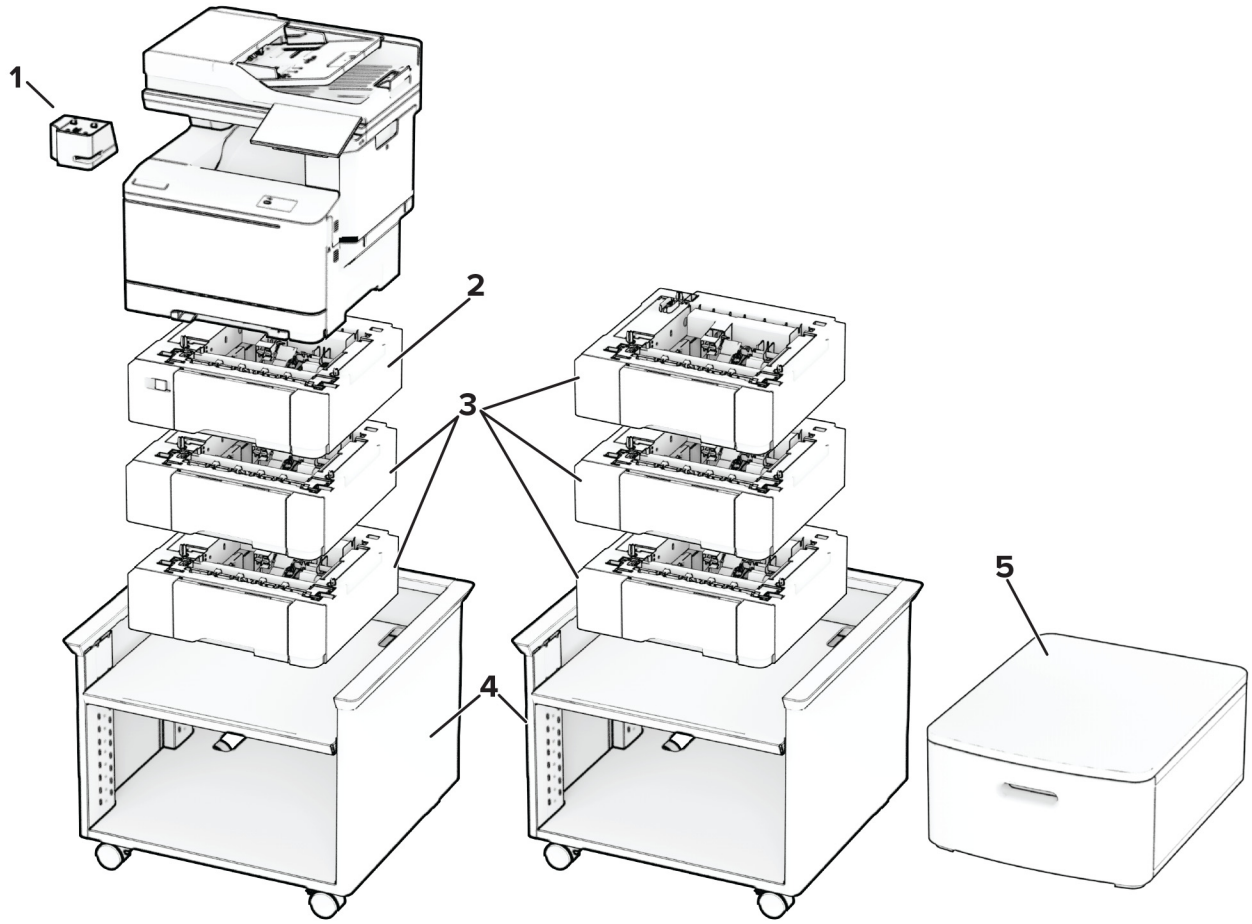

	Option	Placement				Part number
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet	
1	Convenience stapler	1	1	1	1	47C4500 (Americas LV)
						47C4590 (EMEA, Nordics, Switzerland HV)
						47C4593 (UK HV)
						47C4595 (Israel HV)
						47C4596 (ES Africa HV)
						47C4597 (ANZ HV)
2	650-sheet duo tray[1]	1	1	1	1	50M7650
3	550-sheet tray[2, 3]	3	3	3	3	50M7550
4	Adjustable printer stand[4]	N/A	1	N/A	N/A	40C2300
5	Swivel cabinet	1	1	N/A	N/A	3073173

[1] When installed with the 550-sheet tray, place this tray below the printer.

[2] When installed with the 650-sheet duo tray, place this tray at the bottom of the configuration.

[3] When installed with the 650-sheet duo tray, you can add a maximum of two of this tray.


[4] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

Printer model	Dimensions (height, width, and depth)
All models	491.4 x 475.1 x 479 mm (19.3 x 18.7 x 18.9 in.)

Printer option	Dimensions (height, width, and depth)
Convenience stapler	82 x 109 x 121 mm (3.23 x 4.29 x 4.77 in.)
650-sheet duo tray	132.1 x 424.2 x 416.6 mm (5.2 x 16.7 x 16.4 in.)
550-sheet tray	132.1 x 424.2 x 416.6 mm (5.2 x 16.7 x 16.4 in.)

Printer option	Dimensions (height, width, and depth)
Adjustable printer stand	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)
Swivel cabinet	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

Lexmark MS531, MS631, MS632, MS639, M3350

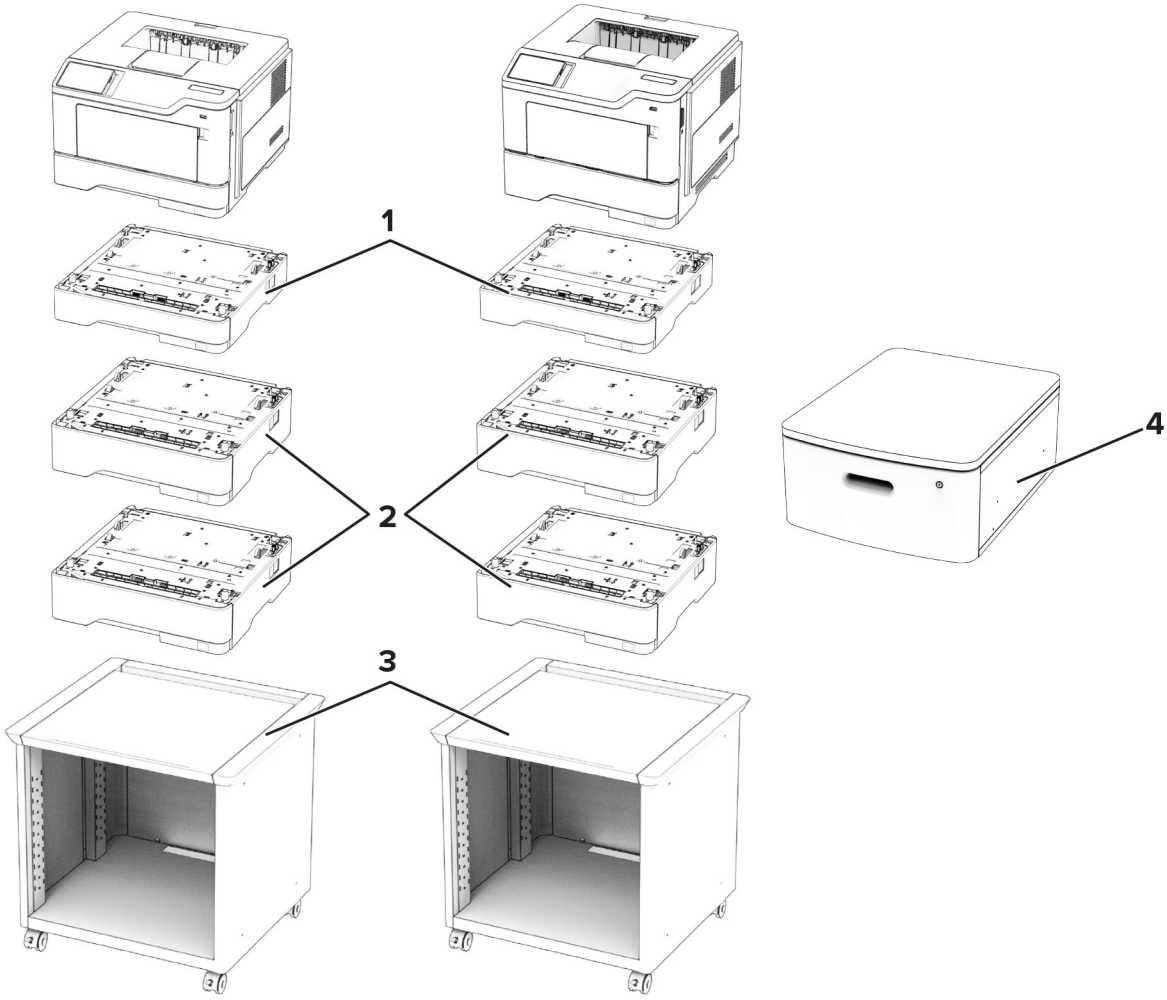

Printer options, maximum configurations, part numbers, and dimensions


	Option	Placement				Part number
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet	
1	250-sheet tray*	3	3	3	3	38S2910
2	550-sheet tray*	3	3	3	3	38S3110
	550-sheet lockable tray*					38S3130
3	Adjustable printer stand	N/A	1	N/A	N/A	35S8502
4	Swivel cabinet	1	1	N/A	N/A	3073173

* Can be installed with other optional trays in any order.

Printer model	Dimensions (height, width, and depth)
MS531	263 x 399 x 389 mm (10.4 x 15.7 x 15.3 in.)
MS631	307 x 399 x 389 mm (12.1 x 15.7 x 15.3 in.)
MS632, M3350	308 x 399 x 389 mm (12.1 x 15.7 x 15.3 in.)
MS639	307 X 399 X 389 mm (12.1 x 15.7 x 15.3 in.)

Printer option	Dimensions (height, width, and depth)
250-sheet tray	78 x 389 x 374 mm (3.1 x 15.3 x 14.7 in.)
550-sheet tray	108 x 389 x 374 mm (4.3 x 15.3 x 14.7 in.)
550-sheet lockable tray*	
Adjustable printer stand	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
Swivel cabinet	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

Lexmark MX532, MX632, XM3350

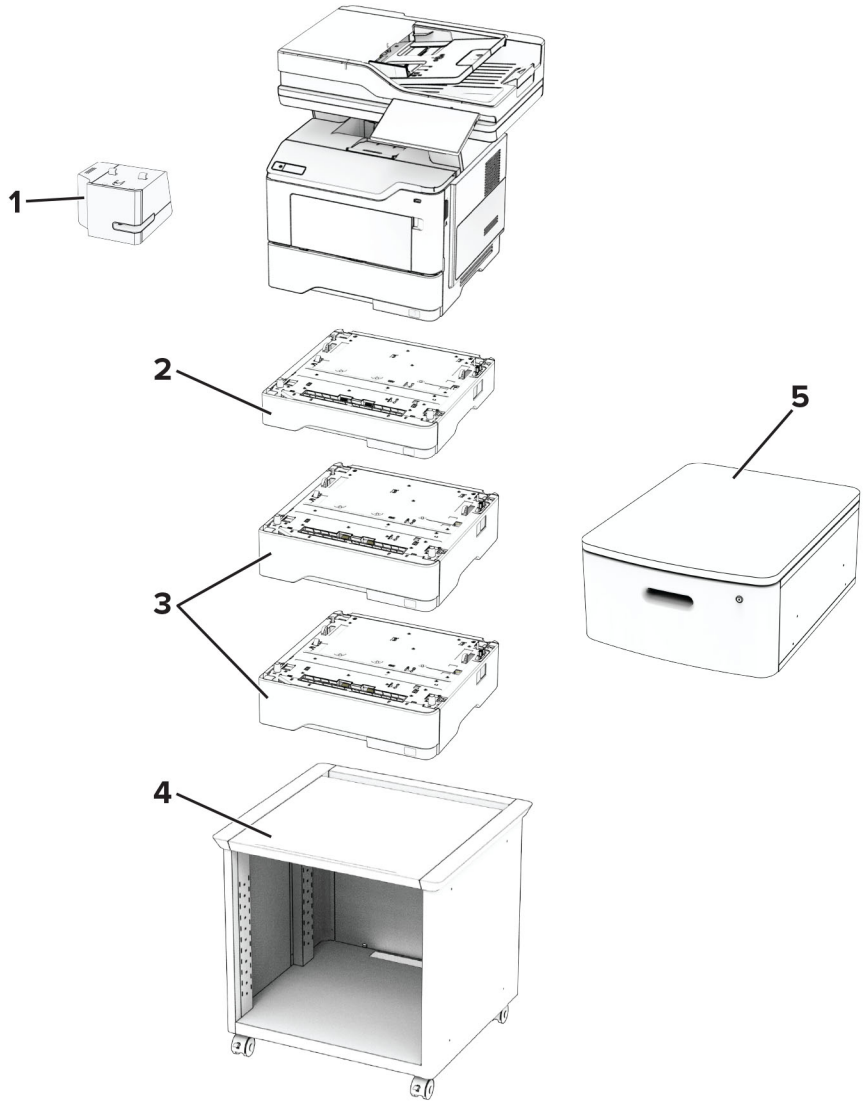

Printer options, maximum configurations, part numbers, and dimensions


	Option	Placement				Part number
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet	
1	Convenience stapler	1	1	1	1	47C4500 (United States and Canada)
						47C4590 (European Economic Area, Iceland, Liechtenstein, and Norway)
						47C4593 (Middle East)
						47C4595 (Africa)
						47C4596 (United Kingdom)
						47C4597 (Australia and New Zealand)
2	250-sheet tray*	3	3	3	3	38S2910
3	550-sheet tray*	3	3	3	3	38S3110
	550-sheet lockable tray*					38S3130
4	Adjustable printer stand	N/A	1	N/A	N/A	35S8502
5	Swivel cabinet	1	1	N/A	N/A	3073173

* Can be installed with other optional trays in any order.

Printer model	Dimensions (height, width, and depth)
MX532	514 x 479 x 450 mm (20.2 x 18.9 x 17.7 in.)
MX632, XM3350	514 x 479 x 452 mm (20.2 x 18.9 x 17.8 in.)

Printer option	Dimensions (height, width, and depth)
Convenience stapler	82 x 109 x 121 mm (3.23 x 4.29 x 4.77 in.)
250-sheet tray	78 x 389 x 374 mm (3.1 x 15.3 x 14.7 in.)
550-sheet tray	108 x 389 x 374 mm (4.3 x 15.3 x 14.7 in.)
550-sheet lockable tray*	
Adjustable printer stand	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
Swivel cabinet	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

Lexmark CX730, CX735, CX737, XC4342, XC4352

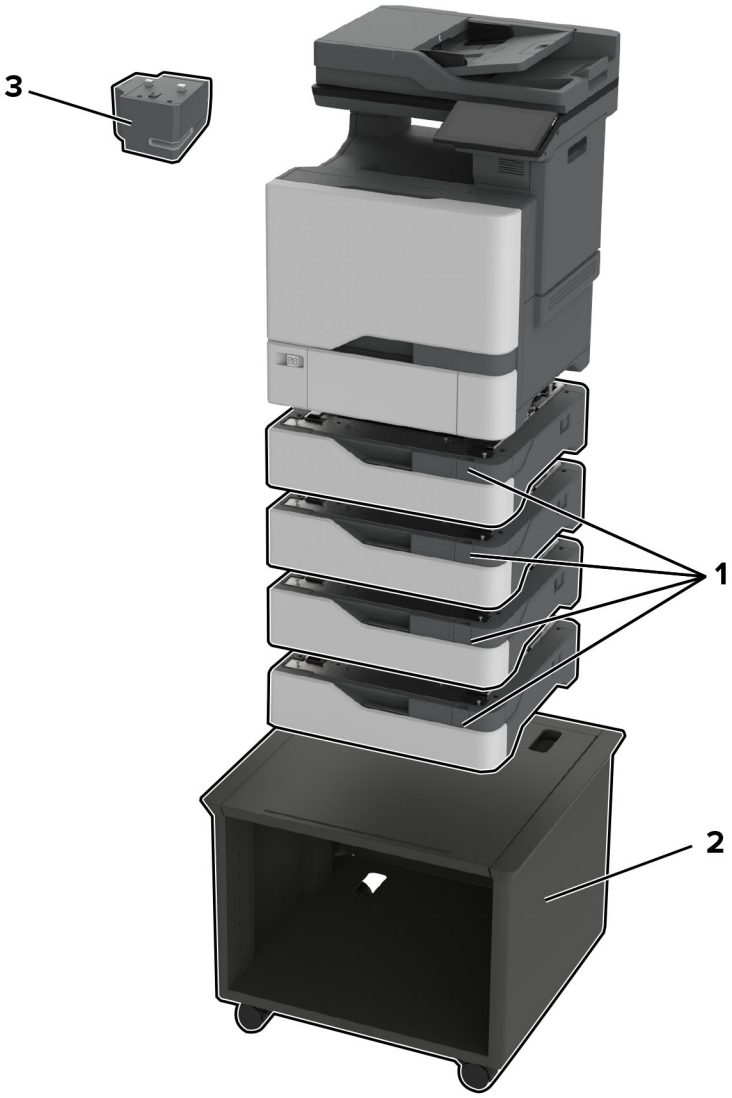


Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand		
1	550-sheet tray	4	4	4	40C2100	119 x 463 x 483 mm (4.7 x 18.23 x 19 in.)
2	Adjustable printer stand*	N/A	1	N/A	40C2300	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)
3	Convenience stapler	1	1	1	47C4500 (NA) 47C4590 (EMEA)	82 x 109 x 121 mm (3.23 x 4.29 x 4.77 in.)

* For more information on supported configurations, see “Adjustable printer stand 40C2300” on page 98.

Printer model	Dimensions (height, width, and depth)
All models	621 x 479 x 533 mm (24.44 x 18.85 x 20.90 in.)

Lexmark C4342, C4352, CS730, CS735, CS737

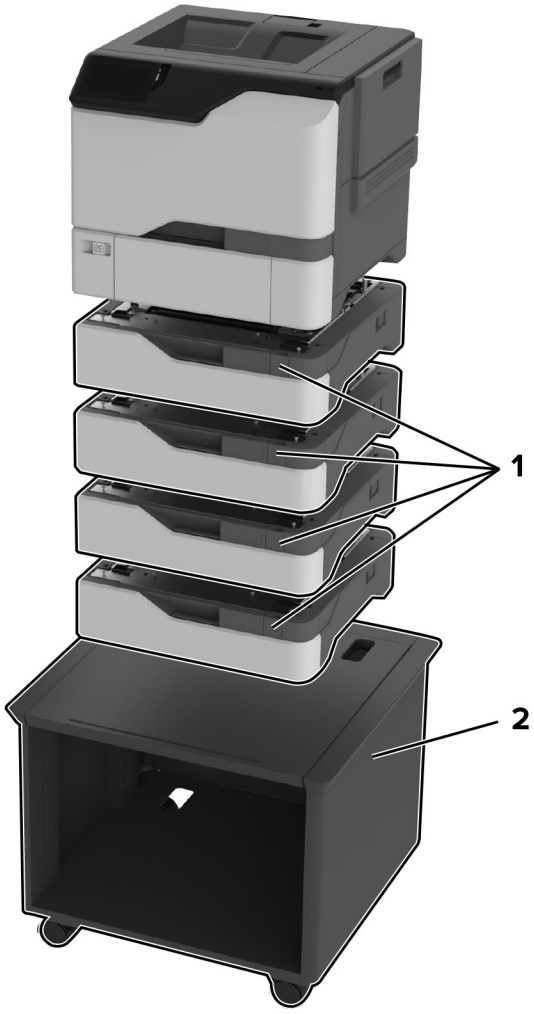

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand		
1	550-sheet tray	4	4	4	40C2100	119 x 463 x 483 mm (4.7 x 18.23 x 19 in.)
2	Adjustable printer stand*	N/A	1	N/A	40C2300	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)

* For more information on supported configurations, see “Adjustable printer stand 40C2300” on page 98.

Printer model	Dimensions (height, width, and depth)
All models	413 x 479 x 489 mm (16.25 x 18.85 x 19.25 in.)

Lexmark MX331, MX431, MX432, MB3442, XM1342, XM3142




Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	550-sheet tray	1	1	1	1	29S0600	107 x 368 x 378 mm (4.2 x 14.5 x 14.9 in.)
2	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
3	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

Printer model	Dimensions (height, width, and depth)
All models	339 x 411 x 366 mm (13.3 x 16.2 x 14.4 in.)

Lexmark CS943

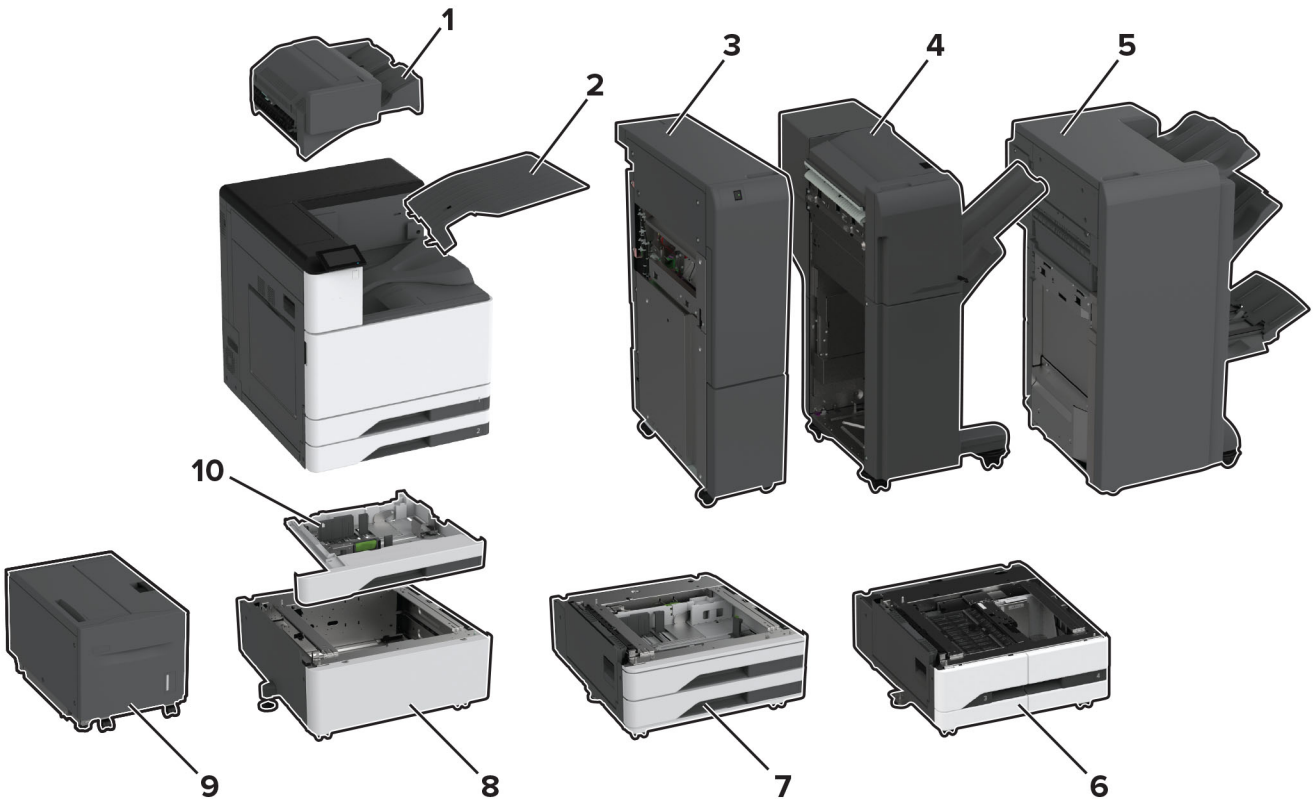

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement		Part number	Dimensions (height, width, and depth)
		Floor	Spacer		
1	Staple finisher[1]	1	N/A	32D0820	238.76 x 477.52 x 459.74 mm (9.4 x 18.8 x 18.1 in.)
2	Dual catch bin	1	N/A	32D0819	124.46 x 474.98 x 381 mm (4.9 x 18.7 x 15 in.)
3	Trifold/Z-fold finisher[2, 3]	1	N/A	Varies according to region	990.6 x 231.14 x 726.44 mm (39 x 9.1 x 28.6 in.)
4	Staple, hole punch finisher[2, 4]	1	N/A	32D0823 (2/3 hole punch)	982.98 x 952.5 x 652.78 mm (38.7 x 37.9 x 25.7 in.)
				32D0824 (2/4 hole punch)	
				32D0828 (Swedish hole punch)	
5	Booklet finisher[2, 4]	1	N/A	32D0825 (2/3 hole punch)	1056.64 x 789.94 x 589.28 mm (41.6 x 31.1 x 23.2 in.)
				32D0826 (2/4 hole punch)	
6	2000-sheet tandem tray[5]	1	1	32D0812	304.8 x 668.02 x 718.82 mm (12 x 26.3 x 28.3 in.)
7	2 x 520-sheet tray[6]	1	1	32D0811	304.8 x 668.02 x 718.82 mm (12 x 26.3 x 28.3 in.)

[1] Not supported when another finisher is installed.

[2] Requires placing the printer on top of the 2000-sheet tandem tray, optional 2 x 520-sheet tray, or spacer.

[3] Must be installed with the booklet finisher.

[4] Comes with a paper transport.

[5] Cannot be installed with the optional 2 x 520-sheet tray or spacer.

[6] Cannot be installed with the 2000-sheet tandem tray or spacer.

[7] Cannot be installed with the 2000-sheet tandem tray or optional 2 x 520-sheet tray.

[8] Must be installed with either the 2000-sheet tandem tray or optional 2 x 520-sheet tray.

	Option	Placement		Part number	Dimensions (height, width, and depth)
		Floor	Spacer		
8	Spacer[7]	1	N/A	32D0810	304.8 x 668.02 x 718.82 mm (12 x 26.3 x 28.3 in.)
9	2000-sheet tray[8]	1	N/A	32D0816	490.22 x 751.84 x 525.78 mm (19.3 x 29.6 x 20.7 in.)
10	Envelope tray	1	1	32D0813	88.9 x 619.76 x 566.42 mm (3.5 x 24.4 x 22.3 in.)

[1] Not supported when another finisher is installed.

[2] Requires placing the printer on top of the 2000-sheet tandem tray, optional 2 x 520-sheet tray, or spacer.

[3] Must be installed with the booklet finisher.

[4] Comes with a paper transport.

[5] Cannot be installed with the optional 2 x 520-sheet tray or spacer.


[6] Cannot be installed with the 2000-sheet tandem tray or spacer.

[7] Cannot be installed with the 2000-sheet tandem tray or optional 2 x 520-sheet tray.

[8] Must be installed with either the 2000-sheet tandem tray or optional 2 x 520-sheet tray.

Printer model	Dimensions (height, width, and depth)
CS943	713.74 x 619.76 x 746.76 mm (28.1 x 24.4 x 29.4 in.)

Lexmark CX942, CX943, CX944, XC9445, XC9455, XC9465

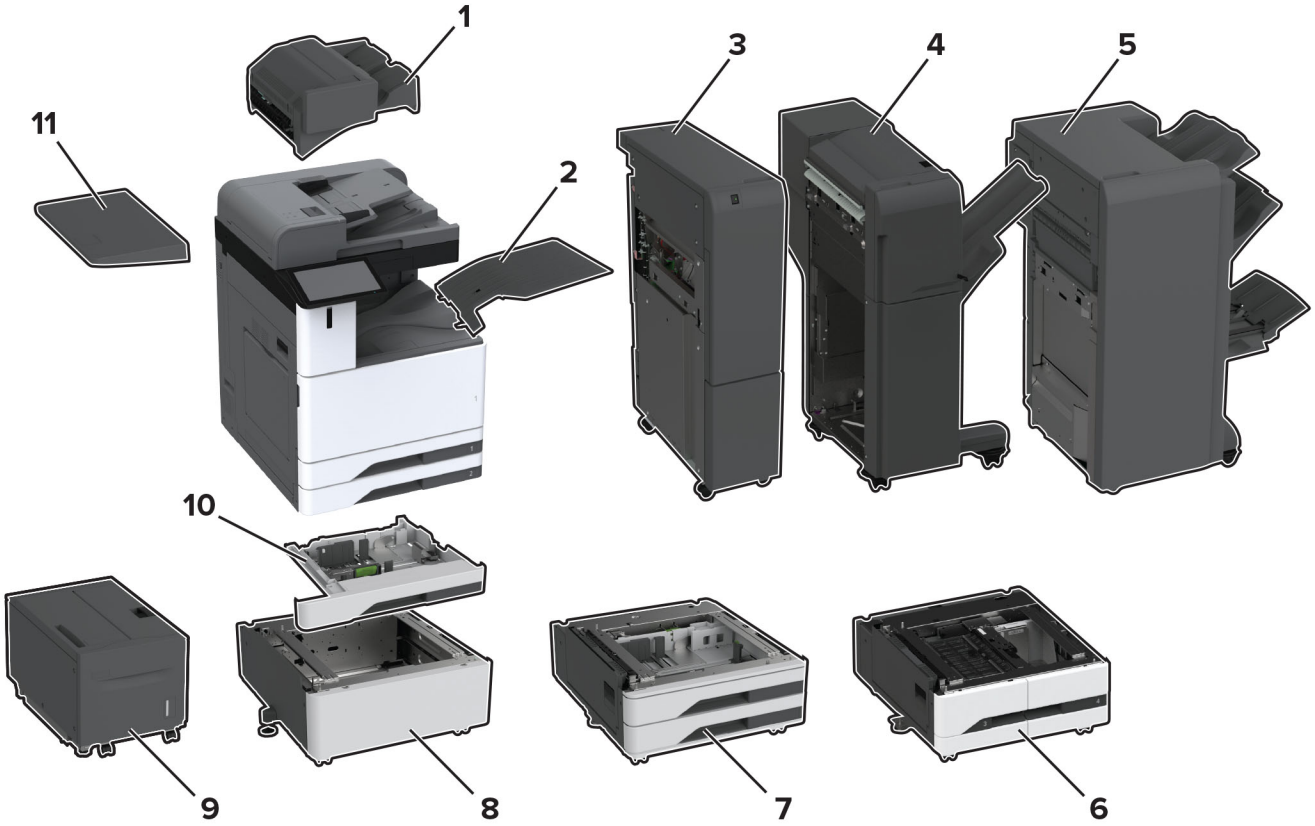

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement		Part number	Dimensions (height, width, and depth)
		Floor	Spacer		
1	Staple finisher[1]	1	N/A	32D0820	238.76 x 477.52 x 459.74 mm (9.4 x 18.8 x 18.1 in.)
2	Dual catch bin	1	N/A	32D0819	124.46 x 474.98 x 381 mm (4.9 x 18.7 x 15 in.)
3	Trifold/Z-fold finisher[2, 3]	1	N/A	Varies according to region	990.6 x 231.14 x 726.44 mm (39 x 9.1 x 28.6 in.)
4	Staple, hole punch finisher[2, 4]	1	N/A	32D0823 (2/3 hole punch)	982.98 x 952.5 x 652.78 mm (38.7 x 37.9 x 25.7 in.)
				32D0824 (2/4 hole punch)	
				32D0828 (Swedish hole punch)	
5	Booklet finisher[2, 4]	1	N/A	32D0825 (2/3 hole punch)	1056.64 x 789.94 x 589.28 mm (41.6 x 31.1 x 23.2 in.)
				32D0826 (2/4 hole punch)	
6	2000-sheet tandem tray[5]	1	1	32D0812	304.8 x 668.02 x 718.82 mm (12 x 26.3 x 28.3 in.)
7	2 x 520-sheet tray[6]	1	1	32D0811	304.8 x 668.02 x 718.82 mm (12 x 26.3 x 28.3 in.)

[1] Not supported when another finisher is installed.

[2] Requires placing the printer on top of the 2000-sheet tandem tray, optional 2 x 520-sheet tray, or spacer.

[3] Must be installed with the booklet finisher.

[4] Comes with a paper transport.

[5] Cannot be installed with the optional 2 x 520-sheet tray or spacer.

[6] Cannot be installed with the 2000-sheet tandem tray or spacer.

[7] Cannot be installed with the 2000-sheet tandem tray or optional 2 x 520-sheet tray.

[8] Must be installed with either the 2000-sheet tandem tray or optional 2 x 520-sheet tray.

	Option	Placement		Part number	Dimensions (height, width, and depth)
		Floor	Spacer		
8	Spacer[7]	1	N/A	32D0810	304.8 x 668.02 x 718.82 mm (12 x 26.3 x 28.3 in.)
9	2000-sheet tray[8]	1	N/A	32D0816	490.22 x 751.84 x 525.78 mm (19.3 x 29.6 x 20.7 in.)
10	Envelope tray	1	1	32D0813	88.9 x 619.76 x 566.42 mm (3.5 x 24.4 x 22.3 in.)
11	Working shelf	1	1	32D0809	81.28 x 302.26 x 528.32 mm (3.2 x 11.9 x 20.8 in.)

[1] Not supported when another finisher is installed.

[2] Requires placing the printer on top of the 2000-sheet tandem tray, optional 2 x 520-sheet tray, or spacer.

[3] Must be installed with the booklet finisher.

[4] Comes with a paper transport.

[5] Cannot be installed with the optional 2 x 520-sheet tray or spacer.


[6] Cannot be installed with the 2000-sheet tandem tray or spacer.

[7] Cannot be installed with the 2000-sheet tandem tray or optional 2 x 520-sheet tray.

[8] Must be installed with either the 2000-sheet tandem tray or optional 2 x 520-sheet tray.

Printer model	Dimensions (height, width, and depth)
CX942, XC9445, XC9455, XC9465	878.84 x 619.76 x 756.92 mm (34.6 x 24.4 x 29.8 in.)
CX943, CX944	1132.84 x 619.76 x 756.92 mm (44.6 x 24.4 x 29.8 in.)

Lexmark CX930, CX931, MX931, XC9325, XC9335

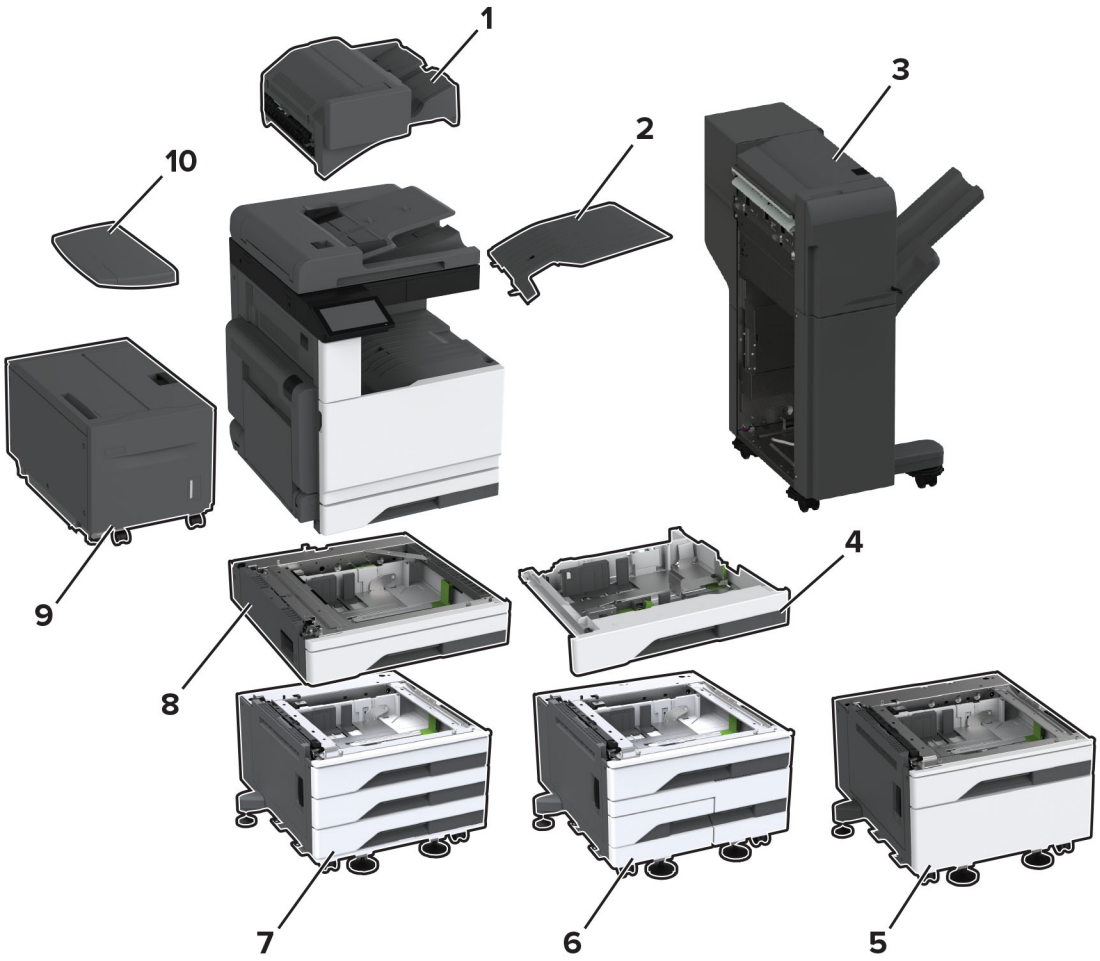

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement		Part number	Dimensions (height, width, and depth)
		Floor	Spacer		
1	Staple finisher[1]	1	N/A	32D0820	238.76 x 477.52 x 459.74 mm (9.4 x 18.8 x 18.1 in.)
2	Dual catch bin	1	N/A	32D0818	121.92 x 447.04 x 378.46 mm (4.8 x 17.6 x 14.9 in.)
3	Staple, hole punch finisher[2, 3]	1	N/A	32D0821 (2/3 hole punch)	982.98 x 952.5 x 652.78 mm (38.7 x 37.9 x 25.7 in.)
				32D0822 (2/4 hole punch)	
				32D0827 (Swedish punch)	
4	Envelope tray	1	1	32D0804	86.36 x 683.26 x 660.4 mm (3.4 x 26.9 x 26.1 in.)
5	520-sheet tray with cabinet[4]	1	1	32D0801	381 x 614.68 x 619.76 mm (15 x 24.2 x 24.4 in.)
6	2520-sheet tandem tray[5]	1	N/A	32D0803	381 x 614.68 x 619.76 mm (15 x 24.2 x 4.4 in.)
7	3 x 520-sheet tray[5]	1	1	32D0802	381 x 614.68 x 619.76 mm (15 x 24.2 x 24.4 in.)

[1] Not supported when another finisher is installed.

[2] Requires placing the printer on top of the 520-sheet tray with cabinet, 2520-sheet tandem tray, or 3 x 520-sheet tray.

[3] Comes with a paper transport.

[4] Cannot be installed with any other input options.

[5] Cannot be installed with any other input options except the 2000-sheet tray.

[6] Cannot be installed with the 520-sheet tray with cabinet.

	Option	Placement		Part number	Dimensions (height, width, and depth)
		Floor	Spacer		
8	520-sheet tray[4]	1	1	32D0800	134.62 x 541.02 x 586.74 mm (5.3 x 21.3 x 23.1 in.)
9	2000-sheet tray[6]	1	N/A	32D0810	304.8 x 668.02 x 718.82 mm (12 x 26.3 x 28.3 in.)
10	Working shelf	1	1	32D0808	58.42 x 302.26 x 485.14 mm (2.3 x 11.9 x 19.1 in.)

[1] Not supported when another finisher is installed.

[2] Requires placing the printer on top of the 520-sheet tray with cabinet, 2520-sheet tandem tray, or 3 x 520-sheet tray.

[3] Comes with a paper transport.


[4] Cannot be installed with any other input options.

[5] Cannot be installed with any other input options except the 2000-sheet tray.

[6] Cannot be installed with the 520-sheet tray with cabinet.

Printer model	Dimensions (height, width, and depth)
CX930, CX931dse, MX931, XC9325, XC9335	767.08 x 589.28 x 701.04 mm (30.2 x 23.2 x 27.6 in.)
CX931dtse	1120.14 x 589.28 x 701.04 mm (44.1 x 23.2 x 27.6 in.)

Lexmark B3340, B3442, M1342, MS331, MS431, MS439

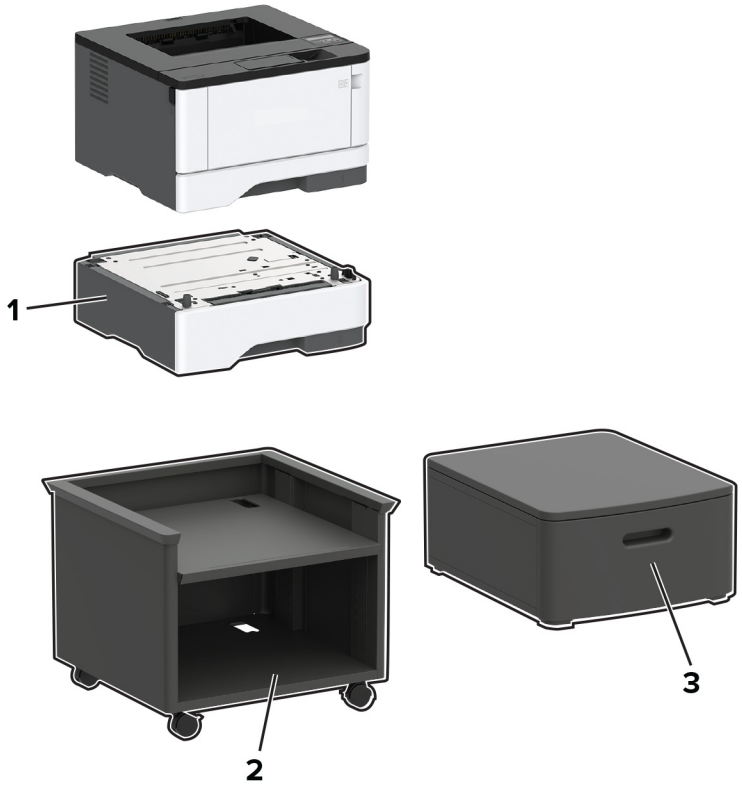


Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	550-sheet tray	1	1	1	1	29S0600	107 x 368 x 378 mm (4.2 x 14.5 x 14.9 in.)
2	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
3	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

Printer model	Dimensions (height, width, and depth)
All models	222 x 368 x 363 mm (8.7 x 14.5 x 14.3 in.)


Lexmark C2326, C3224, C3326, C3426, CS331, CS431, CS439

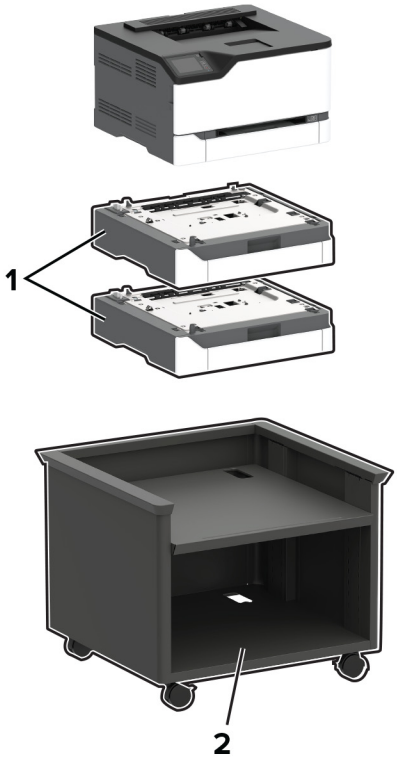

	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand		
1	250-sheet tray	2	2	2	40N4250	103.9 x 411.2 x 381 mm (4.1 x 16.2 x 15 in.)
2	Adjustable printer stand	N/A	1	N/A	40C2300	520.7 x 652.78 x 624.84 mm (20.5 x 25.7 x 24.6 in.)

Printer model	Dimensions (height, width, and depth)
All models	243.7 x 411.2 x 394.1 mm (9.6 x 16.2 x 15.5 in.)


Lexmark CX331, CX431, MC3224, MC3326, MC3426, XC2326

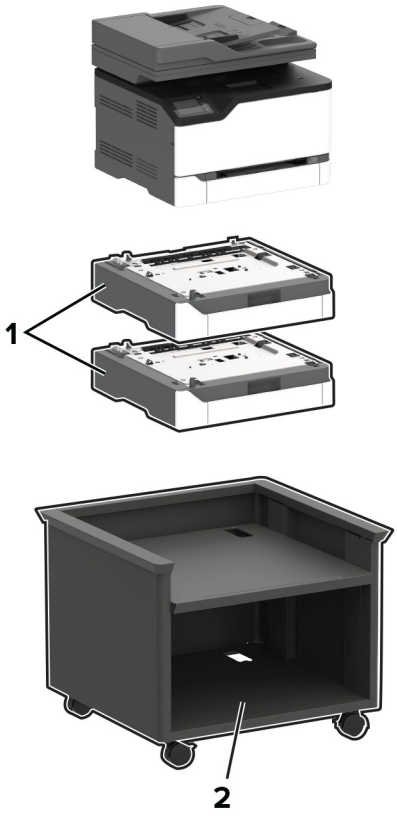

	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand		
1	250-sheet tray	2	2	2	40N4250	103.9 x 411.2 x 381 mm (4.1 x 16.2 x 15 in.)
2	Adjustable printer stand	N/A	1	N/A	40C2300	520.7 x 652.78 x 624.84 mm (20.5 x 25.7 x 24.6 in.)

Printer model	Dimensions (height, width, and depth)
All models	344.4 x 411.2 x 394.1 mm (13.6 x 16.2 x 15.5 in.)

Lexmark C2240, C2325, C2425, C2535, CS421, CS521, CS622

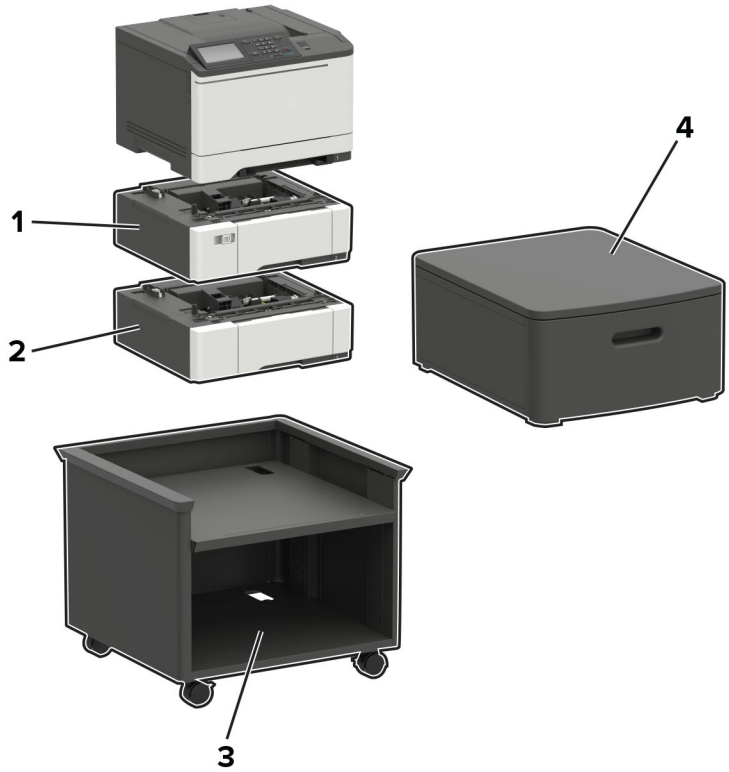

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	650-sheet duo tray[1,2]	1	1	1	1	42C7650	133 x 424 x 416 mm (5.2 x 16.7 x 16.4 in.)
2	550-sheet tray[3,4]	1	1	1	1	42C7550	133 x 424 x 416 mm (5.2 x 16.7 x 16.4 in.)

[1] Not supported in C2325.

[2] When installed with the 550-sheet tray, place this tray below the printer. The combination of a 650-sheet duo tray and a 550-sheet tray is supported only in C2240, C2535, CS521, and CS622.

[3] When installed with the 650-sheet duo tray, place this tray at the bottom of the configuration.

[4] Not supported in C2325, C2425, and CS421.

[5] For more information on supported configurations, see “Adjustable printer stand 40C2300” on page 98.

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
3	Adjustable printer stand[5]	N/A	1	N/A	N/A	40C2300	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)
4	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

[1] Not supported in C2325.

[2] When installed with the 550-sheet tray, place this tray below the printer. The combination of a 650-sheet duo tray and a 550-sheet tray is supported only in C2240, C2535, CS521, and CS622.

[3] When installed with the 650-sheet duo tray, place this tray at the bottom of the configuration.

[4] Not supported in C2325, C2425, and CS421.

[5] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

Printer model	Dimensions (height, width, and depth)
All models	308 x 442 x 421 mm (12.1 x 17.4 x 16.6 in.)

Lexmark CX421, CX522, CX622, CX625, MC2325, MC2425, MC2535, MC2640, XC2235, XC4240



	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	650-sheet duo tray[1,2]	1	1	1	1	42C7650	133 x 424 x 416 mm (5.2 x 16.7 x 16.4 in.)

[1] Not supported in MC2325.

[2] When installed with the 550-sheet tray, place this tray below the printer. The combination of a 650-sheet duo tray and a 550-sheet tray is supported only in CX522, CX622, CX625, MC2535, MC2640, XC2235, and XC4240.

[3] When installed with the 650-sheet duo tray, place this tray at the bottom of the configuration.

[4] Not supported in CX421 and MC2425.

[5] For more information on supported configurations, see “Adjustable printer stand 40C2300” on page 98.

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
2	550-sheet tray[3,4]	1	1	1	1	42C7550	133 x 424 x 416 mm (5.2 x 16.7 x 16.4 in.)
3	Adjustable printer stand[5]	N/A	1	N/A	N/A	40C2300	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)
4	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

[1] Not supported in MC2325.

[2] When installed with the 550-sheet tray, place this tray below the printer. The combination of a 650-sheet duo tray and a 550-sheet tray is supported only in CX522, CX622, CX625, MC2535, MC2640, XC2235, and XC4240.


[3] When installed with the 650-sheet duo tray, place this tray at the bottom of the configuration.

[4] Not supported in CX421 and MC2425.

[5] For more information on supported configurations, see “Adjustable printer stand 40C2300” on page 98.

Printer model	Dimensions (height, width, and depth)
CX421, MC2325, MC2425	462 x 442 x 556 mm (18.2 x 17.4 x 21.9 in.)
MC2535, MC2640, CX522, CX622, XC2235	462 x 442 x 588 mm (18.2 x 17.4 x 23.1 in.)
CX625, XC4240	462 x 442 x 608 mm (18.2 x 17.4 x 23.9 in.)

Lexmark B2865, M5255, M5270, MS725, MS821, MS822, MS823, MS825, MS826

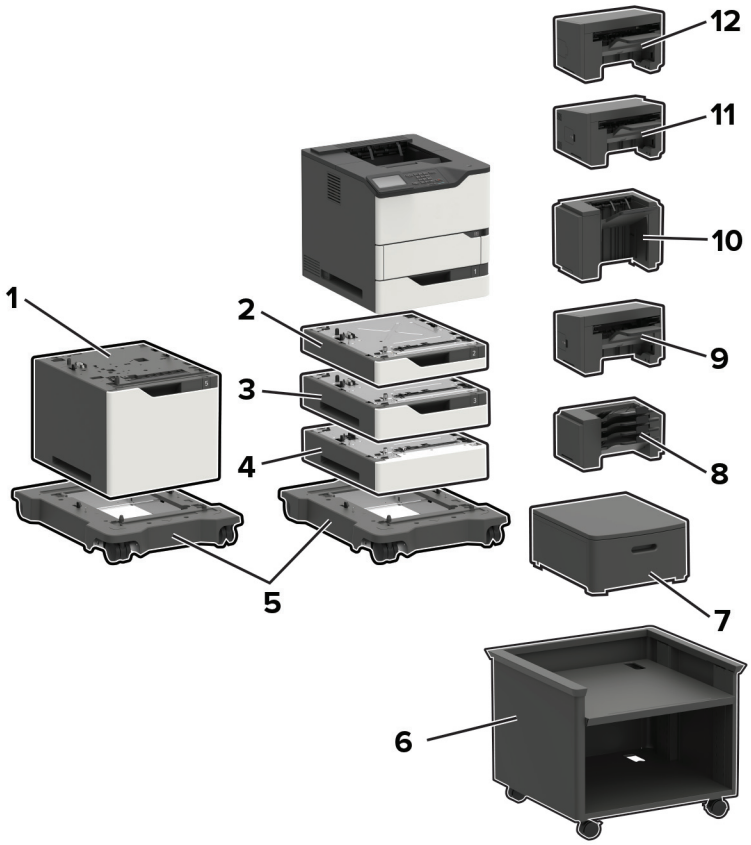

	Option	Part number	Dimensions (height, width, and depth)
1	2100-sheet tray	50G0804	350 x 428 x 510 mm (13.8 x 16.8 x 20.1 in.)
2	250-sheet tray	50G0800	80 x 428 x 510 mm (3.2 x 16.8 x 20.1 in.)
	250-sheet lockable tray	50G0820	
3	550-sheet tray	50G0802	110 x 428 x 510 mm (4.3 x 16.8 x 20.1 in.)
	550-sheet lockable tray	50G0822	
4	Spacer	50G0854	110 x 428 x 510 mm (4.3 x 16.8 x 20.1 in.)
5	Caster base	50G0855	126 x 521 x 693 mm (5 x 20.5 x 27.3 in.)
6	Adjustable printer stand	40C2300	520.7 x 652.78 x 624.84 mm (20.5 x 25.7 x 24.6 in.)

	Option	Part number	Dimensions (height, width, and depth)
7	Swivel cabinet	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)
8	4-bin mailbox	50G0852	272 x 421 x 384 mm (10.7 x 16.6 x 15.1 in.)
9	Output expander	50G0851	165 x 421 x 380 mm (6.5 x 16.6 x 15 in.)
10	High capacity output expander	50G0853	310 x 421 x 335 mm (12.2 x 16.6 x 13.2 in.)
11	Staple, hole punch finisher	50G0849	263 x 462 x 507 mm (10.3 x 18.2 x 20 in.)
12	Staple finisher	50G0850	246 x 435 x 414 mm (9.7 x 17.1 x 16.3 in.)

Printer input options, furniture, maximum configurations, and placement

Option	Placement				
	Table or desktop	Swivel cabinet	Floor	Caster base[3 5,]	Adjustable printer stand[3, 6]
250-sheet tray[1, 2, 3]	4	4	4	4	4
250-sheet lockable tray[1, 2, 3]					
550-sheet tray[1, 2, 3]				3	3
550-sheet lockable tray[1, 2, 3]					
Spacer[4]					
2100-sheet tray[2, 5]	N/A	N/A	N/A	1	N/A

[1] Can be installed with other optional trays in any order except the 2100-sheet tray.

[2] Only three optional 250-or 550-sheet trays can be used when installing the 2100-sheet tray. Place the 2100-sheet tray at the bottom of the configuration.

[3] When placing the configuration on the caster base or adjustable printer stand, follow these maximum configuration instructions. If using three optional 550-sheet trays or spacers, no optional 250-sheet tray can be used. If using two 550-sheet trays or spacers, only one 250-sheet tray can be used. If using one 550-sheet tray or spacer, up to three 250-sheet trays can be used.

[4] When using a spacer, install it first, and then install any optional trays above it. Do not install the spacer with the 2100-sheet tray.

[5] The 2100-sheet tray requires the use of the caster base.

[6] For more information on supported configurations, see “Adjustable printer stand 40C2300” on page 98.

Printer output options, maximum configurations, and placement

Option	Placement				
	Table or desktop	Swivel cabinet	Floor	Caster base	Adjustable printer stand
4-bin mailbox[1, 4]	3	3	3	3	3
Output expander[1, 2, 4]					
High capacity output expander[2, 3]	1	1	1	1	1
Staple finisher[5]	1	1	1	1	1
Staple, hole punch finisher[6]	1	1	1	1	1

[1] The 4-bin mailboxes and output expanders can be installed in any order.

[2] A single output expander is the only option that can be placed on top of the high capacity output expander.

[3] No other output option may be installed below the high capacity output expander.

[4] When used with a staple finisher, place this option below it.

[5] The staple finisher is always on top of the configuration. An extra 4-bin mailbox or output expander may be installed below it.

[6] Do not use the staple, hole punch finisher with any other output options.

Printer model	Dimensions (height, width, and depth)
B2865, MS725, MS821, MS823, MS825	445 x 428 x 510 mm (17.5 x 16.85 x 20.1 in.)
M5255, M5270, MS822, MS826	441 x 428 x 510 mm (17.4 x 16.85 x 20.1 in.)

Maximum floor, table, or desktop configuration



Maximum swivel cabinet configuration



Maximum adjustable printer stand configuration



Maximum caster base configuration



Maximum 4-bin mailbox configuration



Maximum high capacity output expander configuration




Maximum staple, hole punch finisher configuration



Maximum staple finisher configuration



Lexmark MB2770, MX721, MX722, MX725, XM5365, XM5370

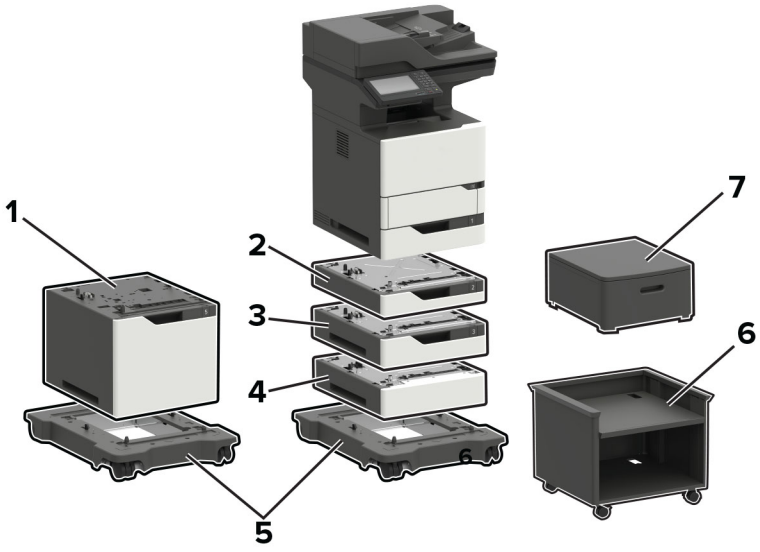

	Option	Part number	Dimensions (height, width, and depth)
1	2100-sheet tray	50G0804	350 x 428 x 510 mm (13.8 x 16.8 x 20.1 in.)
2	250-sheet tray	50G0800	80 x 428 x 510 mm (3.2 x 16.8 x 20.1 in.)
	250-sheet lockable tray	50G0820	
3	550-sheet tray	50G0802	110 x 428 x 510 mm (4.3 x 16.8 x 20.1 in.)
	550-sheet lockable tray	50G0822	
4	Spacer	50G0854	110 x 428 x 510 mm (4.3 x 16.8 x 20.1 in.)
5	Caster base	50G0855	126 x 521 x 693 mm (5 x 20.5 x 27.3 in.)
6	Adjustable printer stand	40C2300	520.7 x 652.78 x 624.84 mm (20.5 x 25.7 x 24.6 in.)
7	Swivel cabinet	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

Printer input options, maximum configurations, and placement

Option	Placement				
	Table or desktop	Swivel cabinet	Floor[3]	Caster base[4, 6]	Adjustable printer stand[4]
250-sheet tray[1, 2, 3, 4]	3	3	2	3	3
250-sheet lockable tray[1, 2, 3, 4]					
550-sheet tray[1, 2, 3, 4]			2	3	3
550-sheet lockable tray[1, 2, 3, 4]					
Spacer[5]					
2100-sheet tray[2, 6]	N/A	N/A	N/A	1	N/A
Caster base[4, 6]	N/A	N/A	1	N/A	N/A
Adjustable printer stand[4, 7]	N/A	N/A	1	N/A	N/A
Swivel cabinet	1	N/A	1	N/A	N/A

[1] Can be installed with other optional trays in any order except the 2100-sheet tray.

[2] Only one optional 250- or 550-sheet tray can be used when installing the 2100-sheet tray. Place the 2100-sheet tray at the bottom of the configuration.

[3] When placing the configuration on the floor, only one optional 250-sheet tray can be used with one optional 550-sheet tray or spacer.

[4] When placing the configuration on the caster base or adjustable printer stand, follow these maximum configuration instructions. If using three optional 550-sheet trays or spacers, a 250-sheet tray cannot be used. If using two 550-sheet trays or spacers, only one 250-sheet tray can be used. If using one 550-sheet tray or spacer, two 250-sheet trays can be used.


[5] When using a spacer, install it first, and then install any optional trays above it. Do not install the spacer with the 2100-sheet tray.

[6] The 2100-sheet tray requires the use of the caster base.

[7] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

Printer model	Dimensions (height, width, and depth)
All models	739.1 x 558.8 x 578.4 mm (29.1 x 22.0 x 22.8 in.)

Lexmark MX822, MX826, XM7355, XM7370

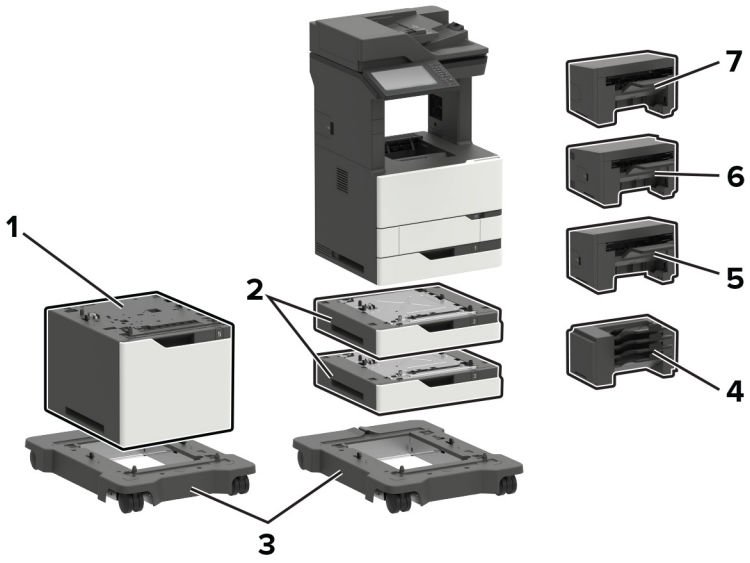

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Caster base[2]		
1	2100-sheet tray[1, 2]	N/A	N/A	1	25B2950	355 x 559 x 508 mm (14 x 22 x 20 in.)
2	550-sheet tray	2	2	2	25B2900	111 x 559 x 508 mm (4.3 x 22 x 20 in.)
3	Caster base	N/A	1	N/A	25B2910	106.7 x 685.8 x 693.4 mm (4.2 x 27 x 27.3 in.)
4	4-bin mailbox[3]	1	1	1	50G0852	272 x 421 x 384 mm (10.7 x 16.6 x 15.1 in.)

[1] Only two 550-sheet trays can be used with the 2100-sheet tray. Place the 2100-sheet tray at the bottom of the configuration.

[2] The 2100-sheet tray requires a caster base.

[3] Cannot be configured with any other type of finisher.

	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Caster base[2]		
5	Staple finisher[3]	1	1	1	50G0850	246 x 435 x 414 mm (9.7 x 17.1 x 16.3 in.)
6	Staple, hole punch finisher[3]	1	1	1	50G0849	263 x 462 x 507 mm (10.3 x 18.2 x 20 in.)
7	Offset stacker[3]	1	1	1	25B2999	246 x 435 x 414 mm (9.7 x 17.1 x 16.3 in.)


[1] Only two 550-sheet trays can be used with the 2100-sheet tray. Place the 2100-sheet tray at the bottom of the configuration.

[2] The 2100-sheet tray requires a caster base.

[3] Cannot be configured with any other type of finisher.

Printer model	Dimensions (height, width, and depth)
MX822ade, MX826ade, XM7355, XM7355b, XM7370	1150.6 x 685.8 x 693.4 mm (45.3 x 27 x 27.3 in.)
MX822adtfe, MX826adtfe	1259.8 x 685.8 x 693.4 mm (49.6 x 27 x 27.3 in.)
MX822adxe, MX826adxe	1391.9 x 685.8 x 693.4 mm (54.8 x 27 x 27.3 in.)

Lexmark B2338, B2442, B2546, B2650, M1242, M1246, M3250, MS321, MS421, MS521, MS621, MS622

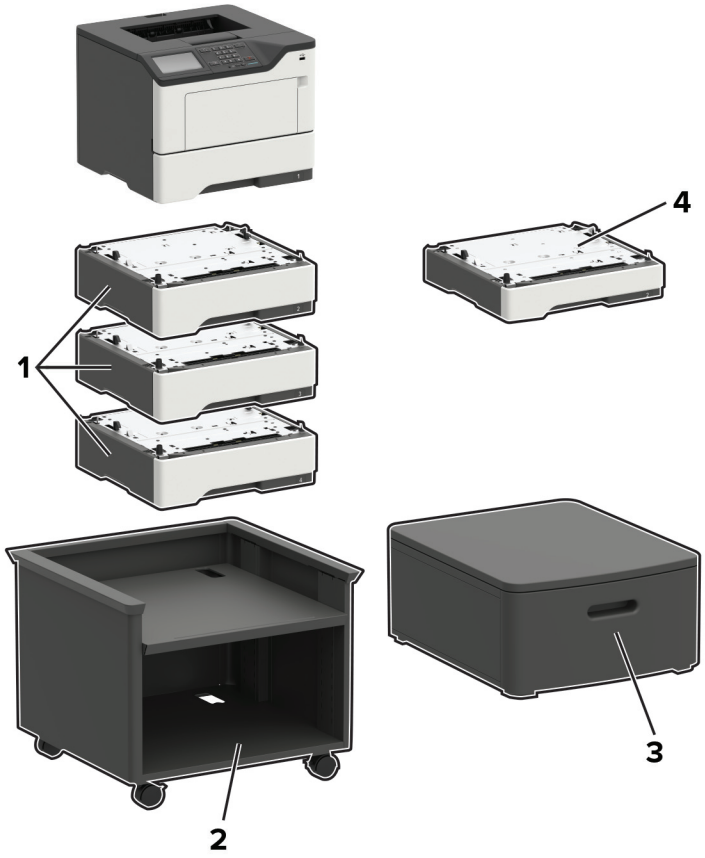

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	550-sheet tray[1, 2]	3	3	3	3	36S3110	126 x 389 x 374 mm (5 x 15.7 x 14.7 in.)
2	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
3	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

[1] Can be installed with other optional trays in any order.

[2] Only one optional tray can be configured with B2338, B2442, M1242, MS321, and MS421.


	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
4	250-sheet tray[1, 2]	3	3	3	3	36S2910	95 x 389 x 374 mm (3.7 x 15.7 x 14.7 in.)

[1] Can be installed with other optional trays in any order.

[2] Only one optional tray can be configured with B2338, B2442, M1242, MS321, and MS421.

Printer model	Dimensions (height, width, and depth)
B2338, B2442, B2546, M1242, M1246, MS321, MS421, MS521	260 x 399 x 374 mm (10.2 x 15.7 x 14.7 in.)
B2650, M3250, MS621, MS622	303 x 399 x 374 mm (11.9 x 15.7 x 14.7 in.)

Lexmark MB2338, MB2442, MB2546, MX321, MX421, MX521, MX522, XM1242, XM1246

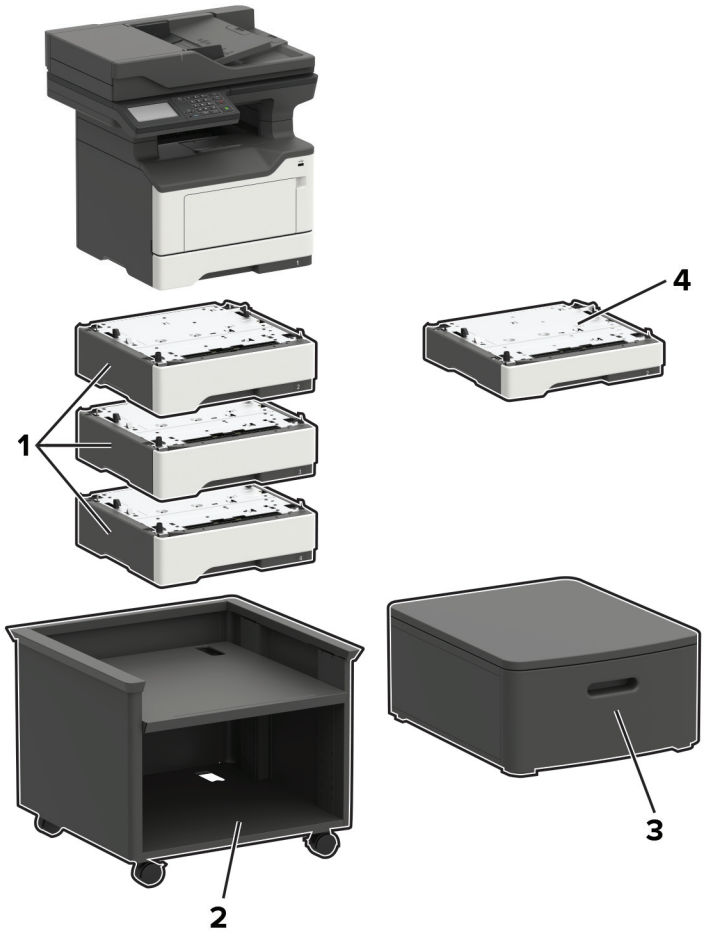

Printer options, maximum configurations, part numbers, and dimensions


	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	550-sheet tray[1, 2]	3	3	3	3	36S3110	126 x 389 x 374 mm (5 x 15.7 x 14.7 in.)
2	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
3	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)
4	250-sheet tray[1, 2]	3	3	3	3	36S2910	95 x 389 x 374 mm (3.7 x 15.7 x 14.7 in.)

[1] Can be installed with other optional trays in any order.

[2] Only one optional tray can be configured with MB2338, MB2442, MX321, MX421, and XM1242.

Printer model	Dimensions (height, width, and depth)
MB2338, MB2442, MX321, MX421, XM1242	467 x 399 x 429.5 mm (18.4 x 15.7 x 16.9 in.)
MB2546, MX521, MX522, XM1246	477 x 489 x 429.5 mm (18.8 x 19.3 x 16.9 in.)

Lexmark MB2650, MX622, XM3250

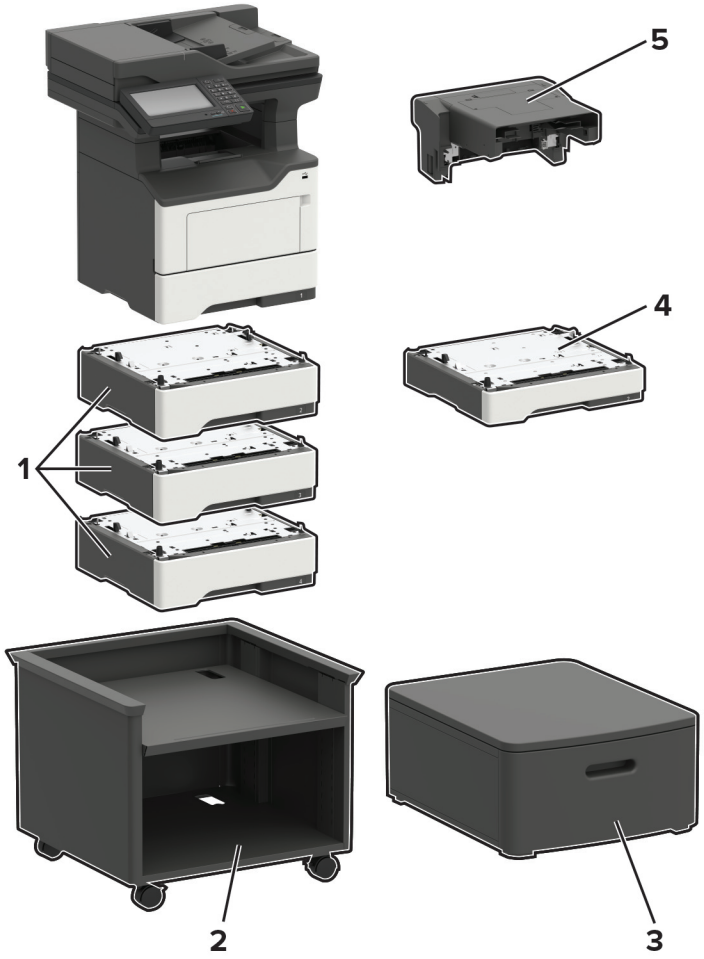


		Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	550-sheet tray*	3	3	3	3	36S3110	126 x 389 x 374 mm (5 x 15.7 x 14.7 in.)
2	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
3	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)
4	250-sheet tray*	3	3	3	3	36S2910	95 x 389 x 374 mm (3.7 x 15.7 x 14.7 in.)

* Can be installed with other optional trays in any order.

		Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
5	Inline stapler	1	1	1	1	36S8010	195 x 409 x 371 mm (7.7 x 16.1 x 14.6 in.)
* Can be installed with other optional trays in any order.							

Printer model	Dimensions (height, width, and depth)
All models	545 x 489 x 476.5 mm (21.5 x 19.3 x 18.8 in.)

Lexmark C9235, CS921, CS923, CS927

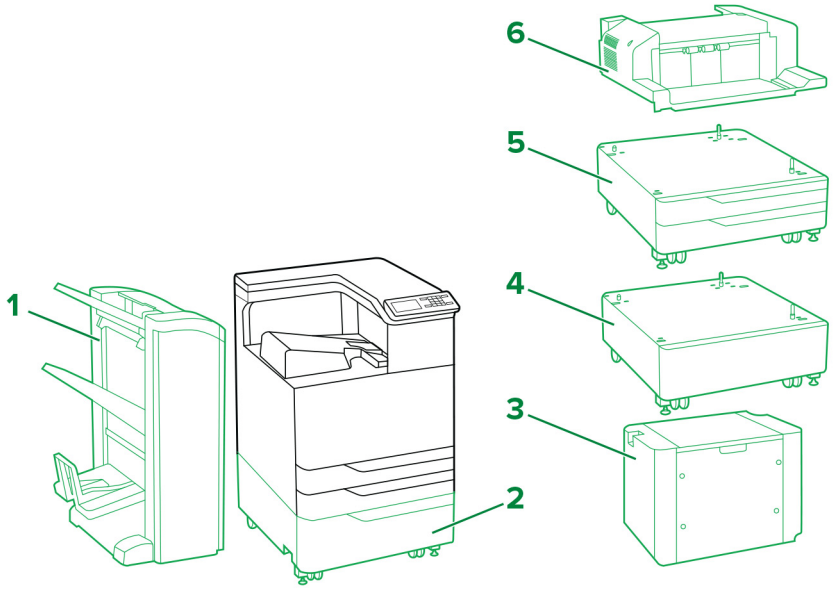

Legend: – Standard – Optional

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement		Part number	Dimensions (height, width, and depth)
		Floor	Cabinet		
1	Staple, hole punch finisher[1, 2]	1	N/A	26Z0080 (4-hole) 26Z0081 (3-hole)	1065.02 x 641.10 x 658.11 mm (41.93 x 25.24 x 25.91 in.)
	Booklet finisher[1, 2]	1	N/A	26Z0082 (4-hole) 26Z0083 (3-hole)	1065.02 x 641.10 x 658.11 mm (41.93 x 25.24 x 25.91 in.)
2	2500-sheet tray	1	N/A	32C0051 (Letter) 32C0052 (A4)	304.04 x 614.93 x 653.03 mm (11.97 x 24.21 x 25.71 in.)
3	3000-sheet tray[3]	1	N/A	26Z0088 (Letter) 26Z0089 (A4)	404.88 x 367.03 x 528.07 mm (15.94 x 14.45 x 20.79 in.)
4	Cabinet	1	N/A	32C0053	254 x 614.93 x 651.76 mm (10 x 24.21 x 25.66 in.)
5	2 x 500-sheet tray	1	N/A	32C0050	304.04 x 614.93 x 561.09 mm (11.97 x 24.21 x 22.09 in.)
6	Staple finisher[4]	1	1	26Z0084	195.07 x 472.95 x 583.95 mm (7.68 x 18.62 x 22.99 in.)

[1] Installing this option requires placing the printer on top of one 2500-sheet tray, one 2 x 500-sheet tray, or a cabinet.


[2] This option comes with a horizontal paper transport.

[3] The 3000-sheet tray requires the use of one 2500-sheet tray or one 2 x 500-sheet tray.

[4] If another finisher is installed, then the staple finisher is not supported.

Printer model	Dimensions (height, width, and depth)
C9235, CS921, CS927	780 x 615 x 740 mm (30.7 x 24.2 x 29.1 in.)
CS923	780 x 615 x 770 mm (30.7 x 24.2 x 30.3 in.)

Lexmark CX921, CX922, CX923, CX924, CX927, XC9235, XC9245, XC9255, XC9265

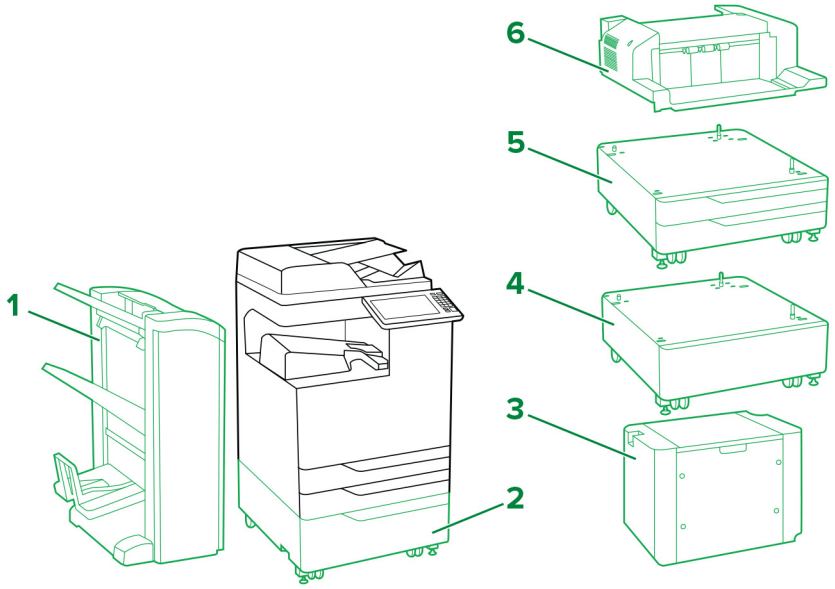

Legend: – Standard – Optional

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement		Part number	Dimensions (height, width, and depth)
		Floor	Cabinet		
1	Staple, hole punch finisher[1, 2]	1	N/A	26Z0080 (4-hole) 26Z0081 (3-hole)	1065.02 x 641.10 x 658.11 mm (41.93 x 25.24 x 25.91 in.)
	Booklet finisher[1, 2]	1	N/A	26Z0082 (4-hole) 26Z0083 (3-hole)	1065.02 x 641.10 x 658.11 mm (41.93 x 25.24 x 25.91 in.)
2	2500-sheet tray	1	N/A	32C0051 (Letter) 32C0052 (A4)	304.04 x 614.93 x 561.09 mm (11.97 x 24.21 x 25.71 in.)
3	3000-sheet tray[3]	1	N/A	26Z0088 (Letter) 26Z0089 (A4)	404.88 x 367.03 x 528.07 mm (15.94 x 14.45 x 20.79 in.)
4	Cabinet	1	N/A	32C0053	254 x 614.93 x 651.76 mm (10 x 24.21 x 25.66 in.)
5	2 x 500-sheet tray	1	N/A	32C0050	304.04 x 614.93 x 561.09 mm (11.97 x 24.21 x 22.09 in.)
6	Staple finisher[4]	1	1	26Z0084	195.07 x 472.95 x 583.95 mm (7.68 x 18.62 x 22.99 in.)

[1] Installing this option requires placing the printer on top of one 2500-sheet tray, one 2 x 500-sheet tray, or a cabinet.

[2] This option comes with a horizontal paper transport.


[3] The 3000-sheet tray requires the use of one 2500-sheet tray or one 2 x 500-sheet tray.

[4] If another finisher is installed, then the staple finisher is not supported.

Printer model	Dimensions (height, width, and depth)
CX921, XC9235	921 x 615 x 762 mm (36.3 x 24.2 x 30 in.)
CX922, XC9245	921 x 615 x 696 mm (36.3 x 24.2 x 27.4 in.)
CX923de, CX924de, XC9255, XC9265	921 x 615 x 792 mm (36.3 x 24.2 x 31.2 in.)

Printer model	Dimensions (height, width, and depth)
CX923dte, CX923dxe, CX924dte, CX924dxe	1225 x 615 x 792 mm (48.2 x 24.2 x 31.2 in.)

Lexmark C4150, CS720, CS725, CS727, CS728

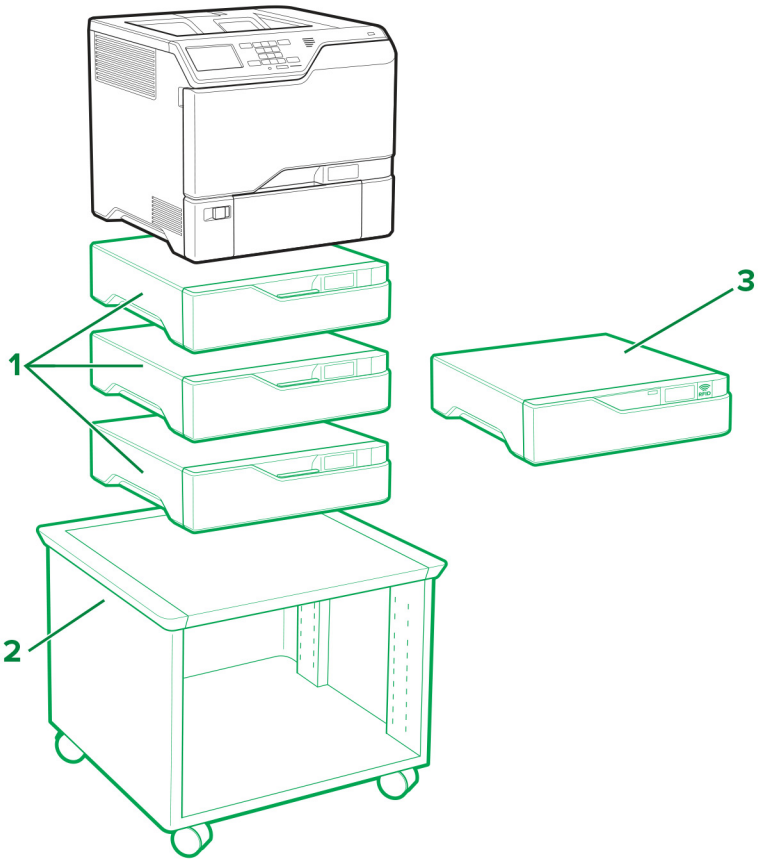

Legend: – Standard – Optional

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand		
1	550-sheet tray	3	3	3	40C2100	119 x 463 x 483 mm (4.7 x 18.23 x 19 in.)
2	Adjustable printer stand[1]	N/A	1	N/A	40C2300	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)

[1] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

[2] Install the RFID option on top of an optional tray. You can use a maximum of two optional trays.


	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand		
3	RFID option[2]	1	1	1	40C0745 (NA) 40C0747 (EU)	119 x 463 x 483 mm (4.7 x 18.23 x 19 in.)

[1] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

[2] Install the RFID option on top of an optional tray. You can use a maximum of two optional trays.

Printer model	Dimensions (height, width, and depth)
C4150, CS720de, CS725de, CS727de, CS728de	417 x 475 x 499 mm (16.4 x 18.7 x 19.6 in.)
CS720dte, CS725dte	536 x 475 x 495 mm (21.1 x 18.7 x 19.4 in.)

Lexmark CX725, CX727, XC4140, XC4143, XC4150, XC4153

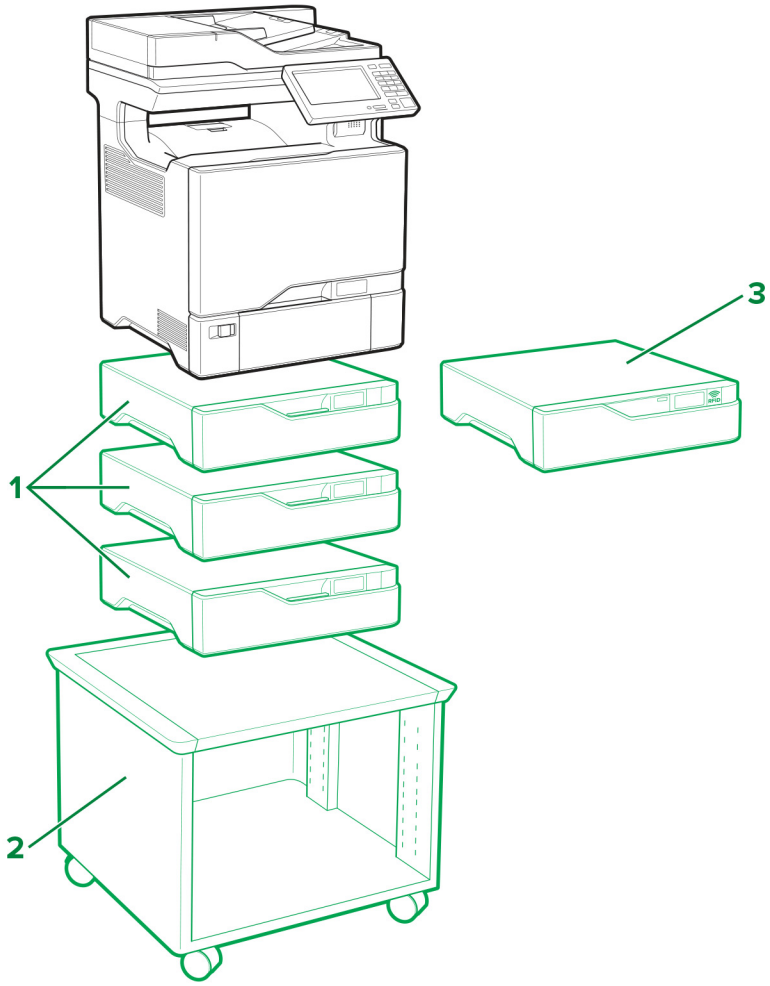

Legend: – Standard – Optional

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand		
1	550-sheet tray	3	3	3	40C2100	119 x 463 x 483 mm (4.7 x 18.23 x 19 in.)
2	Adjustable printer stand[1]	N/A	1	N/A	40C2300	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)

[1] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

[2] Install the RFID option on top of an optional tray. You can use a maximum of two optional trays.


	Option	Placement			Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand		
3	RFID option[2]	1	1	1	40C0745 (NA) 40C0747 (EU)	119 x 463 x 483 mm (4.7 x 18.23 x 19 in.)

[1] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

[2] Install the RFID option on top of an optional tray. You can use a maximum of two optional trays.

Printer model	Dimensions (height, width, and depth)
CX725de/dhe, CX727de, XC4150, XC4153	648 x 505 x 533 mm (25.5 x 19.9 x 21 in.)
CX725dthe, XC4140, XC4143	767 x 505 x 533 mm (30.2 x 19.9 x 21 in.)

Lexmark C6160, CS820, CS827

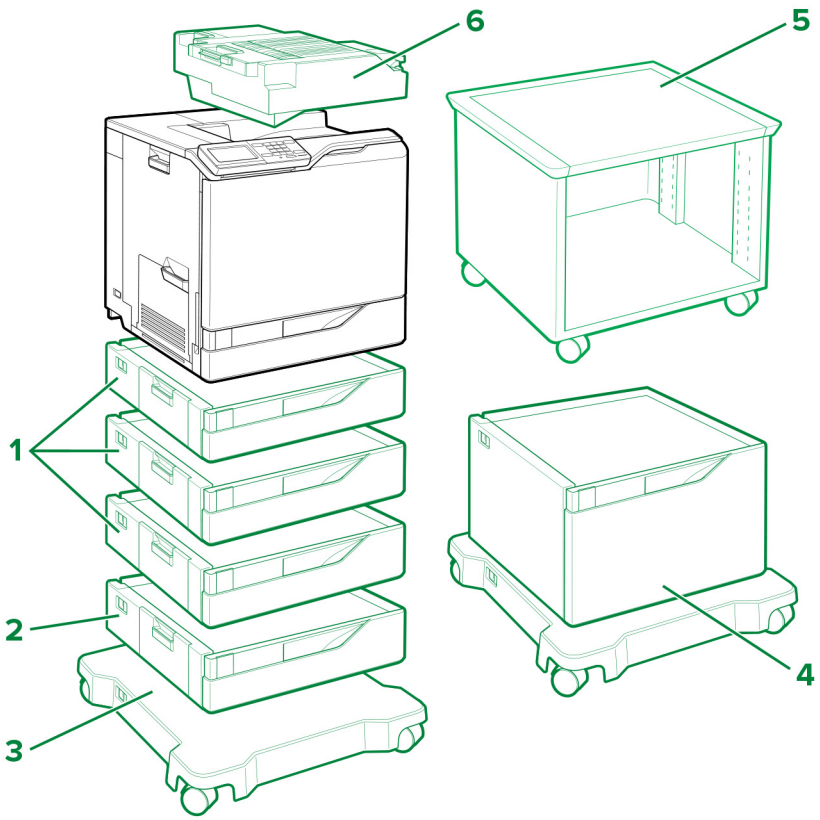

Legend: – Standard – Optional

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Caster base	Adjustable printer stand		
1	550-sheet tray	4	4	4	1	21K0567	120 x 558.8 x 522.4 mm (4.7 x 22.0 x 20.6 in.)
2	Envelope tray[1]	1	1	1	N/A	21K0787	120 x 558.8 x 522.4 mm (4.7 x 22.0 x 20.6 in.)
3	Caster base	N/A	1	N/A	N/A	21K2501	108.5 x 662 x 658 mm (4.27 x 26.1 x 25.9 in.)
4	2200-sheet tray[2]	1	1	1	N/A	21K0237	359 x 558.8 x 522.4 mm (14.13 x 22.0 x 20.6 in.)
5	Adjustable printer stand[3]	N/A	1	N/A	N/A	40C2300	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)
6	Staple finisher	1	1	1	1	42K2000	140.2 x 530 x 475.4 mm (5.5 x 20.9 x 18.7 in.)


[1] This option must be installed as tray 3 in the configuration.

[2] Use a maximum of three optional 550-sheet trays when installing the 2200-sheet tray. Place the 2200-sheet tray at the bottom of the configuration.

[3] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

Printer model	Dimensions (height, width, and depth)
C6160, CS820de, CS827de	535.94 x 558.8 x 522.4 mm (21.12 x 22 x 20.6 in.)
CS820dte	655 x 558.8 x 522.4 mm (25.8 x 22 x 20.6 in.)
CS820dtfe	690 x 646 x 522.4 mm (27.17 x 25.43 x 20.6 in.)

Lexmark CX820, CX827, XC6152, XC6153

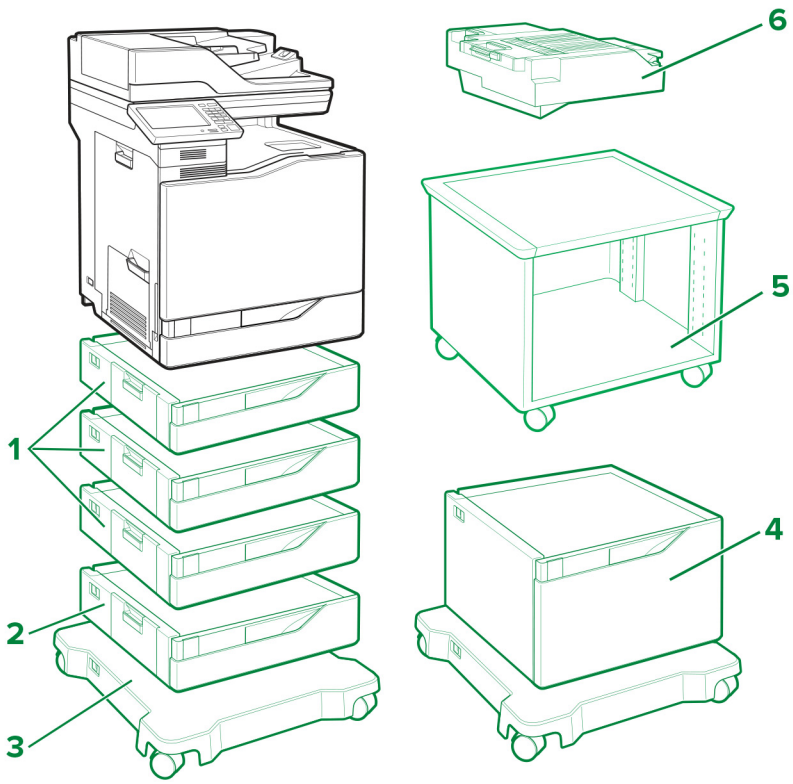

Legend: – Standard – Optional

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Caster base	Adjustable printer stand		
1	550-sheet tray	4	4	4	1	21K0567	120 x 558.8 x 522.4 mm (4.7 x 22.0 x 20.6 in.)
2	Envelope tray[1]	1	1	1	N/A	21K0787	120 x 558.8 x 522.4 mm (4.7 x 22.0 x 20.6 in.)
3	Caster base	N/A	1	N/A	N/A	21K2501	108.5 x 662 x 658 mm (4.27 x 26.1 x 25.9 in.)

[1] This option must be installed as tray 3 in the configuration.

[2] Use a maximum of three optional 550-sheet trays when installing the 2200-sheet tray. Place the 2200-sheet tray at the bottom of the configuration.

[3] For more information on supported configurations, see “Adjustable printer stand 40C2300” on page 98.

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Caster base	Adjustable printer stand		
4	2200-sheet tray[2]	1	1	1	N/A	21K0237	359 x 558.8 x 522.4 mm (14.13 x 22.0 x 20.6 in.)
5	Adjustable printer stand[3]	N/A	1	N/A	N/A	40C2300	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)
6	Staple finisher	1	1	1	1	42K2000	140.2 x 530 x 475.4 mm (5.5 x 20.9 x 18.7 in.)


[1] This option must be installed as tray 3 in the configuration.

[2] Use a maximum of three optional 550-sheet trays when installing the 2200-sheet tray. Place the 2200-sheet tray at the bottom of the configuration.

[3] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

Printer model	Dimensions (height, width, and depth)
CX820de, CX827de, XC6152de, XC6153de	762.6 x 558.8 x 588 mm (30 x 22 x 23.15 in.)
CX820dtfe, XC6152dtfe, XC6153dtfe	1137 x 662 x 658 mm (44.8 x 26.1 x 25.9 in.)

Lexmark CX825, CX860, XC8155, XC8160, XC8163

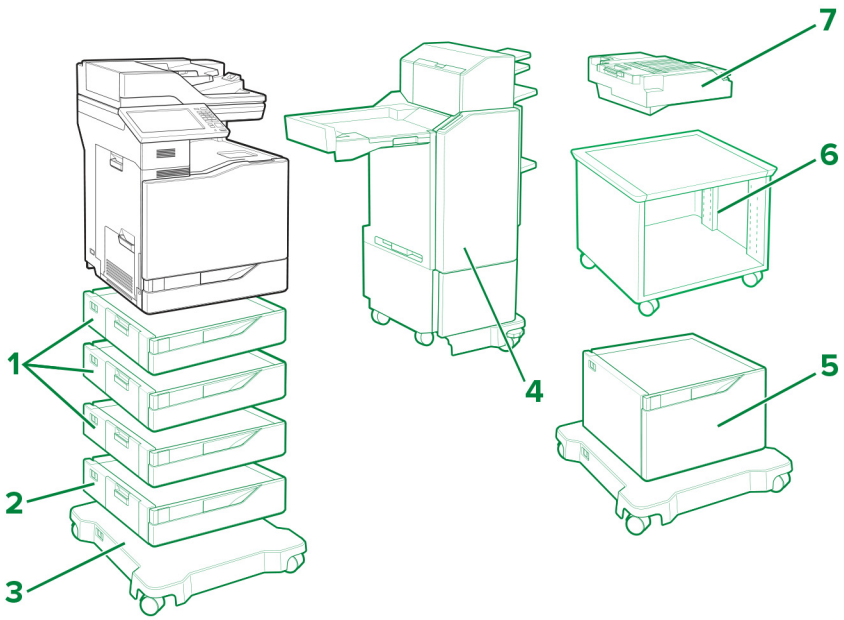

Legend: – Standard – Optional

Printer options, maximum configurations, part numbers, and dimensions

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Caster base	Adjustable printer stand		
1	550-sheet tray	4	4	4	1	21K0567	120 x 558.8 x 522.4 mm (4.7 x 22.0 x 20.6 in.)
2	Envelope tray[1]	1	1	1	N/A	21K0787	120 x 558.8 x 522.4 mm (4.7 x 22.0 x 20.6 in.)
3	Caster base	N/A	1	N/A	N/A	21K2501	108.5 x 662 x 658 mm (4.27 x 26.1 x 25.9 in.)
4	Multiposition staple, hole punch finisher (short configuration)[2]	N/A	N/A	1	N/A	42K1267 42K1268	1156 x 621 x 574 mm (45.5 x 24.4 x 22.6 in.)
	Multiposition staple, hole punch finisher (tall configuration)[3]	N/A	N/A	1	N/A	42K1597 42K1598	1276 x 621 x 574 mm (50.2 x 24.5 x 22.6 in.)
5	2200-sheet tray[4]	1	1	1	N/A	21K0237	359 x 558.8 x 522.4 mm (14.13 x 22.0 x 20.6 in.)
6	Adjustable printer stand[5]	N/A	1	N/A	N/A	40C2300	521 x 653 x 625 mm (20.5 x 25.7 x 24.6 in.)
7	Staple finisher	1	1	1	1	42K2300	159.3 x 543.8 x 475.4 mm (6.3 x 21.4 x 18.7 in.)

[1] This option must be installed as tray 3 in the configuration.

[2] Installing the multiposition staple, hole punch finisher (short configuration) requires placing the printer on top of two optional 550-sheet trays and the caster base.

[3] Installing the multiposition staple, hole punch finisher (tall configuration) requires placing the printer on top of three optional 550-sheet trays and the caster base or on top of the 2200-sheet tray and the caster base.

[4] Use a maximum of three optional 550-sheet trays when installing the 2200-sheet tray. Place the 2200-sheet tray at the bottom of the configuration.

[5] For more information on supported configurations, see “Adjustable printer stand 40C2300” on page 98.

Printer model	Dimensions (height, width, and depth)
CX825de, XC8155de	812.8 x 558.8 x 588 mm (32 x 22 x 23.15 in.)
CX825dte, XC8155dte	1162 x 662 x 658 mm (45.8 x 26.1 x 25.9 in.)
CX825dtfe	1162 x 662 x 658 mm (45.8 x 26.1 x 25.9 in.)
CX860de, XC8160de, XC8163de	812.8 x 558.8 x 588 mm (32 x 22 x 23.15 in.)


Printer model	Dimensions (height, width, and depth)
CX860dte, XC8160dte, XC8163dte	1162 x 662 x 658 mm (45.8 x 26.1 x 25.9 in.)
CX860dtfe	1162 x 662 x 658 mm (45.8 x 26.1 x 25.9 in.)

Lexmark MS911 and MX910 series

The printers with optional trays and finisher:



Cabinet 26Z0094:

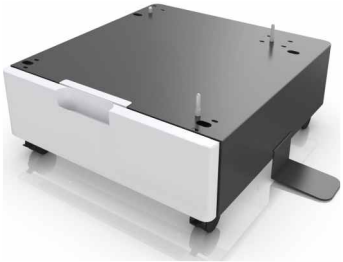

Supported printer models: MS911de, MX910de, MX911dte, and MX912dxe

Input options

Placement	2 x 500-sheet tray[2]	2500-sheet tray	3000-sheet tray[3]	Staple finisher[4,5]	Staple, hole punch finisher	Booklet finisher
Floor	✓					
	✓		✓			
	✓		✓	✓		
	✓		✓		✓	
	✓		✓			✓
	✓			✓		
	✓				✓	
	✓					✓
		✓				
		✓	✓			
		✓	✓	✓		
		✓	✓		✓	
		✓	✓			✓
		✓		✓		
		✓			✓	
		✓				✓

[1] The cabinet is supported even if no other optional hardware is installed.

[2] The 2 x 500 sheet tray cannot be used with 2500-sheet tray.

[3] The 3000-sheet tray is supported only if a 2 x 500- or 2500-sheet tray or a cabinet is installed.

[4] The staple finisher is not supported if another finisher is installed.

[5] The staple finisher is not supported in MX912dxe.

Placement	2 x 500-sheet tray[2]	2500-sheet tray	3000-sheet tray[3]	Staple finisher[4,5]	Staple, hole punch finisher	Booklet finisher
Cabinet[1]			✓			
			✓	✓		
			✓		✓	
			✓			✓
				✓		
					✓	
						✓

[1] The cabinet is supported even if no other optional hardware is installed.


[2] The 2 x 500 sheet tray cannot be used with 2500-sheet tray.

[3] The 3000-sheet tray is supported only if a 2 x 500- or 2500-sheet tray or a cabinet is installed.

[4] The staple finisher is not supported if another finisher is installed.

[5] The staple finisher is not supported in MX912dxe.

Lexmark M5155, M5163, M5170, MS710, MS711, MS810, MS811, MS812, MS817, MS818

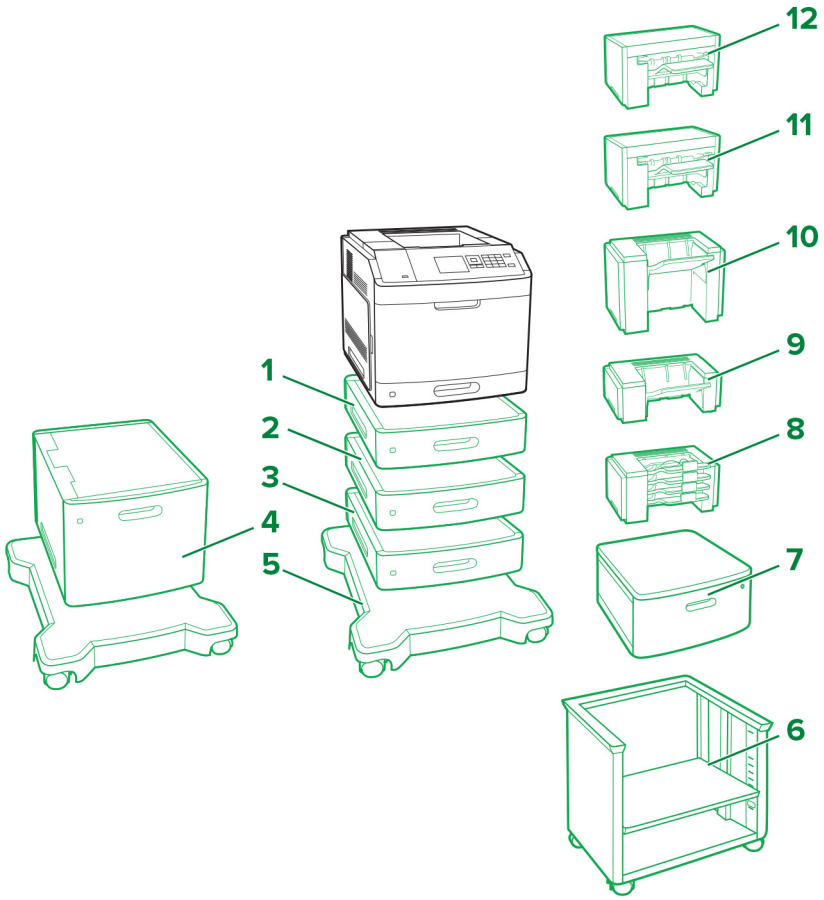

Legend: – Standard – Optional

	Option	Part number	Dimensions (height, width, and depth)
1	250-sheet tray	40G0800	78.74 x 421.64 x 510.54 mm (3.1 x 16.6 x 20.1 in.)
	250-sheet lockable tray	40G0820	
2	550-sheet tray	40G0802	109.22 x 421.64 x 510.54 mm (4.3 x 16.6 x 20.1 in.)
	550-sheet lockable tray	40G0822	
3	Spacer	40G0854	109.22 x 421.64 x 510.54 mm (4.3 x 16.6 x 20.1 in.)
4	2100-sheet tray	40G0804	350.52 x 421.64 x 510.54 mm (13.8 x 16.6 x 20.1 in.)
5	Caster base	40G0855	106.68 x 594.36 x 693.42 mm (4.2 x 23.4 x 27.3 in.)

	Option	Part number	Dimensions (height, width, and depth)
6	Adjustable printer stand	40C2300	520.7 x 652.78 x 624.84 mm (20.5 x 25.7 x 24.6 in.)
7	Swivel cabinet	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)
8	4-bin mailbox	40G0852	271.78 x 421.64 x 383.54 mm (10.7 x 16.6 x 15.1 in.)
9	Output expander	40G0851	165.1 x 421.64 x 381 mm (6.5 x 16.6 x 15 in.)
10	High capacity output expander	40G0853	309.88 x 421.64 x 335.28 mm (12.2 x 16.6 x 13.2 in.)
11	Staple, hole punch finisher	40G0849	246.38 x 434.34 x 513.08 mm (9.7 x 18.2 x 20.2 in.)
12	Staple finisher	40G0850	246.38 x 434.34 x 414.02 mm (9.7 x 17.1 x 16.3 in.)

Printer input options, maximum configurations, and placement

Option	Placement				
	Table or desktop	Swivel cabinet	Floor[3]	Caster base[4, 6]	Adjustable printer stand[4]
250-sheet tray[1, 2, 3, 4]	4	4	2	4	4
250-sheet lockable tray[1, 2, 3, 4]					
550-sheet tray[1, 2, 3, 4]			1	3	3
550-sheet lockable tray[1, 2, 3, 4]					
Spacer[5]					

[1] Can be installed with other optional trays in any order except the 2100-sheet tray.

[2] Only one optional 250- or 550-sheet tray can be used when installing the 2100-sheet tray. Place the 2100-sheet tray at the bottom of the configuration.

[3] When placing the configuration on the floor, only one optional 250-sheet tray can be used with one optional 550-sheet tray or spacer.

[4] When placing the configuration on the caster base or adjustable printer stand, follow these maximum configuration instructions. If using three optional 550-sheet trays or spacers, no optional 250-sheet tray can be used. If using two 550-sheet trays or spacers, only one 250-sheet tray can be used. If using one 550-sheet tray or spacer, up to three 250-sheet trays can be used.

[5] When using a spacer, install it first, and then install any optional trays above it. Do not install the spacer with the 2100-sheet tray.

[6] The 2100-sheet tray requires the use of the caster base.

[7] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

Option	Placement				
	Table or desktop	Swivel cabinet	Floor[3]	Caster base[4, 6]	Adjustable printer stand[4]
2100-sheet tray[2, 6]	N/A	N/A	N/A	1	N/A
Caster base[4]	N/A	N/A	1	N/A	N/A
Adjustable printer stand[4, 7]	N/A	N/A	1	N/A	N/A
Swivel cabinet	1	N/A	1	N/A	N/A

[1] Can be installed with other optional trays in any order except the 2100-sheet tray.

[2] Only one optional 250- or 550-sheet tray can be used when installing the 2100-sheet tray. Place the 2100-sheet tray at the bottom of the configuration.

[3] When placing the configuration on the floor, only one optional 250-sheet tray can be used with one optional 550-sheet tray or spacer.

[4] When placing the configuration on the caster base or adjustable printer stand, follow these maximum configuration instructions. If using three optional 550-sheet trays or spacers, no optional 250-sheet tray can be used. If using two 550-sheet trays or spacers, only one 250-sheet tray can be used. If using one 550-sheet tray or spacer, up to three 250-sheet trays can be used.

[5] When using a spacer, install it first, and then install any optional trays above it. Do not install the spacer with the 2100-sheet tray.

[6] The 2100-sheet tray requires the use of the caster base.

[7] For more information on supported configurations, see "Adjustable printer stand 40C2300" on page 98.

Printer output options, maximum configurations, and placement

Option	Placement				
	Table or desktop	Swivel cabinet	Floor	Caster base	Adjustable printer stand
4-bin mailbox[1, 4]	3	3	3	3	3
Output expander[1, 2, 4]					
High capacity output expander[2, 3]	1	1	1	1	1
Staple finisher[5]	1	1	1	1	1
Staple, hole punch finisher[6]	1	1	1	1	1

[1] The 4-bin mailboxes and output expanders can be installed in any order.

[2] A single output expander is the only option that can be placed on top of the high capacity output expander.

[3] No other output option may be installed below the high capacity output expander.

[4] When used with a staple finisher, place this option below it.

[5] The staple finisher is always on top of the configuration. An additional 4-bin mailbox or output expander may be installed below it.

[6] Do not use the staple, hole punch finisher with any other output options.

Maximum floor configuration



Maximum table or desktop configuration



Maximum swivel cabinet configuration



Maximum adjustable printer stand configuration



Maximum caster base configuration



Maximum 4-bin mailbox configuration



Maximum high capacity output expander configuration




Maximum staple, hole punch finisher configuration



Maximum staple finisher configuration



Lexmark MX710, MX711, MX717, MX718, XM5163, XM5170

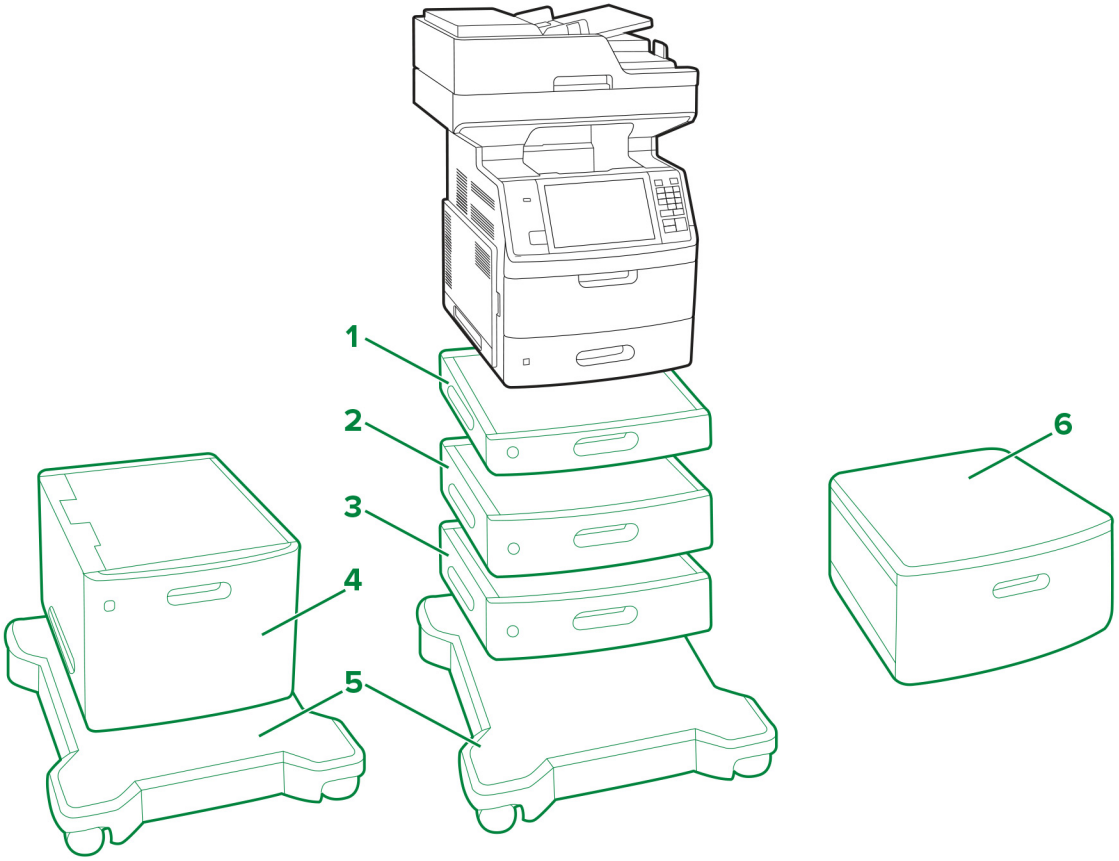

Legend: – Standard – Optional

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Swivel cabinet	Floor[3]	Caster base[4]		
1	250-sheet tray[1, 2, 3, 4]	4	4	2	4	40G0800	78.74 x 421.64 x 510.54 mm (3.1 x 16.6 x 20.1 in.)
	250-sheet lockable tray[1, 2, 3, 4]					40G0820	
2	550-sheet lockable tray[1, 2, 3, 4]			1	3	40G0802	109.22 x 421.64 x 510.54 mm (4.3 x 16.6 x 20.1 in.)
	550-sheet tray[1, 2, 3, 4]					40G0822	
3	Spacer[5]					40G0854	109.22 x 421.64 x 510.54 mm (4.3 x 16.6 x 20.1 in.)
4	2100-sheet tray[2, 6]	N/A	N/A	N/A	1	40G0804	350.52 x 421.64 x 510.54 mm (13.8 x 16.6 x 20.1 in.)
5	Caster base[4]	N/A	N/A	1	N/A	40G0855	106.68 x 594.36 x 693.42 mm (4.2 x 23.4 x 27.3 in.)
6	Swivel cabinet	1	N/A	1	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

[1] Can be installed with other optional trays in any order except the 2100-sheet tray.

[2] Only one optional 250- or 550-sheet tray can be used with the 2100-sheet tray. Place the 2100-sheet tray at the bottom of the configuration.

[3] When placing the configuration on the floor, only one optional 250-sheet tray can be used with one optional 550-sheet tray or spacer.

[4] When placing the configuration on the caster base, follow these maximum configuration instructions. If using three optional 550-sheet trays or spacers, no optional 250-sheet tray can be used. If using two 550-sheet trays or spacers, only one 250-sheet tray can be used. If using one 550-sheet tray or spacer, up to three 250-sheet trays can be used.

[5] When using a spacer, install it first, and then install any optional trays above it. Do not install the spacer with the 2100-sheet tray.

[6] The 2100-sheet tray requires the use of the caster base.

Lexmark MX810 Series

The printer with optional tray and standard caster base:



Notes:


- A maximum of four trays may be configured with the printer.
- Always use a caster base when configuring the printer with the 2100-sheet tray.

Supported printer models: MX810, MX811, and MX812

Placement	Caster base	550-sheet tray				2100-sheet tray*
		1	2	3	4	
Floor	✓					✓
		✓				
		✓	✓			
		✓	✓	✓		
Desktop		✓				
		✓	✓			
		✓	✓	✓		
		✓	✓	✓	✓	

* The 2100-sheet tray cannot be paired with other trays and must be the lowest tray.

Lexmark CX310, CX317, CX410, CX417, CX510, CX517, XC2132

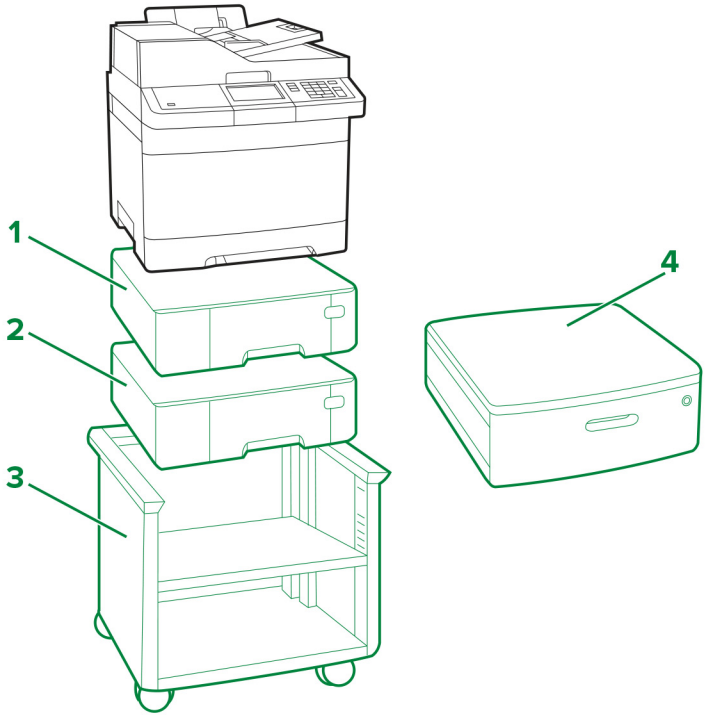

Legend: – Standard – Optional

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	550-sheet tray[1, 2]	2	2	2	2	38C0636	132 x 424 x 417 mm (5.2 x 16.7 x 16.4 in.)
2	650-sheet duo tray[1, 2]	1	1	1	1	38C0626	132 x 424 x 417 mm (5.2 x 16.7 x 16.4 in.)
3	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)

[1] Only one 550-sheet tray can be installed with the 650-sheet duo tray.


[2] Only one optional tray can be configured with CX310n, CX310dn, CX317dn, CX410dte, and CX510dthe.

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
4	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

[1] Only one 550-sheet tray can be installed with the 650-sheet duo tray.

[2] Only one optional tray can be configured with CX310n, CX310dn, CX317dn, CX410dte, and CX510dthe.

Lexmark C2132, CS310, CS317, CS410, CS417, CS510, CS517

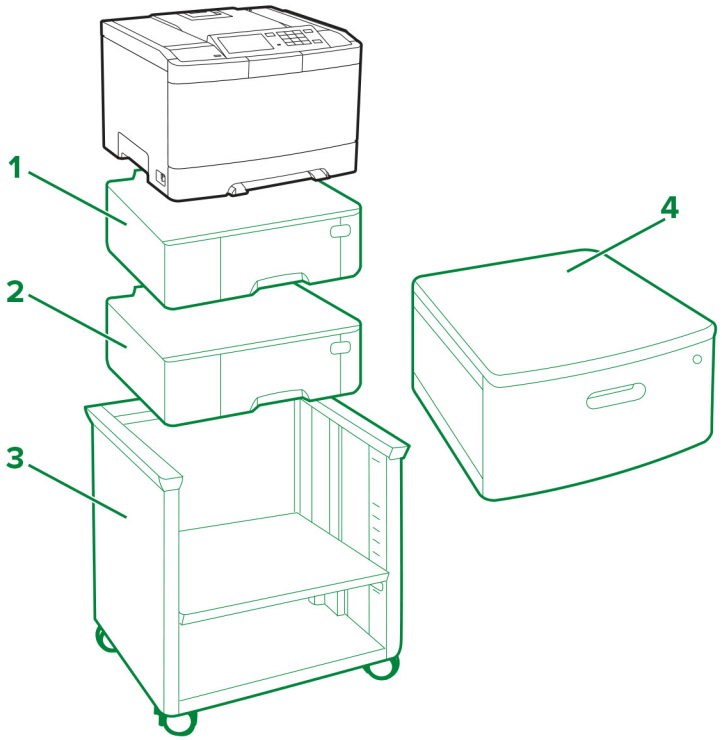


Legend: – Standard – Optional

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	550-sheet tray[1, 2]	2	2	2	2	38C0636	132 x 424 x 417 mm (5.2 x 16.7 x 16.4 in.)
2	650-sheet duo tray[1, 2]	1	1	1	1	38C0626	132 x 424 x 417 mm (5.2 x 16.7 x 16.4 in.)
3	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
4	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

[1] Only one 550-sheet tray can be installed with the 650-sheet duo tray.

[2] Only one optional tray can be configured with CS310n, CS310dn, CS317dn, CS410dtn, and CS510dte.

Lexmark MX610, MX611, MX617, XM3150

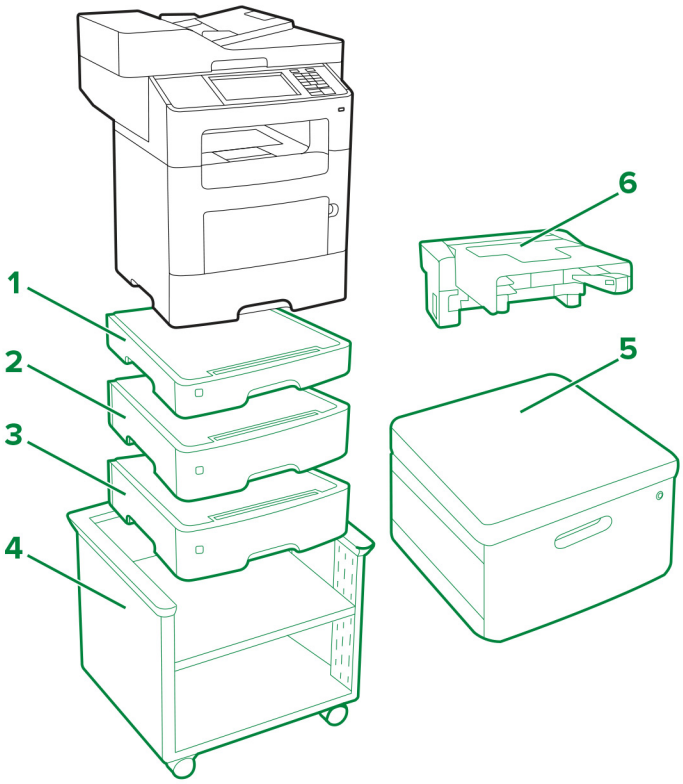


Legend: – Standard – Optional

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	250-sheet tray*	3	3	3	3	35S0267	77 x 389 x 382 mm (3.03 x 15.30 x 15.04 in.)
2	550-sheet lockable tray*					35S0367	109 x 389 x 382 mm (4.29 x 15.30 x 15.04 in.)
3	550-sheet tray*					35S0567	109 x 389 x 382 mm (4.29 x 15.30 x 15.04 in.)
4	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)

* This tray can be configured with other optional trays in any order.

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
5	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)
6	Inline stapler	1	1	1	1	35S8000	196 x 409 x 371 mm (7.7 x 16.1 x 14.6 in.)
* This tray can be configured with other optional trays in any order.							

Lexmark MX310, MX317, MX410, MX417, MX510, MX511, MX517, XM1145

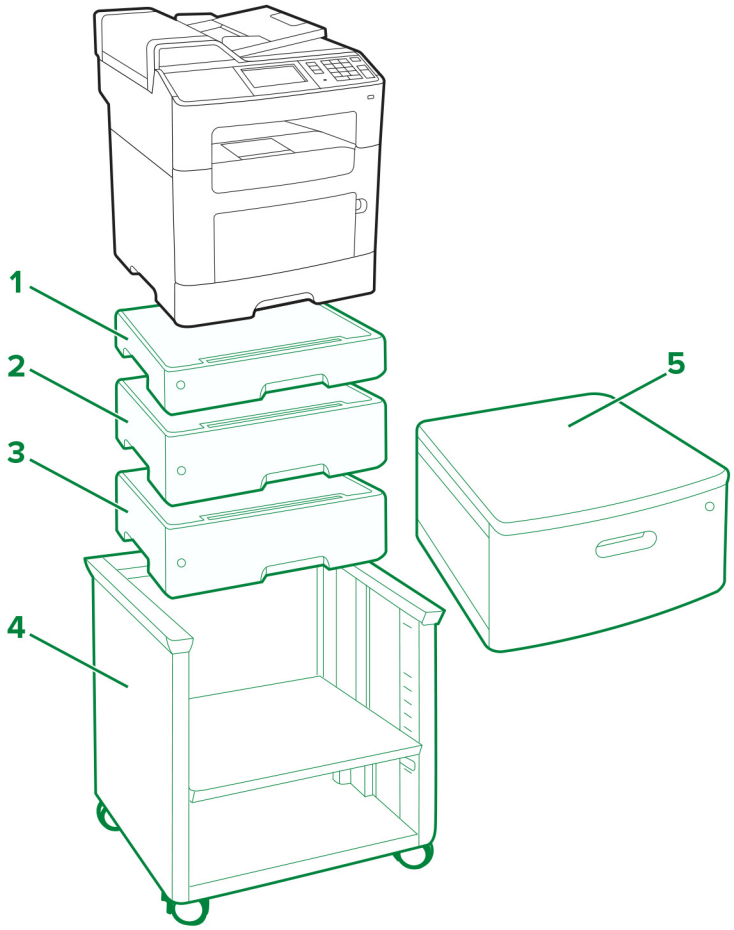


Legend: – Standard – Optional

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	250-sheet tray[1, 2]	3	3	3	3	35S0267	77 x 389 x 382 mm (3.03 x 15.30 x 15.04 in.)
2	550-sheet lockable tray[1, 2]					35S0367	109 x 389 x 382 mm (4.29 x 15.30 x 15.04 in.)
3	550-sheet tray[1, 2]					35S0567	109 x 389 x 382 mm (4.29 x 15.30 x 15.04 in.)
4	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
5	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

[1] This tray can be configured with other optional trays in any order.

[2] Only one optional tray can be configured with MX310, MX317, MX410, and MX417.

Lexmark M1145, M3150, M1140+, MS310, MS312, MS317, MS410, MS415, MS417, MS510, MS517, MS610, MS617

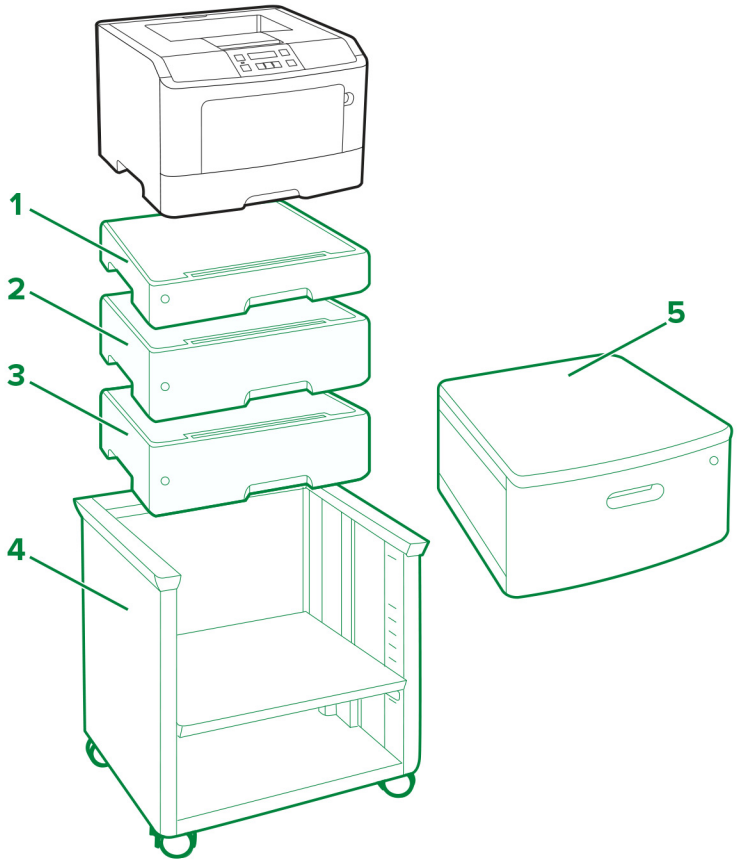

Legend: – Standard – Optional

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
1	250-sheet tray[1, 2]	3	3	3	3	35S0267	77 x 389 x 382 mm (3.03 x 15.30 x 15.04 in.)
2	550-sheet lockable tray[1, 2]					35S0367	109 x 389 x 382 mm (4.29 x 15.30 x 15.04 in.)
3	550-sheet tray[1, 2]					35S0567	109 x 389 x 382 mm (4.29 x 15.30 x 15.04 in.)

[1] The optional trays can be installed in any order.

[2] Only one optional tray can be configured with M1145, M3150, M1140+, MS310, MS312, MS317, MS410, MS415, and MS417.

	Option	Placement				Part number	Dimensions (height, width, and depth)
		Table or desktop	Floor	Adjustable printer stand	Swivel cabinet		
4	Adjustable printer stand	N/A	1	N/A	N/A	35S8502	584 x 597 x 597 mm (23 x 23.5 x 23.5 in.)
5	Swivel cabinet	1	1	N/A	N/A	3073173	263 x 476 x 600 mm (10.4 x 18.7 x 23.6 in.)

[1] The optional trays can be installed in any order.

[2] Only one optional tray can be configured with M1145, M3150, M1140+, MS310, MS312, MS317, MS410, MS415, and MS417.

Lexmark C546dtn and X546dtn

The printers with optional tray and swivel cabinet:



Supported printer models: C546dtn and X546dtn

Note: Only one optional tray with part number 3051710 may be configured with the printers.

Lexmark C730 Series

The printer with optional trays and caster base:



Swivel cabinet 3052765:



Supported printer models: C734 and C736

Placement	Optional caster base	Optional 550-sheet tray or 4.8-in. spacer				Optional 2000-sheet tray
		1	2	3	4	
Floor	✓	✓	✓	✓		✓
		✓	✓	✓	✓	
Floor	✓*					✓
		✓	✓	✓		
Desktop or swivel cabinet		✓	✓	✓		✓
		✓	✓	✓	✓	

* An optional caster base may be used, but you can still safely operate the printer without it.

Lexmark C740 Series

The printer with optional trays and caster base:



Swivel cabinet 3052765:



Supported printer models: C746 and C748

Placement	Optional caster base	Optional 550-sheet tray or 4.8-in. spacer[1]				Optional 2000-sheet tray
		1	2	3	4	
Desktop or swivel cabinet[2]		✓	✓	✓		✓
		✓	✓	✓	✓	
Floor	✓	✓	✓	✓		
		✓				✓

[1] The spacer must be under the optional 550-sheet tray and cannot be used with the 2000-sheet tray.

[2] When placing the printer on a desktop, make sure the height of the printer, including options, does not exceed 1.3 m (51.18 in.).

[3] An optional caster base may be used, but you can still safely operate the printer without it.

Placement	Optional caster base	Optional 550-sheet tray or 4.8-in. spacer[1]				Optional 2000-sheet tray
		1	2	3	4	
Floor	✓[3]	✓				✓
		✓	✓	✓		

[1] The spacer must be under the optional 550-sheet tray and cannot be used with the 2000-sheet tray.

[2] When placing the printer on a desktop, make sure the height of the printer, including options, does not exceed 1.3 m (51.18 in.).

[3] An optional caster base may be used, but you can still safely operate the printer without it.

Lexmark C792

Base printer:



Lexmark C792 with extra drawers and caster base:





Supported printer: C792

Placement	Optional caster base	Optional 550-sheet drawers				Optional 2000-sheet drawer	Optional output option
		1	2	3	4	1	1
Desktop[1]		✓	✓	✓		✓	✓
		✓	✓	✓	✓		✓
Floor	✓	✓	✓	✓			✓
		✓				✓	✓
Floor	✓[2]	✓	✓				✓

Notes:

- [1] The maximum recommended height is 1.3 m (51.18 in.).
- [2] May be used but not required for safe operation

Lexmark C925

Lexmark C925 with extra drawers:



Lexmark C925 with extra drawers and printer stand converted to caster base 24Z0031:



Printer stand 39V4339:



Supported printer: C925

Placement	Printer stand 24Z0031	Printer stand converted to caster base 24Z0031	Optional 550-sheet drawers		
			1	2	3
Desktop			✓		
Floor		✓	✓		
			✓	✓	
			✓	✓	✓
Floor	✓		✓		

Lexmark C950 Series

Lexmark C950 with tandem-tray module, high-capacity feeder, and booklet finisher:



Optional three-tray module:



Optional one-tray module:



Optional finisher:



Supported printer model: C950de

Placement	One-tray module	Three-tray module	Tandem-tray module	Optional high-capacity feeder	Optional booklet finisher	Optional finisher
Floor	✓					
	✓			✓		
	✓				✓	
	✓					✓
	✓			✓	✓	
	✓			✓		✓
		✓				
		✓		✓		
		✓			✓	
		✓				✓
		✓		✓	✓	
		✓		✓		✓
			✓			
			✓	✓		
			✓		✓	
			✓			✓
			✓	✓	✓	
			✓	✓		✓

Lexmark T650 Series

Lexmark T65x with caster base 39V3588:



Supported printers: T650, T652, T654, and T656

Printer models	Placement	Optional 2000-sheet tray	Duplex Unit	Optional 250-sheet tray				Optional 550-sheet tray or 5.1-in. spacer				Optional caster base 39V3588
				1	2	3	4	1	2	3	4	
T650, T652, T654, T656	Desktop or swivel cabinet		Yes[2] or No[1]	✓	✓	✓	✓					✓
				✓	✓	✓		✓				
				✓	✓			✓	✓			
				✓				✓	✓	✓		
								✓	✓	✓	✓	

[1] The optional duplex unit is available only on Lexmark T650n.

[2] An internal duplex unit is a standard feature on Lexmark T652dn, T654dn, and T656.

[3] An optional caster base may be used, but you can still safely operate the printer without it.

Printer models	Placement	Optional 2000-sheet tray	Duplex Unit	Optional 250-sheet tray				Optional 550-sheet tray or 5.1-in. spacer				Optional caster base 39V3588
				1	2	3	4	1	2	3	4	
T650	Floor		Yes[1]	✓	✓	✓						✓[3]
				✓				✓				
								✓	✓			
			No[1]	✓	✓	✓	✓					
				✓	✓			✓				
								✓	✓			
T652, T654, T656	Floor		Included[1]	✓	✓	✓						✓[3]
				✓	✓			✓				
								✓	✓			
T650, T652, T654, T656	Floor		Yes[2] or No[1]	✓	✓	✓	✓					✓
				✓	✓	✓		✓				
				✓	✓			✓	✓			
				✓				✓	✓	✓		
								✓	✓	✓	✓	
		✓		✓	✓	✓						
		✓		✓	✓			✓				
		✓		✓				✓	✓			
		✓						✓	✓	✓		

[1] The optional duplex unit is available only on Lexmark T650n.

[2] An internal duplex unit is a standard feature on Lexmark T652dn, T654dn, and T656.

[3] An optional caster base may be used, but you can still safely operate the printer without it.

Lexmark W850 and X860de

The printer with optional trays, cabinet 15R0140, and finisher:



Supported printer models: W850 and X860de

Placement	Printer configuration	Cabinet	Standard 2 x 500-sheet tray		Optional 2 x 500- or 850 + 1150-sheet tray		Optional 2000-sheet tray	Finisher
			Tray 1	Tray 2	Tray 3	Tray 4		
Floor	A		✓	✓				
	B		✓	✓	✓	✓		
	C		✓	✓	✓	✓	✓	
	D	✓	✓	✓				
	E	✓	✓	✓				✓
	F	✓	✓	✓			✓	
	G	✓	✓	✓			✓	✓

Notes:

- The 850 + 1150-sheet tray cannot be used with the 2000-sheet tray.
- The optional 2 x 500- or 850 + 1150-sheet tray cannot be used with the cabinet.
- Always use a cabinet when configuring the printer with the finisher.

Lexmark X650 Series

The printer with optional trays and caster base 16M1216:



Swivel cabinet 3052765:



Supported printer models: X651e, X652e, X654e, and X656e

Printer configuration	Optional caster base	Desktop or swivel cabinet	Optional 250-sheet tray				Optional 500-sheet tray or 5.1-in. spacer			Optional 2000-sheet tray
			1	2	3	4	1	2	3	
A	✓		✓	✓	✓	✓				
B	✓		✓	✓	✓		✓			
C	✓		✓	✓			✓	✓		
D	✓						✓	✓	✓	
E	✓		✓							✓
F	✓						✓			✓
G		✓	✓	✓	✓	✓				
H		✓	✓	✓	✓		✓			
I		✓	✓				✓	✓		
J		✓					✓	✓	✓	

Notes:

- The spacer must be under the optional 250- or 500-sheet tray and cannot be used with the 2000-sheet tray.
- The optional 2000-sheet tray must always be at the bottom of a configuration.
- At least one optional tray or spacer is required when using the caster base.

Lexmark X658e



Supported printer: Lexmark X658e

A maximum of four 550-sheet drawers are supported. Since one of the 550-sheet drawers is part of the base unit, only up to three additional optional drawers are allowed when configuring the printer.

Note: The caster base is standard.

Lexmark X730 Series

The printer with optional trays and caster base:





Swivel cabinet 3052765



Supported printer models: X734de, X736de, and X738de

Printer configuration	Placement		Optional caster base	Optional 550-sheet tray or 4.8-in. spacer				Optional 2000-sheet tray
	Desktop or swivel cabinet	Floor		1	2	3	4	
A	✓			✓	✓	✓	✓	
B	✓			✓	✓	✓		✓
C		✓		✓				
D			✓	✓	✓	✓		✓
E			✓	✓				✓

Notes:

- The spacer must be under the optional 550-sheet tray and cannot be used with the 2000-sheet tray.
- The optional 2000-sheet tray must always be at the bottom of a configuration.
- At least one optional tray or spacer must be installed when using the caster base.

Lexmark X740 Series

The printer with optional tray and caster base:



Swivel cabinet 3052765:



Supported printers models: X746 and X748

Placement	Optional caster base	Optional 550-sheet tray or 4.8-in. spacer[1]				Optional 2000-sheet tray
		1	2	3	4	
Desktop or swivel cabinet[2]		✓	✓	✓		✓
		✓	✓	✓	✓	
Floor	✓	✓	✓	✓		
						✓
Floor	✓[3]					✓
		✓	✓	✓		

[1] The spacer must be under the optional 550-sheet tray and cannot be used with the 2000-sheet tray.

[2] When placing the printer on a desktop, make sure the height of the printer, including options, does not exceed 1.3 m (51.18 in.).

[3] An optional caster base may be used, but you can still safely operate the printer without it.

Lexmark X792

Lexmark X792 with extra drawer



Lexmark X792 with extra drawer and caster base



Supported printer: X792

Placement	Optional caster base	Optional 550-sheet drawers				Optional 2000-sheet drawer	Optional output option
		1	2	3	4	1	1
Desktop[3]		✓	✓			✓	✓
		✓	✓	✓	✓		✓

Placement	Optional caster base	Optional 550-sheet drawers				Optional 2000-sheet drawer	Optional output option
		1	2	3	4	1	1
Floor	✓[1]	✓	✓	✓			✓
		✓	✓	✓	✓		✓[1]
						✓	✓
		✓				✓	✓[1]
Floor	✓[2]	✓					✓
		✓	✓				✓[1]

Notes:

- [1] Required
- [2] May be used but not required for safe operation
- [3] The maximum recommended height is 1.3 m (51.18 in.).

Lexmark X925

Lexmark X925 with extra drawers and printer stand converted to caster base 24Z0031:



Printer stand 24Z0031:



Supported printer: X925

Placement	Printer stand 24Z0031	Printer stand converted to caster base 24Z0031	Optional 550-sheet drawers		
			1	2	3
Desktop			✓		
Floor		✓	✓		
			✓	✓	
			✓	✓	✓
Floor	✓		✓		

Lexmark X950 Series

Lexmark X950de with tandem-tray module, high-capacity feeder, and booklet finisher:



Optional three-tray module:



Optional one-tray module:



Optional finisher:



Supported printer model: X950de


Placement	One-tray module	Three-tray module	Tandem-tray module	Optional high-capacity feeder	Optional booklet finisher	Optional finisher
Floor	✓					
	✓			✓		
	✓				✓	
	✓					✓
	✓			✓	✓	
	✓			✓		✓
		✓				
		✓		✓		
		✓			✓	
		✓				✓
		✓		✓	✓	
		✓		✓		✓
			✓			
			✓	✓		
			✓		✓	
			✓			✓
			✓	✓	✓	
			✓	✓		✓

Supported printer models: X952dte and X954dhe

Placement	Optional high-capacity feeder	Optional booklet finisher	Optional finisher
Floor	✓		
		✓	
			✓
	✓	✓	
	✓		✓

Printer stand

Adjustable printer stand 40C2300

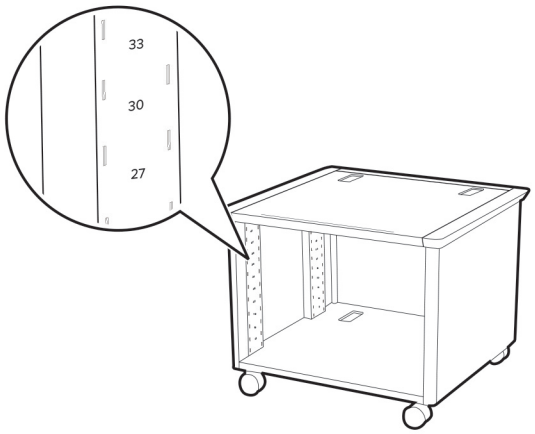

Shelf placement	Lexmark C2335, CS531, CS632, CS639, CX532, CX635, XC2335
Topmost	Base printer
	Base printer + one optional 650-sheet duo tray + two optional 550-sheet trays

Shelf placement	Lexmark B2865, M5155, M5255, M5265, M6163, M5170, MB2770, MS710, MS711, MS725, MS810, MS811, MS812, MS817, MS818, MS821, MS822, MS823, MS825, MS826, MX721, MX722, MX725, XM5365, XM5370	Lexmark C6160, CS820, CS827, CX820, CX825, CX827, CX860, XC6152, XC8155, XC8160	Lexmark C4150, CS720, CS725, CS727, CS728, CX725, CX727, XC4140, XC4150	Lexmark C2240, C2425, C2325, C2535, CS421, CS521, CS622, CX421, CX522, CX622, CX625, MC2325, MC2425, MC2535, MC2640, XC2235, XC4240	Lexmark C4342, C4352, CS730, CS735, CS737, CX730, CX735, CX737, XC4342, XC4352
Topmost	Base printer	Base printer	Base printer	Base printer	Base printer
		Base printer + one optional 550-sheet tray			
41	Base printer + one optional 250-sheet tray	N/A	N/A	N/A	N/A

Shelf placement	Lexmark B2865, M5155, M5255, M5265, M6163, M5170, MB2770, MS710, MS711, MS725, MS810, MS811, MS812, MS817, MS818, MS821, MS822, MS823, MS825, MS826, MX721, MX722, MX725, XM5365, XM5370	Lexmark C6160, CS820, CS827, CX820, CX825, CX827, CX860, XC6152, XC8155, XC8160	Lexmark C4150, CS720, CS725, CS727, CS728, CX725, CX727, XC4140, XC4150	Lexmark C2240, C2425, C2325, C2535, CS421, CS521, CS622, CX421, CX522, CX622, CX625, MC2325, MC2425, MC2535, MC2640, XC2235, XC4240	Lexmark C4342, C4352, CS730, CS735, CS737, CX730, CX735, CX737, XC4342, XC4352
37	Base printer + one optional 550-sheet tray	N/A	Base printer + one optional 550-sheet tray	Base printer + one optional 650-sheet duo tray	Base printer + one optional 550-sheet tray
33	Base printer + two optional 250-sheet trays	N/A	N/A	N/A	N/A
30	Base printer + one optional 550-sheet tray + one optional 250-sheet tray	N/A	N/A	N/A	N/A
27	Base printer + two optional 550-sheet trays	N/A	N/A	N/A	N/A
25	Base printer + three optional 250-sheet trays	N/A	Base printer + two optional 550-sheet trays	N/A	Base printer + two optional 550-sheet trays
22	Base printer + two optional 250-sheet trays + one optional 550-sheet tray	N/A	N/A	Base printer + one optional 650-sheet duo tray + one optional 550-sheet tray	N/A
19	Base printer + one optional 250-sheet tray + two optional 550-sheet trays	N/A	N/A	N/A	N/A
16	Base printer + four optional 250-sheet trays	N/A	N/A	N/A	N/A
	Base printer + three optional 550-sheet trays				

Shelf placement	Lexmark B2865, M5155, M5255, M5265, M6163, M5170, MB2770, MS710, MS711, MS725, MS810, MS811, MS812, MS817, MS818, MS821, MS822, MS823, MS825, MS826, MX721, MX722, MX725, XM5365, XM5370	Lexmark C6160, CS820, CS827, CX820, CX825, CX827, CX860, XC6152, XC8155, XC8160	Lexmark C4150, CS720, CS725, CS727, CS728, CX725, CX727, XC4140, XC4150	Lexmark C2240, C2425, C2325, C2535, CS421, CS521, CS622, CX421, CX522, CX622, CX625, MC2325, MC2425, MC2535, MC2640, XC2235, XC4240	Lexmark C4342, C4352, CS730, CS735, CS737, CX730, CX735, CX737, XC4342, XC4352
13	Base printer + three optional 250-sheet trays + one optional 550-sheet tray	N/A	Base printer + three optional 550-sheet trays	N/A	Base printer + three or four optional 550-sheet trays

Printer stand 16N1708 with or without scanner shelf 10B1755



Supported printers: C760 and C762

Supported MFP: X762e

Supported scanner: X4500

Printer configuration	MFP option	Duplex unit	Optional 500-sheet drawers		
			1	2	3
A	✓	✓	✓		
B	✓		✓	✓	
C		✓	✓	✓	✓

- If an optional duplex unit is installed, then:
  - The duplex unit must always be installed directly under the printer.
  - All paper-handling options must be installed under the duplex unit.

– A printer without MFP option can also support a maximum combination of one optional 2,000-sheet drawer and one optional 500-sheet drawer without a printer stand.
– An optional 500-sheet drawer is required when using a 2,000-sheet drawer and duplex unit configuration.

Printer stand 16N1708 with or without scanner shelf 21J0055





Supported printers: C772 and C782

Supported MFPs: X772e and X782e

Supported scanner: 4600

Printer configuration	MFP option	Duplex unit	Optional 500-sheet drawers		
			1	2	3
A	✓	✓	✓	✓	
B	✓	**X**	✓	✓	
C	**X**	✓	✓	✓	✓

- If an optional duplex unit is installed, then:
  – The duplex unit must be directly under the printer for any of the listed configurations.
  – All paper-handling options must be installed under the duplex unit.
- A printer without MFP option can also support a maximum combination of one optional 2,000-sheet drawer and one optional 500-sheet drawer without a printer stand. An optional 500-sheet drawer, as the first option under the duplex unit, is required when using a 2,000-sheet drawer and duplex unit configuration.

Caster base

Caster base 22G0544 for MFPs



Supported MFPs: X646e, X644e, and X642e

Printer configuration	Duplex unit	Optional 250-sheet drawers				Optional 500-sheet drawers				Optional 10-inch cabinet	Optional 2,000-sheet drawer
		1	2	3	4	1	2	3	4		
A	✓	✓	✓	✓	✓						
B	✓	✓	✓	✓		✓					
C	✓	✓	✓			✓	✓				
D	✓	✓				✓	✓	✓			
E	✓					✓	✓	✓	✓		
F	✓	✓	✓							✓	
G	✓					✓	✓			✓	
H	✓	✓								✓	
I	✓	✓									✓
J	✓					✓					✓

- If an optional duplex unit is installed, then:
  - The duplex unit must always be installed directly under the printer.
  - All paper-handling options must be installed below the duplex unit.
- The optional 2,000-sheet drawer must be at the bottom of the stack of drawers.

- The optional 10-inch cabinet must be at the bottom of the stack of drawers.
- At least one input drawer or optional 10-inch cabinet is required with this caster base.

Caster base 22G0544 with scanner and shelf 21J0050



Supported printers: T642, T642n, T644, and T644

Supported scanner: 4600

Printer configuration	MFP option	Duplex unit	Optional 250-sheet drawers				Optional 500-sheet drawers			Optional 10-inch cabinet	Optional 2,000-sheet drawer
			1	2	3	4	1	2	3		
A	✓	✓	✓	✓	✓	✓					
B	✓	✓	✓	✓	✓		✓				
C	✓	✓	✓				✓	✓			
D	✓	✓	✓	✓			✓	✓			
E	✓	✓					✓	✓	✓		
F	✓	✓									✓
G	✓	✓					✓			✓	

- If an optional duplex unit is installed, then:
  - The duplex unit must always be installed directly under the printer.
  - All paper-handling options must be installed below the duplex unit.
- The optional 2,000-sheet drawer must be at the bottom of the stack of drawers.
- The optional 10-inch cabinet must be at the bottom of the stack of drawers.
- At least one input drawer or optional 10-inch cabinet is required with this caster base.

Notices

Edition notice

April 2023

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user’s responsibility.

For Lexmark technical support, go to **http://support.lexmark.com**.

For information on Lexmark's privacy policy governing the use of this product, go to **www.lexmark.com/privacy**.

For information on supplies and downloads, go to **www.lexmark.com**.

© **2011 Lexmark International, Inc.**

All rights reserved.

GOVERNMENT END USERS

The Software Program and any related documentation are "Commercial Items," as that term is defined in 48 C.F.R. 2.101, "Computer Software" and "Commercial Computer Software Documentation," as such terms are used in 48 C.F.R. 12.212 or 48 C.F.R. 227.7202, as applicable. Consistent with 48 C.F.R. 12.212 or 48 C.F.R. 227.7202-1 through 227.7207-4, as applicable, the Commercial Computer Software and Commercial Software Documentation are licensed to the U.S. Government end users (a) only as Commercial Items and (b) with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

Trademarks

Lexmark and the Lexmark logo are trademarks or registered trademarks of Lexmark International, Inc. in the United States and/or other countries.

All other trademarks are the property of their respective owners.

Index

Numerics

10B1755, part number 100
15R0140, part number 87
16M1210, part number 90
16M1216, part number 88
16N1708, part number 100, 101
21J0050, part number 103
21J0055, part number 101
22G0544, part number 102
  caster base with scanner 103
24Z0031, part number 80, 94
26Z0094, part number 58
3051710, part number 76
3052765, part
number 77, 78, 88, 90, 92
39V3588, part number 85

A

adjustable printer stand 98

C

cabinet
  part number 15R0140 87
  part number 26Z0094 58
caster base
  part number 16M1210 90
  part number 16M1216 88
  part number 22G0544 102, 103
  part number 39V3588 85

L

Lexmark B2338 42
Lexmark B2442 42
Lexmark B2546 42
Lexmark B2650 42
Lexmark B2865 33
Lexmark B3340 26
Lexmark B3442 26
Lexmark C2132 70
Lexmark C2240 29
Lexmark C2325 29
Lexmark C2326 27
Lexmark C2335 4
Lexmark C2425 29
Lexmark C2535 29
Lexmark C3224 27
Lexmark C3326 27
Lexmark C3426 27
Lexmark C4150 50
Lexmark C4342 14
Lexmark C4352 14
Lexmark C546dtn 76
Lexmark C6160 53
Lexmark C730 Series 77
Lexmark C740 Series 78
Lexmark C760 100
Lexmark C762 100
Lexmark C772 101
Lexmark C782 101
Lexmark C792 79
Lexmark C9235 46
Lexmark C925 80
Lexmark C950 Series 82
Lexmark CS310 70
Lexmark CS317 70
Lexmark CS331 27
Lexmark CS410 70
Lexmark CS417 70
Lexmark CS421 29
Lexmark CS431 27
Lexmark CS439 27
Lexmark CS510 70
Lexmark CS517 70
Lexmark CS521 29
Lexmark CS531 4
Lexmark CS622 29
Lexmark CS632 4
Lexmark CS639 4
Lexmark CS720 50
Lexmark CS725 50
Lexmark CS727 50
Lexmark CS728 50
Lexmark CS730de 14
Lexmark CS735de 14
Lexmark CS737dze 14
Lexmark CS820 53
Lexmark CS827 53
Lexmark CS921 46
Lexmark CS923 46
Lexmark CS927 46
Lexmark CS943 17
Lexmark CX310 69
Lexmark CX317 69
Lexmark CX331 28
Lexmark CX410 69
Lexmark CX417 69
Lexmark CX421 31
Lexmark CX431 28
Lexmark CX510 69
Lexmark CX517 69
Lexmark CX522 31
Lexmark CX622 31
Lexmark CX625 31
Lexmark CX725 52
Lexmark CX727 52
Lexmark CX8160 56
Lexmark CX820 55
Lexmark CX825 56
Lexmark CX827 55
Lexmark CX921 48
Lexmark CX922 48
Lexmark CX923 48
Lexmark CX924 48
Lexmark CX927 48
Lexmark CX930 23
Lexmark CX931 23
Lexmark CX942 20
Lexmark CX943 20
Lexmark CX944 20
Lexmark M1140+ 75
Lexmark M1145 75
Lexmark M1242 42
Lexmark M1246 42
Lexmark M1342 26
Lexmark M3150 75
Lexmark M3250 42
Lexmark M3550 8
Lexmark M5155 61
Lexmark M5163 61
Lexmark M5170 61
Lexmark M5255 33
Lexmark M5270 33
Lexmark MB2338 43
Lexmark MB2442 43
Lexmark MB2546 43
Lexmark MB2650 45
Lexmark MB2770 37
Lexmark MB3442 16
Lexmark MC2325 31
Lexmark MC2425 31
Lexmark MC2535 31
Lexmark MC2640 31
Lexmark MC3224 28

Lexmark MC3326 28
Lexmark MC3426 28
Lexmark MS310 75
Lexmark MS312 75
Lexmark MS317 75
Lexmark MS321 42
Lexmark MS331 26
Lexmark MS410 75
Lexmark MS415 75
Lexmark MS417 75
Lexmark MS421 42
Lexmark MS431 26
Lexmark MS439 26
Lexmark MS510 75
Lexmark MS517 75
Lexmark MS521 42
Lexmark MS531 8
Lexmark MS610 75
Lexmark MS617 75
Lexmark MS621 42
Lexmark MS622 42
Lexmark MS631 8
Lexmark MS632 8
Lexmark MS639 8
Lexmark MS710 61
Lexmark MS711 61
Lexmark MS725 33
Lexmark MS810 61
Lexmark MS811 61
Lexmark MS812 61
Lexmark MS817 61
Lexmark MS818 61
Lexmark MS821 33
Lexmark MS822 33
Lexmark MS823 33
Lexmark MS825 33
Lexmark MS826 33
Lexmark MS911 58
Lexmark MX310 73
Lexmark MX317 73
Lexmark MX321 43
Lexmark MX331 16
Lexmark MX410 73
Lexmark MX417 73
Lexmark MX421 43
Lexmark MX431 16
Lexmark MX432 16
Lexmark MX510 73
Lexmark MX511 73
Lexmark MX517 73
Lexmark MX521 43
Lexmark MX522 43
Lexmark MX610 72
Lexmark MX611 72
Lexmark MX617 72
Lexmark MX622 45
Lexmark MX710 66
Lexmark MX711 66
Lexmark MX717 66
Lexmark MX718 66
Lexmark MX721 37
Lexmark MX722 37
Lexmark MX725 37
Lexmark MX810 Series 68
Lexmark MX822 40
Lexmark MX826 40
Lexmark MX910 series 58
Lexmark MX931 23
Lexmark T650-Series 85
Lexmark W850 and X860de 87
Lexmark X546dtn 76
Lexmark X650 Series 88
Lexmark X658e 90
Lexmark X730 Series 90
Lexmark X740 Series 92
Lexmark X762e 100
Lexmark X772e 101
Lexmark X782e 101
Lexmark X792 93
Lexmark X925 94
Lexmark X950 Series 95
Lexmark XC2132 69
Lexmark XC2235 31
Lexmark XC2326 28
Lexmark XC4140 52
Lexmark XC4143 52
Lexmark XC4150 52
Lexmark XC4153 52
Lexmark XC4240 31
Lexmark XC6152 55
Lexmark XC6153 55
Lexmark XC8155 56
Lexmark XC8160 56
Lexmark XC8163 56
Lexmark XC9235 48
Lexmark XC9245 48
Lexmark XC9255 48
Lexmark XC9265 48
Lexmark XC9325 23
Lexmark XC9335 23
Lexmark XC9445 20
Lexmark XC9455 20
Lexmark XC9465 20
Lexmark XM1145 73
Lexmark XM1242 43
Lexmark XM1246 43
Lexmark XM1342 16
Lexmark XM3142 16
Lexmark XM3150 72
Lexmark XM3250 45
Lexmark XM5163 66
Lexmark XM5170 66
Lexmark XM5365 37
Lexmark XM5370 37
Lexmark XM7355 40
Lexmark XM7355b 40
Lexmark XM7370 40

O

optional tray
part number 3051710 76
options
configuration 58

P

printer
Lexmark C546dtn 76
Lexmark C730 Series 77
Lexmark C740 Series 78
Lexmark C760 100
Lexmark C762 100
Lexmark C772 101
Lexmark C792 79
Lexmark C925 80
Lexmark MS911 58
Lexmark MX810 Series 68
Lexmark MX910 series 58
Lexmark W850 and X860de 87
Lexmark X546dtn 76
Lexmark X650 Series 88
Lexmark X658e 90
Lexmark X730 Series 90
Lexmark X762e 100
Lexmark X772e 101
Lexmark X782e 101
Lexmark X792 93
Lexmark X925 94
Lexmark X950 Series 95
printer stand
part number 16N1708 100, 101
part number 40C2300 98
part number 24Z0031 80, 94
printers
Lexmark C782 101

S

scanner shelf
  part number 10B1755 100
  part number 21J0050 103
  part number 21J0055 101
swivel cabinet
  part number 3052765 88, 90
  part
    number 3052765 77, 78, 92