
CREATIVE

# XF1

HI-RESOLUTION
*BLUETOOTH*® 6.0
DESKTOP SPEAKERS

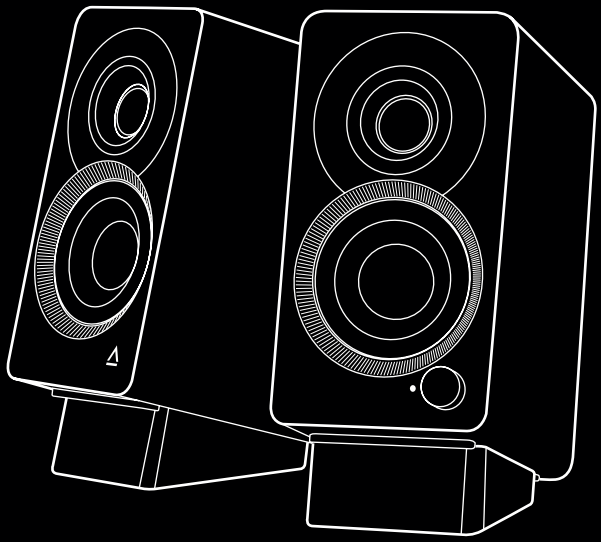

QUICK START GUIDE

MODEL NO.: MF1730

PN: 03MF173000001 Rev B


**TABLE OF**

# CONTENTS


| | |
|---|---|
| OVERVIEW | **02** |
| SETUP | **04** |
| CONTROLS | **06** |
| DOWNLOAD | **09** |
| TECHNICAL SPECIFICATIONS | **10** |
| TECHNICAL SUPPORT | **10** |


## OVERVIEW


1. Speaker Base
2. LED Indicator
3. Multifunction button / Volume Control Knob
4. Energy Saving Switch
5. *Bluetooth* Pairing button
6. Power
7. AUX Input Port
8. Subwoofer Output Port
9. USB Audio Input Port
10. Speaker Output Port
11. Speaker Input Port

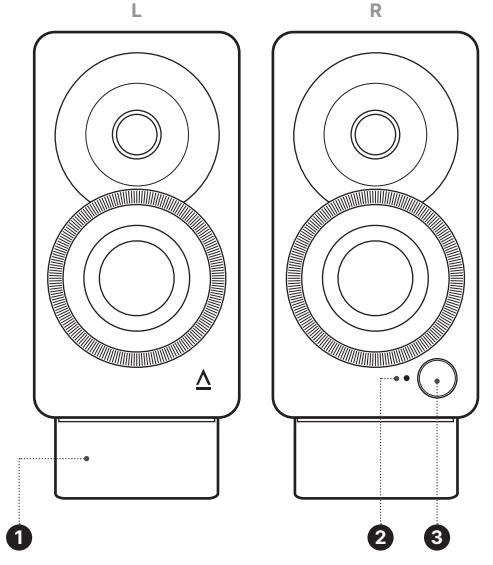




## OVERVIEW

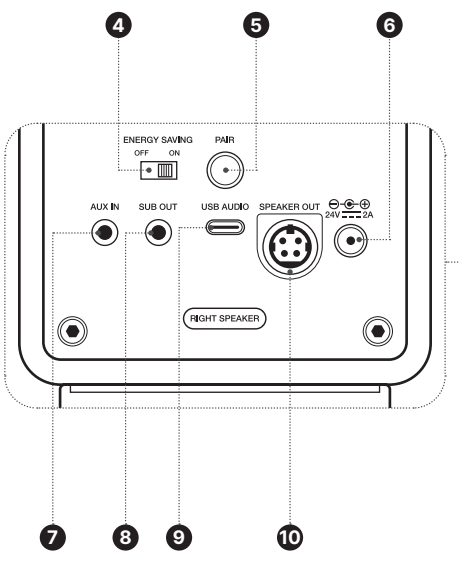

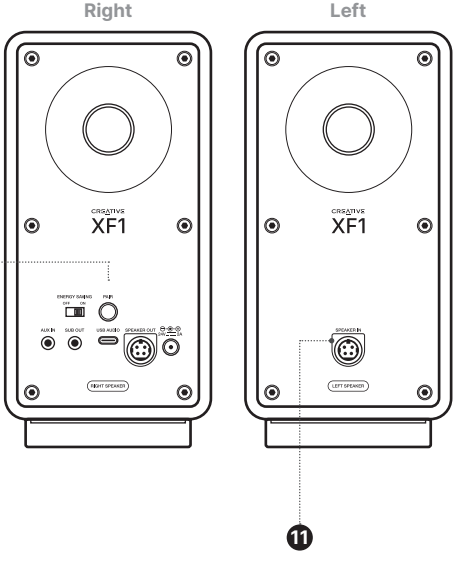
## SETUP

### **Installing the Cork Base** (Optional)

1. Align the slot on the bottom of the speaker with the cork base.
2. Secure the cork base using the provided screw and a screwdriver (not included).
3. Repeat the steps for the other speaker.




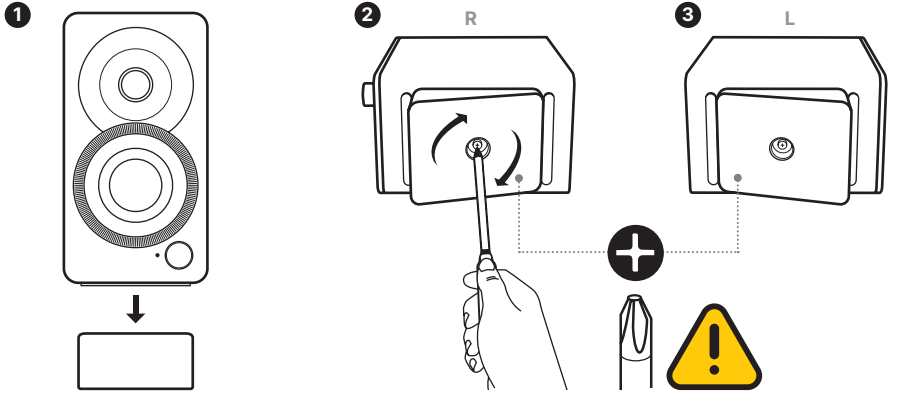


## SETUP


### **Powering Up**

1. Connect the left (L) and right (R) speakers using the included 4-pin speaker interconnect cable.
2. Connect the speakers to the provided power adapter, then plug the adapter into a wall outlet.

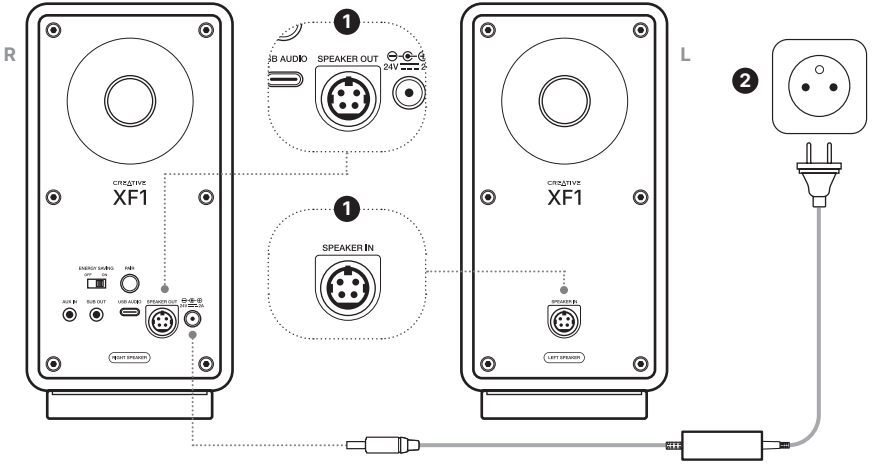

## CONTROLS

### Multifunction Knob

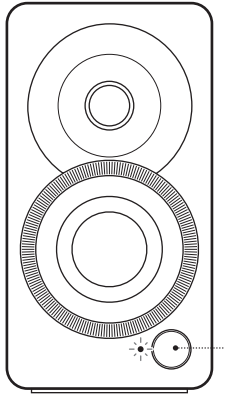

x1

| | | |
|---|---|---|
| ON | ○ | Source Color |
| OFF / 2s | ● | Solid Red |

| | |
|---|---|
| − | + |

**Note:** LED blinks twice at minimum or maximum volume.

x1 **USB → *BLUETOOTH* → AUX**


| | | |
|---|---|---|
| USB Audio | ○ | Solid White |
| *Bluetooth* | ● | Solid Blue |
| AUX Input | ● | Solid Green |



## CONTROLS

### *Bluetooth* First-time Pairing

When powered on for the first time, the speaker will be in USB mode.

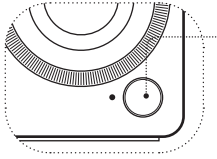


x1

Press the power button once to enter *Bluetooth* pairing mode automatically.

Once paired, the speaker will automatically connect to the paired *Bluetooth* device.




### Pairing A New Device

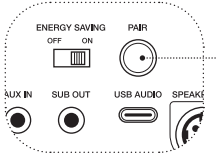


2s


| | | |
|---|---|---|
| *Bluetooth* Pairing | ✳ | Blinking Blue |
| *Bluetooth* Paired | ● | Solid Blue |

x1

| | | |
|---|---|---|
| Cancel *Bluetooth* Pairing | ✳ | Blue Breathing Pattern |

**Note:** If no device is connected in 3 minutes, the speaker will switch to *Bluetooth* Idle mode. The LED blue light will be in a breathing pattern.

## CONTROLS

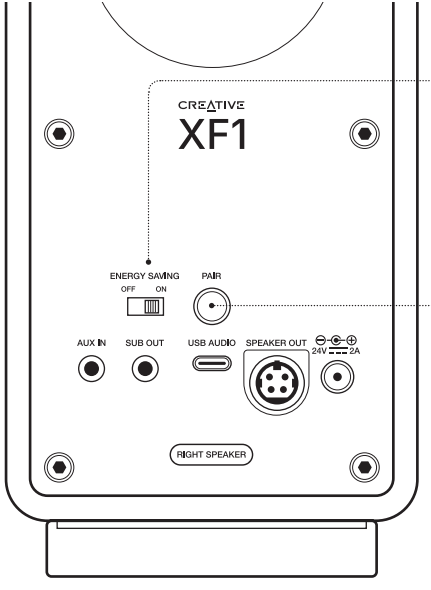


### Energy Saving

| | | |
|---|---|---|
| Energy Saving On | ● | Solid Orange |

The speakers will enter network standby mode after 15 minutes of inactivity, reducing power consumption while remaining ready to resume audio playback instantly. To turn the speakers back on, simply play audio from a connected device or tap on the power button. However, when Energy Saving is switched off, it will not automatically enter network standby mode.

### Master Reset

8s

Press and hold the *Bluetooth* Pairing button for 8 seconds to perform a Master Reset. Upon completion, the LED indicator will blink white, before reverting to its default factory state.



## DOWNLOAD

Connect your Creative XF1 to the Creative Nexus app for enhanced customization.

The Creative Nexus app provides:

- Parametric EQ for precise audio adjustment
- Professionally tuned presets for movies, music, and games
- Product updates

**For Windows**

Visit: **creative.com/nexus/dl**
USB connection required

**For Mobile**

iOS App Store

Google Play Store

App control via *Bluetooth* (BLE)

## TECHNICAL SPECIFICATIONS

***Bluetooth* Version:** *Bluetooth* 6.0
**Operating Frequency:** 2402–2480 MHz
**Operating Range:** Up to 10m / 33 ft, measured in open space. Walls and structures may affect range of device
**Maximum RF Output Power:** 9.4 dBm
**Supported *Bluetooth* Profiles:** A2DP (Wireless Stereo *Bluetooth*), AVRCP (*Bluetooth* Remote Control)
**Supported Codec:** SBC, AAC, LDAC
**Adapter model:** GM60-220270-D
**Input:** 100–240V ~ 50 / 60 Hz 1A
**Output:** 22V ⎓ 2.7 A
**Operating Temperature:** 0 - 40°C

**Note:** Compliance marking are located at the bottom of this product.

## TECHNICAL SUPPORT

For support, visit the following links:

- creative.com/support/XF1
- creative.com/contactus

## PRODUCT REGISTRATION

To ensure you receive the most appropriate service and product support, please register your product by scanning the QR code located on the bottom of the product. The QR code contains essential product information and the product serial number. You also can register your product at **creative.com/register**.



*This page is intentionally left blank.*

## PRODUCT REGISTRATION AND WARRANTY

Registering your product ensures you receive the most appropriate service and product support available. You can register your product at creative.com/register. Please note that your warranty rights are not dependent on registration.

Creative warrants the included Creative-branded hardware product (the "Product") against defects in materials and workmanship ("Defect(s)") for twelve (12) months (for the European Union, twenty-four (24) months (excluding all wear and tear), subject to certain exceptions as stated in the EU Directive 1999/44/EC) from the date of purchase. The Creative Limited Hardware Warranty (the "Warranty") does not cover (but not limited to) consumable parts, such as batteries or protective coatings that, due to their nature, tend to diminish over time; normal wear and tear, accidents or misuse. You must provide Creative proof of original purchase of the Product by a dated itemized receipt to be eligible for the Warranty. If a Defect arises and a valid claim is received during the applicable Warranty Period, Creative will at its sole option, service the Product at no charge using new or refurbished replacement parts at our sole discretion. Warranty benefits are in addition to rights provided under local consumer laws.

For Australia only: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. [Address: Creative Technology Ltd, 438A Alexandra Road, #04-10, Alexandra Technopark, Singapore 119967. Telephone: +65 6895 4101 (standard international call charges apply.)]

For the full terms and detailed information on the Warranty,
please visit **creative.com/compliance/XF1**, or scan the QR code.
A printed copy is available upon request to
Creative Labs, Inc., 2033 Gateway Place,
Suite 500 San Jose, CA 95110.



กสทช.

เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคม ตามพระราชบัญญัติวิทยุคมนาคม พ.ศ.2498

กสทช. โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 ( โทรฟรี )

**Waste Electrical and Electronic Equipment (WEEE) Symbol**
The use of the WEEE Symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help protect the environment. For more detailed information about the recycling of this product, please contact your local authority, your household waste disposal service provider or the shop where you purchased the product.

Hereby, Creative Labs Pte. Ltd. declares the Bluetooth speakers, model no. MF1730 is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017. The full text of the EU and UK declaration of conformity is available at http://www.creative.com/EUDoC.

**OTHER INFORMATION**
Please visit **creative.com/compliance/XF1** for the user guide, safety and regulatory information, ErP information where applicable. Please visit **creative.com/support/XF1** for all other support related to your product.

CREATIVE®

REGISTER YOUR PRODUCT

creative.com/register

TECHNICAL SUPPORT

creative.com/support

© 2026 Creative Technology Ltd. All rights reserved. Creative and the Creative logo are trademarks or registered trademarks of Creative Technology Ltd. in the United States and/or other countries. LDAC and LDAC logo are trademarks of Sony Corporation. "Hi-Res Audio" logo and "Hi-Res Audio Wireless" logo are used under license from Japan Audio Society. The *Bluetooth*® word mark and logo are owned by Bluetooth SIG, Inc. and any use of such marks by Creative is under license. All other trademarks are the property of their respective owners and are hereby recognized as such. All specifications are subject to change without notice. Actual product may differ slightly from images shown. Use of this product is subject to a limited warranty.