

CHAIR ARM INSTRUCTIONS

INSTALLATION INSTRUCTIONS

Illustration 1


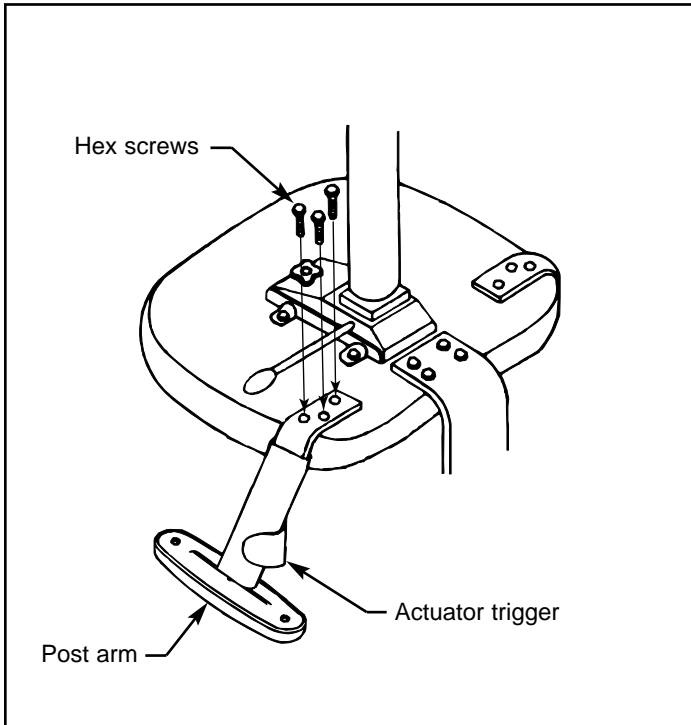


Illustration 2

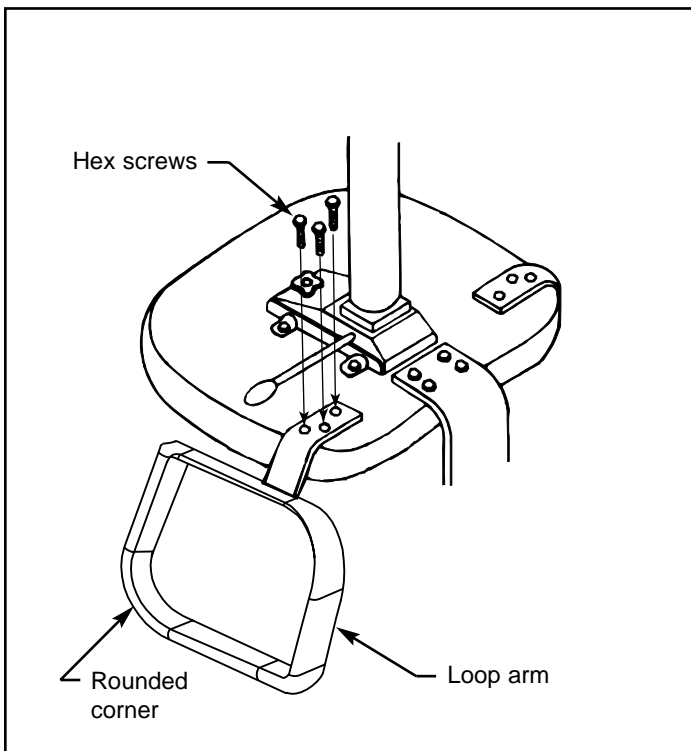

Read all instructions and review illustrations before installing.

Tools required for assembly:
 $\frac{3}{8}$ " wrench

This assembly includes:
(1) Right-hand arm assembly
(1) Left-hand arm assembly
(6) Hex screw

IMPORTANT

Hand start all hex screws into seat. **Do not use excessive force.**

Post Arm Installation (refer to Illustration 1):

1. Place chair upside down on a clean work surface.

NOTE

When installing post arms, ensure arms are angled toward the front of chair seat and the actuator triggers are on the back side of the arms.

2. Align holes in arm bracket with holes in seat bottom.
3. Hand start all hex screws through arm bracket and into seat bottom. Use the $\frac{3}{8}$ " wrench to fully tighten hex screw.
4. Refer to the Seating Booklet (inside orange packet attached to seat bottom) for post arm adjustment instructions.

Loop Arm Installation (refer to Illustration 2):

1. Place chair upside down on a clean work surface.

NOTE

When installing loop arms, ensure rounded corner of arms are facing toward the front of chair seat.

2. Align holes in arm bracket with holes in seat bottom.
3. Hand start all hex screws through arm bracket and into seat bottom. Use the $\frac{3}{8}$ " wrench to fully tighten hex screw.