












MID-BACK LEATHER CHAIR

ITEM: VL 635SP11


PARTS LIST

PART#		DESCRIPTION	Q'TY
A		BACK CUSHION	1PC
B		SEAT CUSHION	1PC
C		SEAT PLATE	1PC
D		GAS LIFT	1PC
E		TELESCOPIC COVER	1PC
F		NYLON BASE	1PC
G		CASTERS	5PCS
H		SCREWS(1/4"*1")	4PCS
I		SCREWS(5/16"*5/8")	3PCS
J		WASHERS	7PCS
K		ALLEN WRENCH	1PC

ATTENTION: Make certain that all screws are fully tightened before using the chair.


START

- ① TURN BASE "F" UPSIDE DOWN, PRESS CASTERS "G" INTO THE HOLES OF EACH LEG OF THE BASE "F".

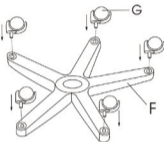


REVERSED


- ② INSERT GAS LIFT "D" WITH TELESCOPIC COVER "E" INTO THE CENTER HOLE OF THE BASE "F".

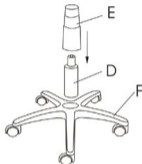

- ③ FASTEN SEAT PLATE "C" ONTO THE BOTTOM SIDE OF SEAT CUSHION "B" USING SCREWS "H" AND WASHERS "J" AS SHOWN. NOTE: DO NOT TIGHTEN ALL THE SCREWS FULLY AT ONCE.

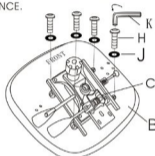

- ④ ATTACH SEAT CUSHION "B" AND BACK CUSHION "A" USING SCREWS "I" AND WASHERS "J" AS SHOWN. NOTE: DO NOT TIGHTEN ALL THE SCREWS FULLY AT ONCE.



- ⑤ POSITION THE CHAIR SEAT UPRIGHT WITH SEAT PLATE FACING DOWN, INSERT GAS LIFT "D" INTO THE CENTER HOLE OF THE SEAT PLATE.



COMPLETED

