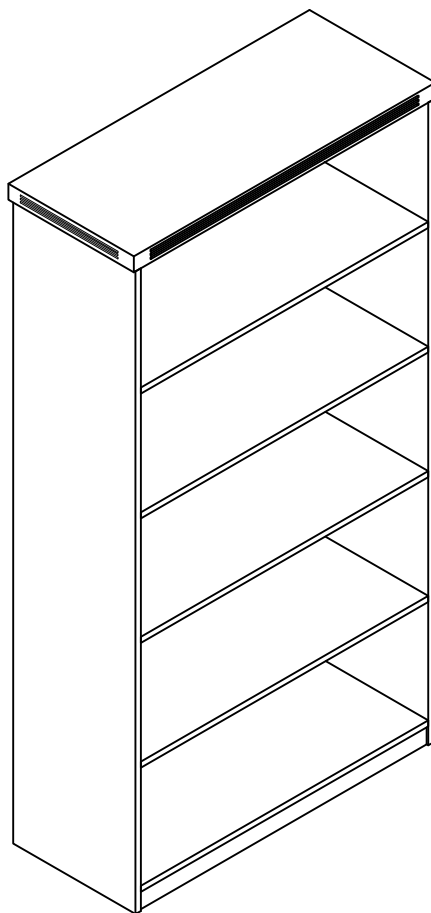




Tiffany Industries™
A MAYLINE GROUP COMPANY

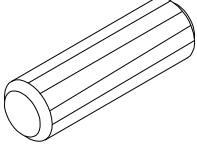

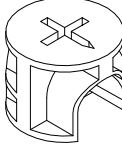


5 Shelf Bookcase Model No. AB5S36

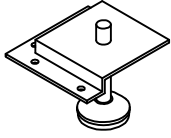





ASSEMBLY INSTRUCTIONS

CALL 1-800-822-8037 FOR ASSISTANCE

PARTS LIST

Name	Part	Qty.	Spare Qty
A*	 REALS004 Wood Dowel	31	2
B*	 REALS003 Cam Post	26	2
C*	 REALS001 Cam Fastener	26	2
D*	 REALS102** Cam Sticker	26	2
E*	 REALS009 Shelf Support Pin	12	1

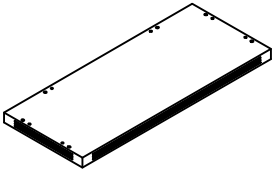
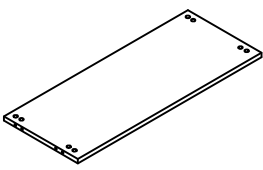
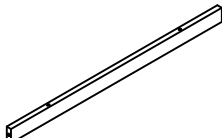
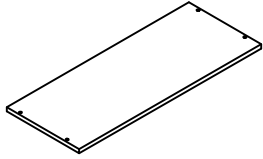
Name	Part	Qty.	Spare Qty
F*	 REALS008 Corner Bracket w/ Glide	4	
G*	 REALS005 Ø4 x 16mm	16	2
H	 REALS104 Grommet	2	
	 AB5S36HB		

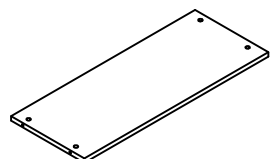
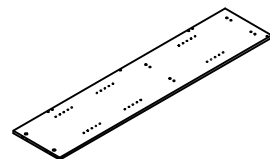
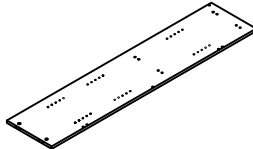
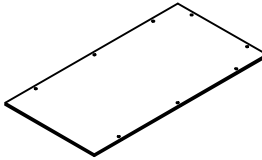
Items with HB are in hardware box.

*For Individual Items, Order By Part Number.

**Denotes Color Code

PARTS LIST

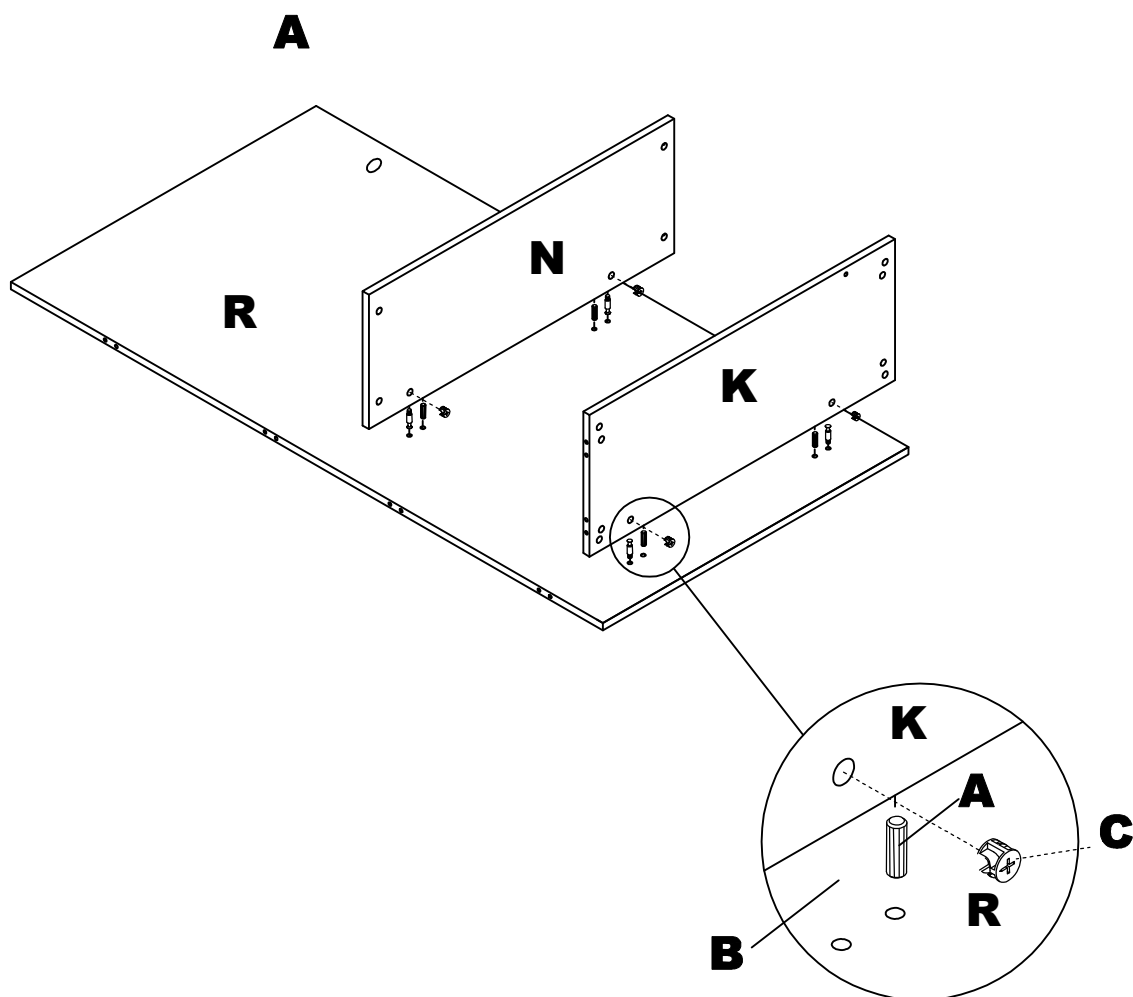
Name	Part	Qty.
J*	 ABS36J** Top	1
K*	 ABS36K** Bottom	1
L*	 ABS36L** Toe Kick	1
M*	 ABS36M** Moveable Shelf	1

Name	Part	Qty.
N*	 AB5S36N** Fixed Shelf	3
P*	 AB5S36P** Left Side Panel	1
Q*	 AB5S36Q** Right Side Panel	1
R*	 AB5S36R** Back Panel	1

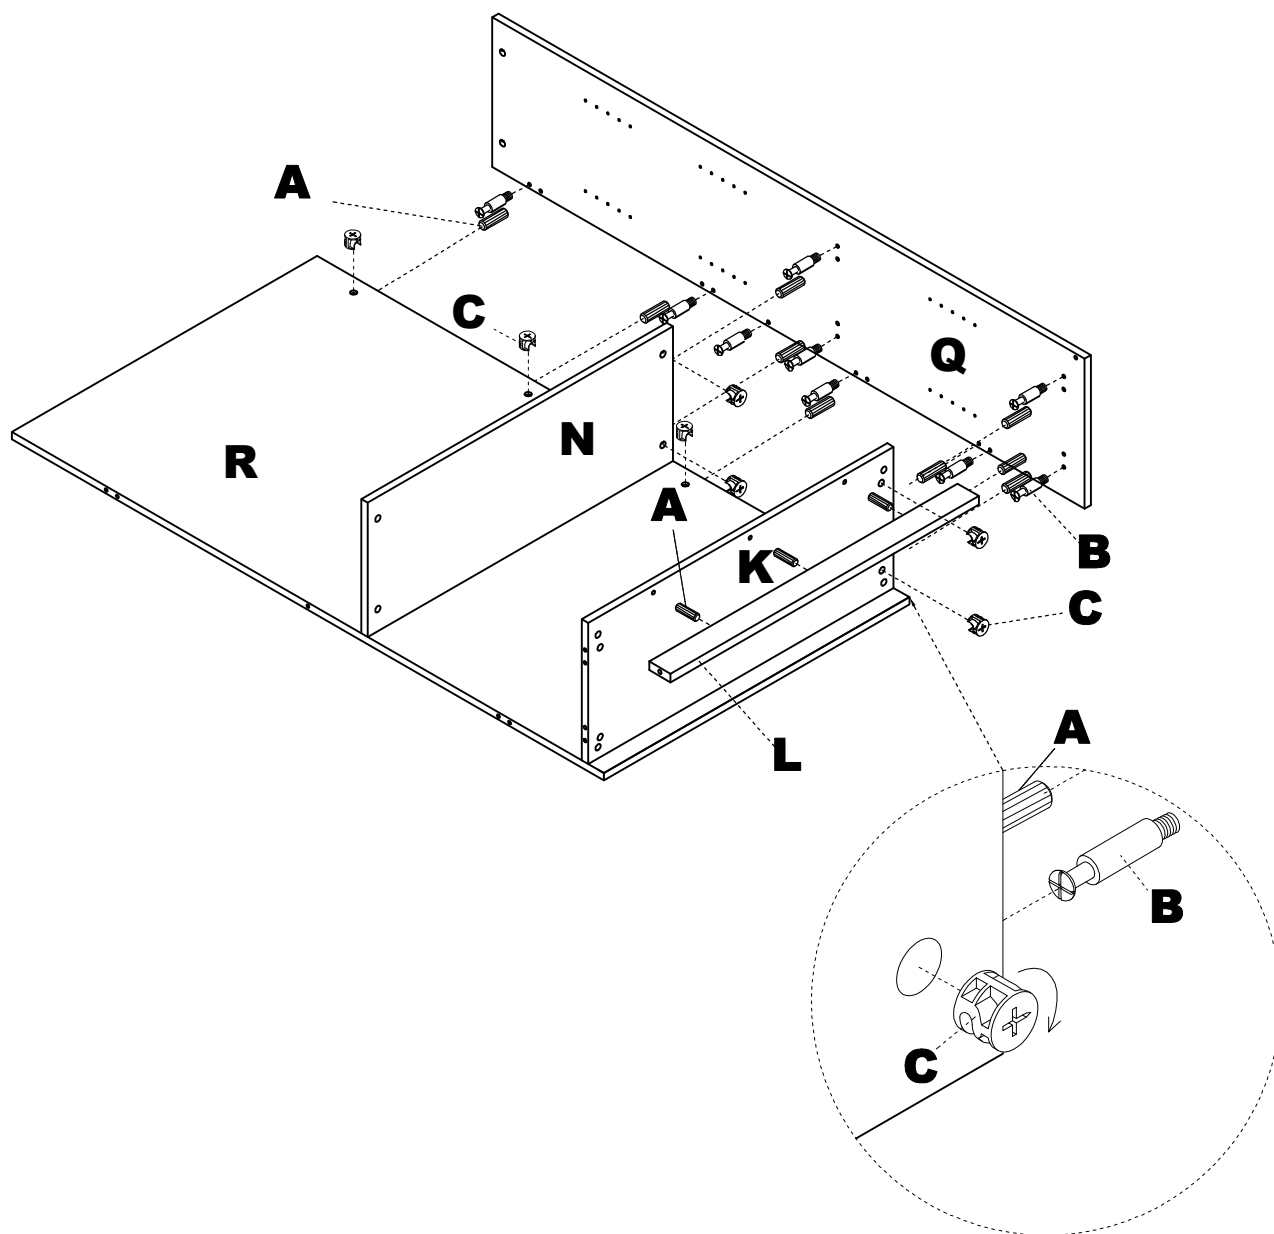
*For Individual Items, Order By Part Number.

**Denotes Color Code

- 1** Insert Wood Dowels (A) into Bottom (K) and Fixed Shelf (N). Insert Cams (C) into Bottom (K) and Fixed Shelf (N). Install Cam Posts (B) into threaded inserts in Back Panel (Q). Attach Back Panel (Q) to Bottom (K) and Fixed Shelf (N) by turning Cams (C).



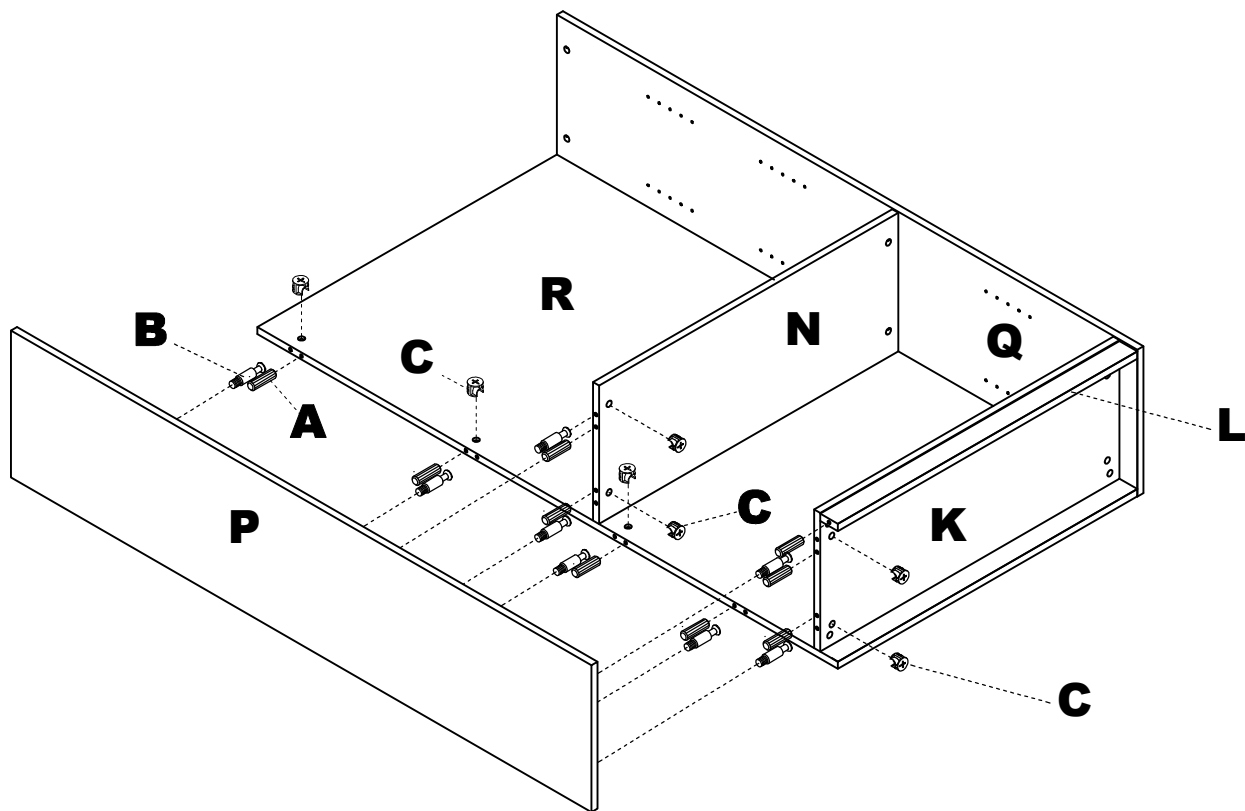
- 2** Insert Wood Dowels (A) into Back Panel (R), Bottom (K), Fixed Shelf (N), and Toe Kick (L). Insert Cams (C) into Back Panel (R) Fixed Shelf (N), and Bottom (K). Install Cam Posts (B) into threaded inserts in Right Side Panel (Q). Press Toe Kick (L) to Bottom (K). Attach Right Side Panel (Q) to Back Panel (R), Fixed Shelf (N), and Bottom (K) by turning Cams (C).



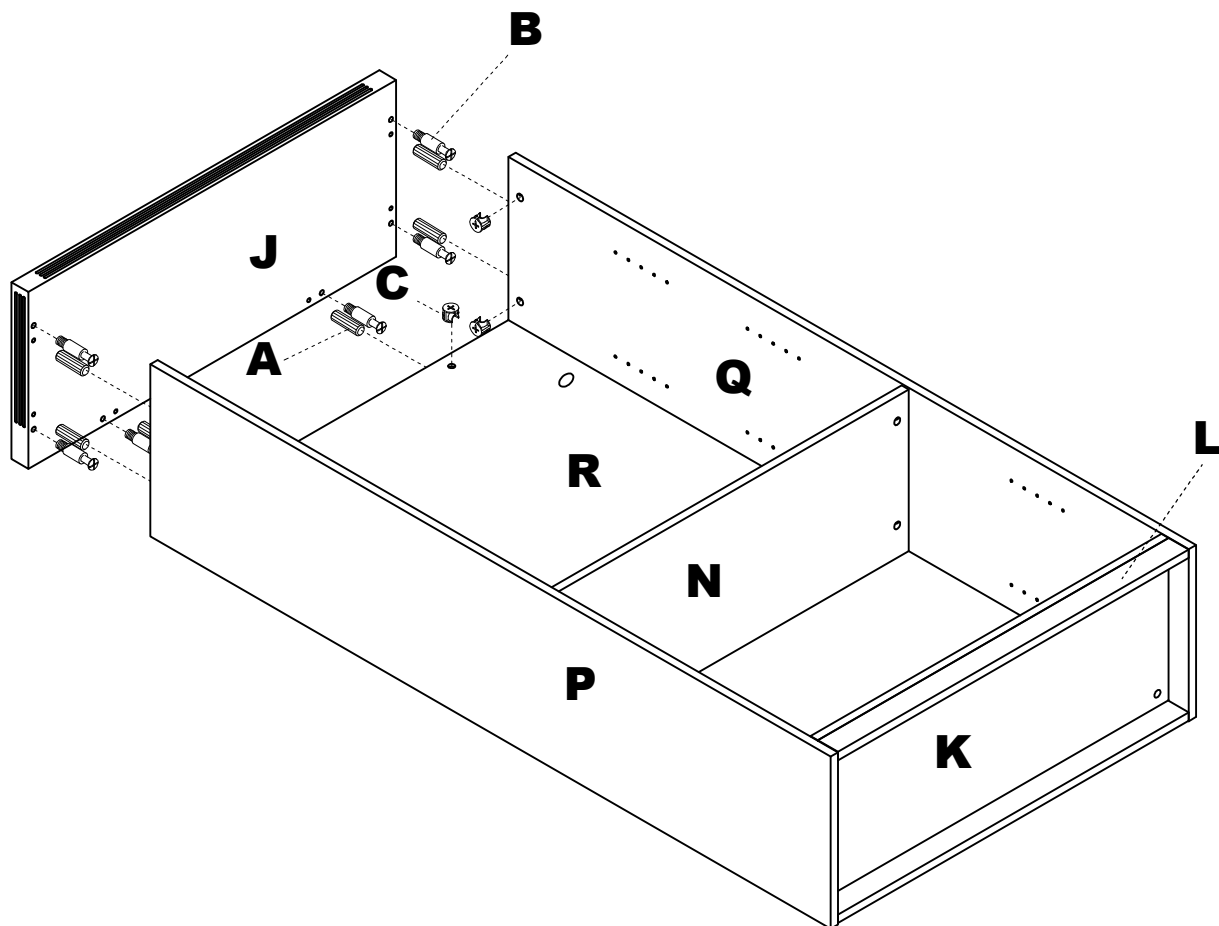
NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.

3

Insert Wood Dowels (A) into Back Panel (R), Bottom (K), Fixed Shelf (N), and Toe Kick (L). Insert Cams (C) into Back Panel(R), Bottom (K), and Fixed Shelf (N). Install Cam Posts (B) into threaded inserts in Left Side Panel (P). Attach Left Side Panel (P) to Back Panel (R), Fixed Shelf (N), and Bottom (K) by turning Cams (C).

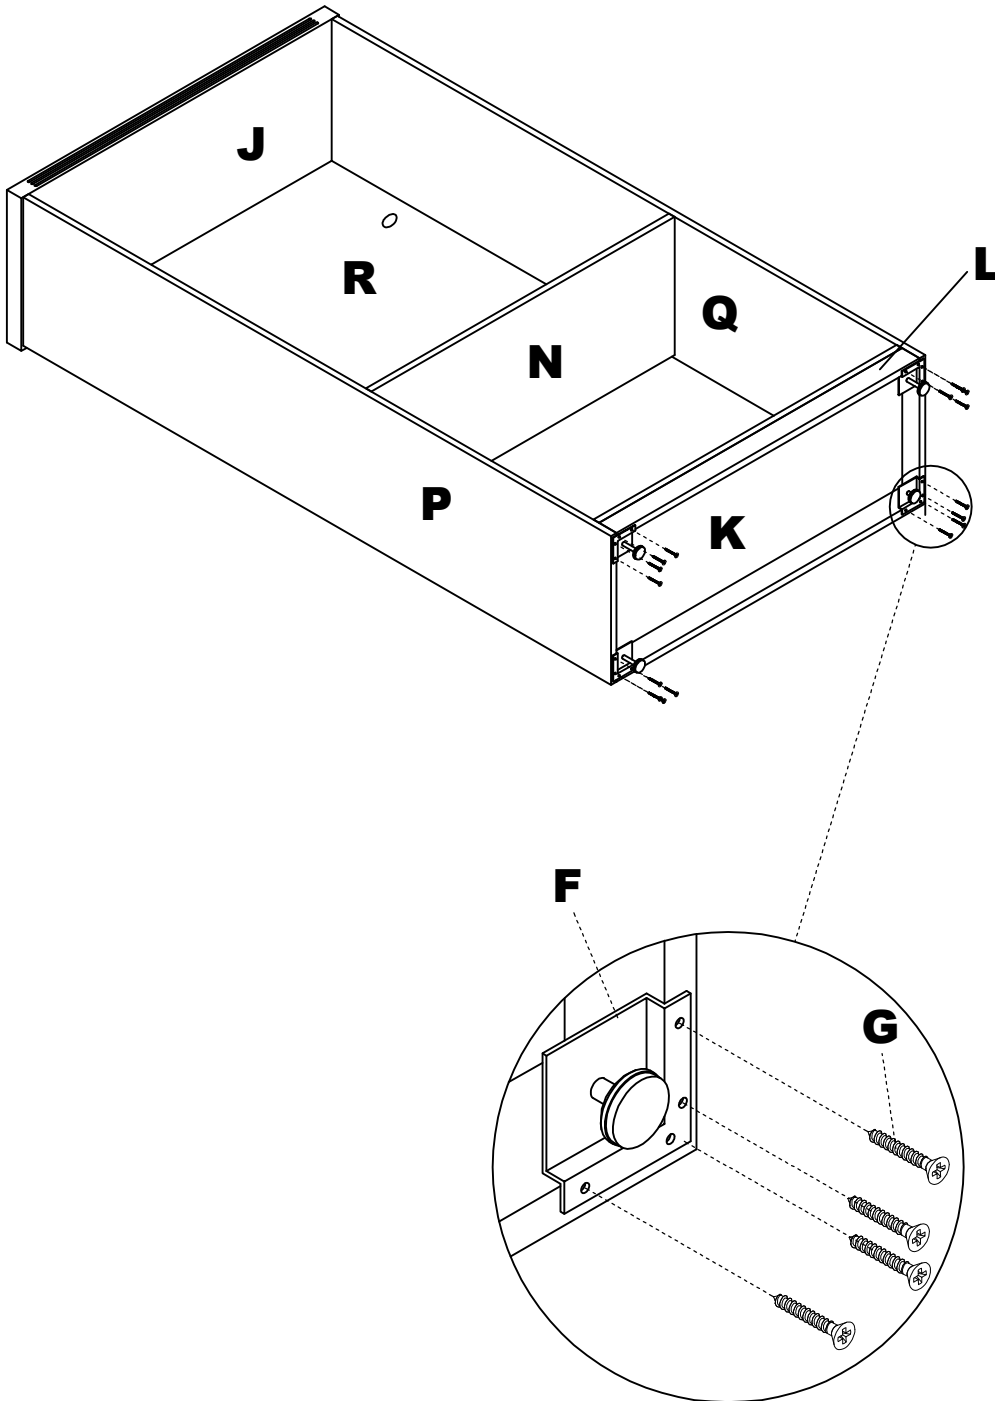


- 4** Insert Wood Dowels (A) into Back Panel (R) and Side Panels (P & Q). Insert Cams (C) into Back Panel (R) and Side Panels (P & Q) . Install Cam Posts (B) into threaded inserts in Top (J). Attach Top (J) to Back Panel (R) and Side Panels (P & Q) by turning Cams (C).

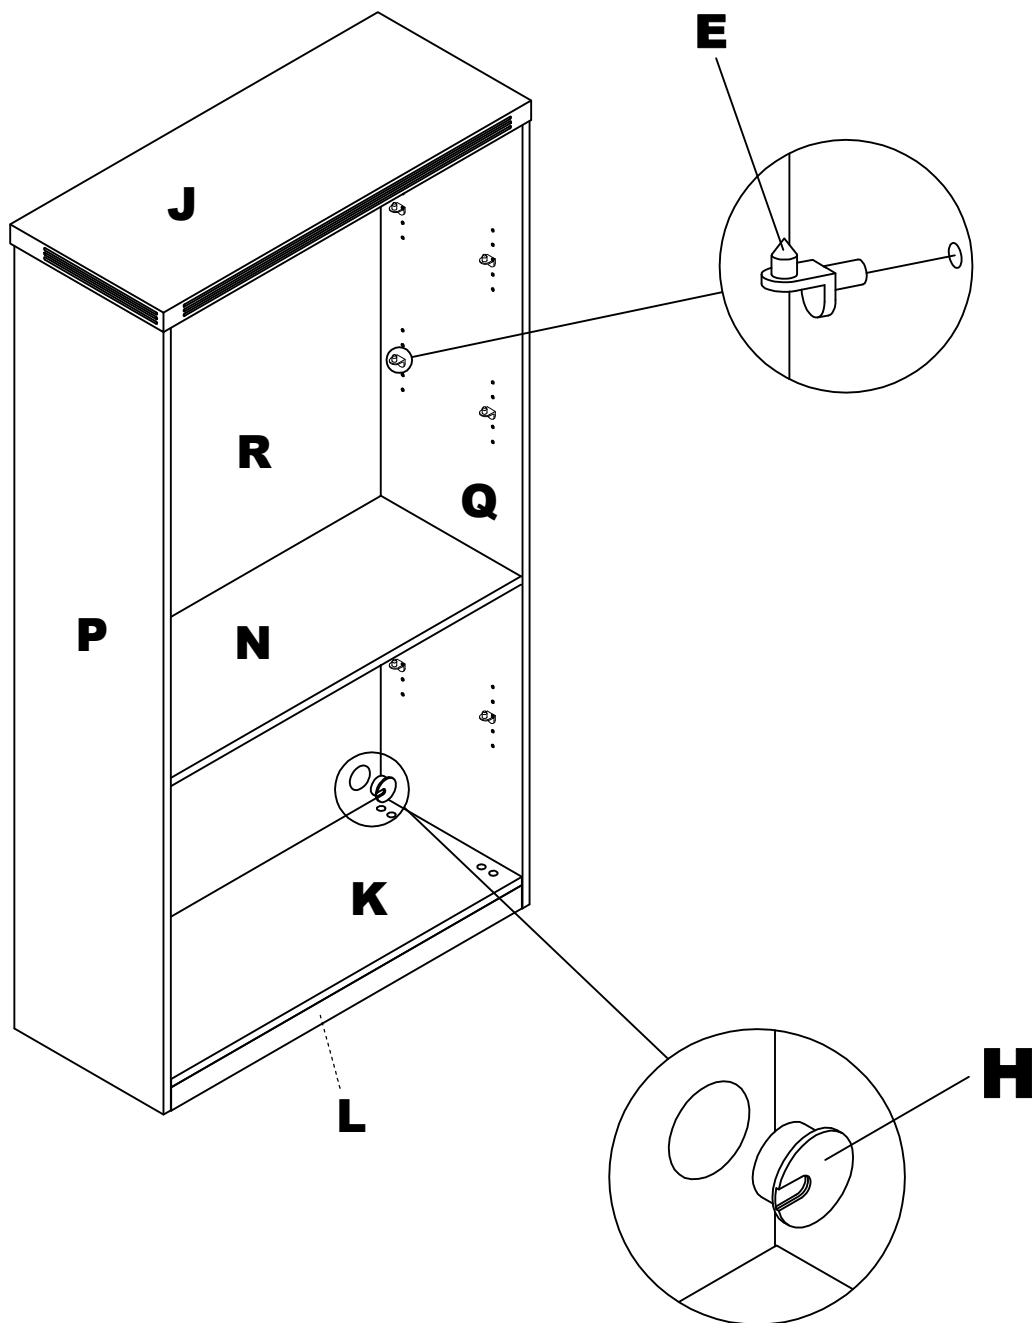


5

Attach Corner Brackets with Glides (F) using Screws (G).



- 6** Install Shelf Support Pins (E). Insert Grommets (H) into Back Panel (R). Apply Cam Stickers (D) over exposed Cams (C).



7 Install Shelves (M).

