


Installation Instructions

visidec

Focus | Articulated Arm | Double

Component Checklist

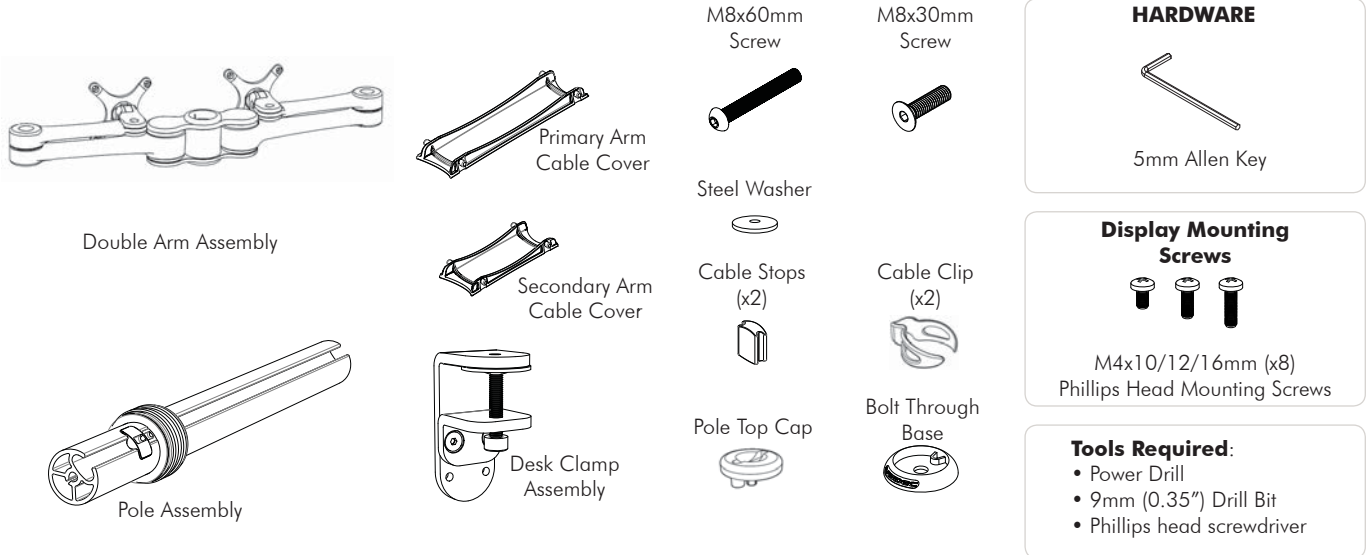

IMPORTANT INFORMATION:

- ! IMPORTANT - Install Visidec Focus Articulated Arm - Double as per installation instruction.**
- ! This product supports a maximum load of 8kg (17.6lbs)/Screen.
- ! The manufacturer accepts no responsibility for incorrect installation.


Step 1. Check Components

Check what you have received against the component checklist and hardware above.

Step 2. Mount Pole Assembly


Option 1: Bolt Through

1.1 Drill a 9mm (0.35") hole in the work surface in the desired position and assemble as shown below. It is recommended that the Pole Assembly be mounted towards the rear edge of the work surface.

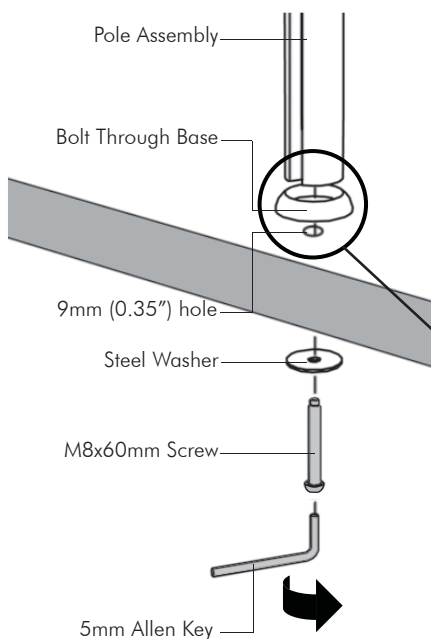


Option 2: Mount using Desk Clamp

2.1 Remove both the Pressure plate and M10 Desk Clamp Screw.

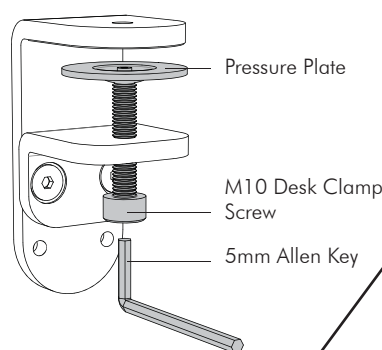

2.2 Fasten the Desk Clamp to the Bolt Through Base & Pole Assembly using the M8 x 30mm Screw and **Tighten Firmly.**

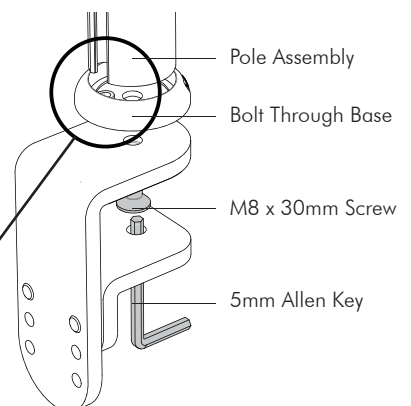

Note: Ensure that the Slot Tab in the Bolt Through Base fits snugly into the Slot on the Pole Assembly.



The Visidec logo on the Bolt Through Base must face the **front** of this assembly.

Step 2. Mount Pole Assembly (cont.)

2.3 The Desk Clamp bracket can be repositioned to suit different mounting surface thicknesses. The maximum mounting surface thicknesses supported are listed below from the Top to Middle and Bottom Screw Holes.

Top 0 - 32mm (default)
Middle 7 - 47mm
Bottom 22 - 62mm


Top 29 - 69mm
Middle 43 - 84mm
Bottom 59 - 99mm

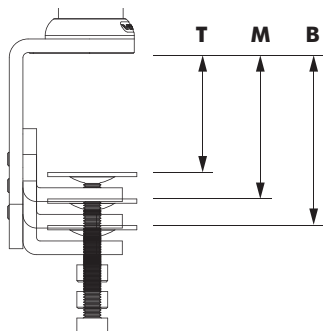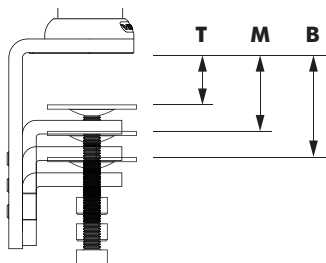


If you need to reposition the desk clamp bracket or you have no access to the rear of your table continue to **Step 2.4**.

If you **DO NOT** need to reposition the desk clamp bracket and you have access to the rear of your table skip to **Step 2.7**.


2.4 Remove the M8 x 16mm Socket Head Countersunk Screws to release the Desk Clamp Bracket.

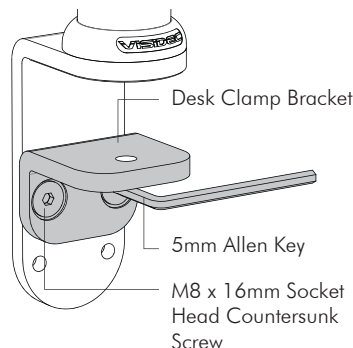


2.5 Place in desired location.

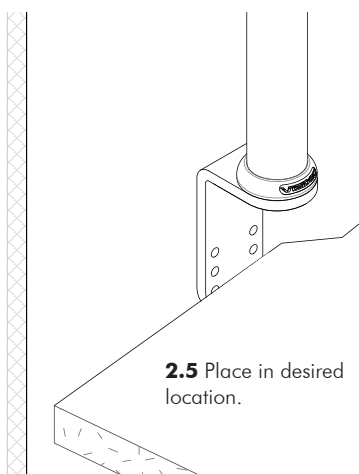

2.6 Reattach Desk Clamp Bracket.

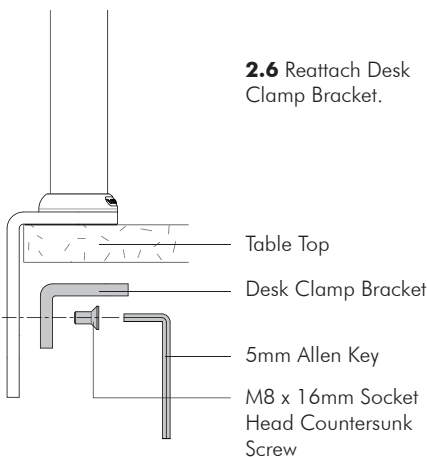


2.7 After positioning your Pole Assembly, screw Pressure Plate in and Tighten Firmly.

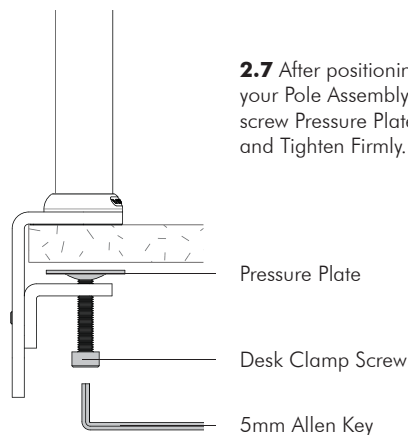


Step 3. Mount Double Arm Assembly

Handgrip Tab

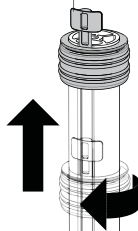

3.1 Unlock Handgrip and raise so that Handgrip Tab protrudes.

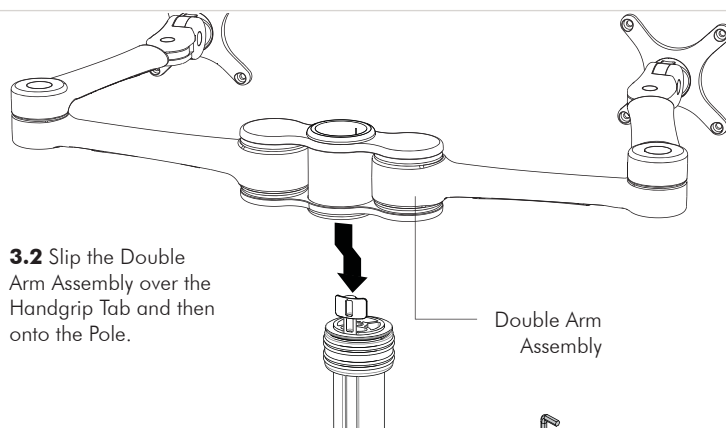

3.2 Slip the Double Arm Assembly over the Handgrip Tab and then onto the Pole.


Double Arm Assembly

5mm Allen Key

Pole Top Cap


3.3 Slide the Double Arm Assembly and Handgrip down the pole before locking the handgrip at the desired height.

3.4 Insert Pole Top Cap into Pole. This is also where the Allen Key is stored.

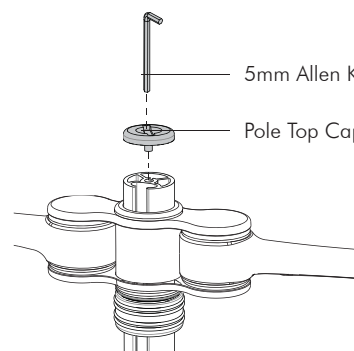


Step 4. Mount Displays


Option 1: 75x75mm Hole Pattern

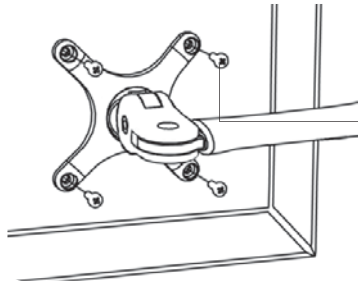


M4 Phillips Head
Mounting Screws

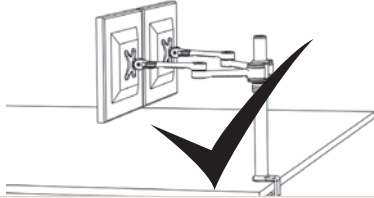

Option 2: 100x100mm Hole Pattern

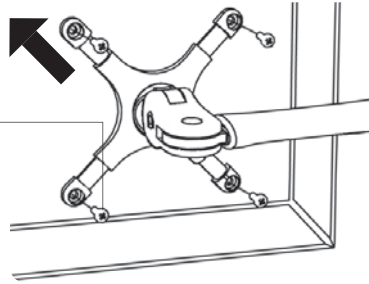


Note: Extend Arms to
achieve 100x100mm
hole pattern.

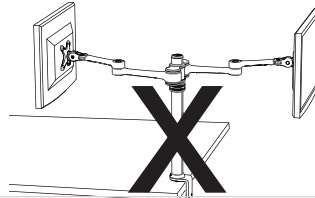


Note: Back to back configurations may
result in clamp failure.


Step 5. Adjust Height (Note: This procedure requires two people.)

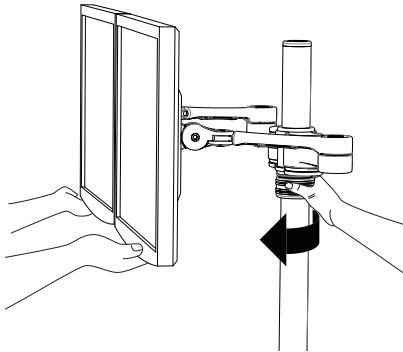

5.1 Unlock Handgrip ensuring both screens
and double arm assembly are supported.

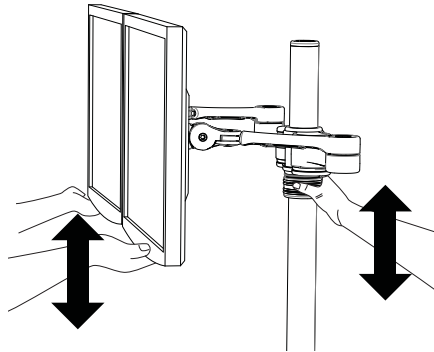


5.2 Lift/Lower Screens to the desired height.
Move both Screens and Arm assembly together.

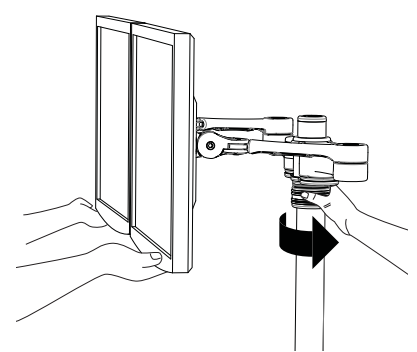


5.3 Lock Hangrip firmly.

Step 6. Cable Management

6.1 After plugging in your cables, install the Cable Covers.

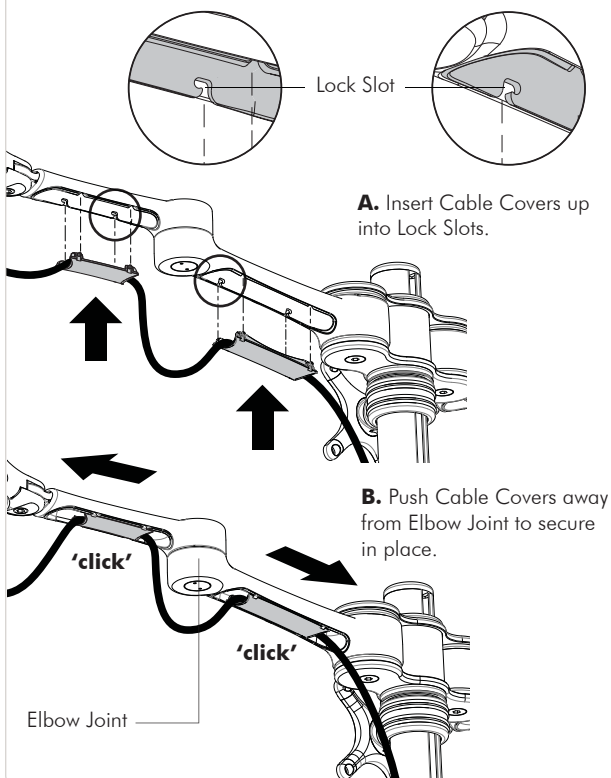

6.2 Cable Clips and Cable Stops can be
installed to further manage cables.
Please See Over.

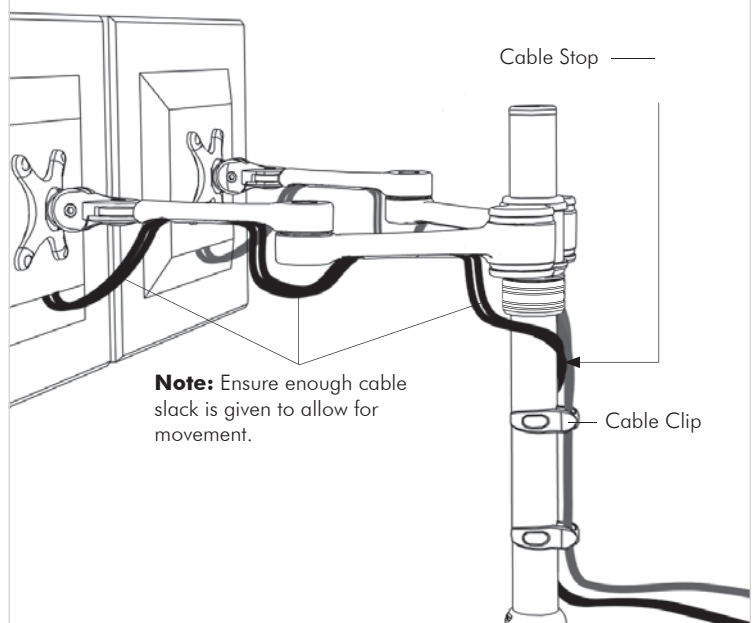

Step 6.2. Insert Cable Stops




A. Insert Cable Stop on one edge of the Pole Slot.



B. Press down firmly onto the other edge of the Cable Stop and hold. This allows the rear profile to flex in place.




Step 8. Adjusting the Display Bracket

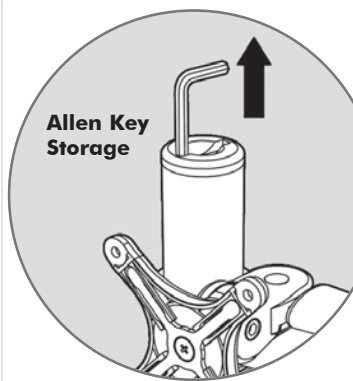


Allen Key Storage

PORTRAIT/LANDSCAPE


95° Max.

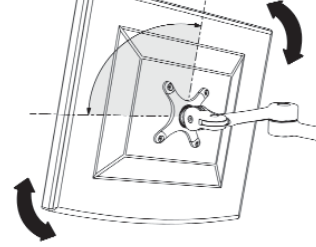

TILT (screen angle up/down)

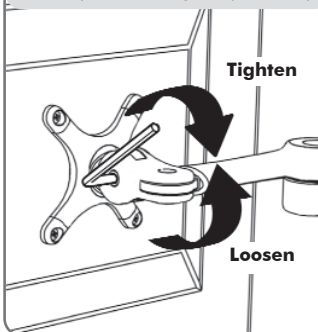

PAN (screen angle left/right)

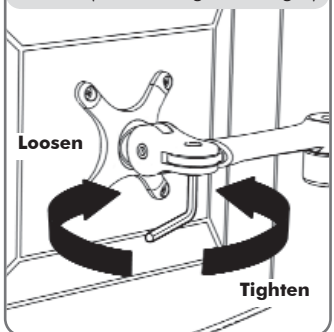

Ergonomic Guidelines

Many experts believe that the extended use of any computer screen has the potential to cause serious injury to your eyes, neck and back. This can be largely avoided by correctly positioning your display.


Viewing angle: Ergonomists recommend that the optimal position of your display should be slightly below eye level. When looking at the display's centre the user should have a downward visual angle of approximately 10°-20°.

Height: As a guide, the height (h) of your display should approximately be as follows:

- Tall Male (Max): 560mm (22")
- Short Male (Min): 368mm (14.5")
- Tall Female (Max): 520mm (20.5")
- Short Female (Min): 356mm (14")

Distance: For visual comfort, a viewing distance (d) between 500mm (20") to 750mm (29.5") is recommended.

Tilt Angle: Angular adjustments to reduce reflection on your monitor should range between 5° forward tilt to 15° backward tilt.

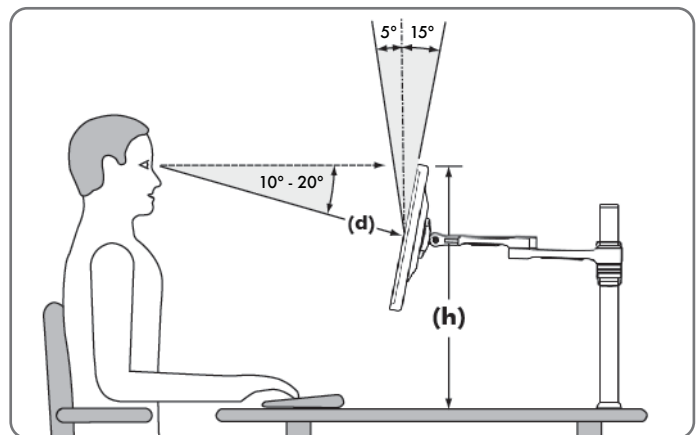

Installation Complete

