


Component Checklist

Collar Joiner



1 Metre Extension hanger

M8 x 10mm Screw
x12**Tools Required:**


5mm allen key

IMPORTANT INFORMATION**! IMPORTANT - Install Telehook Flatpanel ceiling mount 1m extension as per Installation Instructions**


- ! The Telehook Flat panel ceiling mount plus the 1 metre extension supports a maximum of 91kg (200lbs).
- ! The installers should satisfy themselves that the ceiling is strong enough to support the Telehook Flat panel ceiling mount unit of 14kgs (31lbs) and the 1m extension unit of 3kgs (6.6lbs) plus the maximum allowable monitor weight of 91kgs (200lbs). Total of 108kgs (238lbs).
- ! The Manufacturer recommends the use of guy wires when adding the 1 metre extension to an existing set-up
- ! The Manufacturer accepts no responsibility for incorrect installation.

Step 1. Check Components


Check you have received all parts against the Component Checklist and Hardware.

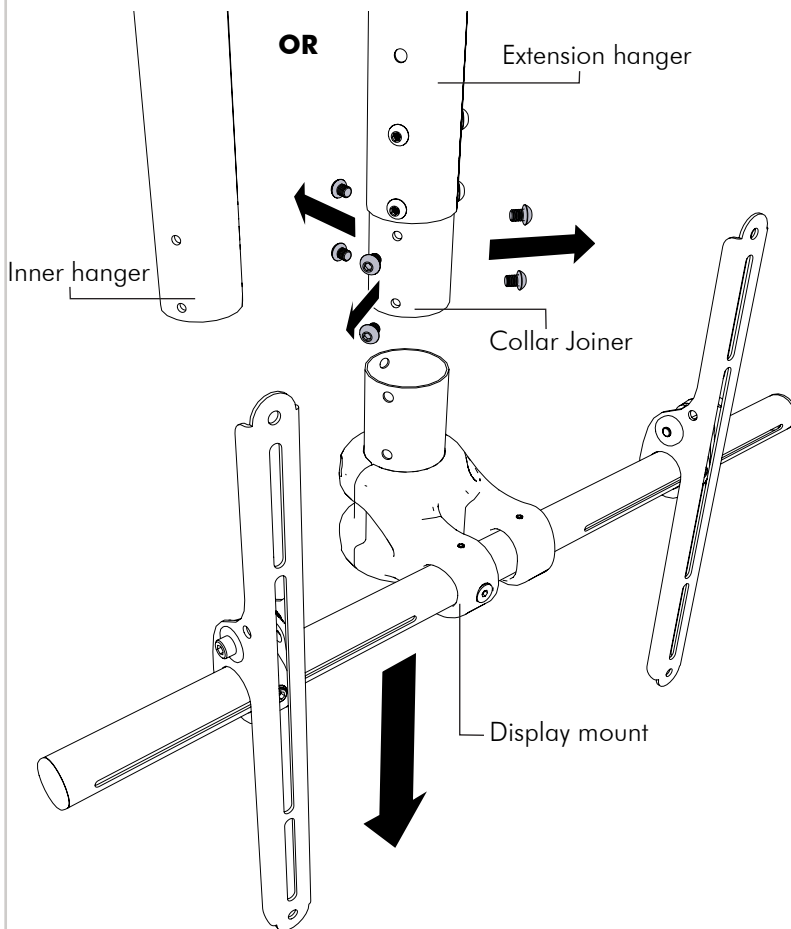Step 2. Remove display mount

Remove Display mount from existing set-up by undoing the screws with a 5mm allen key.
Note: retain screws for further use with extension

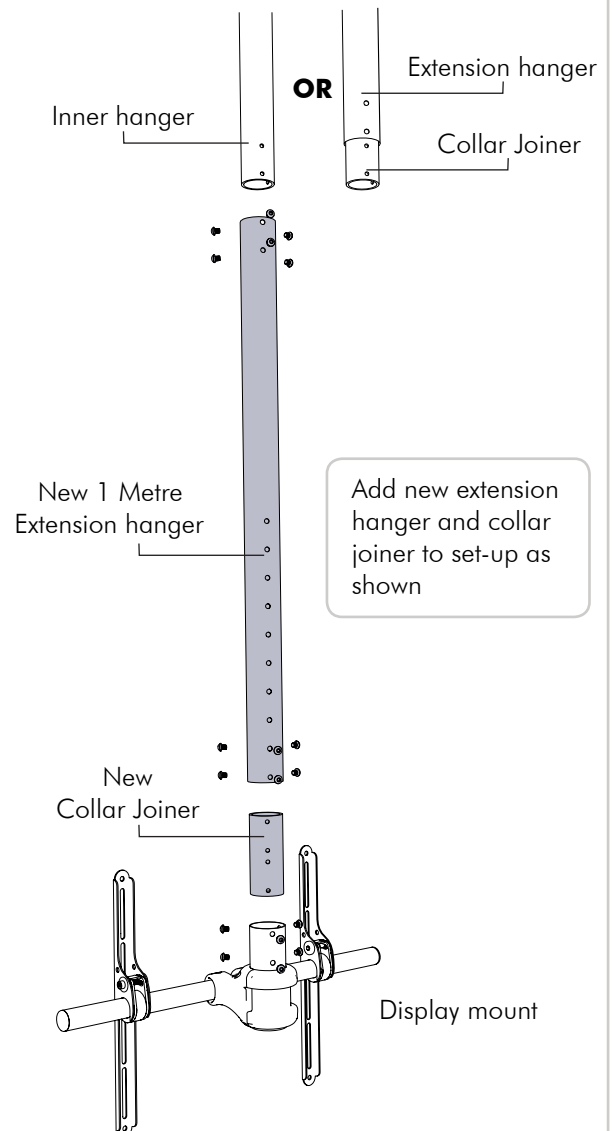Step 3. Add extension to set-up

Step 3. Using Guy wires

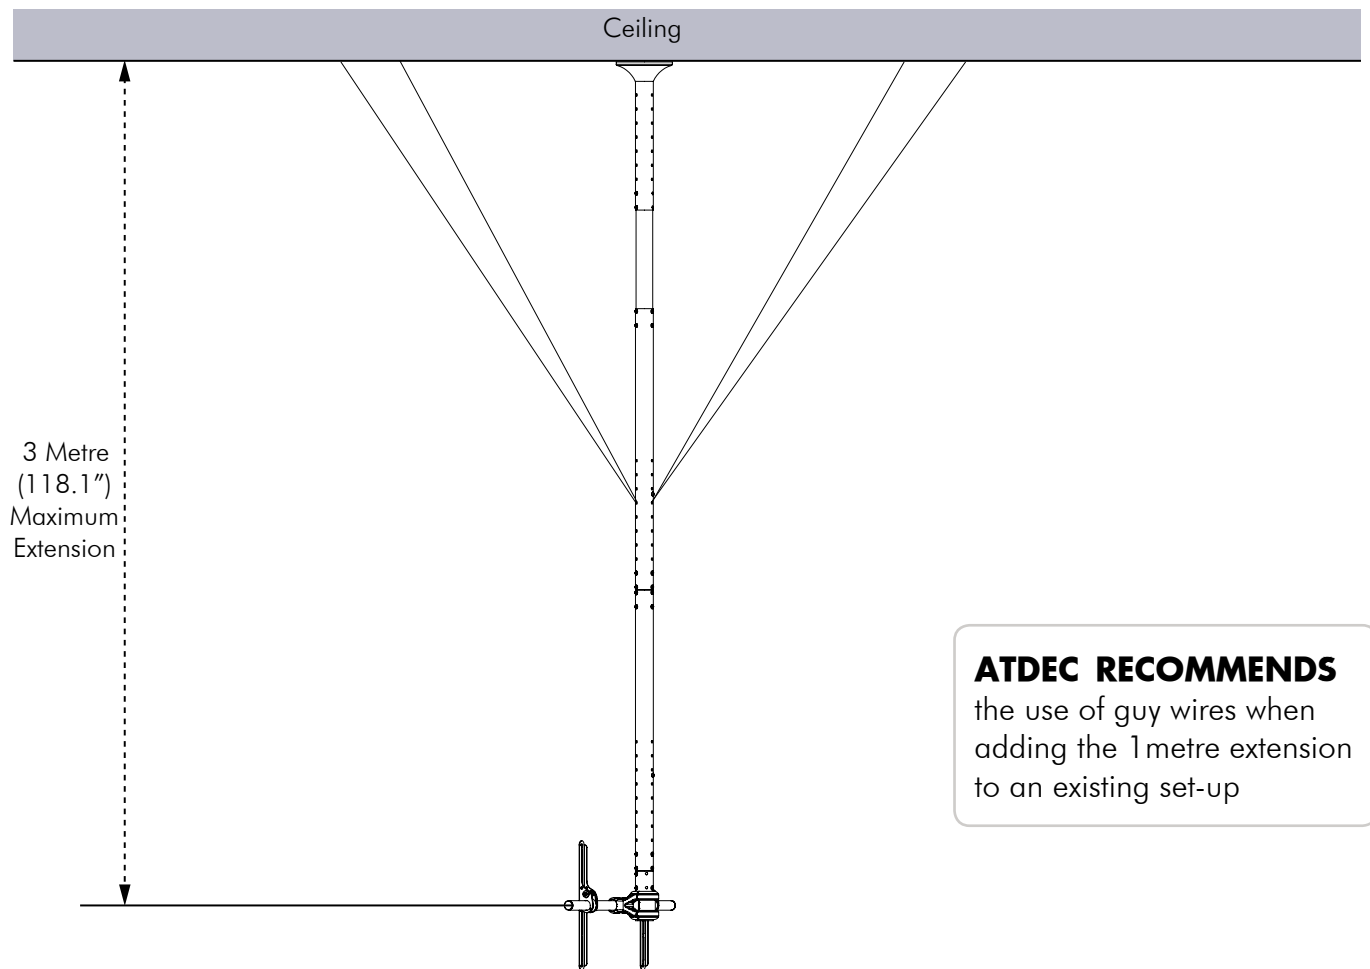

ATDEC RECOMMENDS
the use of guy wires when
adding the 1 metre extension
to an existing set-up

