

PureCharge Station™

for iPad and iPad mini


Mounting Instructions



Table of Contents

Desktop or Countertop Mounting	4
Before You Begin	5
Stacking Multiple Stations	6
Mounting Steps	7
Wall Mounting	17
Before You Begin	18
Mounting Steps	19

Desktop or Countertop Mounting

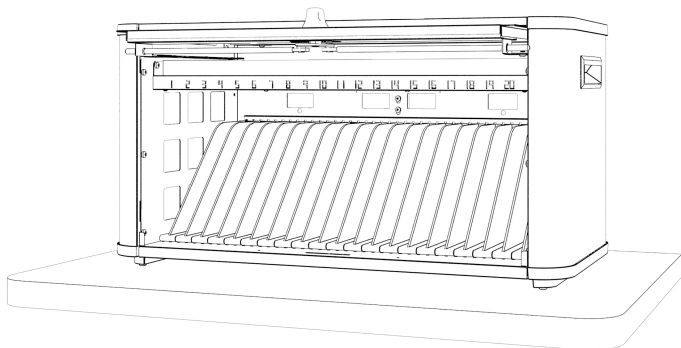

Before You Begin

The PureCharge Station™ can be mounted to a solid surface, providing added security for your iPad devices. Mounting to a solid surface requires:

- PureCharge Station™
- Surface mounting bracket (included)
- Mounting screws or other anchors appropriate for your surface* (not included). The holes in the surface mounting bracket are 9/32" / 7 mm diameter.
- Two self-tapping screws (included) for securing the PureCharge Station™ to the mounting bracket.
- #2 Phillips screwdriver
- Drill

*if you are uncertain what hardware to use, consult an experienced professional

Stacking Multiple Stations


In addition, when surface mounted, the PureCharge Station™ can be stacked up to three units high. In addition to the required items listed on p.5, stacking two or three PureCharge Station™ also requires:

- Additional PureCharge Station units
- Stacking Bracket (included)
- Self-tapping screws (included)
 - Three for lower unit
 - Two for upper unit(s)


Mounting Steps

If mounting a single unit, skip to **Step 4**.


1. If stacking multiple units, begin by inserting the included stacking bracket into the channel on the rear of the station.
2. Install one screw (included) to align the stacking bracket to the hole on the back of the unit at the top.

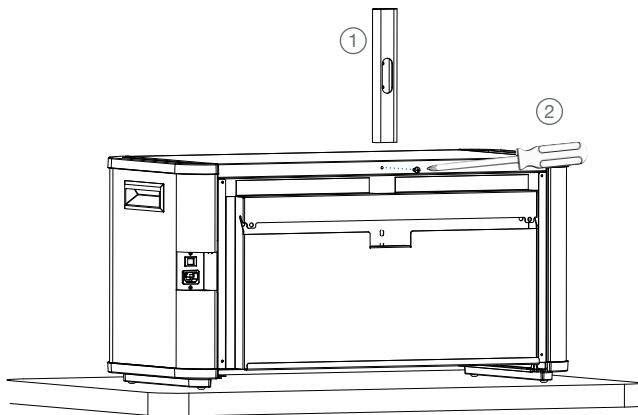

3. From the front, install the remaining two self-tapping screws to secure the stacking bracket from the inside of the station.

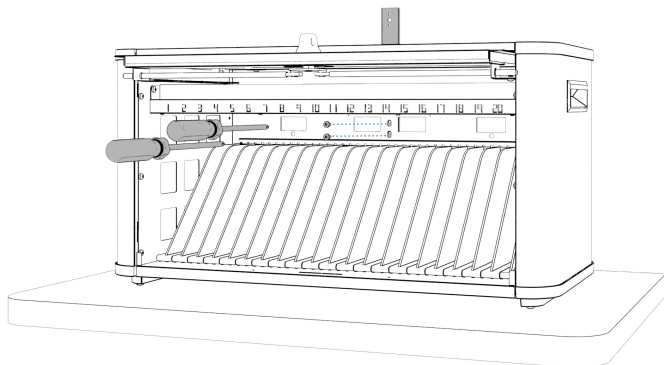


4. Drill pilot holes as needed for the surface mounting bracket.

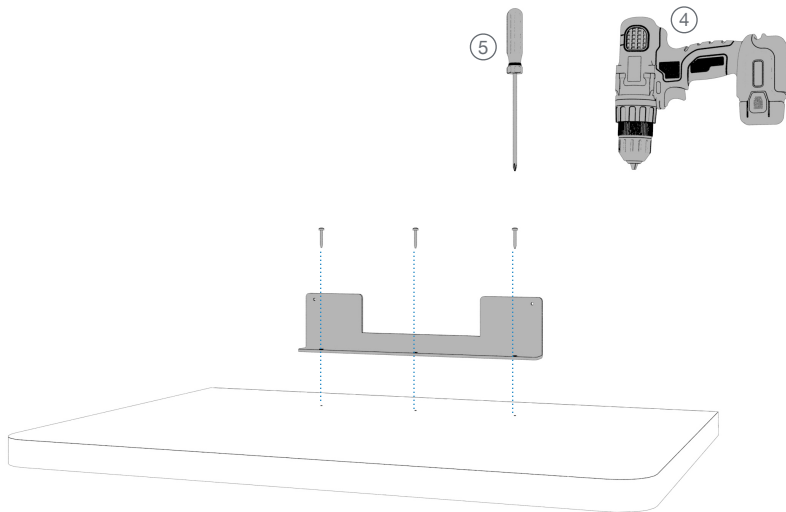


5. Secure the bracket to surface with appropriate fasteners (not included).


6. Place the PureCharge Station™ onto the surface mounting bracket. The bracket should slot into the channels on the rear of the unit.

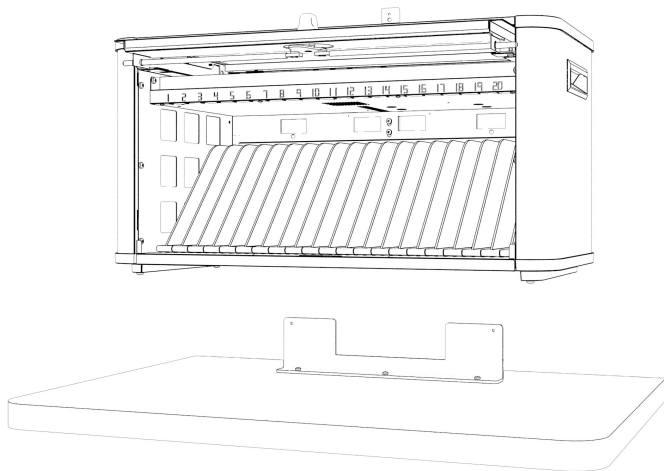

7. Remove dividers 4, 5, 17, and 18 by pulling on each divider firmly.

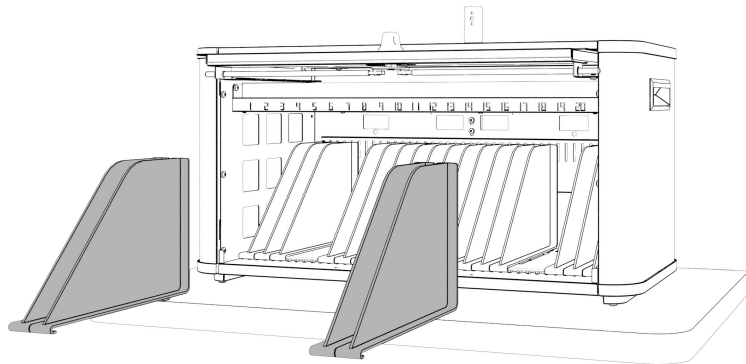


8. Install two screws (included) to secure the unit to the surface mounting bracket.

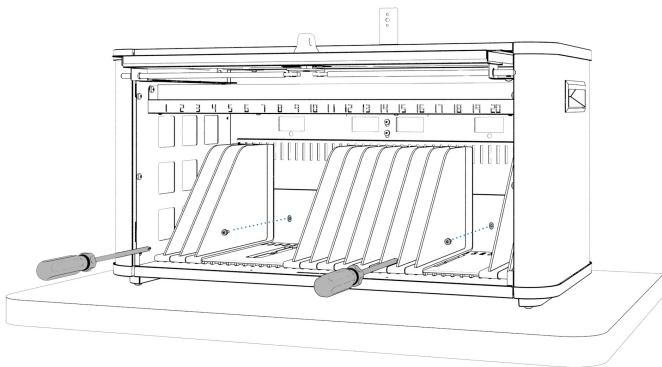


9. Reinstall the dividers back into the PureCharge Station™. If mounting a single unit, the installation is complete.


10. If mounting three units, repeat **Steps 1-3** on the 2nd unit.
11. Carefully stack the next unit on top of the lower unit (2 people recommended).

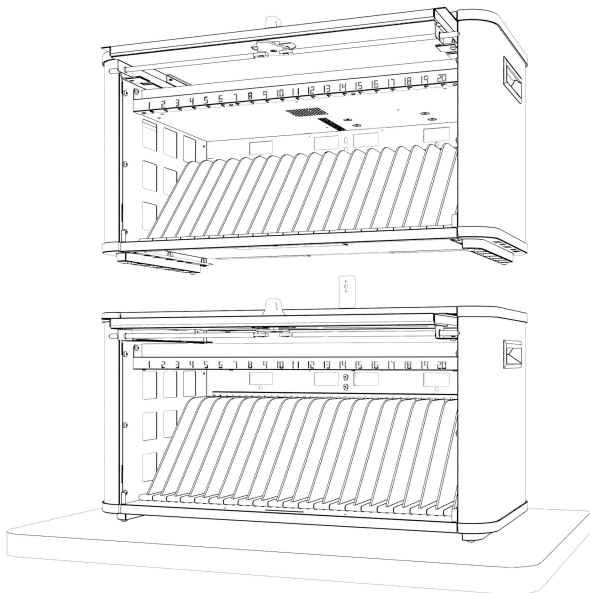


12. Remove divider 11 from the center of the upper unit by pulling firmly on the divider.

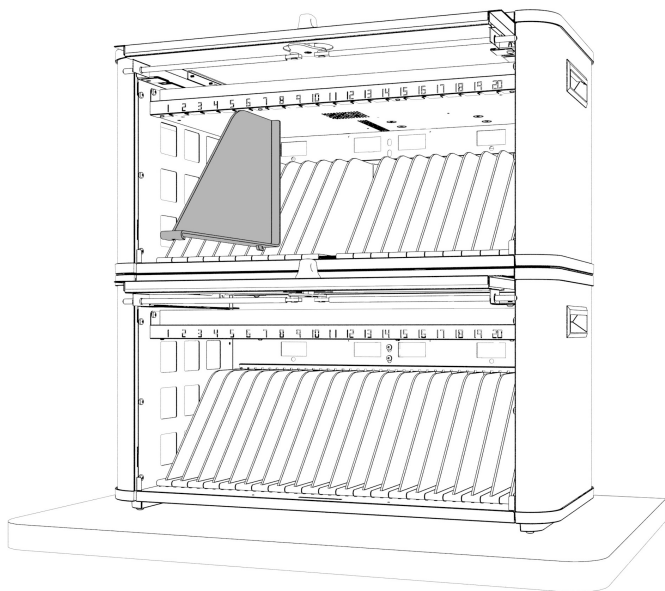


13. Install two screws (included) to secure the upper unit to the stacking bracket.

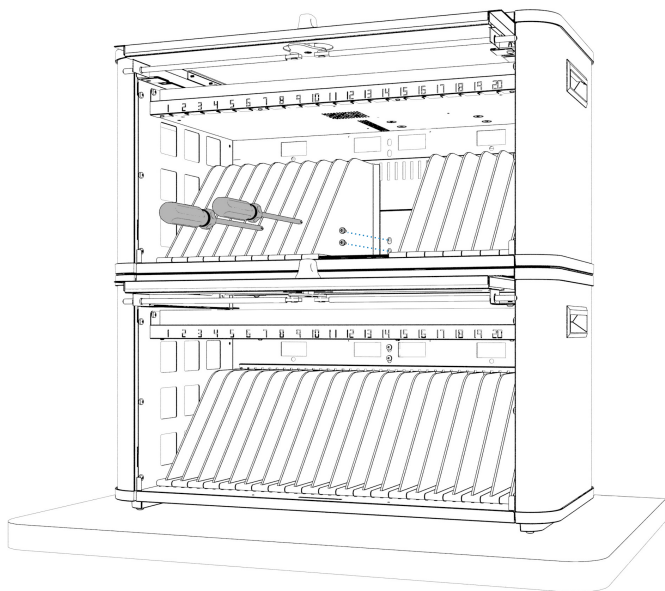

14. Reinstall the center divider back into the upper unit. If installing two units, the installation is complete.
15. If installing three units, repeat **Steps 10-13** to complete the installation.

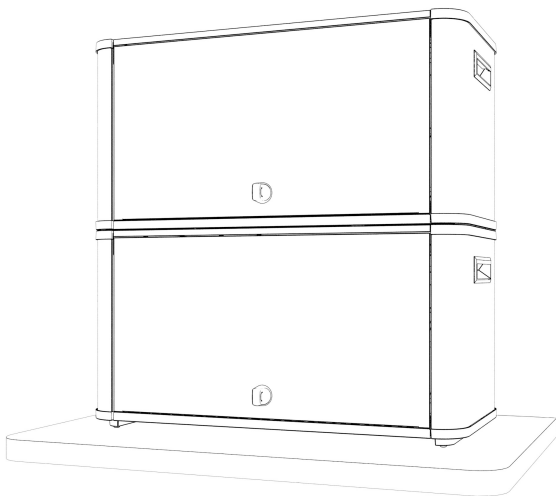

Wall Mounting

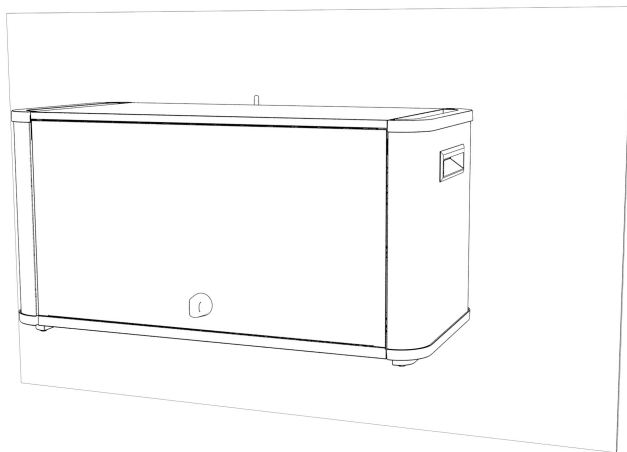

Before You Begin


The PureCharge Station™ can be wall mounted*, providing added security for your iPad devices, and freeing up valuable desk space. Mounting to a wall requires:

- PureCharge Station™
- Wall mounting bracket (included)
- Toggle bolt wall anchors. Anchors appropriate for 5/8" thick dry wall are included.
- 1/4"-20 bolts (included)
- #2 phillips screwdriver
- Drill
- Pencil
- Level


*Improper installation can result in injury. If in doubt, consult an experienced professional

Mounting Steps

1. Using a level, place the wall mounting bracket in the desired location on the wall and mark the hole locations:
 - for the PureCharge Station™ 20, there are 4 holes
 - for the PureCharge Station™ 10, there are 3 holes

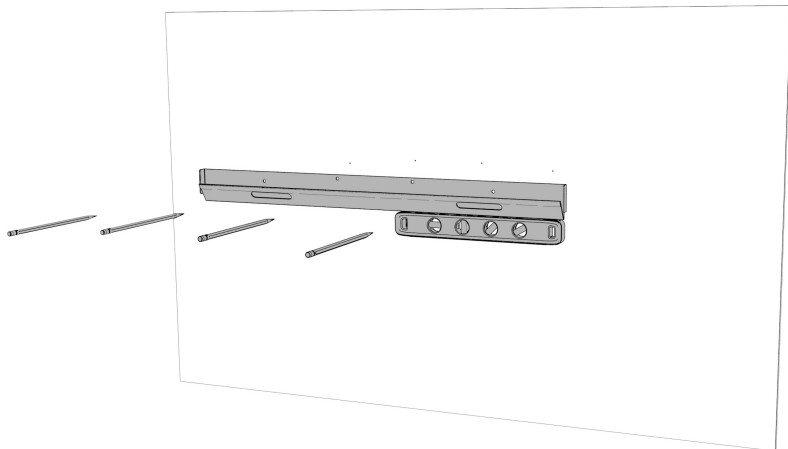


2. Drill $\frac{1}{2}$ " diameter holes. If using the included hollow wall fasteners, locate holes in clear space between studs.

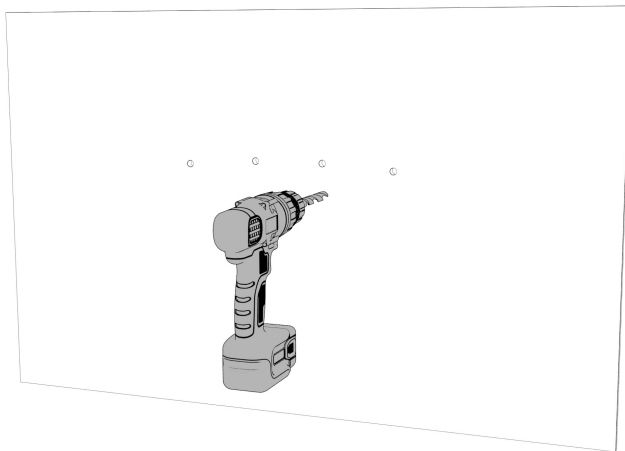


3. To install the included toggle bolt wall anchors:
 - a. Hold metal channel flat alongside plastic straps and slide channel through hole.

- b. Hold ends of straps between thumb and forefinger and pull toward you until channel rests flush behind wall.
- c. Slide plastic cap along straps with other hand until flange of cap is flush with wall.
- d. Snap straps at wall by pushing side to side, snapping off straps level with flange of cap.
- e. Repeat for each marked hole.

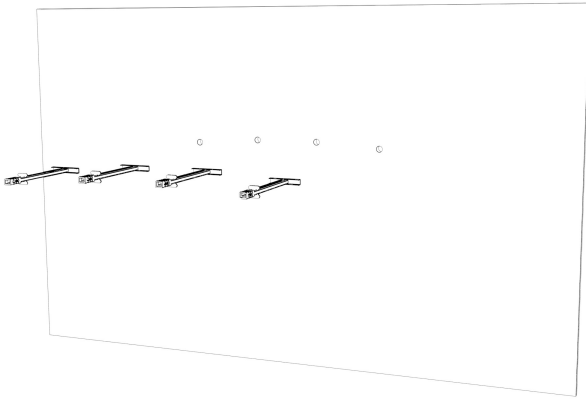


4. Place wall mounting bracket over flanges and install 1/4"-20 bolts to affix bracket to the wall.


CAUTION: Bracket must be securely fastened to the wall before additional steps are taken. Injury may occur from improper installation

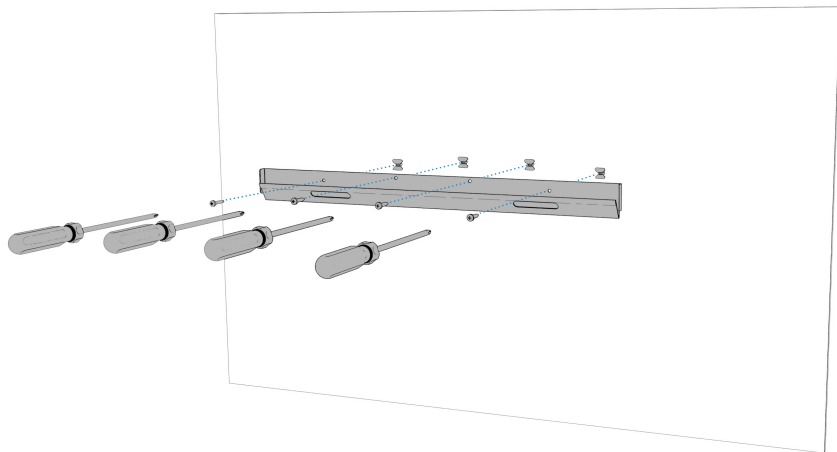

5. Hang the PureCharge Station™ onto the affixed wall bracket (2 people recommended).

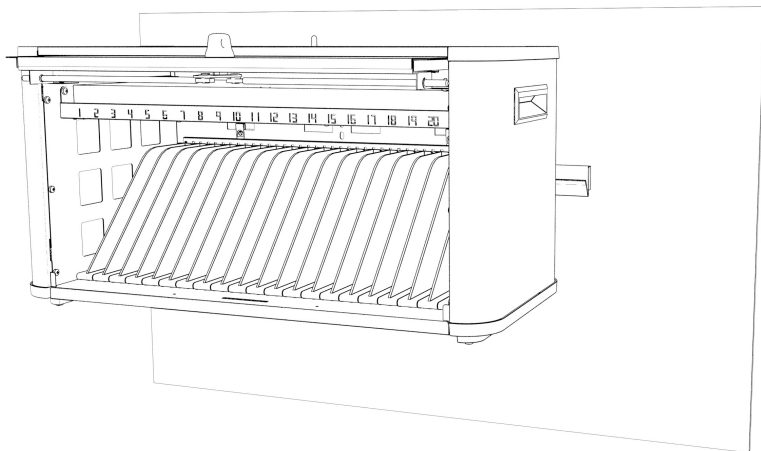

6. Install two additional bolts via the front of the PureCharge Station™ to secure the unit to the wall mounting bracket.

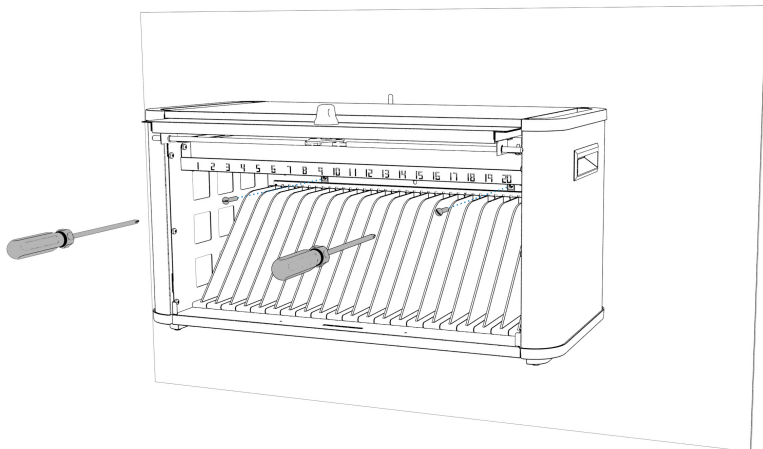

CAUTION: Do not stack additional units on top of a wall mounted station.



BRET FORD®

11000 Seymour Avenue
Franklin Park, Illinois 60131 USA
Toll Free Phone: 800-521-9614
Phone: 847-678-2545
Toll Free Fax: 800-343-1779
Fax: 847-678-0852

BRET FORD.COM/APPLE



Designed and Manufactured in the USA

Bretford, B design, and PureCharge are trademarks or registered marks of Bretford Manufacturing, Inc. Patents Pending. All rights reserved. © 2015 Bretford Manufacturing, Inc. All other referenced product names and logos are trademarks of their respective owners.