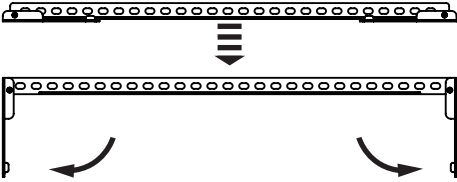# Installation Instructions
1U-48 Port High Density Patch Panel
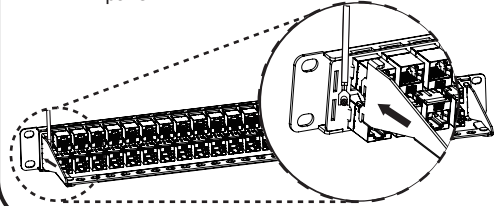
1 Open the both hangers from cable manager.
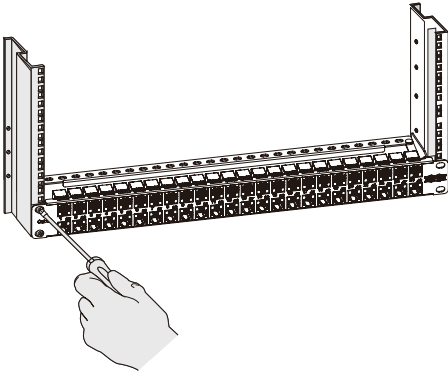

2 Assemble the cable manager to the panel.

3 Fix The Panel to the rack.

4 Connect the gorunding wire between the panel and rack.