


To install the hard handle to K120:

1. Remove four screws from each top corner of K120.

Note there are short and long screws. All screws are required later.

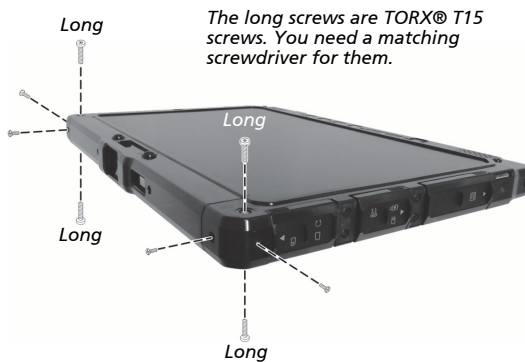

2. Fit the hard handle to K120.



3. Noting the positions of the short and long screws, fasten the screws to secure the handle in place.



**Disclaimer**

Getac will not be held responsible for any damages arising from failure to follow the user guide.



5 6 1 8 1 4 2 0 0 0 1 R 0 1