


YOU WILL NEED:

- A PHILLIPS SCREW DRIVER
- A DRILL WITH A 1/8" BIT
- A RELIABLE WALL STUD FINDER
- A LEVELING TOOL
- A TAPE MEASURE
- A RUBBER Mallet
- POWER SCREW DRIVER

PARTS LIST:

- 2 - WOOD WALL SUPPORTS
- 1 - METAL ROD
- 3 - WOOD SLATS
- 4 - 3" #8 FLAT HEAD PHILLIPS WOOD SCREWS
- 2 - BLACK SLAT SCREWS
- 4 - WOOD BUTTONS

32" Coat Rack Mounting and Assembly Instructions

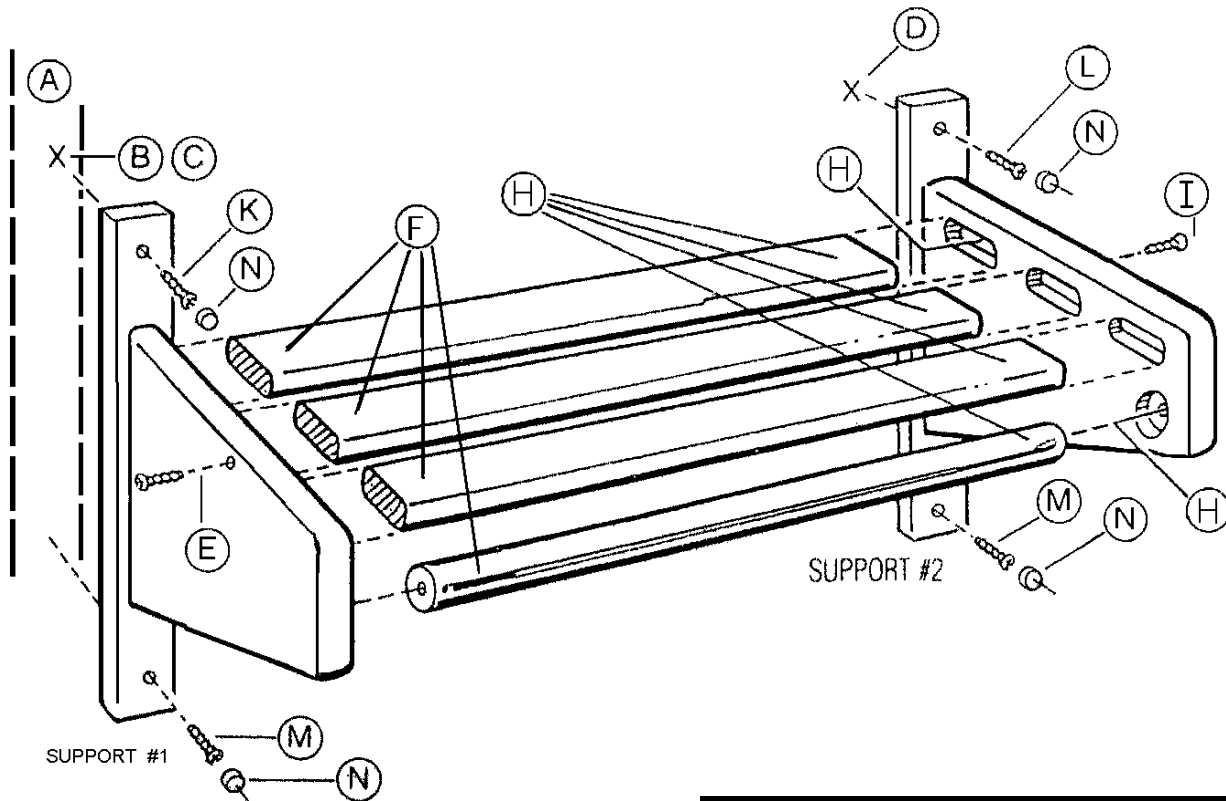

BEFORE YOU START, PLEASE NOTE:

THESE INSTRUCTIONS ARE FOR MOUNTING THIS COAT RACK ON WALLS WITH WOOD FRAME CONSTRUCTION AND WALL STUDS SPACED 16" APART (refer to Step #1-D, below). IF YOUR WALL IS NOT WOOD FRAME CONSTRUCTION, OR THE WALL STUDS ARE NOT 16" APART, YOU MUST SEEK AN ALTERNATIVE METHOD OF MOUNTING THIS RACK TO YOUR WALL. SUCH AS, TOGGLE BOLTS, WALLBOARD ANCHORS, CONCRETE SCREW ANCHORS, SLEEVE ANCHORS, OR WHATEVER IS APPROPRIATE FOR THE DESIGNATED WALL SURFACE.

INSTRUCTIONS:

1. Measure and mark the desired location on the wall.

- Use a wall stud finder to locate and mark a stud, in the desired location on the wall, more than 32" from a doorway, window or corner.
 - Make a small "X" at the desired height (approx. 72") on the wall where you located the stud.
 - Drill a 1/8" pilot hole where you made your "X".
 - Measure 32" to the left or right of your "X". Locate and mark a point level with your "X" on the wall and check for and mark a wall stud at that point.
- **NOTE:** If your second mark does not line up with a wall stud, you may need to seek an alternative method to secure the second support to the wall

2. Assemble the Coat Rack prior to mounting on wall.

- Using power screw driver, attach 1 wood slat into the center hole of Support #1 with 1 black slat screw.
- Lay Support #1; with the slat attached, on a soft surface, with the slat pointing up. Insert remaining slats and metal rod.
- If using close-loop or theft proof hangers, slide them onto rod before inserting into Support #2.
- Snap Support #2 over the three (3) slat ends and metal rod.
- Insert other black slat screw into hole in upright, and using power screw driver attach to middle slat.
- Return coat rack to mounting position.

3. Mount the Coat Rack on the Wall

- Place the rack on the wall and insert one Wood Screw through the top, pre-drilled hole in Wall Support #1 and into the pilot hole you drilled in Step #1-C, above. Turn the screw only a few turns, tight enough to hold the Coat Rack on the wall but loose enough to allow the Coat Rack to pivot.
- Line up Support #2 (at the other end of the rack) so the top, pre-drilled hole is over the second "X" you made on the wall. Check the rack to make sure it is level. Once it is level, use the top, pre-drilled hole to locate and drill your 3/8" pilot hole. Then fasten Support #2 securely to the wall using 1 Wood Screw attached to the wall through the second wall stud located in Step #1-D, above.
- Drill 1/8" pilot holes for the bottom screws using both of the bottom, pre-drilled holes. Insert 1 Wood Screw in each and fasten securely to the wall.
- Place Wood Buttons over the wood screws in the wall supports and lightly tap into place.

generations:[®]
consumer products

Part# CR32WM

A div. of Next Generations, Inc.
P O Box 379
Marne, MI 49435
Phone (616) 677-1100
Fax (616) 677-1068
1-877-676-6700