




## Commercial Caddy Assembly Instructions

Model:15030

- 1.) Unpack the box and make sure that there is a bag of hardware, four casters, and two of each parts labeled A,B,C and D.
- 2.) Lay the components on the floor as shown in the assembly drawing **making sure that the three caster mounting holes run along the outside of the assembly, and the letters are visible and facing up on all parts.**
- 3.) Assemble rail C to rail D (C should be on top of D) to the appropriate length that you will use, and bolt the two parts together with the small carriage bolt and lock washer. Repeat process with the remaining two C and D rails.
- 4.) Assemble rail A to rail B (B should be on top of A) to the appropriate length and bolt the two parts together using two lock washers. Repeat process with the remaining two A and B rails.
- 5.) Assemble the following components, in order, top to bottom; rail C, rail A and a caster with three carriage bolts and lock washers. Repeat process. **NOTE: Make sure that the two LOCKING casters are placed on the side of the caddy that you will use as the front.**
- 6.) Assemble the following components, in order, top to bottom; rail D, rail B and a caster with three carriage bolts and lock washers. Repeat process to complete the assembly of the Commercial Cabinet Dolly.

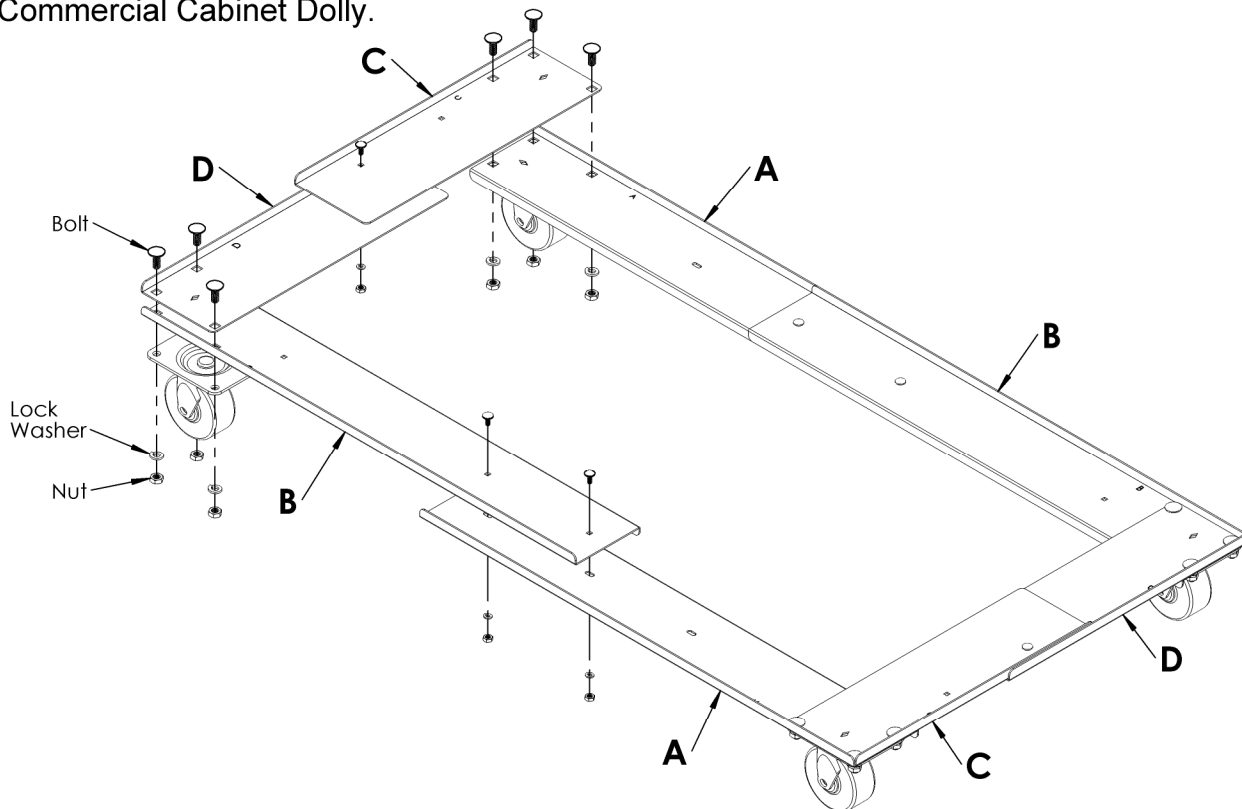

Do not contact store for parts or assembly assistance. Individual stores do not stock parts. For friendly service, call toll free: 1800-383-7414