


**IMPORTANT NOTICE:
HARDWARE PACKAGE IS ATTACHED
ON THE BOTTOM OF SEAT CUSHION.**

MODEL: B9471 B9476

(1)X1

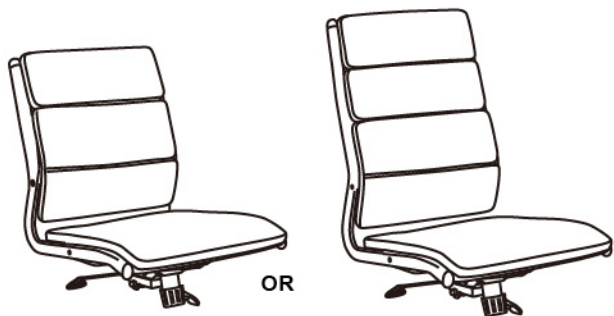

(2)X5



(3)X1



(4)X1



(5)X1(L)X1(R)



(A)*4




M8*45 Arm Screws

(B)*1



Allen Key


1

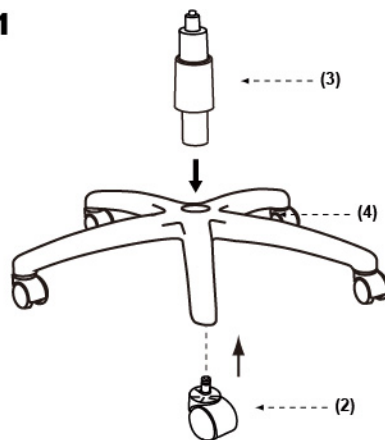


2



3

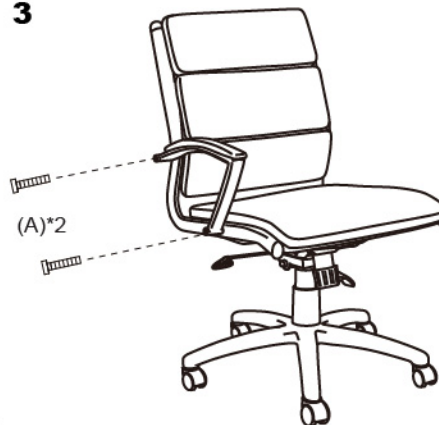

4

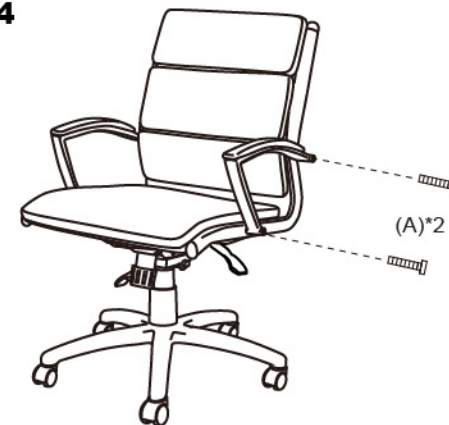

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

