



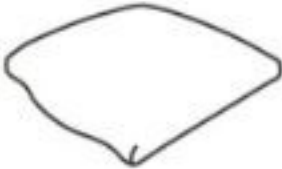

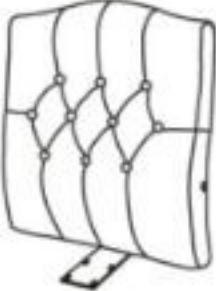







**Please unscrew all hardware from cushion before assembly.**  
**Por favor de destornillar todos los tornillos del cojín antes de ensamblar la silla.**

MODEL:  B959  B969  B958

(1)x1	(2)x1	(3)x1 (L)x1 (R)
		
Seat	Back	OR
(4)x1	(5)x1	
		
Back Bar	Front Bar	
(A)x4		M6*25 BACK BAR SCREW
(B)x4		M6*65 FRAME SCREW
(C)x2		M6*50 ARM SCREW
(D)x6		WOOD CAP
(E)x2		M6*25 SEAT SCREW

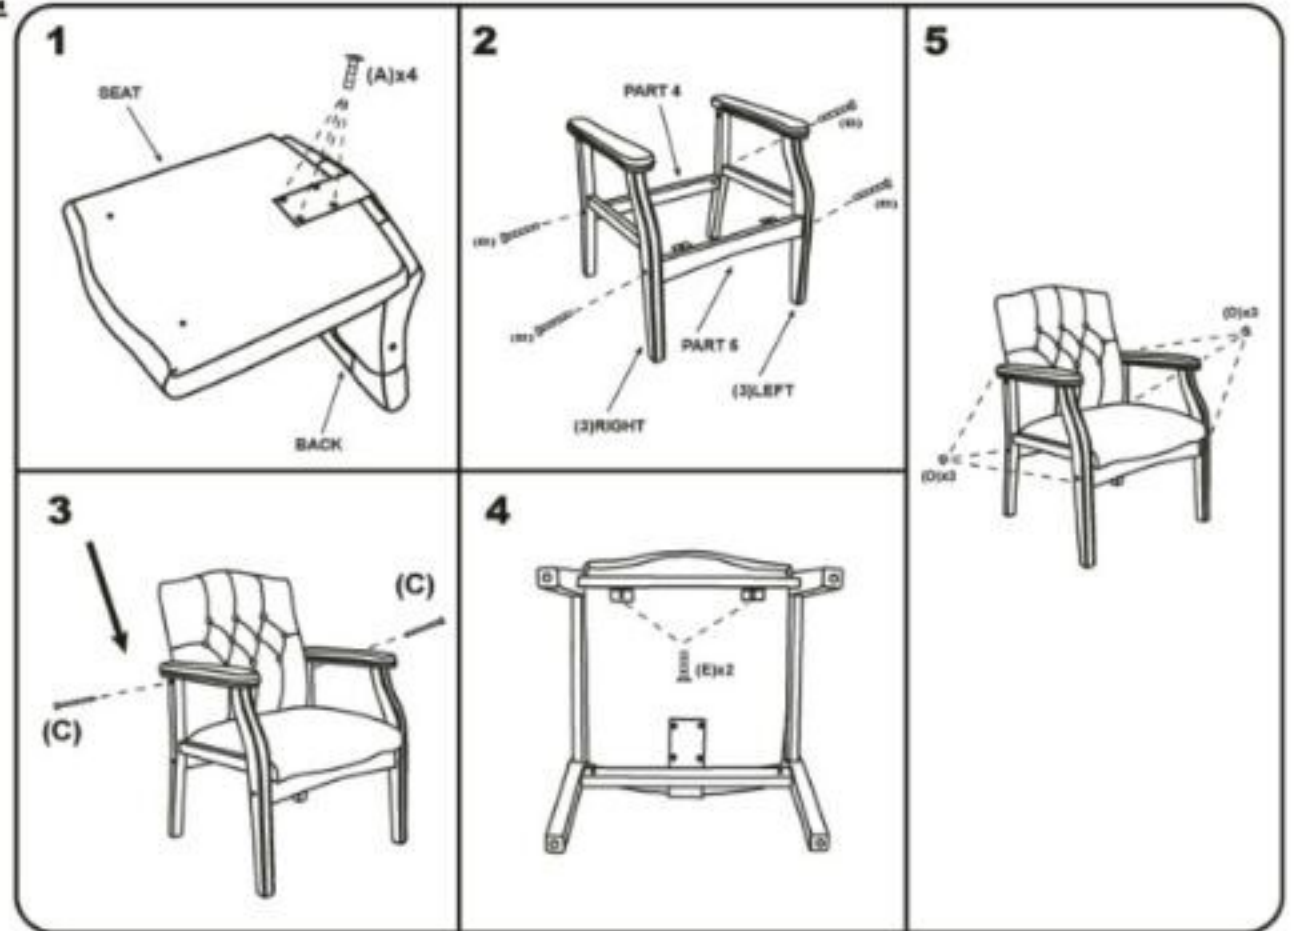

**NOTE:** Before insert all 6 (D) wood caps to screw holes:  
 1. Lightly tighten the screws indicate on step 2 & step 3.  
 2. Tighten ALL 6 screws on step 5, then insert ALL 6 (D) wood caps to finish.

**Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.**

**Customer Service Hotline: 1-800-593-1888**  
**For further assembly instructions,**  
**please visit our website at [www.bosschair.com](http://www.bosschair.com)**

