
Please unscrew all hardware from cushion before assembly.

Por favor de destornillar todos los tornillos del cojín antes de assamblar la silla.

MODEL: 16240

WODEL. 10240		
(1)x1	(2)x1	(3)x1
Seat	TU001-240 / mechanism	Base W/Casters
(4)x1	(5)x1	(6)x1
TU026-240/5- Gas Lift	TU009	TU009-EXT
(A)x4 GIIIIII M8X22 MECHANISM SCREW		

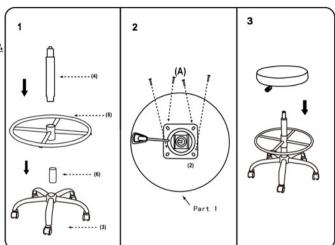

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.





