
## IMPORTANT NOTICE: HARDWARE PACKAGE IS ATTACHED ON THE BOTTOM OF SEAT CUSHION.

MODEL: B9591 B9595 B9595AM-BK-400 B9591AM-BK-500 59053FP 59054FP 59055FP

(1)X1	(2)X1		(3)X1 (L)X1 (R)
BACK	SEAT		RIGHT FRAME & LEFT FRAME
(4)X2			
	(A)x4 (B)x4 (C)x1		M6*36 SEAT SCREW M6*25 BACK SCREW ALLEN KEY
Connecting bar			J

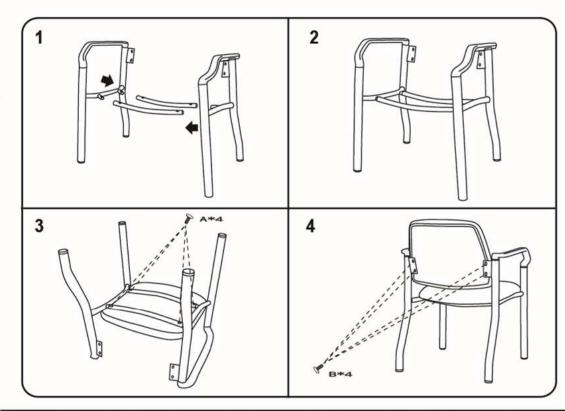


Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.



B9591AM-BK-500



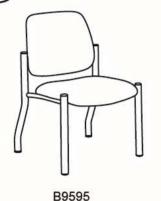





B9591 59053FPBLK 59053FPGRY

59054FPBLK 59054FPGRY B9595AM-BK-400

59055FPBLK 59055FPGRY