


Medina Series [™]
Corner Support
Model No. MNPO

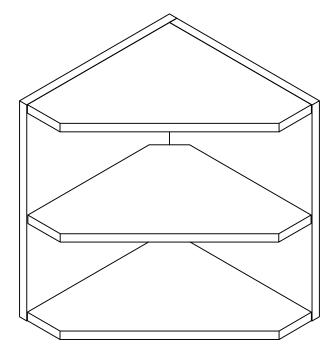

ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE

P/N **MNPO** REV 2 02/27/15

www.mayline.com

PARTS LIST

Name	Part	Qty.	Spare Qty
A	HB REALSO04 Wood Dowel	6	1
В	HB REALSO01 Cam Lock	11	1
С	HB REALS002 Cam Post	11	1
D	HB REALS102** Cam Sticker	11	1


Name	Part	Qty.	Spare Qty
E	HB REALSO66 Shelf Cam Post	4	
F	HB REALSO65 Shelf Cam	4	
G	REALS423 Foam Tape 400x18x3mm	3	
	MVBQ2HB		


Items with HB are in hardware box.

**Denotes Color Code

1

PARTS LIST

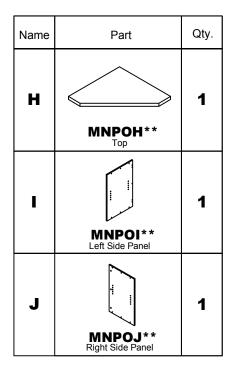

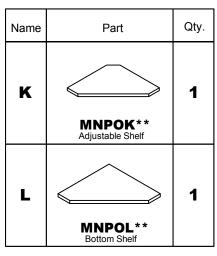


IMPORTANT!

Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

**Denotes Color Code

Insert the Cam Post (C) and Wood Dowel (A) into Right Side Panel (J). Next Insert the Wood Dowel (A) into Top (H) and Bottom Shelf (L) .Attach Right Side Panel (J) to Top (H) and Bottom Shelf (L) by turning Cams (B). Apply Cam Sticker(D) onto Cams (B). Insert the Cam Post (C) into Left Side Panel (I). Then Attach Right Side Panel (J) and Top (H) and Bottom Shelf (L) to Left Side Panel (I) by turning Cams (B). Apply Cam Sticker (D) onto Cams (B).

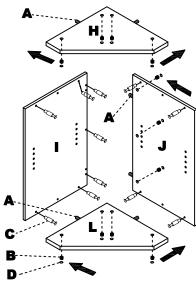

(2) Insert Shelf Cam (F) into Adjustable Shelf (K) with open slot in cam to edge of shelf. Screw Shelf Cam Posts (E) into Side Panels (I & J). Press Shelves onto Shelf Posts. Turn Shelf Cam (F) screw to lock in place. Before installing the MNH63 / MNH72 to the MNPO, Please stick Foam Tape (G) to the surface of Top (H).

