




1

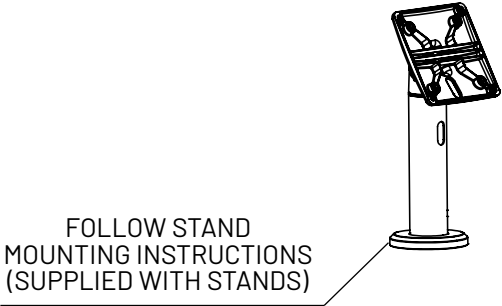


Or

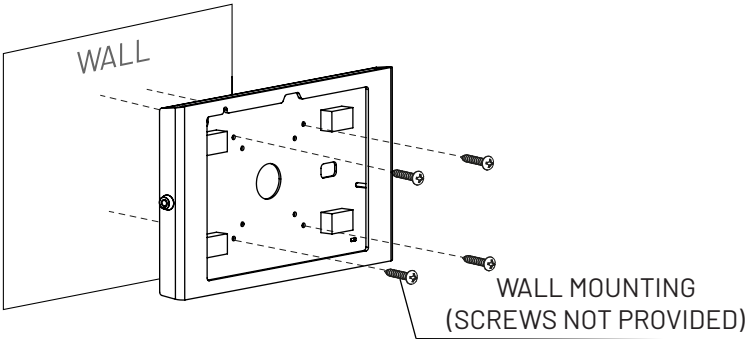


2

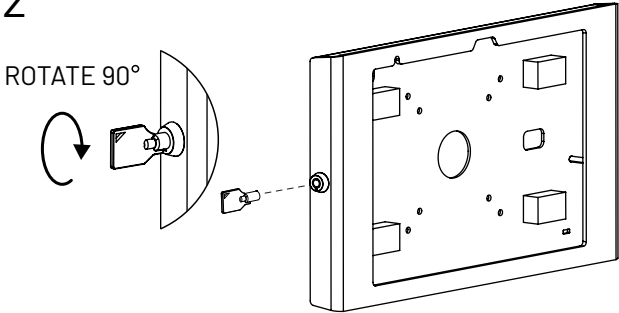


3

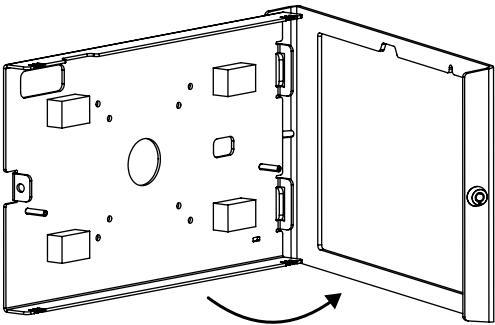


4

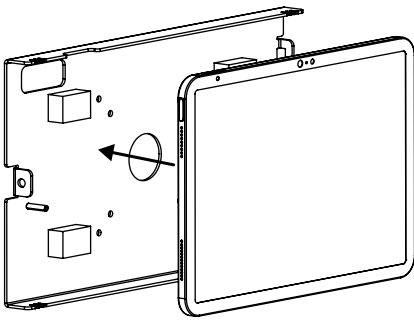


5

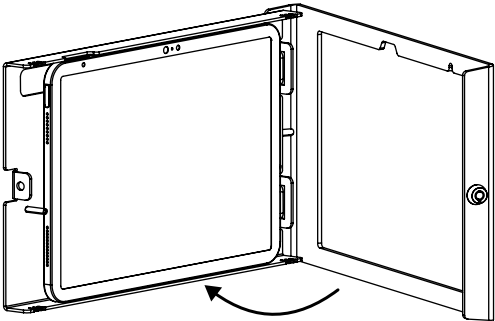


6

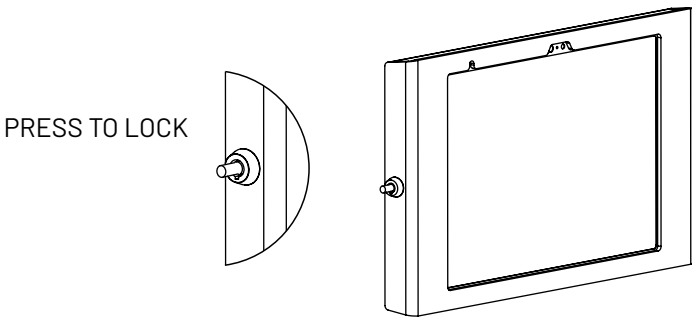

IN THE BOX

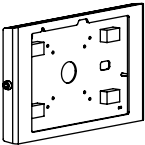


Apex Enclosure




Keys


1

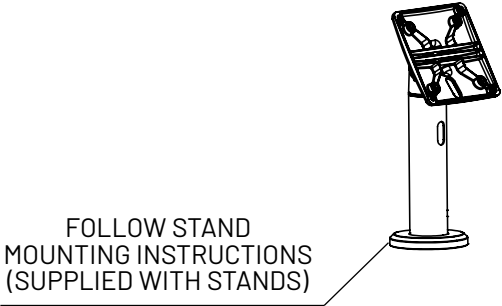


Or

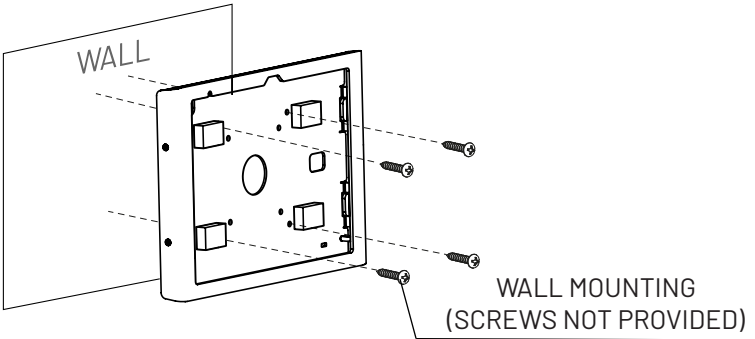


2

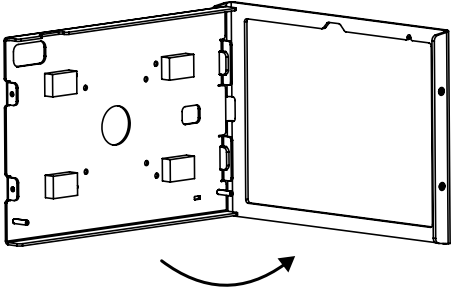


3

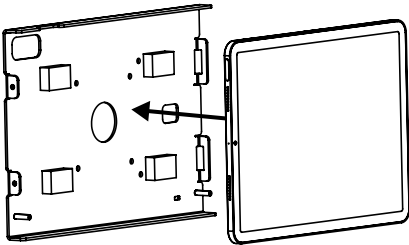


4

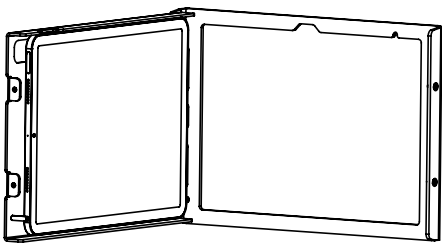


5

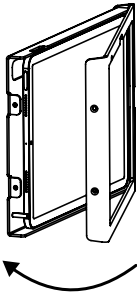

6

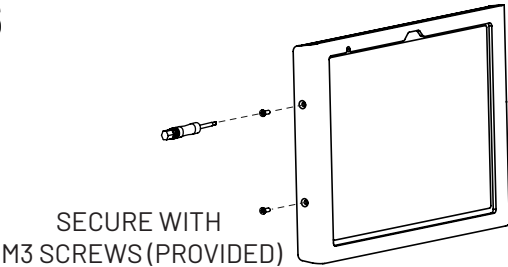

7

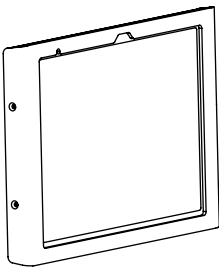


IN THE BOX



Torx Screwdriver



M3x10mm tamper proof screws

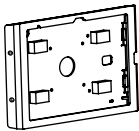


Swell enclosure

Through Stand Cable Assembly

1


DRILL THE BOTTOM PLATE
TO THE WALL \ COUNTER WITH
10 X 1½" PHILLIPS ROUND HEAD
SCREWS (PROVIDED)

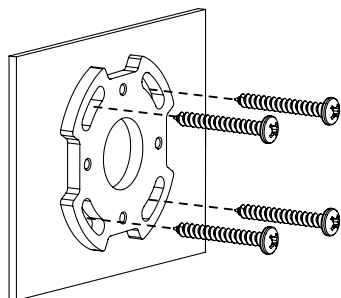

NOTE: IN A WOOD STUD INSTALATION ENSURE
AT LEAST TWO VERTICALLY ALIGNED
SCREWS ARE SECURED INTO THE STUD.


2

REMOVE FRONT COVER.
USE T-20 TORX
WRENCH (PROVIDED)
TO REMOVE M4 X 10mm
TORX FLAT HEAD SCREWS

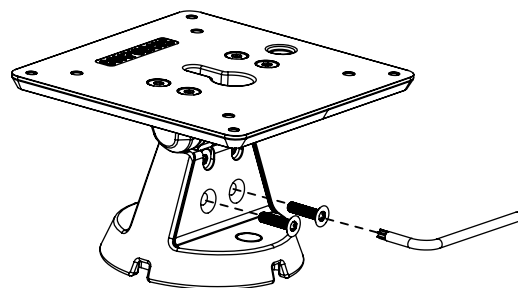


3

ROUTE CHARGING
CABLE THROUGH
STAND AS SHOWN

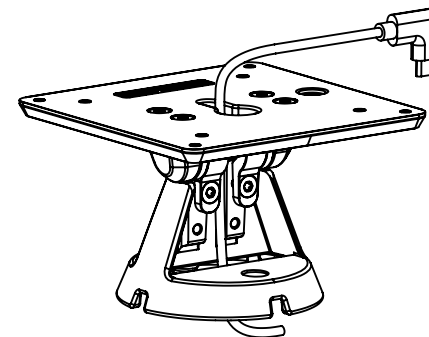


4

ROUTE CHARGING
CABLE THROUGH
STAND AS SHOWN

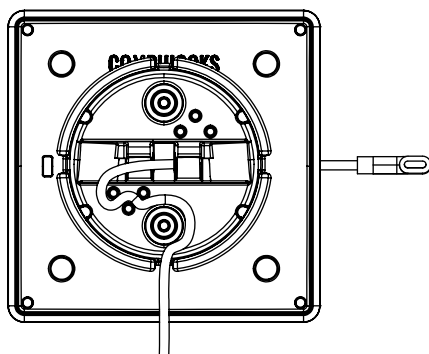


5

INSTALL THE STAND TO THE
BOTTOM PLATE
USING WRENCH PROVIDED

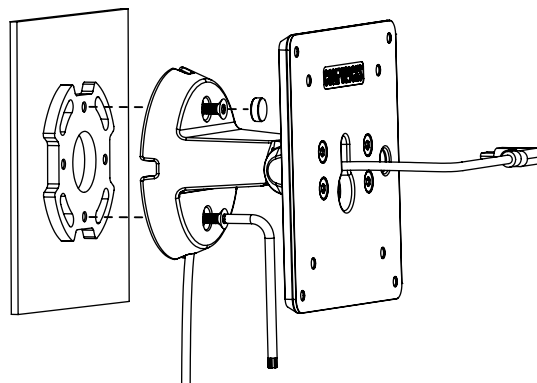


6

ROUTE CHARGING CABLE
THROUGH ENCLOSURE OR VESA MOUNT.
INSTALL TO STAND USING M4 X 8mm
PHILLIPS PAN HEAD SCREWS (PROVIDED)

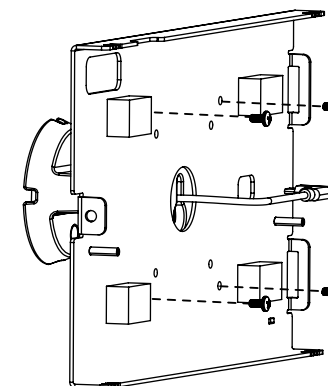


7

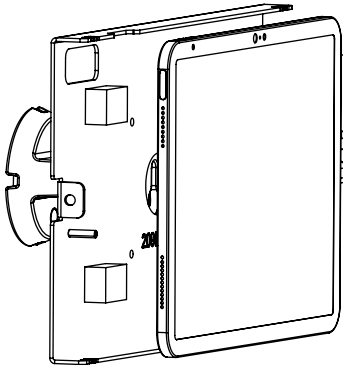



ATTACH CHARGING CABLE
TO TABLET, LEAVE A SMALL LOOP
OF CABLE BENEATH THE TABLET

8

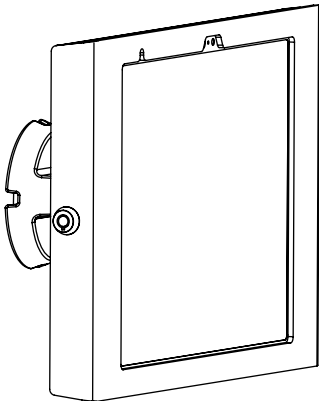

INSTALL THE REST OF THE
ENCLOSURE OR VESA MOUNT
PER THEIR INSTRUCTIONS

Tilt Tension Adjustments

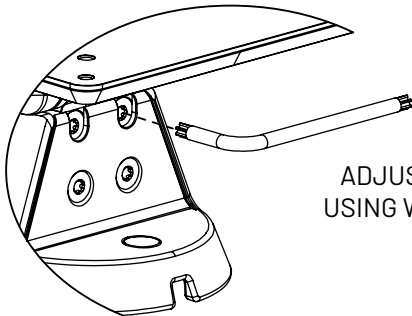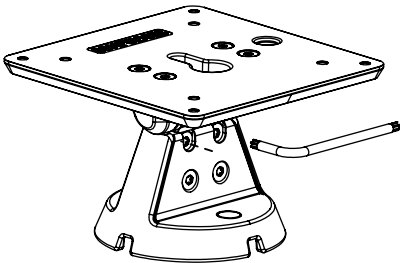

ADJUST HINGE TENSION
USING WRENCH (PROVIDED)

IN THE BOX



Bow Stand



Bottom Plate



Rubber Plugs



10 X 1 1/2" Phillips
Round Head Screw



M4 X 10mm
Torx Flat Head Screw



M4 X 8mm
Phillips Pan Head Screw



T20 TORX L-Wrench