


## CHARGING CABINET MODULAR ASSEMBLY INSTRUCTIONS V1.0

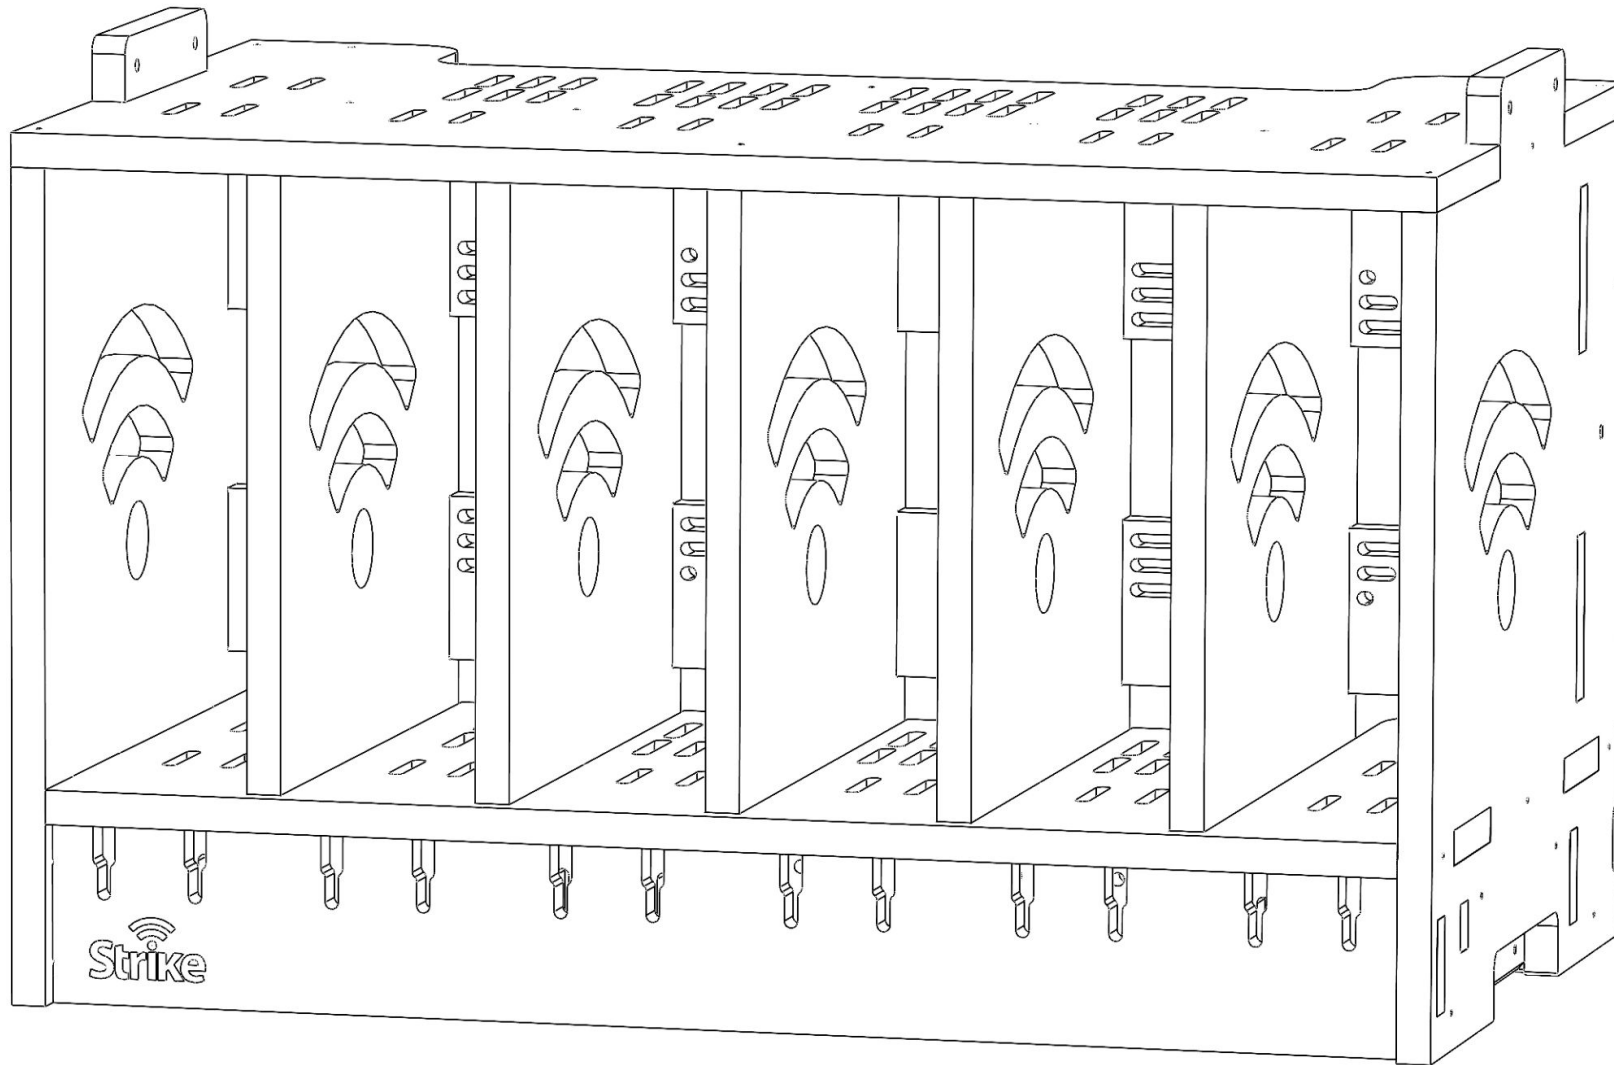


\* Models vary in appearance



## PARTS LIST

### CHARGING CABINET

Charging  
Cabinet

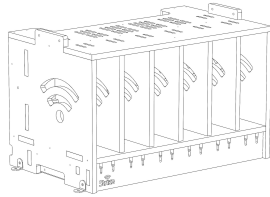

x 1

Power Lead -  
USB-A  
Charger



x 1

### WALL/SHELF HARDWARE

Right Angle  
Bracket



x 4

16mm CSK  
screw



x 8

### STACKING HARDWARE

20mm CSK  
screw



x 4

### JOINING HARDWARE

20mm Barrel  
Nut




x 1

6mm Hex  
Bolt




x 1

POWER

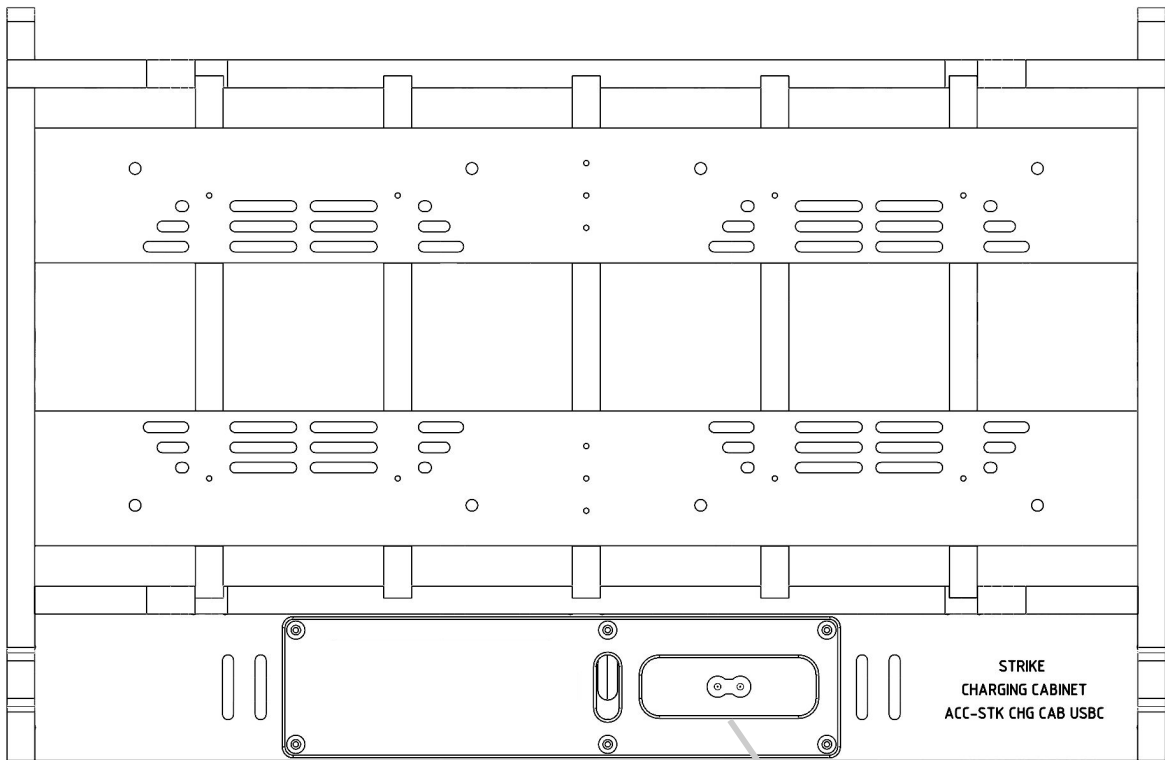

Charging Cabinet

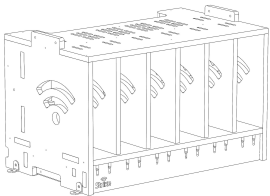

x 1


Power Lead - USB-A Charger



x 1



## SECURING TO SHELF

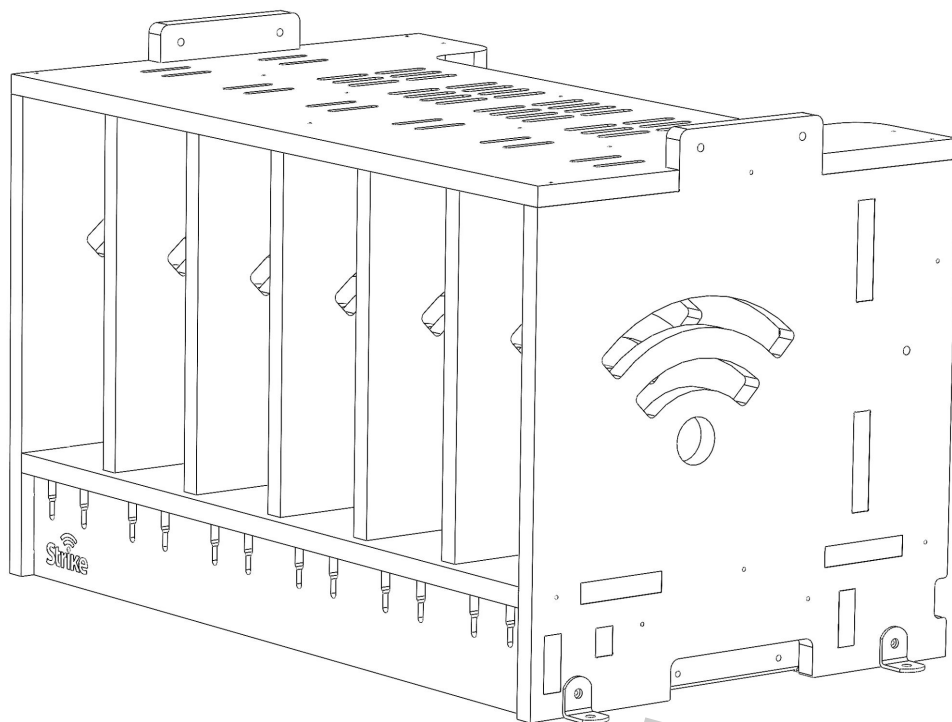

**Right Angle  
Bracket**



**x 4**

**16mm CSK  
screw**




**x 8**




- \* Use appropriate fixings for shelf material (Timber screws provided)
- \* Do not overtighten when screwing into cabinet material

## STACKING CABINETS

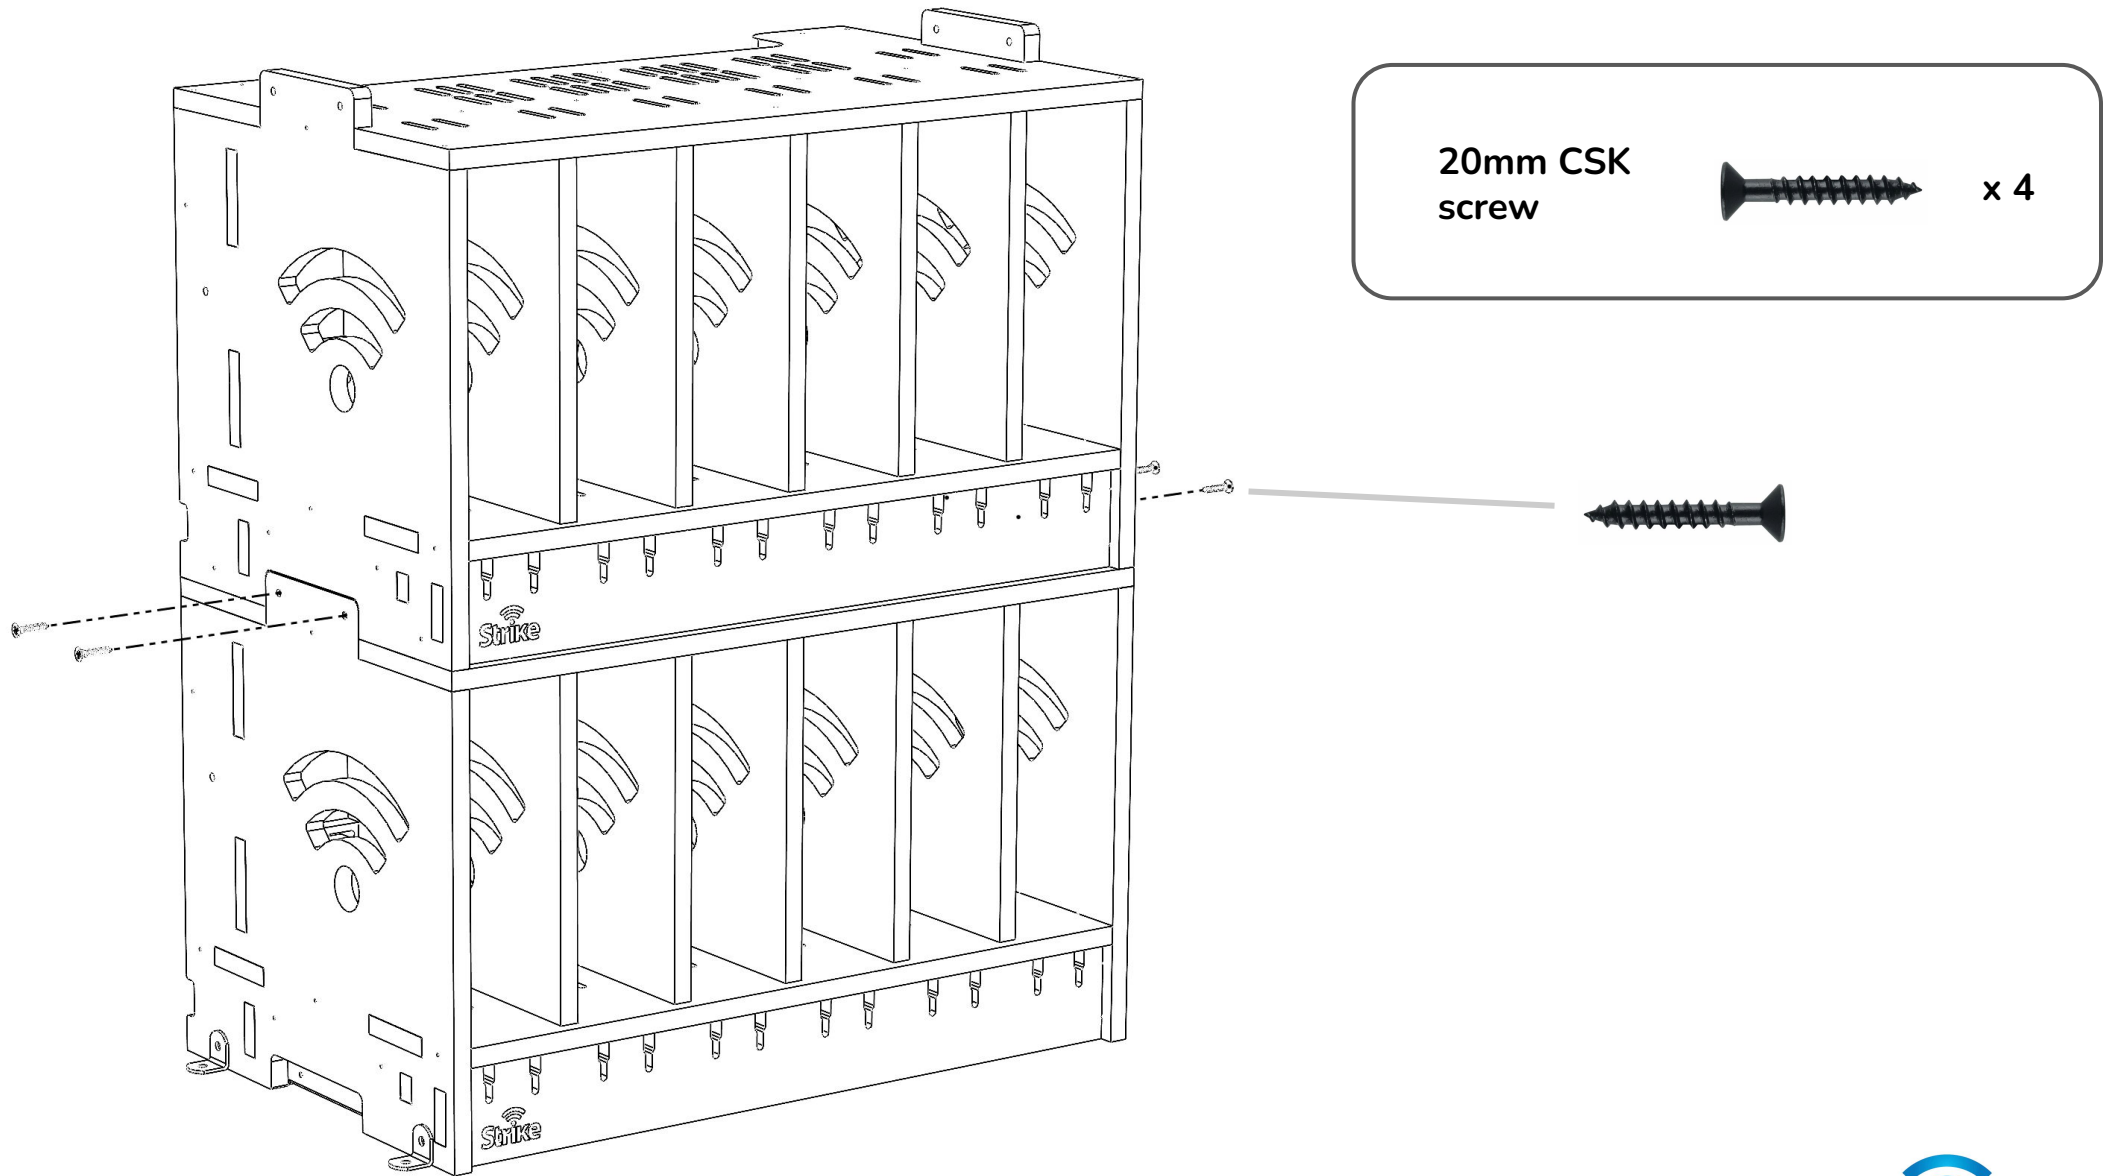

\* Do not overtighten when screwing into cabinet material

## JOINING CABINETS

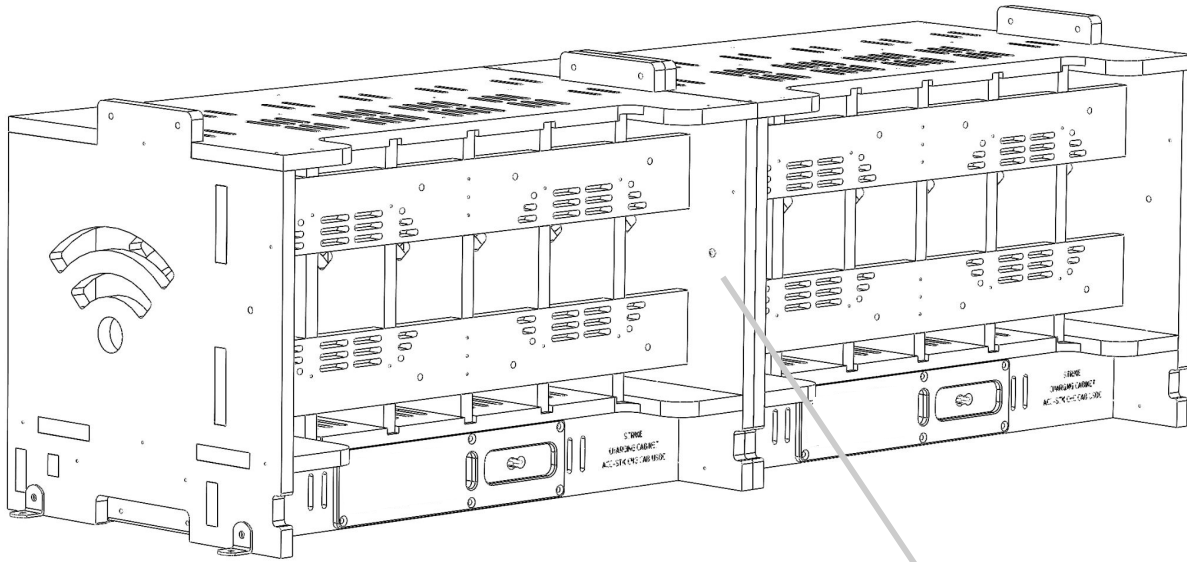

**20mm Barrel  
Nut**




**x 1**

**6mm Hex  
Bolt**




**x 1**

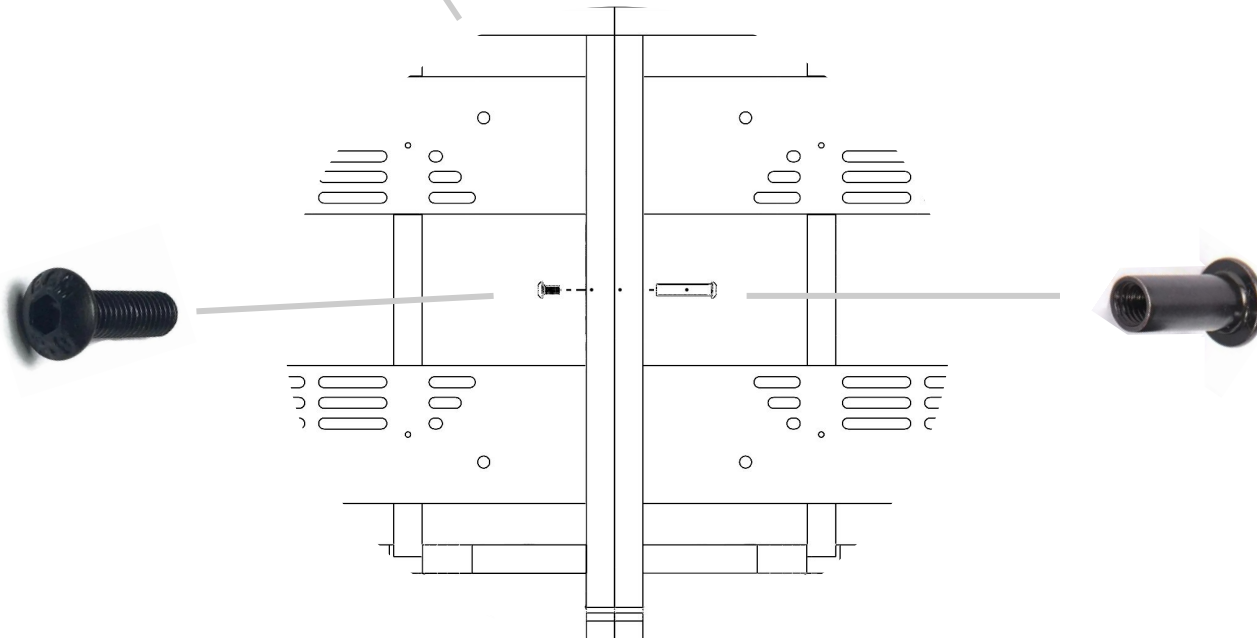

- \* Do not overtighten
- \* Requires Allen key metric sizes 2 and 2.5
- \* Take care when moving the cabinets once joined

## SECURING TO WALL

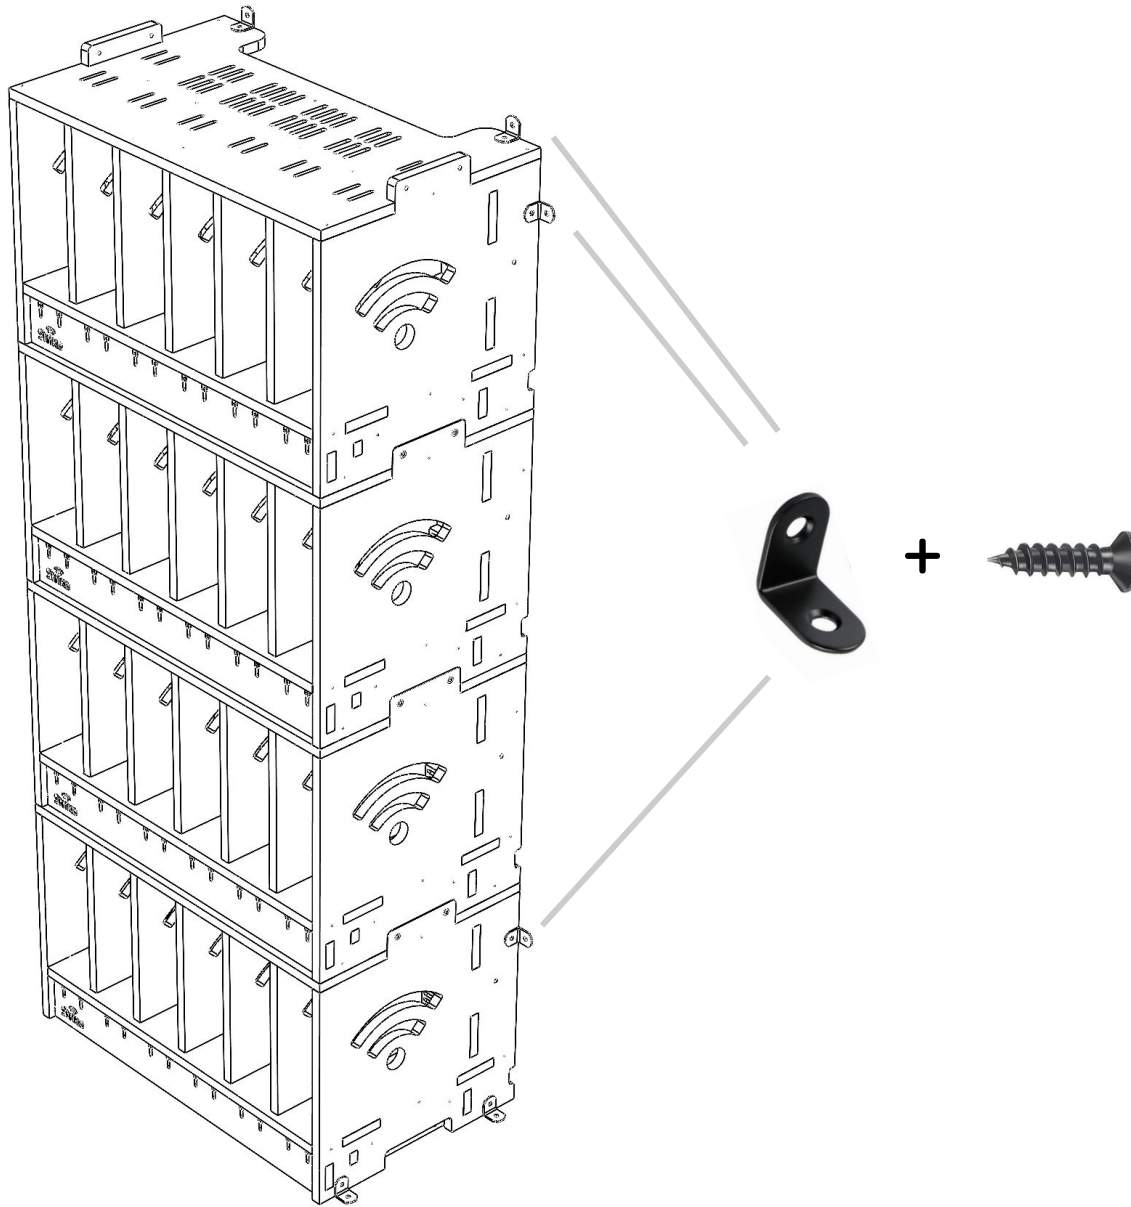

**Right Angle  
Bracket**



**16mm CSK  
screw**




+



- \* Use appropriate fixings for wall material (Timber screws provided)
- \* Do not overtighten when screwing into cabinet material

## MODULAR ASSEMBLY EXAMPLE

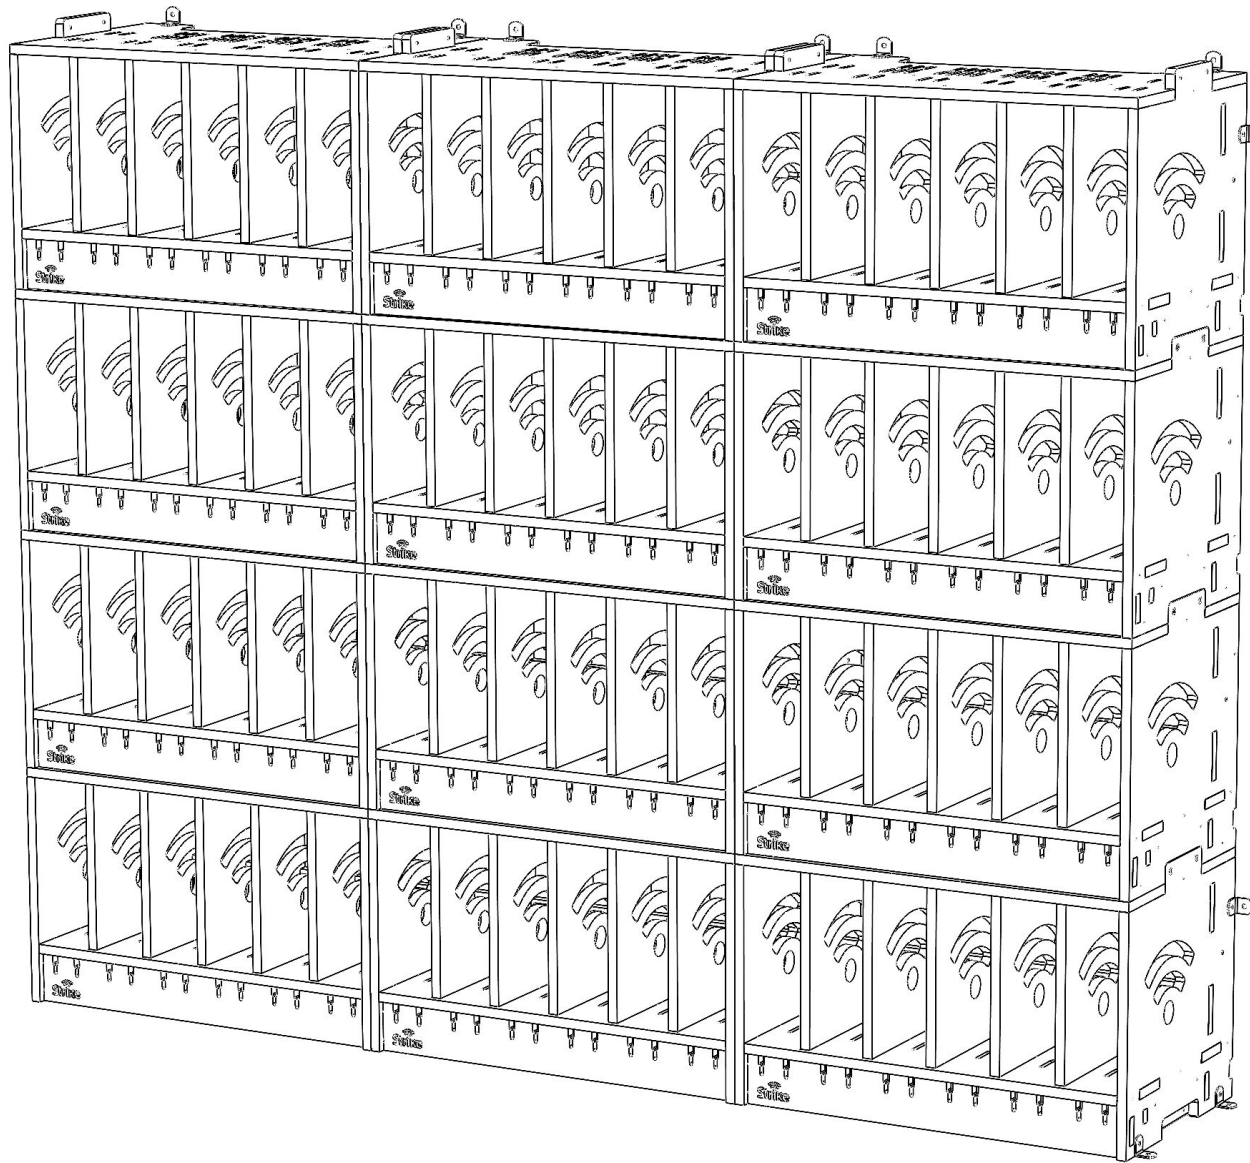

\* Max 4 cabinets high

