



Insta-RP 2 Screen Series

Self-Adhesive Rear Projection Screen Film


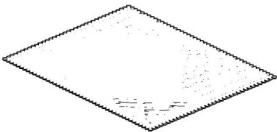
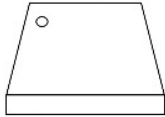
User's Guide

PRECAUTIONS

1. This product is an adhesive rear-projection screen that can be applied to various surfaces such as transparent glass or acrylic.
2. This product is made for a one-time application. It has a non-reusable adhesive that bonds firmly to a window surface. If the window has any layer treatment such as tinting, it is likely that the layering will be damaged upon removal of the screen.
3. To ensure an even and “bubble-free” installation, make sure that the window surface is clean and evenly moistened previous to installation.
4. Do not fold the Insta-RP2 Screen’s material. Folding will result in a permanent crease that cannot be removed.
5. Avoid touching the screen with any hard or sharp objects that may cut, scratch or otherwise deface the material.
6. The Insta-RP2 Screen is applied to a moist surface. This can impact the installation of the material by possibly creating slight ripples or bubbling. These will disappear within the first few weeks as the micro-droplets of water trapped in the adhesive evaporate.

Contents of this package

Please make sure all parts listed below are included before proceeding with the installation.

Parts List		
		
a. Insta-RP 2 material x 1	b. Microfiber cloth x 1	c. Plastic smoothing tool x 1

Installation

1. Use a spray bottle filled with water and a mild detergent (1:1000 ratio column).
2. Thoroughly clean the glass surface using the correct glass-cleaning equipment.
3. Make sure that the glass surface is smooth (unblemished) and perfectly flat.
4. Cut the screen to fit the required size of the product.



5. Partially separate the film from the screen's adhesive backing.
*(*Manufacturer's Tip: It is easier to apply the screen while separating the film from the adhesive simultaneously. This keeps the material from sticking together or going on the surface unevenly.)*



6. Spray applicators are ideal to evenly spread the moisture before attaching the screen material to the glass.



7. Carefully smooth out the surface (preferably using latex gloves) to ensure that the screen is level with no bubbles or ripples present.



8. Now that the material is perfectly flat, make sure that it is aligned well.



9. Use the included Scraper or a leveling brush to eliminate the residual moisture and make sure that the material has been applied properly.

10. Allow material to stand unused for 2 to 3 hours so the adhesive can bond and set.

For a local Elite Screens contact or Technical Support, please visit
www.elitescreens.com