



Very Well Connected™

INSTALLATION INSTRUCTIONS

Product**7160-0821****Revision****Rev.C****Form****INST-715****Ford Utility Police Interceptor Close-To-Dash Mount****Printing Spec: PS-004**

- You must read and follow all of these installation instructions. Failure to follow the installation instructions may result in serious bodily injury or death.
- DO NOT install or use this assembly in the area in which the airbag on the vehicle may be deployed. The installer and user of this assembly are responsible for installing and using this assembly outside the area in which an airbag may be deployed. (See Product Mounting Disclaimer Below)
- If the installation of the equipment requires that the equipment (or any additional equipment that is added to the installation) be placed in front of an airbag, the airbag should be deactivated. In order to secure permission for deactivating the airbag you must contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any questions or need assistance, call Gamber-Johnson at 1-800-456-6868.
- High speed vehicle turns may cause parts of the assembly to swivel, interfering with the driver or other equipment.
- Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.
- Additional copies of the installation instruction can be obtained from Gamber-Johnson. If you need assistance or have any questions, go to www.gamberjohnson.com or call Gamber-Johnson at 1-800-456-6868.
- DO NOT remove the warning label from the product under any circumstances.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

copyright 2018 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

The Ford Utility Police Interceptor Close-To-Dash mount is designed specifically to mount on a Gamber-Johnson vehicle specific console box (7160-0412) and to attach to the dash of the Ford Utility.



Installing the mount:

Step 1. Remove the dash cover panel using an 8mm hex socket.

Step 2. Remove the (4) plastic clips from the bottom side of the cover panel.

Step 3. Attach the (4) plastic clips (removed in step 2) to the new metal Dash cover panel.

Step 4. Attach the metal dash cover panel using the same bolt that was removed in step 1. Tighten bolt to a snug fit only. Over torquing will cause the U-Nut to strip.

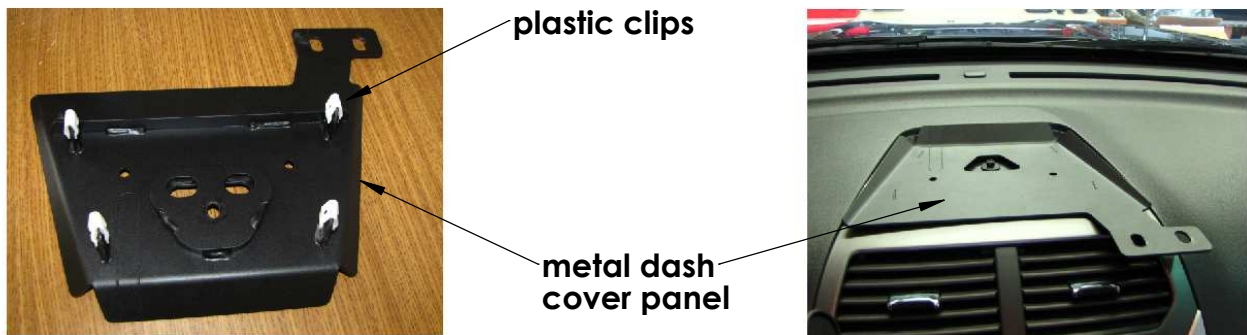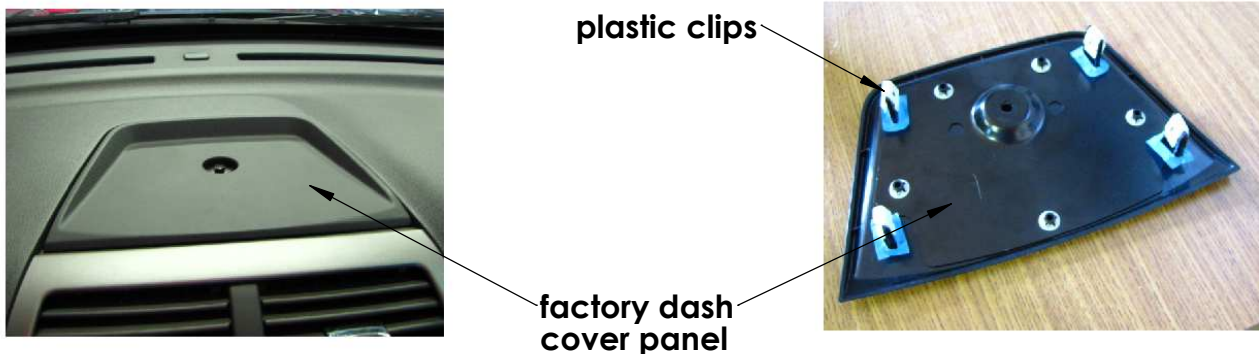

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

Step 5. Remove the (4) 1/4-20 x 1/2" long socket button head machine screws that hold the top plate on the vehicle specific console box.

Step 6. Attach the main bracket to the vehicle specific console box with the (4) 1/4-20 x 7/8" long socket button head machine screws provided in the hardware bag.



1/4-20 x 1/2" long
socket button head
screws



Main bracket

1/4-20 x 7/8" long
socket button head
screws

Step 7. Attach the main bracket to the dash cover plate with the 3/8-16 x 3/4" hex bolts and flat washers provided in the hardware bag.

Step 6. Attach the custom clevis (7110-1205) with the 3/8-16 x 1.25" long hex bolt washers and nylock nut provided in the hardware bag. See next page for exploded view of attachment.



3/8-16 x 3/4" long
hex bolts and flat
washers



7110-1205 clevis

Exploded view showing attachment of 7110-1205 custom clevis to the main bracket

