





# AVTEQ

Easy Setup Guide

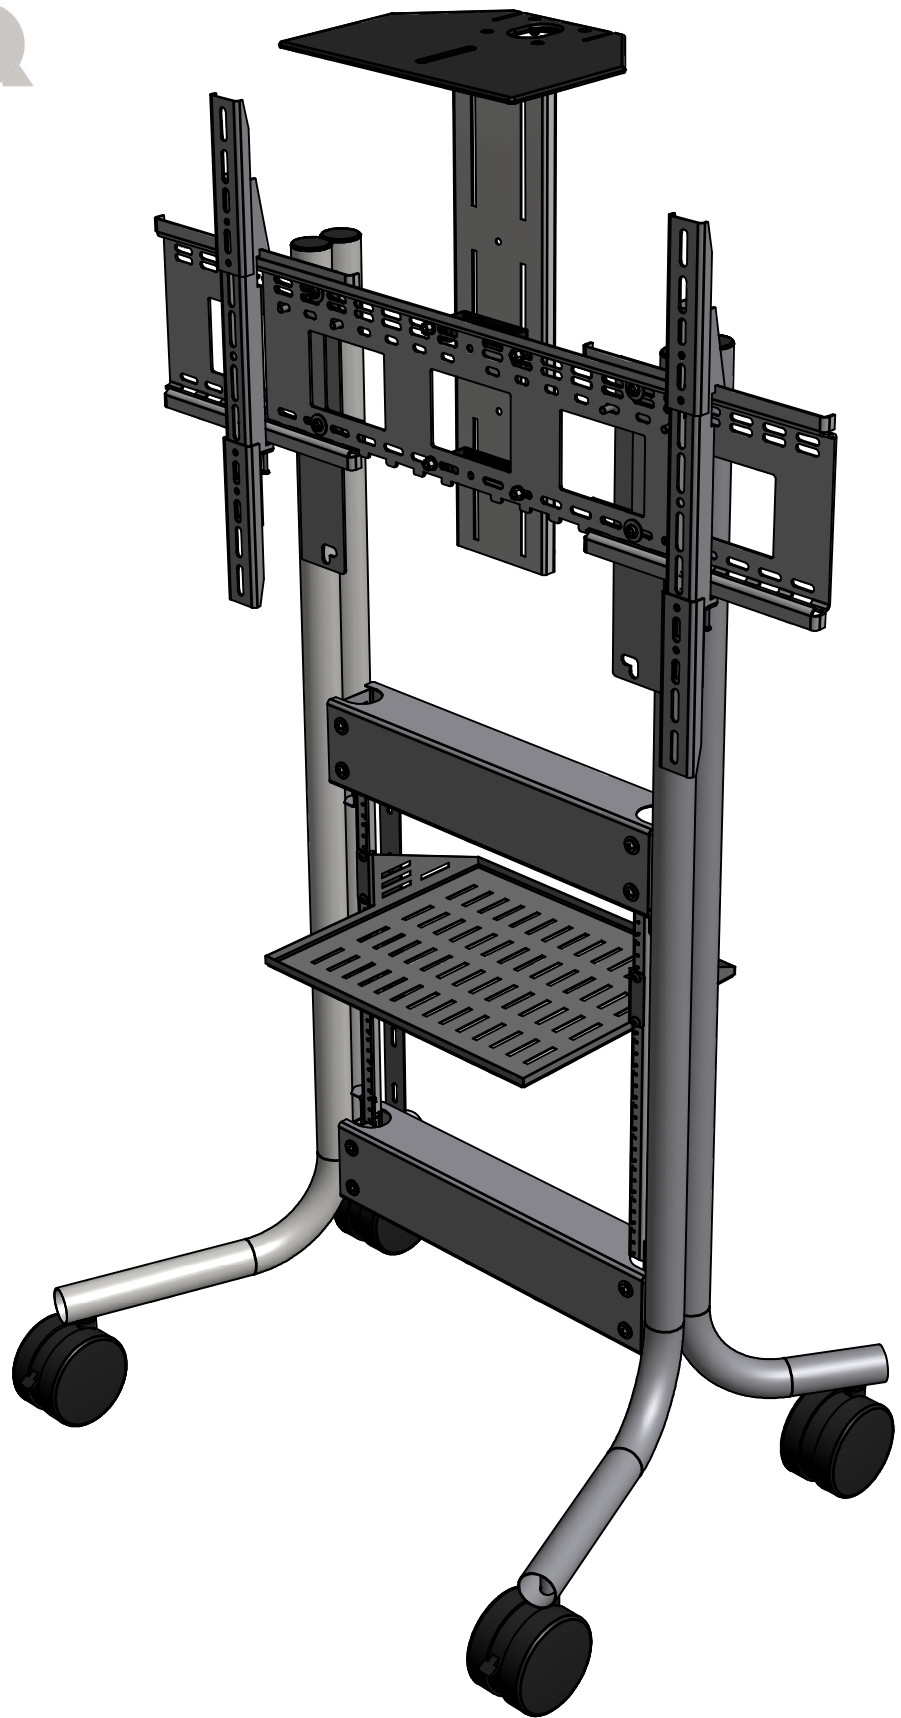


# RPS 500

Items Included

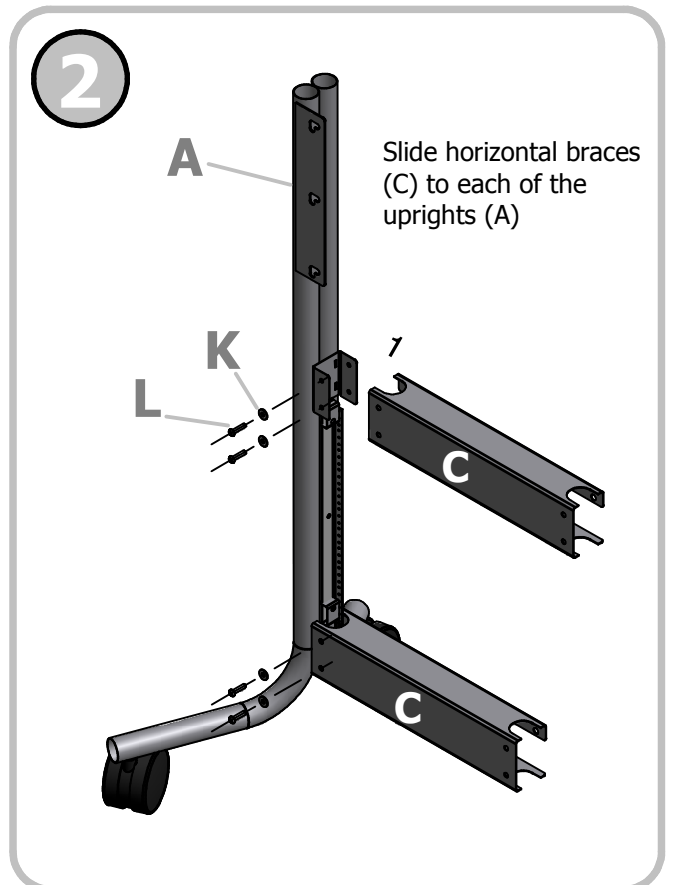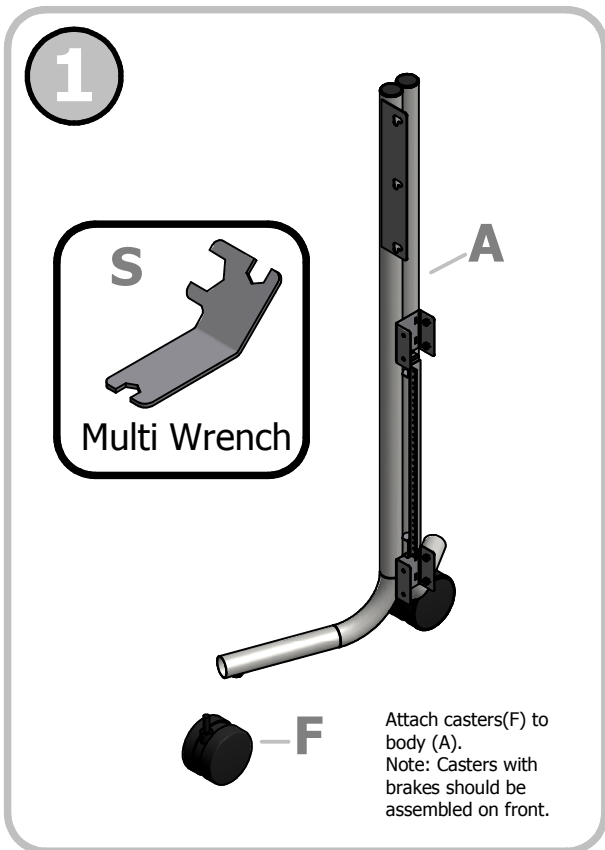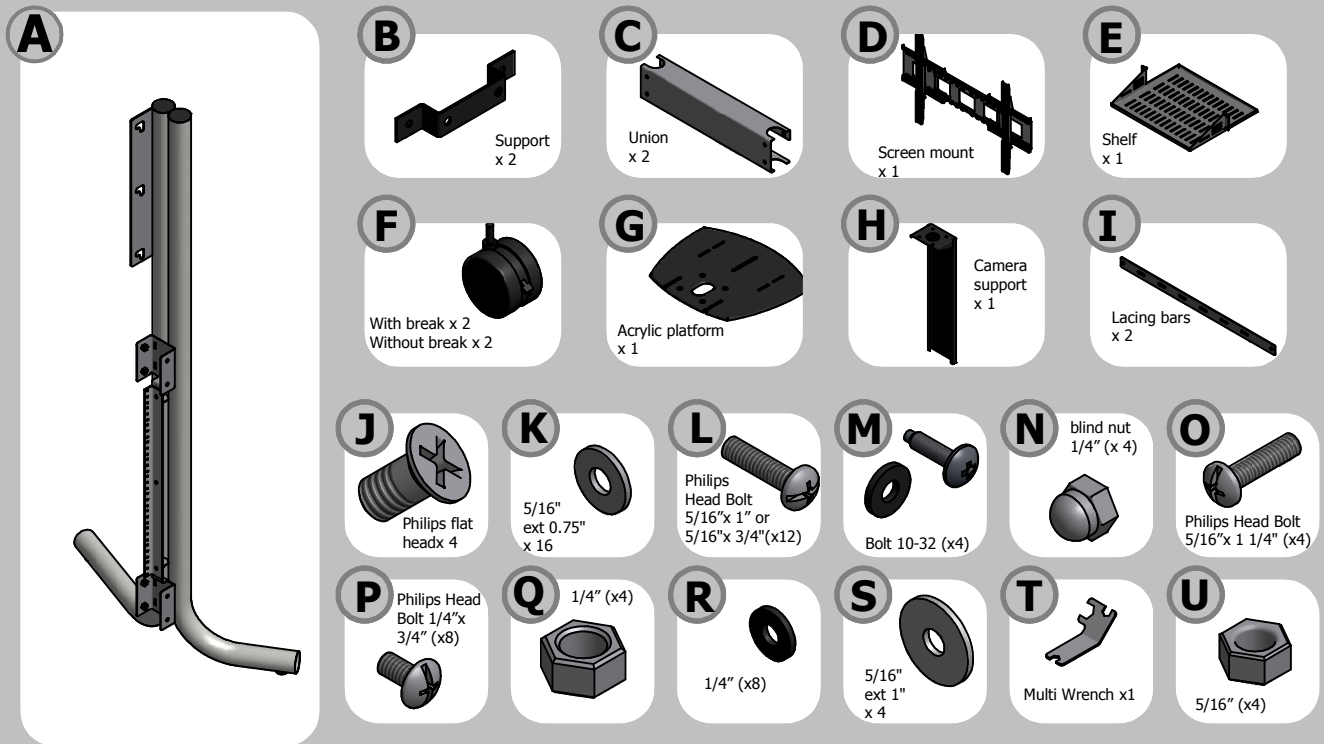


3

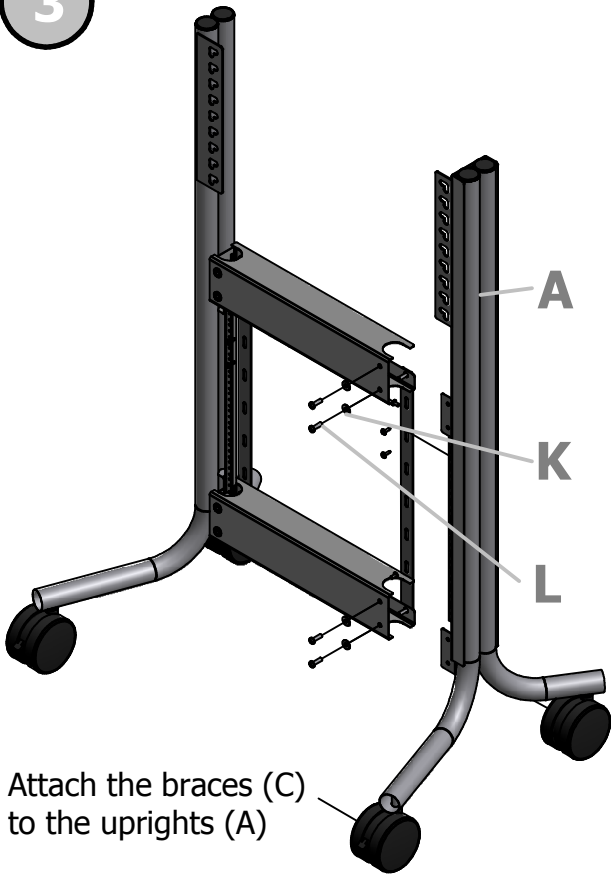


Attach the braces (C) to the uprights (A)

4

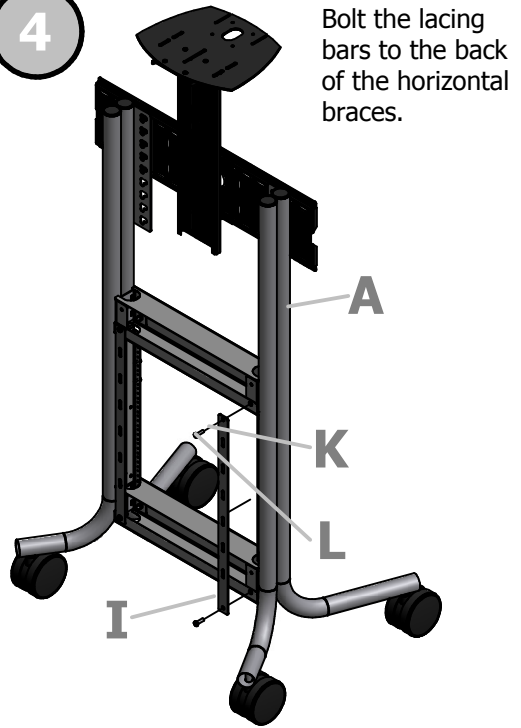

Bolt the lacing bars to the back of the horizontal braces.

5

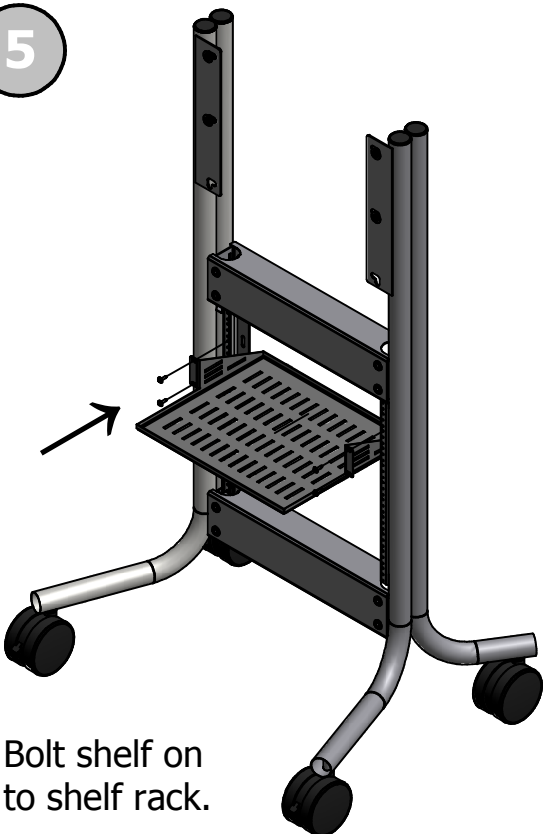

Bolt shelf on to shelf rack.

6

