
## **INSTALLATION INSTRUCTIONS:**

- 1. Review the parts list and ensure you have all parts and tools required for assembly.
- 2. If converting another UT-2000 series product, first remove the existing side lugs and rear fences.
- 3. Loosely assemble the new kit to the base tray as shown in the exploded view.
- 4. Adjust and tighten the new kit according to the configuration instructions in the UT-2000 Series owner's manual or go to www.havis.com for more information.

NOTE: Retain all unused hardware for possible future re-use.

## **UT-2004-KIT HARDWARE CONTENTS** REPLACEMENT PARTS ITEM **HAVIS PART** QTY. **DESCRIPTION** NO. NUMBER BRACKET, SIDE RH FOR F110 UT-0132-SM 2 BRACKET, SIDE LH FOR F110 UT-0133-SM UT-0199-ML FENCE, REAR, UT-200 SERIES GSM33327 SCREW, BUTTON HEAD, PIN-IN-TORX, #10-32 X 0.5" 5 HW-SW-1262/GSM31089 WASHER, BELLEVILLE, SERRATED, #10 6 NUT, #10-32 X 0.375" SQUARE X 0.130" HW-MN-0004/GSM30110 INSTALLATION INSTRUCTIONS, UT-2004-KIT UT-2004-KIT\_INST TOOLS HW-AW-0006/GSM50261

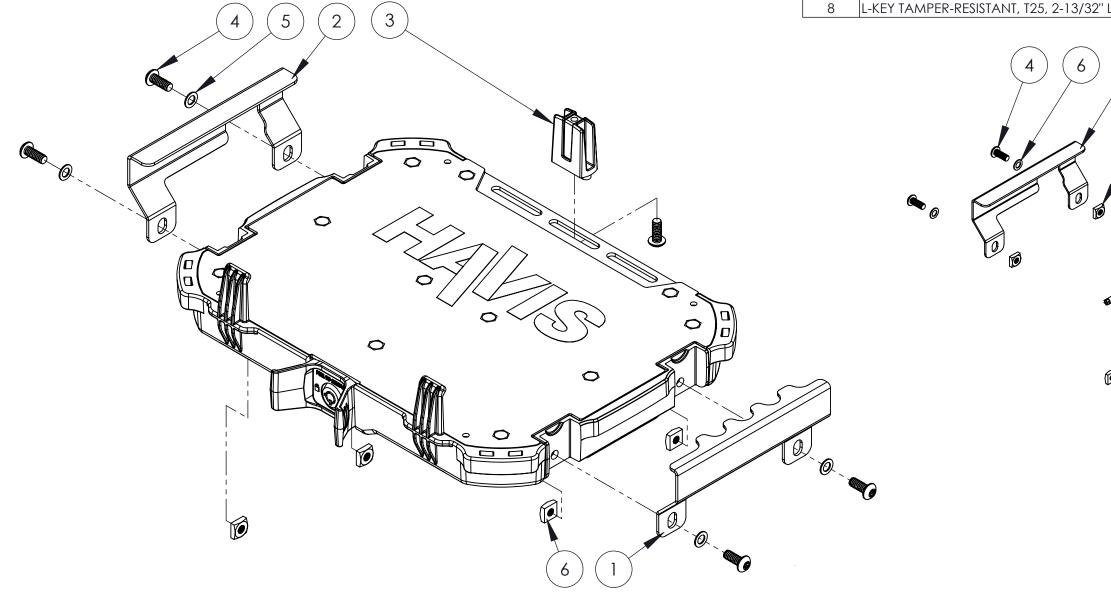

PRODUCT I.D. DATE

UT-2004-KIT 06-07-19

PRODUCT NAME

**UT-2004 KIT** 

DRAWING NUMBER: UT-2004-KIT\_INST\_6-19

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE

IINIIVEDOAL TDAV III

UNIVERSAL TRAY, UT-2000 SERIES, GETAC F110 **HAVIS** 

WEIGHT: (LBS)

1-800-524-9900 www.havis.com 6-19

8 7 6 5 4 3 2 1