


Button Mount Bracket

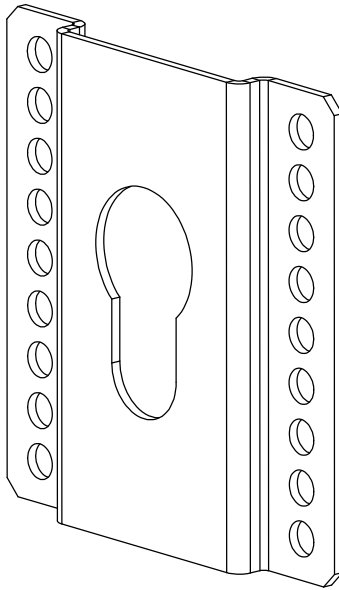

Installation Instructions

Kit P/N: 101-5314

Kit Contents

Kit Contents:

(2) Button Mount Brackets


Mounting Hardware:

(8) 8-32 x .375 Pan Head Screws


(8) 8-32 Keps Nuts

Installation Instructions

Step 1 Line Up Bracket: Line up the holes on the Button Mount Bracket with the slots on the Cable Management Bar.

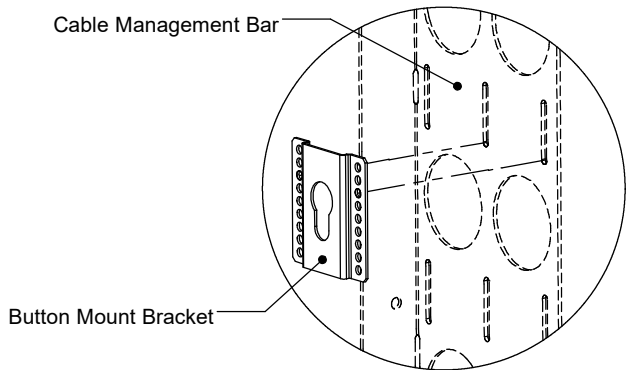


Step 2 Securing the Button Mount Bracket: Install the Pan Head Screws into the appropriate hole location and secure it to the Cable Management Bar with Kep Nuts.

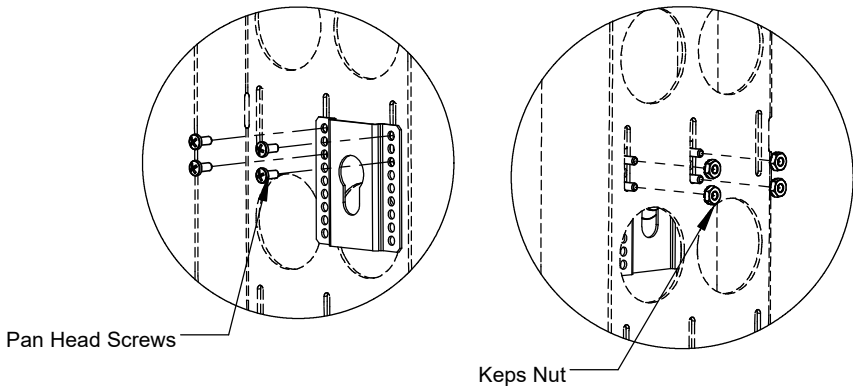

***NOTE:** Correct screw location varies depending on the PDU and the height of the Cable Management Bar.

Installation Instructions

- Step 3** PDU Attachment: After Button Mount Brackets are installed in proper location, Install PDU to the Cable Management Bar by placing buttons through Button Mount Holes and sliding the PDU down.

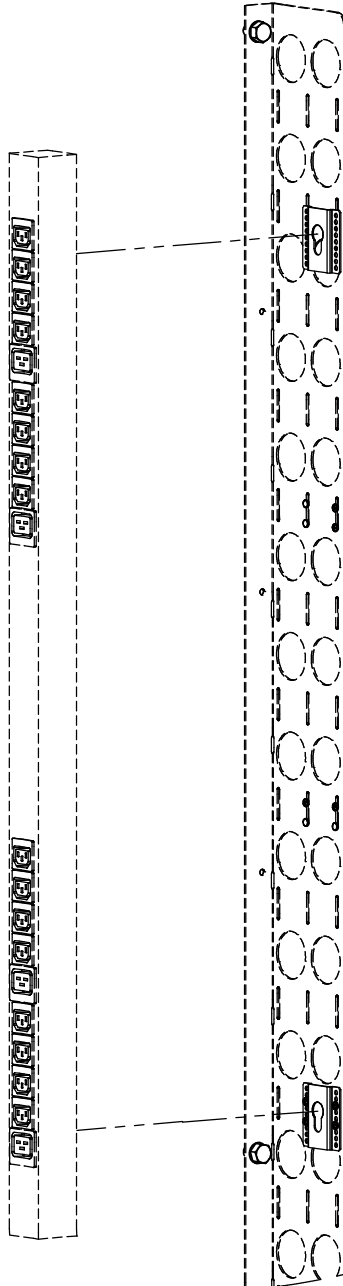

Warranty Statement

Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.