


INSTALLATION INSTRUCTIONS:

1. REMOVE FACTORY CENTER DASH VENT
2. REINSTALL FACTORY LIGHT SENSOR INTO PROVIDED LIGHT SENSOR BRACKET
3. REMOVE 8X FACTORY DASH SCREWS FROM AREA AROUND DUCT AND 1X FACTORY DASH SCREW FROM REAR MOUNTING AREA
4. CHECK CLEARANCE AND DRILL ANY HOLES NEEDED TO MOUNT EQUIPMENT TO THE DASH MOUNT TRAY
5. INSTALL EITHER THE GROMMET (FOR INSTALLATIONS REQUIRING A WIRE PASSTHROUGH) OR PLUG INTO THE HOLE IN THE DASH MOUNT TRAY
6. USING PREVIOUSLY REMOVED FACTORY FASTENERS IN THE FRONT 8 HOLES, INSTALL THE DASH MOUNT TRAY ONTO THE DASH
7. USING PROVIDED SCREW, FASTEN THE REAR OF THE DASH MOUNT TRAY

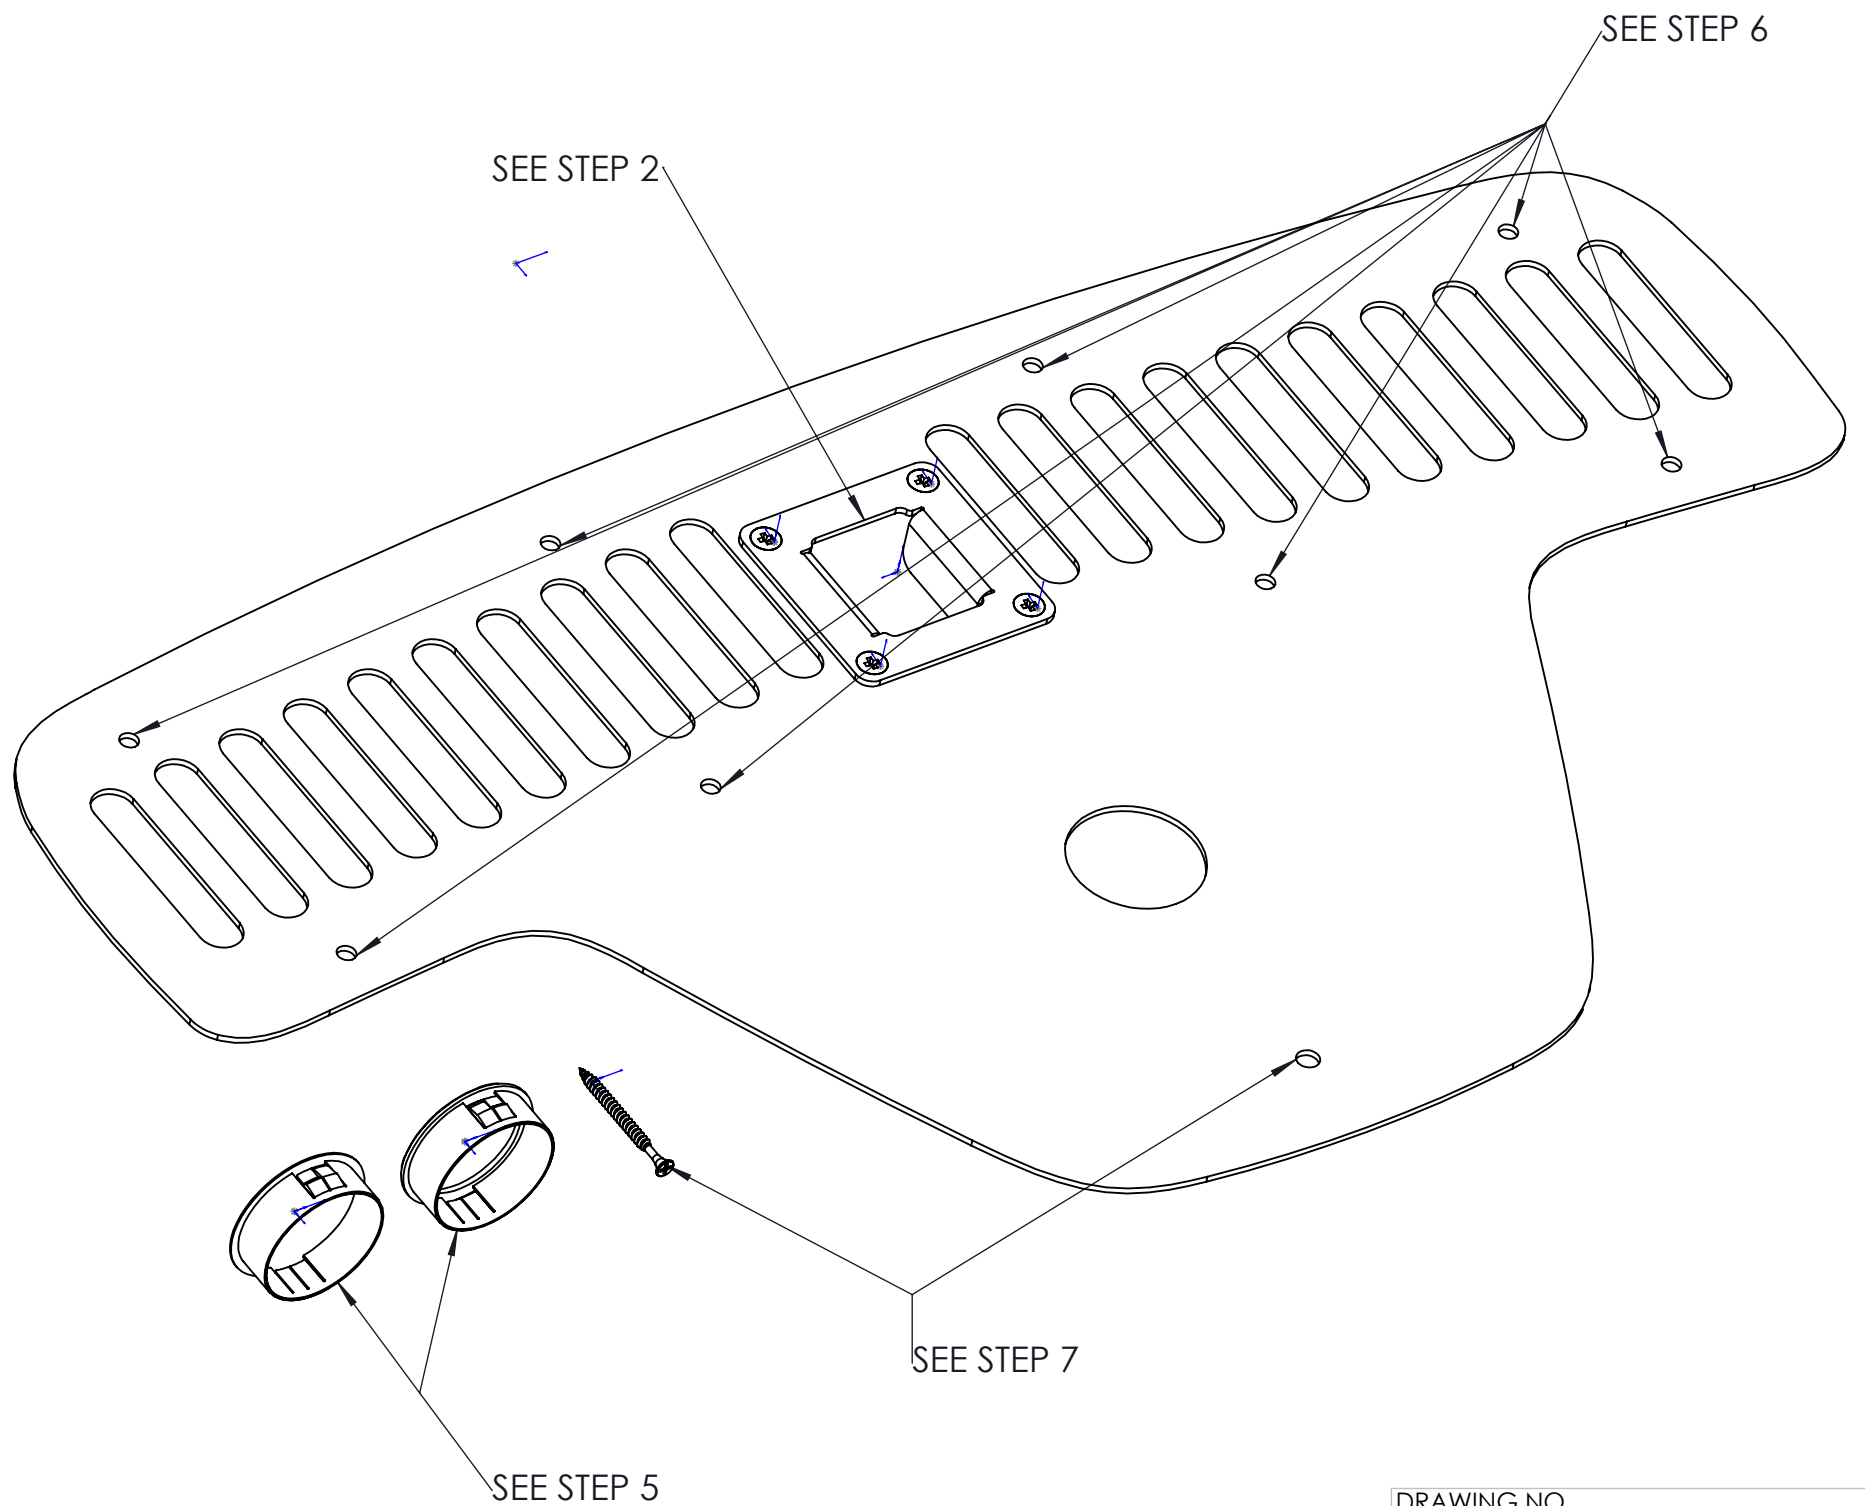

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO. C-DMT-TAH-INST	
PRODUCT DESCRIPTION ASSY, DASH MOUNT TRAY, TAHOE	
 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS) 3.012
	REV. DATE 3-23