



# Thin Premium Floor Stand w/ Large Paragon Security Enclosure

PAD-CHKLB/PAD-CHKLW **INSTALLATION - MANUAL** 

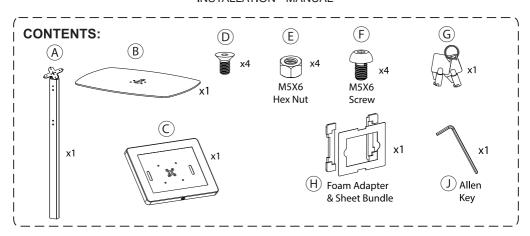


#### **INSTALLATION:**

#### 1. Assembling Floor stand:

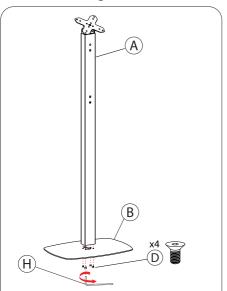


1A. Align the base plate (B) with floor stand body (A) and rotate in the screws(D) from below with the allen key (H) until securely tightened.

### 2. Attaching Enclosure to VESA:

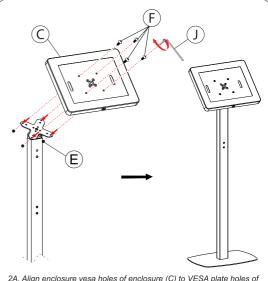


2A. Align enclosure vesa holes of enclosure (C) to VESA plate holes of floor stand (A). Rotate in screws (F) using provided tool (J) while holding hex nut (E) from behind with fingers.

## 3. Setting up Device and Enclosure:

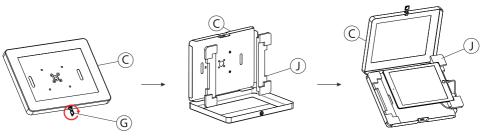

3A. Lock or unlock your tablet enclosure (C) with security key (G) as shown.

3B. Find the appropriate size foam padding (J) for the tablet you wish to use. Make sure device is compatible for the enclosure (C). Lay in device and connect any cables/cords as needed.



3C. If needed, lay-in correct included masking insert (J). Close and lock enclosure afterwards and you're set.

\*\*Tablet shown for illustration and NOT INCLUDED.


#### 4. Cable Routing:



4A. Plug one end of the tablet cord into device, and route the other end through hole in the back as shown above.




4B. Cable route from enclosure to the hole at the top of the body as shown above.



4C.Insert the cable through the cutouts at floorstand head and take it out in the cutout of the back of the base.

#### **Adjusting Angles and Orientation**

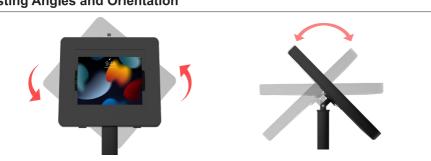

Tilt up/down for preferred angles as needed. Rotate left and right for preferred orientation.