


Premium Locking Floor Stand Kiosk with Enclosed Printer Storage & Cable Management


PAD-PARAFP

INSTRUCTION - MANUAL

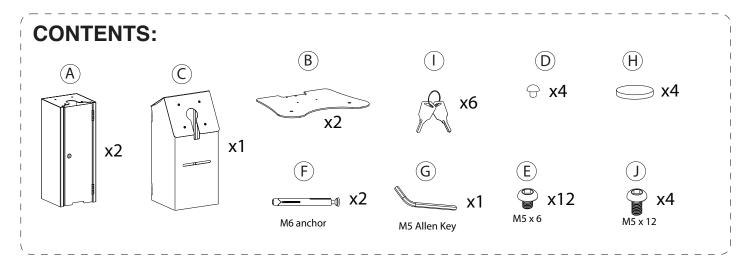


INSTALLATION:


1. Assembling base

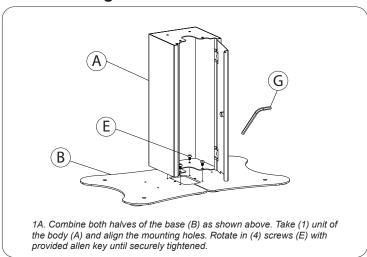

2. Attaching Base Pads

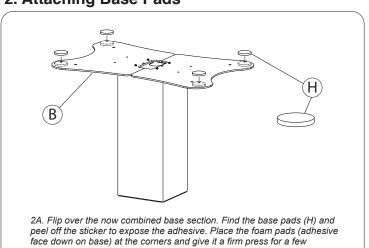


3. Assembling Body Segments

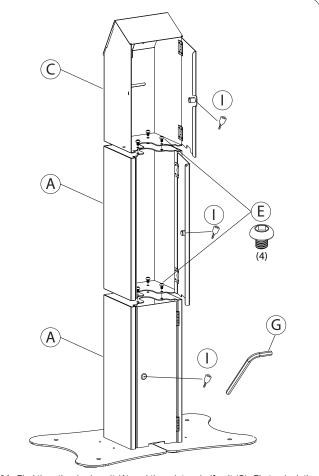

3A. Find the other body unit (A) and the printer shelf unit (C). First unlock the compartments using the keys (I). Then align holes between two body units at a time. Take (4) screws (E) and using the provided allen key tool (G), rotate in the screws as shown until securely tightened. Each body segment has it's own unique key set. Identify which keys go with each segments. Each key set is specific to a segment.


seconds until it's securely attached.

4. (Optional) Anchoring Base to Floor

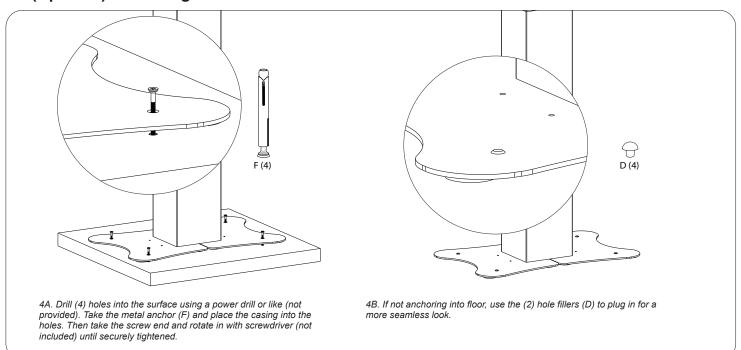


Assembling Enclosure to Printer Shelf Component

Align the VESA holes of the enclosure to that of the printer shelf component (C). Rotate in screws (J) from above using provided allen key tool (G) as shown until securely tightened.

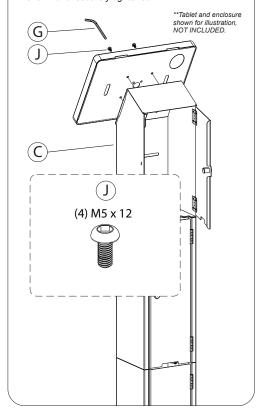


Assembling Monitor to Printer Shelf Component

Align the VESA holes of the monitor to that of the printer shelf component (C). Rotate in screws (J) from behind using provided allen key tool (G) as shown until securely tightened.

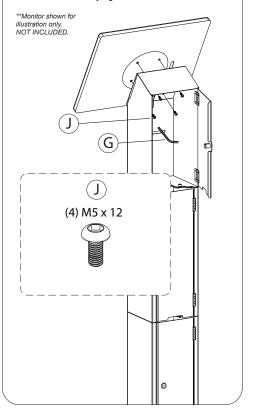

Cable Routing Cable Management

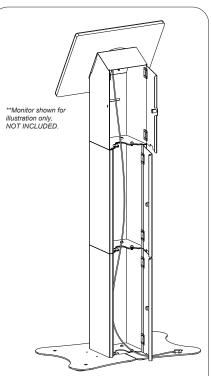

Unlock all (3) body unit storage compartments using the correct key for each section. Fish the cables through as shown and out the opening at the very bottom as needed.