


INSTALLATION INSTRUCTIONS

THRU BOLT INSTALLATION (OPTION A)

TOOLS LIST:

1. ϕ .221"/5.6MM DRILL BIT
2. 8MM WRENCH OR SOCKET
3. #2 PHILLIPS DRIVER

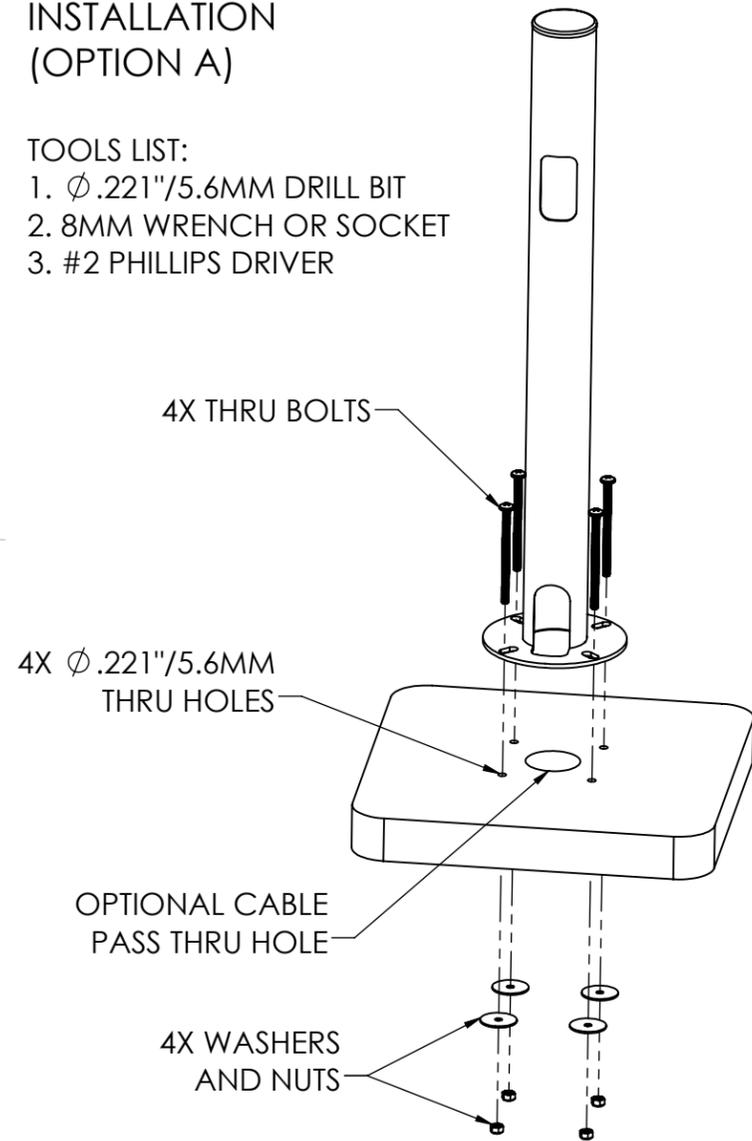


- 1A. USING THE POLE AS A TEMPLATE MARK AND DRILL 4X .221"/5.6MM DIAMETER HOLES THRU COUNTER. SEE DRILL GUIDE.
- 2A. (OPTIONAL) DRILL CABLE PASS THRU HOLE IN COUNTER.
- 3A. ATTACH POLE TO COUNTER WITH 4X THRU BOLTS, WASHERS AND NUTS AS SHOWN.


WOOD SCREW INSTALLATION (OPTION B)

TOOLS LIST:


1. ϕ .125"/3.2MM DRILL BIT
2. 5MM WRENCH OR SOCKET
3. #2 PHILLIPS DRIVER

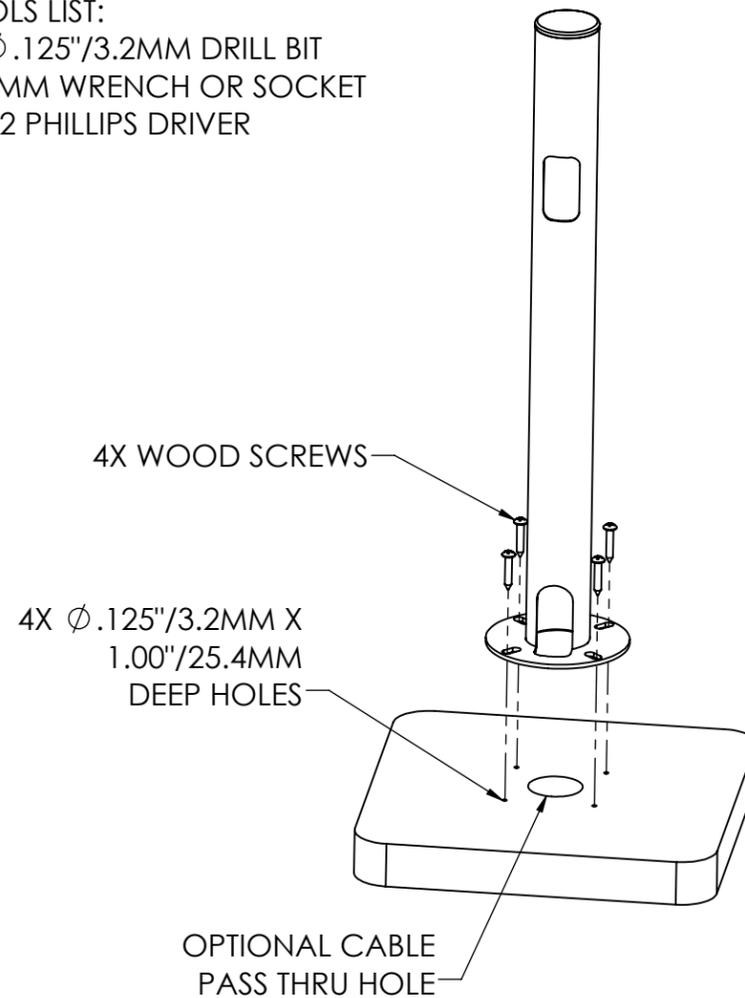

- 1B. USING THE POLE AS A TEMPLATE MARK AND DRILL 4X .125"/3.2MM DIAMETER HOLES 1.00"/25MM DEEP INTO COUNTER. SEE DRILL GUIDE.
- 2B. (OPTIONAL) DRILL CABLE PASS THRU HOLE IN COUNTER.
- 3B. ATTACH POLE TO COUNTER WITH 4X WOOD SCREWS AS SHOWN.

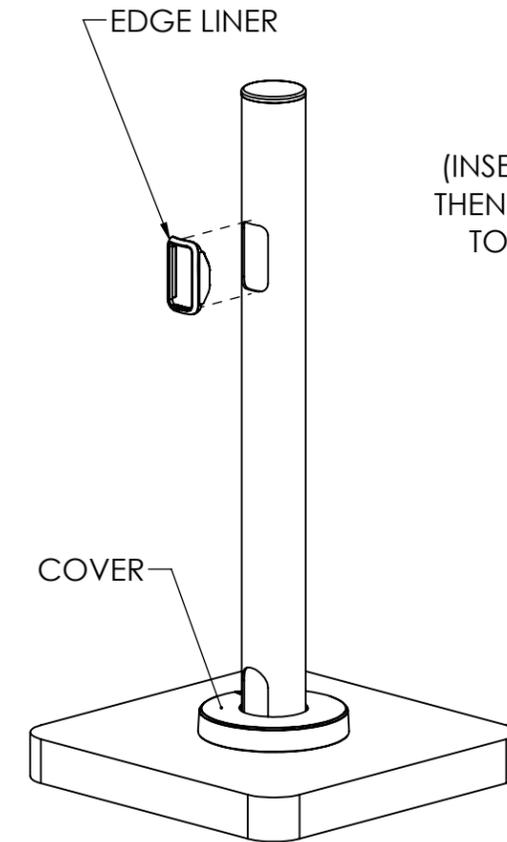

4. SLIDE COVER ONTO BASE.
5. INSTALL EDGE LINER ONTO POLE (SEE DETAIL A). IF ACCESSORIES ARE TO BE MOUNTED BELOW EDGE LINER, INSTALL ACCESSORIES BEFORE EDGE LINER.

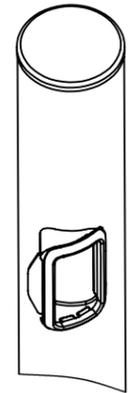

DETAIL A
(INSERT ONE SIDE INTO CUTOUT THEN SQUEEZE IN OPPOSITE SIDE TO FULLY SEAT EDGE LINER)

DWG. NO.
MM-10-150

REV.
A

TITLE

18" STEEL POLE,
FOR USE WITH COLLAR MOUNTS ONLY (-SP LINE)

DRAWN
S. YANG

DATE
5/22/2023

SHEET 1 OF 2


HAVIS

REVISIONS

REV	DESCRIPTION	DATE	BY	CHK'D
A		05/22/2023	SY	

CUSTOMER INSTRUCTIONS

DRILL GUIDE

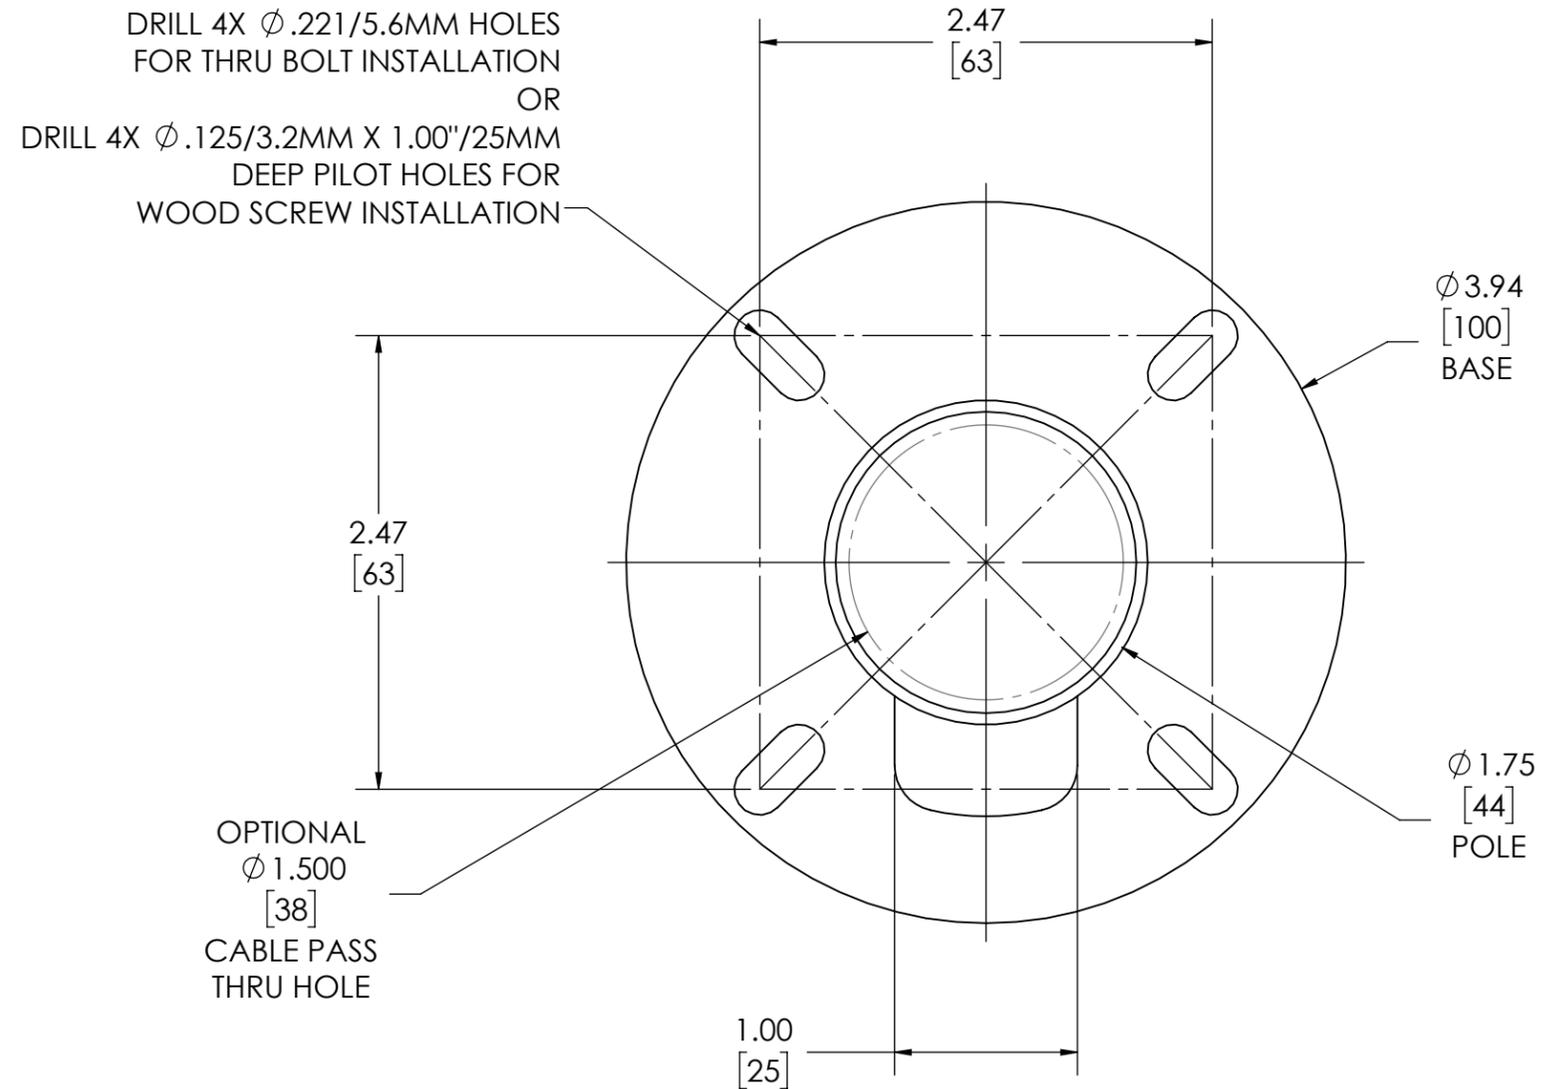

DWG. NO.
MM-10-150

REV.
A

TITLE

18" STEEL POLE,
FOR USE WITH COLLAR MOUNTS ONLY (-SP LINE)

DRAWN
S. YANG

DATE
5/22/2023

SHEET 2 OF 2



REVISIONS

REV	DESCRIPTION	DATE	BY	CHK'D
A		05/22/2023	SY	

CUSTOMER INSTRUCTIONS