




Simple Locking Wall Mount Enclosure with Foams for the iPad 10th Gen/A16

PAD-CPARAW

INSTRUCTION - MANUAL


CONTENTS:

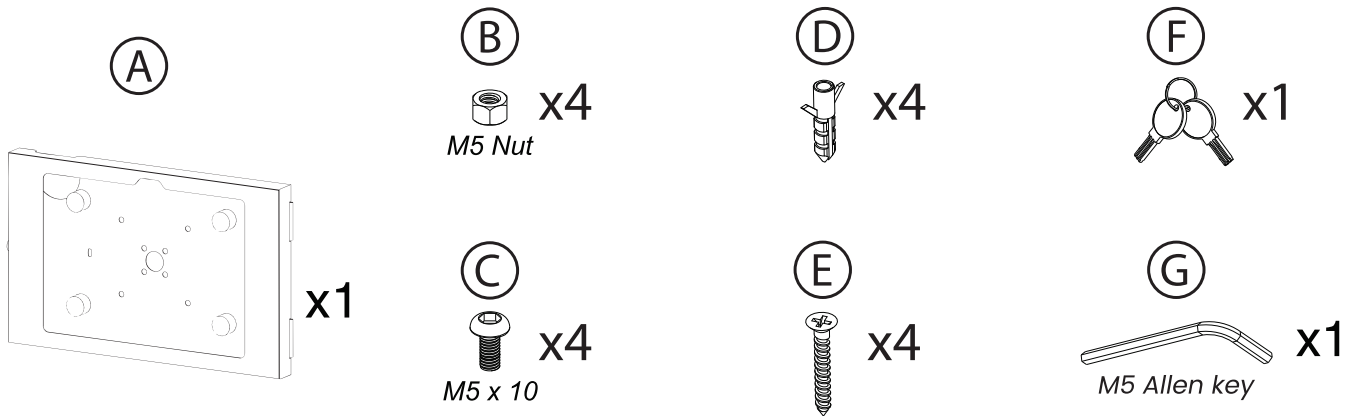


INSTALLATION:

1-Placing Tablet into Enclosure

****Tablet shown for illustration only, NOT INCLUDED.**

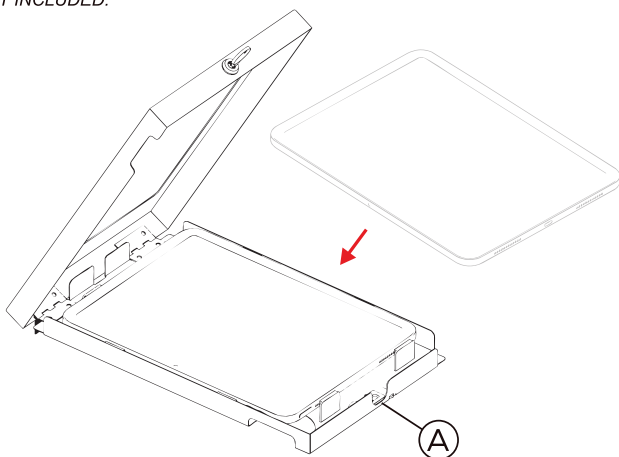


1A. Open enclosure front and insert tablet on foam pieces. If set in properly, the back camera should align with the cutout.

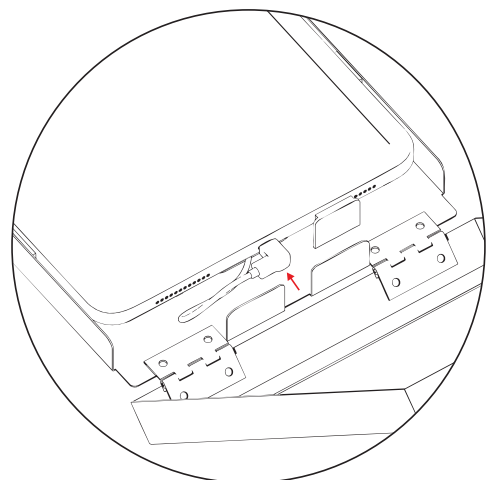


1B. Plug in the charging cable (not included) and route the cable out the back hole as illustrated.

2-Securing Enclosure

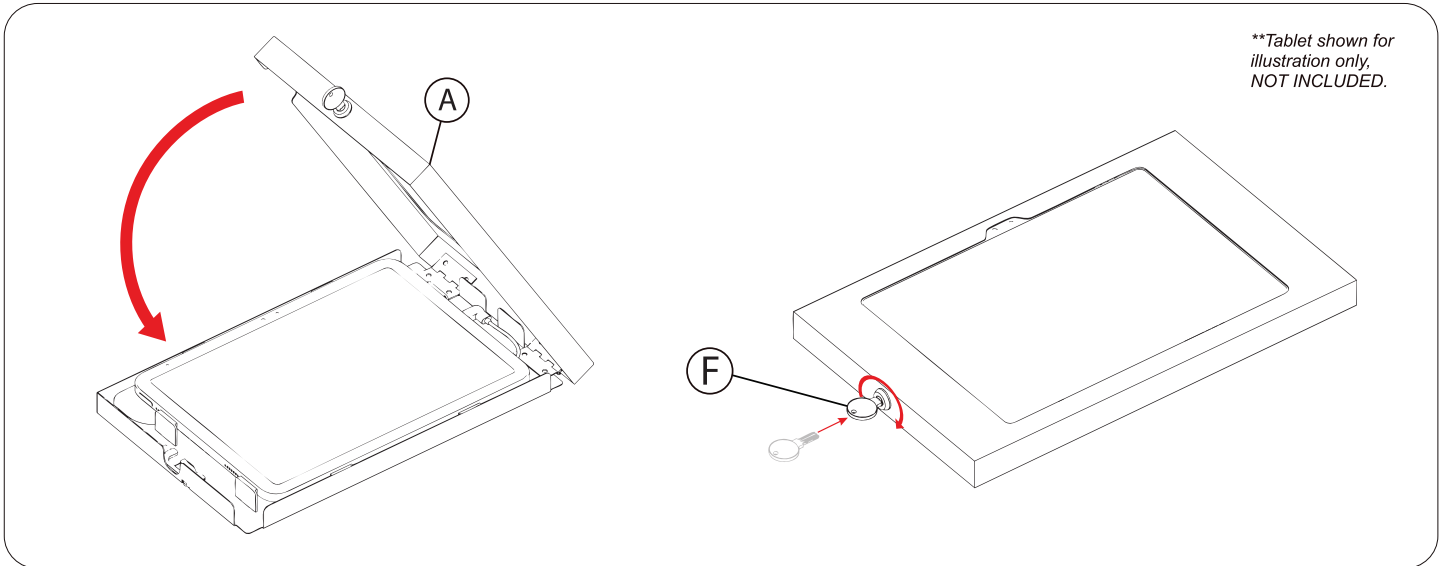


2A. Once the device is in place, close the enclosure, put the key in and turn it to lock and make sure it's secure.

3-Mounting to Wall Using Anchors

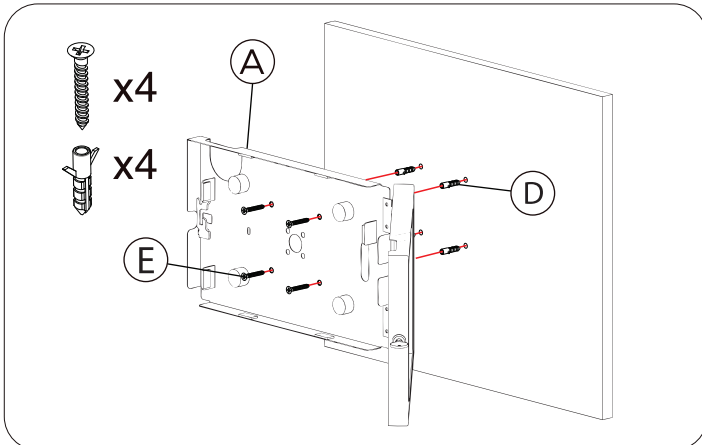


3A. Insert the (4) wall plugs (D) to the pre-drilled holes in the wall. Then, align VESA holes of enclosure as shown above to the drilled holes and screw in the (4) screws (E) using a screwdriver tool (not included) until securely tightened.

4-Mounting to Wall Not Using Anchors

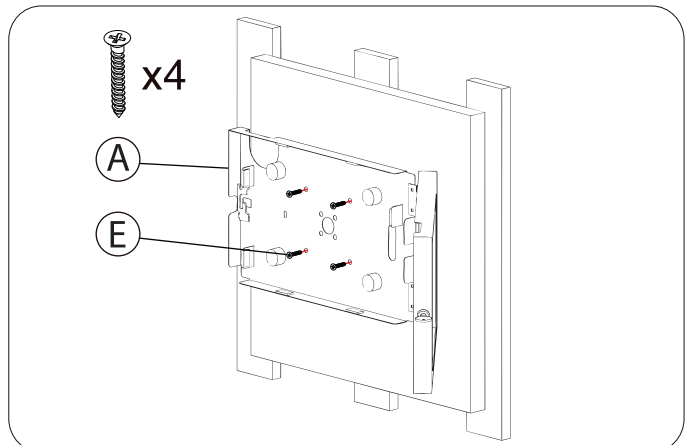

4A. Hold enclosure at the desired mounting location. Rotate in screws (E) with screwdriver tool (not included) until securely tightened.

5-Attaching Enclosure to a VESA Compatible Device

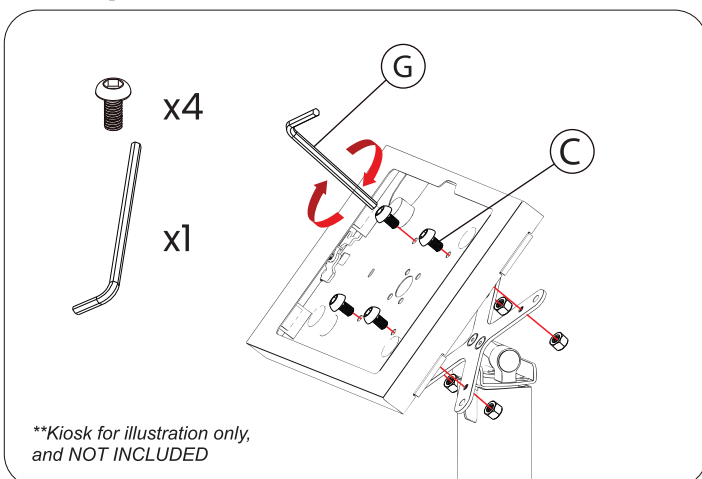

5A. Align enclosure holes to VESA plate mounting holes of the kiosk (not included) . Rotate the screws (C) above using provided allen key tool (G) while holding hex nuts from behind. Rotate until securely tightened.