

# INSTRUCTION MANUAL

## *4MP Flexible Intensifier<sup>®</sup> Technology TVI Motorized Zoom Focus Camera*

HTFB4TM

(Bullet Camera)

HTFD4TM

(Dome Camera)




# Contents

● Contents.....	2
● Precautions .....	3, 4
● Safety Instructions .....	5
● Package Contents.....	6
● Camera Installation .....	7-10
● Lens Adjustment .....	11
● Specifications.....	12,13
● Camera Dimension .....	14
● Features.....	15
● OSD Menu Details .....	16-32
● Trouble Shooting.....	33


# Precautions

Do not install the camera in extreme temperature conditions.

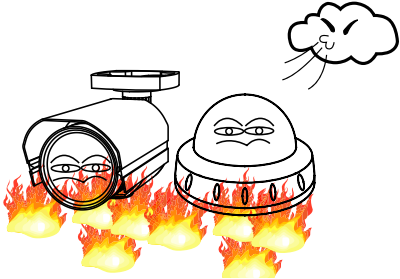


Only use the camera under conditions where temperatures are between  $-10^{\circ}\text{C}$  and  $+50^{\circ}\text{C}$ . Be especially careful to provide ventilation when operating under high temperatures.

Do not install the camera under unstable lighting conditions.

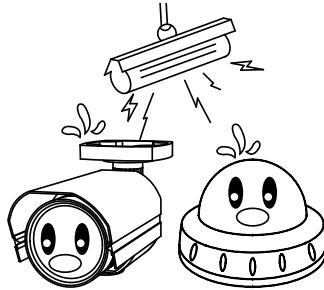


Severe lighting change or flicker can cause the camera to work improperly.

Do not touch the front lens of the camera.

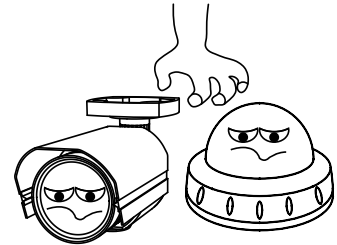


This is one of the most important parts of the camera. Be careful not to leave fingerprints on the lens cover.

Never keep the camera pointed directly at strong light.

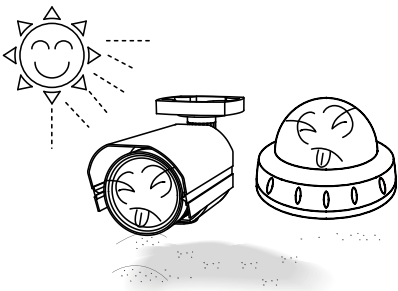


It can cause malfunctions to occur.

Do not drop the camera or subject it to physical shocks.

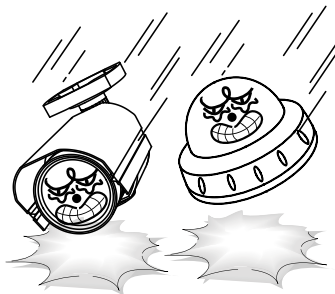

Housing damage can compromise weatherproof ratings.

Do not expose the camera to radioactivity.

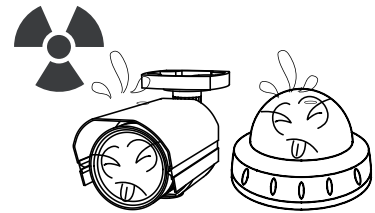


If exposed to radioactivity the CCD will fail.

## NOTE

\* If the camera is exposed to spotlight or object reflecting strong light, smear or blooming may occur.

\* please check that the power satisfies the normal specification before connecting the camera.

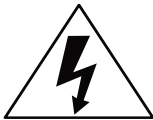

The lightning flash with an arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### In USA and Canada, Use Class 2 Power Supply Only

**INFORMATION** - This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules & CE Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

**WARNING** - Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**WARNING** - To prevent electric shock and risk of fire hazards:

- ◆ Do NOT use power sources other than that specified.
- ◆ Do NOT expose this appliance to rain or moisture.

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

**CAUTION** : To prevent electric shock and risk of fire hazards:

- ☞ Do NOT use power sources other than those specified.

## Safety Instructions

### **Precautions for use**

- ① This camera should be installed by qualified personnel only
- ① There are no user serviceable parts inside
- ① Do not disassemble this camera other than to make initial adjustments
- ① Use a UL approved regulated 24 volt AC or 12 volt DC power supply
- ① Use appropriate low voltage power cable to prevent fire or electrical shock
- ① Please insure that your installation area can support the weight of the camera

### **Please handle this camera carefully :**

- ① Do not use a strong or abrasive detergent when cleaning the camera
- ① Do not install near cooling or heating device

## Package Contents

Please make sure that the following items are included in the Package:

1) HTFB4TM Included Junction Box (CVCJBB)

- 1 Video Test Connector, Power Jack
- 1 Bracket Base
- 1 Wrench
- Set Screw
- 4 Tapping Screws 4x25
- 4 Hexagon Socket Screws M5x10
- 4 Plastic Anchor


2) HTFD4TM Included Junction Box (CVCJBD)

- 1 Video Test Connector, Power Jack
- 1 Chameleon Cover
- 1 Wrench
- Set Screw
- 4 Tapping Screws 4x40
- 1 Hexagon Socket Screw M4x8
- 4 Tapping Screws 4x25
- 3 MachineScrews M4x15
- 4 Plastic Anchor

# CAMERA INSTALLATION

## CONNECT POWER CABLE

1. WHEN USING 12 VOLTS DC (constant voltage 500mA)

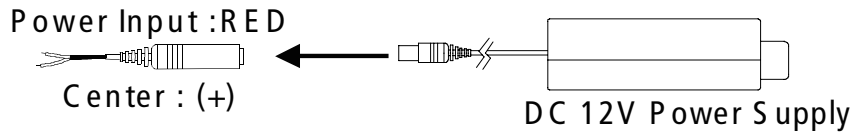


2. WHEN USING 24 VOLTS AC (40 Volt Amps)



3. CONNECT VIDEO CABLE

CONNECT YELLOW COLOR BNC CABLE TO THE BNC JACK.






# CAMERA INSTALLATION

## Compatibility


### 1) HTFB4TM

INTCM

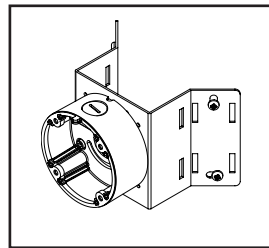
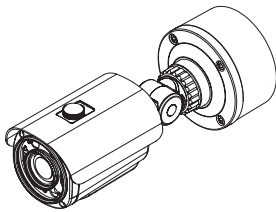
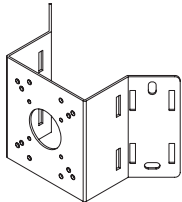


### 2) HTFD4TM

INTWM

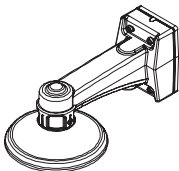


INTCM

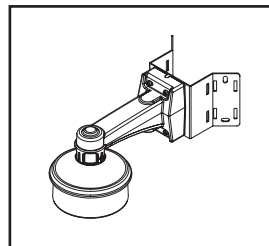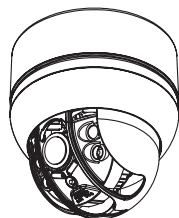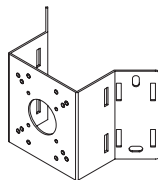




# CAMERA INSTALLATION

## 1. HTFB4TM

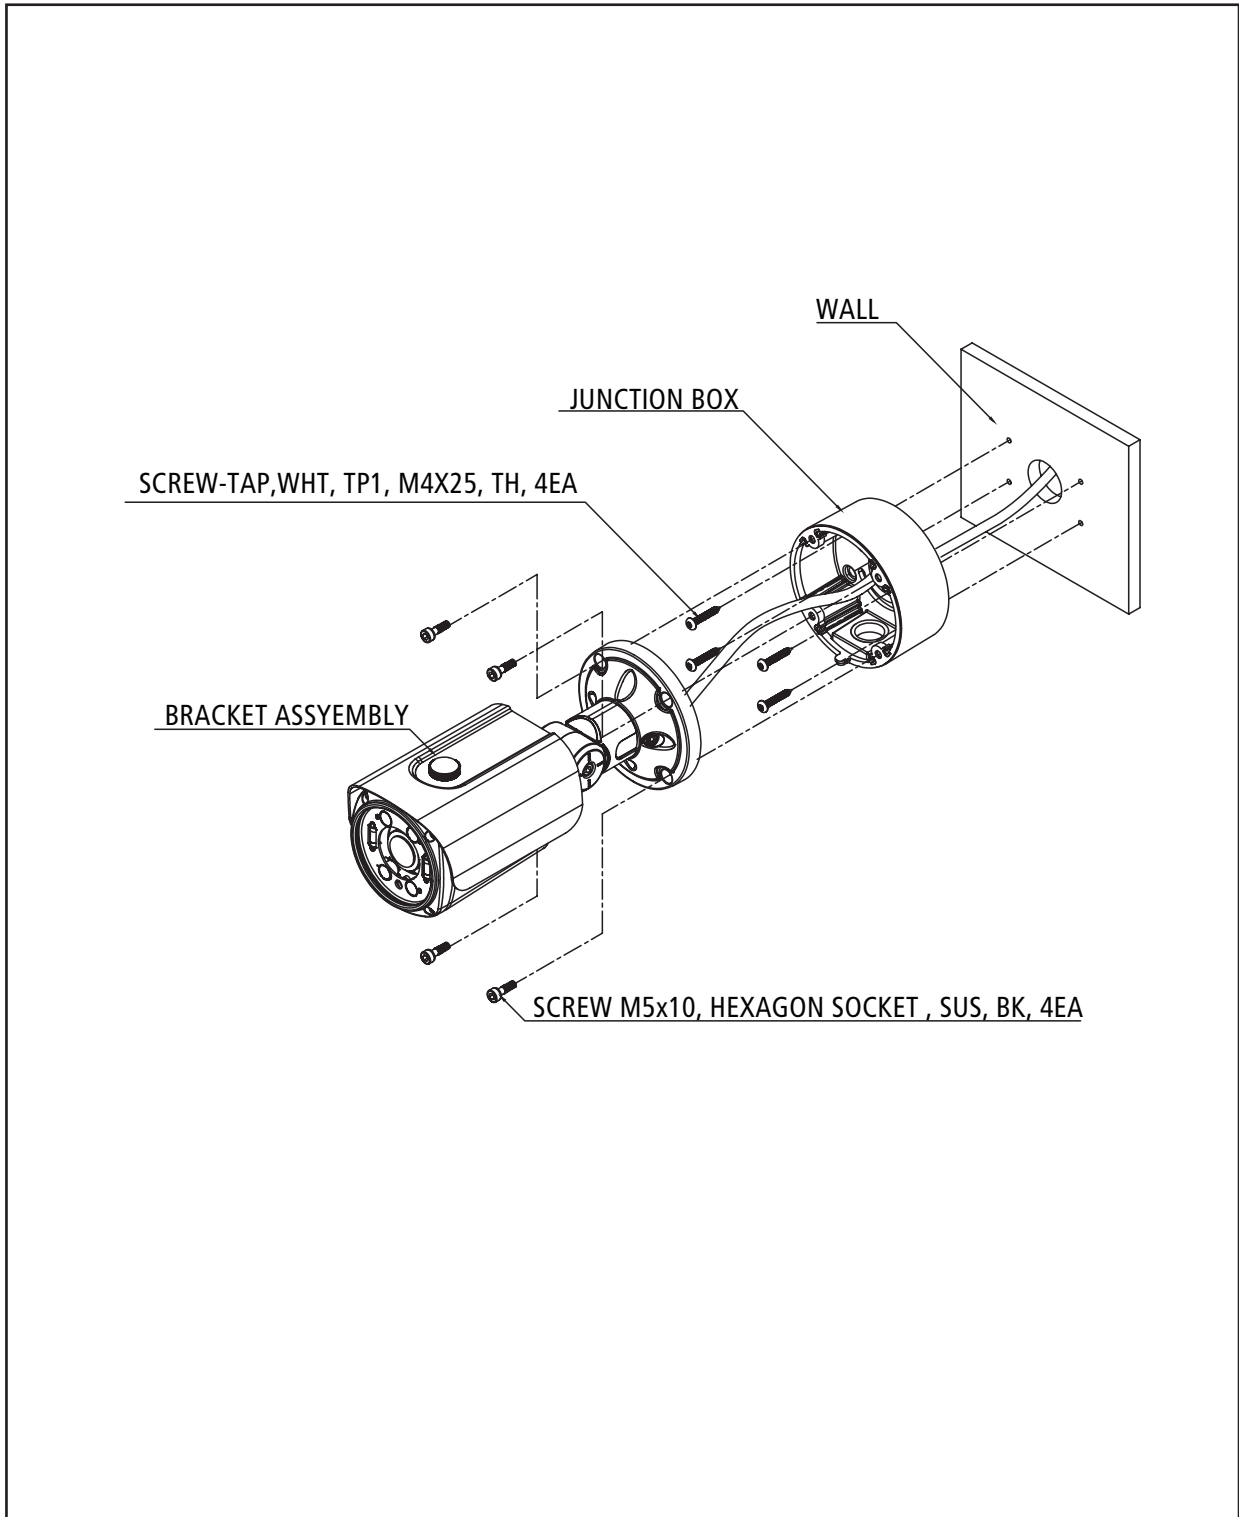




# CAMERA INSTALLATION

## 2. HTFD4TM

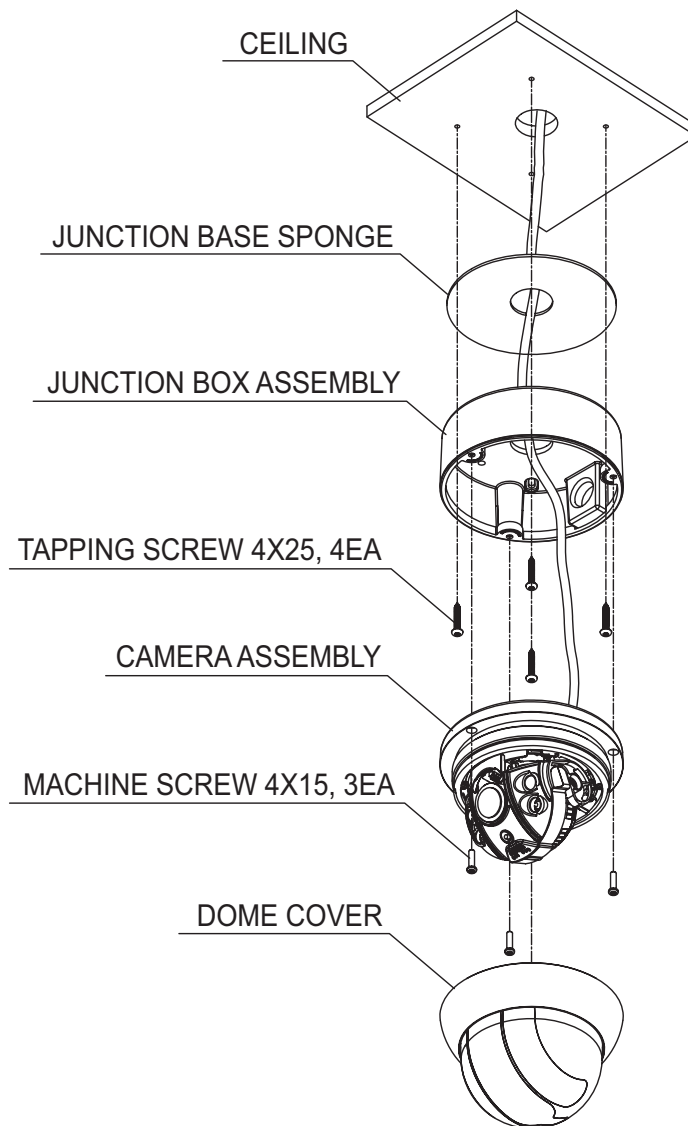

# LENS ADJUSTMENT

## 1. HTFB4TM

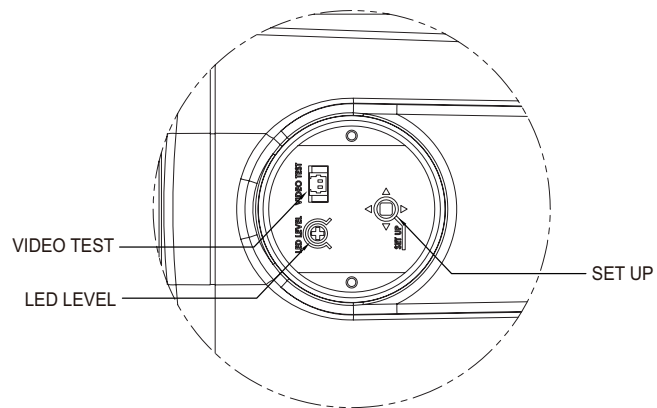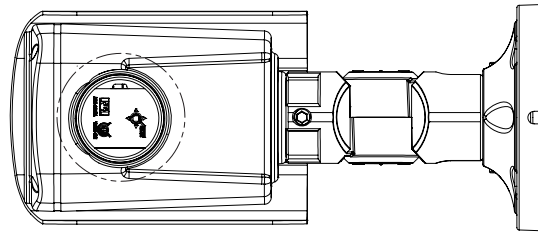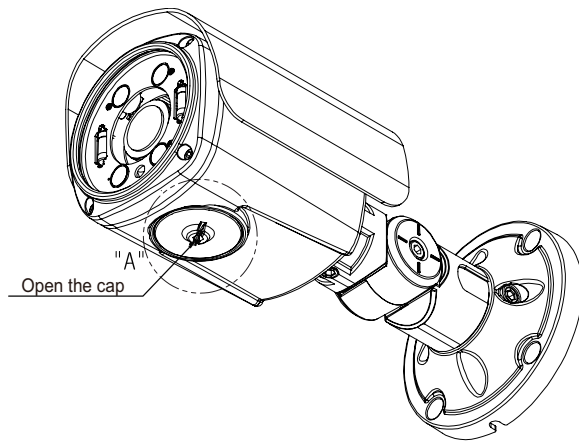


# 4MP FIT TVI Motorized Zoom Focus Camera

## 2.8-12mm MFZ Lens



### ■ HTFB4TM (2.8-12mm)



## SPECIFICATIONS

MODEL	HTFB4TM
Sensor type	1/2.9" SONY STARVIS CMOS Sensor
Effective pixels	2184(H) X 2202(V), 4.81M Pixels
Total pixels	3096(H) X 2218(V), 6.87M Pixels
Resolution	2560X1440 (1440p@15F)
Scanning system	Progressive Scan
Min. illumination	0.01 Lux @ F1.2 , (Sens-UP X32)
Video Output	1.0Vp-p Composite. 75 Ohms Universal HD Analog, CVBS, EX-SDI (Option)
S/N Ratio	More than 50dB
AGC	0 ~ 10 Level Adjustable
Shutter Speed	AUTO / Manual(1/30,1/25Sec ~ 1/30000Sec) / FLICKER
Brightness	0 ~ 20 Level Adjustable
Sens-UP	OFF/AUTO (x2 ~ x32)
WDR(Wide Dynamic Range)	OFF / ON (Low,Middle,High) ODOL WDR(4M 15F) / ROI MODE
Backlight Compensation(BLC)	OFF/ON
HSBLC	1 ~ 20 Level Adjustable
ACE(D-WDR/ATR-EX))	OFF/LOW/MIDDLE/HIGH
Motion Detection	OFF/ON (4 Zone)
Privacy Masking	OFF/ON (16 Zone)
Day & Night	Auto(AGC)/Day/Night/Ext
Smart -IR(IR OPTIMIZER)	0~20 Level Adjustable
White Balance	Auto / AWB / AWC → Set / Manual
Digital Noise Reduction	2D, 3DNR
Mirror	MIRROR,V-FLIP
D-ZOOM(EZOOM)	OFF/ON (~ x16 )
Sharpness	0~10 Level Adjustable
GAMMA Correction	r = 0.45 ~ 0.65
Lens Shading(LSC)	OFF/ON
DEFOG	OFF/ON
CAM TITLE	ENG/KOR/CHN/CHA(S)/JPN
RS485	CAM ID / BAUDRATE (OPTION)
Power Consumption	DC12V : Max 8.5W / 0.71A, AC24V : Max 7.9W / 0.53A
Language	ENG/KOR/CHN1/CHA2/JPN
Defect(White pix mask)	AUTO (1024EA)
Operating Temperature	-4°F ~ +140°F(Humidity : 20%RH ~ 95%RH)
Storage Temperature	-4°F ~ +140°F(Humidity : 20%RH ~ 95%RH)
Dimension	3.90" (W) x 3.90" (H) x 9.16" (D)
Weight	3.08lb

# 4MP FIT TVI Motorized Zoom Focus Camera

## 2.8-12mm MFZ Lens



### HTFD4TM (2.8-12mm)




## SPECIFICATIONS


MODEL	HTFD4TM
Sensor type	1/2.9" SONY STARVIS CMOS Sensor
Effective pixels	2184(H) X 2202(V), 4.81M Pixels
Total pixels	3096(H) X 2218(V), 6.87M Pixels
Resolution	2560X1440 (1440p@15F)
Scanning system	Progressive Scan
Min. illumination	0.01 Lux @ F1.2 , (Sens-UP X32)
Video Output	1.0Vp-p Composite. 75 Ohms Universal HD Analog, CVBS, EX-SDI (Option)
S/N Ratio	More than 50dB
AGC	0 ~ 10 Level Adjustable
Shutter Speed	AUTO / Manual(1/30,1/25Sec ~ 1/30000Sec) / FLICKER
Brightness	0 ~ 20 Level Adjustable
Sens-UP	OFF/AUTO (x2 ~ x32)
WDR(Wide Dynamic Range)	OFF / ON (Low,Middle,High) ODOL WDR(4M 15F) / ROI MODE
Backlight Compensation(BLC)	OFF/ON
HSBLC	1 ~ 20 Level Adjustable
ACE(D-WDR/ATR-EX))	OFF/LOW/MIDDLE/HIGH
Motion Detection	OFF/ON (4 Zone)
Privacy Masking	OFF/ON (16 Zone)
Day & Night	Auto(AGC)/Day/Night/Ext
Smart -IR(IR OPTIMIZER)	0~20 Level Adjustable
White Balance	Auto / AWB / AWC → Set / Manual
Digital Noise Reduction	2D, 3DNR
Mirror	MIRROR,V-FLIP
D-ZOOM(EZOOM)	OFF/ON (~ x16 )
Sharpness	0~10 Level Adjustable
GAMMA Correction	r = 0.45 ~ 0.65
Lens Shading(LSC)	OFF/ON
DEFOG	OFF/ON
CAM TITLE	ENG/KOR/CHN/CHA(S)/JPN
RS485	CAM ID / BAUDRATE (OPTION)
Power Consumption	DC12V : Max 8.5W / 0.71A, AC24V : Max 7.9W / 0.53A
Language	ENG/KOR/CHN1/CHA2/JPN
Defect(White pix mask)	AUTO (1024EA)
Operating Temperature	-4°F ~ +140°F(Humidity : 20%RH ~ 95%RH)
Storage Temperature	-4°F ~ +140°F(Humidity : 20%RH ~ 95%RH)
Dimension	5.12" (W) x 3.89" (H) x 5.12" (D)
Weight	1.98lb

# CAMERA DIMENSION

## 1) HTFB4TM

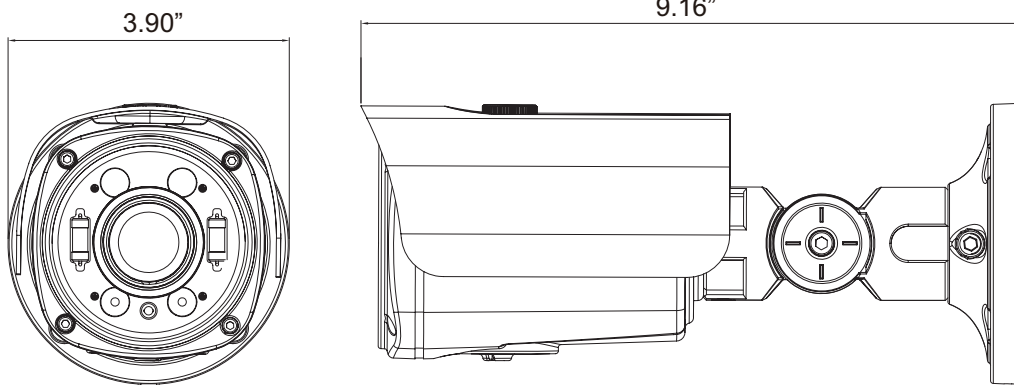

## 2) HTFD4TM

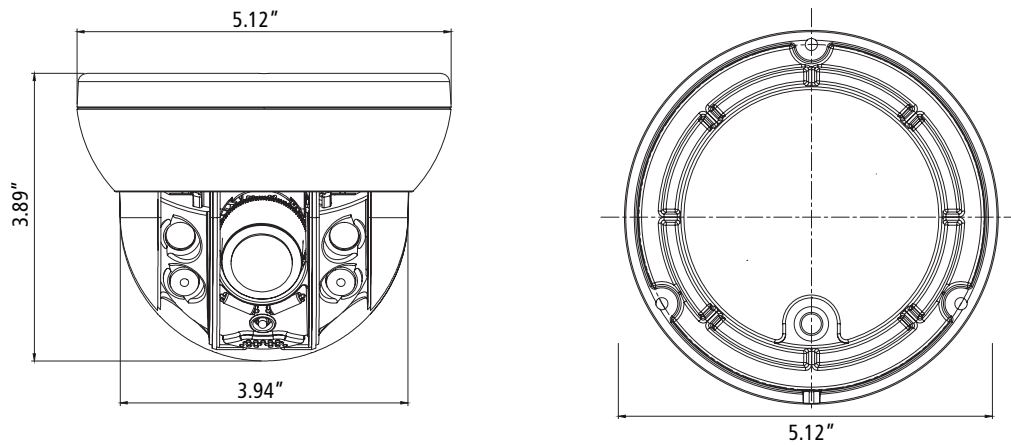

## General Features

### ● Transfer Video Interface

The combination of a 2Mega CMOS image sensor and TVI DSP provides an excellent resolution of TVI picture.

### ● 3D-DNR

Smart 3DNR prevents the image blurring of moving object and activates only if moving objects are appearing on the scene.

### ● Smart-IR

No saturation image, vivid image in darkness! "TVI" camera makes very sharp video image in darkness! This technology eliminates saturation of video image of the closer object in darkness by control of the IR sensitivity. Saturation never happens in our "TVI" cameras, you can enjoy vivid image in any dark condition!

### ● Sens-Up

Despite a limited & low light condition, Sens-Up - Max. x32 helps the viewer to get visible and clear images.

### ● Defog

Defog function "improves" the clarity of images taken in poor conditions such as fog, smoke, rain or snow.

### ● WDR

A powerful and advanced technology that captures a high resolution picture even where images appear dark.

### ● CVBS(Composite Video Blanking and Sync)

TV system is switchable 'NTSC' or 'PAL' with built-in OSD.

### ● Intelligent Function

An extraordinary technology that enables Speco Technologies TVI to become the ultimate solution by providing intelligent features based on motion detection. It also strengthens crime prevention and detection.

# How to Set Up the camera menu

## ● Setup Menu

### MENU

1. LENS	DC					
	MANUAL					
2. 2MOTOR		AF MODE	AUTO/MANUAL			
		SCANNING	HALF/FULL			
		ONEPUSH	ON			
		SYNC TDN	ON/OFF			
		INITIAL	ON			
		RETURN				
3. EXPOSURE		BRIGHTNESS	0~20			
		SUTTER	AUTO	MODE(LENS:DC)	INDOOR/OUTDOOR/DEBLUR	
				RETURN		
				MODE(LENS:MANUAL)	NORMAL/DEBLUR	
				RETURN		
			MANUAL	SPEED	1/3- ~ 1/30000	
			RETURN			
			FLICKER			
			SENS-UP OFF~X32			
			AGC 0~10			
	RETURN					
4. WHITE BAL		AWB	AUTO			
			AWB			
			AWC-SET			
			MANUAL	C-TEMP	3000K/5000K/8000K	
				R-GAIN	0~20	
		B-GAIN		0~20		
			RETURN			
	COLOR GAIN	0~20				
	RETURN					
5. BACKLIGHT	OFF					
	HLC	LEVEL	0~20			
		COLOR	BLK/WHT/YEL/CYN/GRN/MAG/RED/BLU			
		RETURN				
BLC	H-POS	0~26				
	WDR	V-POS	0~26			
		H-SIZE	0~26			
		V-SIZE	0~26			
		RETURN				
		WDR MODE	LINE/FRAME			
		ROI MODE	OFF			
			ON	WINDOW ZONE	0~3	
				WINDOW USE	ON/OFF	
				H-POS	0~2560	
				V-POS	0~1440	
				H-SIZE	0~2560	
			V-SIZE	0~1440		
	WEIGHT	LOW/MIDDLE/HIGH				
	RETURN					
6. SPECO DNR	OFF/LOW/MIDDLE/HIGH					



# How to Set Up the camera menu

## ● Setup Menu

MENU						
7. DAY&NIGHT	AUTO	IR	ON/OFF			
		SMART IR	0~20			
		AGC THRES	0~20			
		AGC MARGIN	0~20			
		RETURN				
	COLOR					
	B/W	SMART IR	0~20			
		RETURN				
	EXTERN	IR	ON/OFF			
		SMART IR	0~20			
		EXTERN SW	LOW/HIGH			
		D>N THRES	0~20			
		N>D THRES	0~20			
		DELAY	LOW/MIDDLE/HIGH			
RETURN						
8. IMAGE	SHARPNESS	0~10				
	GAMMA	0.45~0.75				
	MIRROR	ON/OFF				
	FLIP	ON/OFF				
	D-ZOOM	X1.0~X16.0				
	ACE	OFF/LOW/MIDDLE/HIGH				
	DEFOG	OFF				
		ON	MODE	AUTO/MANUAL		
			LEVEL	LOW/MIDDLE/HIGH		
			RETURN			
	SHADING	OFF				
		ON	WEIGHT	0%~100%		
			RETURN			
	PRIVACY	BOX	OFF			
			ON	ZONE NUM	0~15	
				ZONE DISP	ON/OFF	
				H-POS	0~80	
				V-POS	0~46	
				H-SIZE	0~80	
				V-SIZE	0~46	
				Y LEVEL	0~20	
				CB LEVEL	0~20	
				CR LEVEL	0~20	
				TRANS	0~3	
				RETURN		
			POLYGON	OFF		
				ON	ZONE NUM	0~7
					ZONE DISP	ON/OFF
		POS0-X			160	
	POS0-Y	91				
	POS1-X	160				
	POS1-Y	91				
POS2-X	160					
POS2-Y	91					
POS3-X	160					

# How to Set Up the camera menu

## ● Setup Menu

MENU																	
					<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>POS3-Y</td><td>91</td></tr> <tr><td>Y LEVEL</td><td>0~20</td></tr> <tr><td>CB LEVEL</td><td>0~20</td></tr> <tr><td>CR LEVEL</td><td>0~20</td></tr> <tr><td>TRANS</td><td>0~3</td></tr> <tr><td>RETURN</td><td></td></tr> </table>	POS3-Y	91	Y LEVEL	0~20	CB LEVEL	0~20	CR LEVEL	0~20	TRANS	0~3	RETURN	
POS3-Y	91																
Y LEVEL	0~20																
CB LEVEL	0~20																
CR LEVEL	0~20																
TRANS	0~3																
RETURN																	
		RETURN															
9. MOTION	OFF																
	ON	DET WINDOW	WINDOW USE	0~3													
			WINDOW ZONE	ON/OFF													
			DET H-POS	1~80													
			DET V-POS	1~45													
			DET H-SIZE	1~80													
			DET V-SIZE	1~45													
			RETURN														
			SENSITIVITY	0~10													
			MOTION OSD	ON/OFF													
			TEXT ALARM	ON/OFF													
			SIGNAL OUT	ON/OFF													
		RETURN															
10. SYSTEM		COMM	CAM ID	0~255													
			BAUDRATE	2400/4800/9600/57600/115200													
			RETURN														
		OUTPUT MODE	FRAME RATE	720P 30/1080P 30/1440P 15													
			FREQ	50Hz/60Hz													
			SDI MODE	OFF/135M(V2.0)/135M+(V2.1)/270M(V1.0)													
			ANALOG MODE	CVBS/HD-T,CVBS/HD-C,CVBS/HD-A,CVBS													
			RETURN														
			IMAGE RANGE	FULL													
			COMP														
			USER	OFFSET	0~32												
			RETURN														
			COLOR SPACE	YUV/SD-CBCR/HD-CBCR													
			COLOR BAR	OFF/ON													
			LANGUAGE	ENG/CHN/CHN(S)/JPN/KOR													
			CAM TITLE	OFF													
			RIGHT UP/LEFT DOWN U,D-CHAR SELECT/L,R-POSITION/ENTER-RETURN														
			RESET	ON													
			RETURN														
	11. EXIT																

# Menu Set Up

Menu items can be selected by using the OSD buttons of the camera.

## 1. PRESET



1-1. Preset : INDOOR / OUTDOOR / LOW LIGHT / HALLWAY / LOBBY(WDR) / ELEVATOR.

- Used for a quick and easy setup for the installation environment.

\* The Advanced Set Up menu will be displayed on the monitor.

2. Move and select the required function using the Up and Down button.

\* Move the triangular indicator Up or Down to select the desired feature by pressing the Up or Down button.




3. Change menu settings using the Left or Right button.

\* Available values or Status are displayed by pressing the Left or Right buttons.

Press the button until desired value / status is displayed.

4. After Changing the setting move the arrow indicator to EXIT and press the SET button to EXIT.

## NOTE

\* Move to the available submenu by moving  arrow to desired feature.

\* Submenu is not available when this symbol displayed "---".

# 1. LENS

This function is to adjust the brightness of the monitor.


1. Move the triangular indicator to LENS using the Up and Down buttons on the Set Up menu screen.

2. Select the desired lens type by pressing the Left or Right button.



## 2. 2-MOTOR

1. Move the triangular indicator to 2MOTOR using the Up and Down buttons on the Set Up menu screen.
2. Select the desired lens type by pressing the Left of Right button.

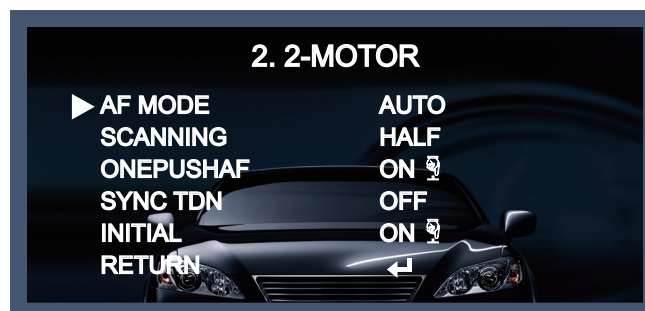

### ◆ AF MODE

- AUTO : Adjust zoom and focus automatically.
- MANUAL : Adjust zoom and focus manually.

### ◆ SCANNING : HALF / FULL

- HALF : Adjust auto focusing when lens focus fixed. If lens focus is not fixed well, adjust focus manually.
- FULL : Scanning full size of scree and adjust autofocusing.

### ◆ ONEPUSHAF : If you press OSD button 3~4 seconds, focus will be fixed automatically.

### ◆ INITIAL : If you press OSD button 3~4 seconds, Lens Initializing start.

# 3. EXPOSURE

1. On the Set Up menu, Select EXPOSURE by using the Up or Down button.



2. Select the desired shutter mode by pressing the Left or Right button.



- ◆ BRIGHTNESS : The brightness can be adjusted. The brightness control range is 1~20.
- ◆ SHUTTER : DC lens is launched with the setting of 1/30 and the manual lens is launched with the setting of Auto shutter, but the shutter speed can be adjusted from 1/30 to 1/30,000.
  - FLK : Select FLK mode if flickering occurs ; caused by the unmatched frequency of electric light.
- ◆ SENS-UP : The bright screen can be displayed by sensing the degree of the darkness automatically under the circumstance of low light condition or at night.
  - Off ~x32 Level Adjustable.
- ◆ AGC (Auto Gain Control) : The higher the AGC level is, the more noises appear.
  - 0~10 Level selectable.

## NOTE

\* Sens-Up mode is not worked when Electronic shutter is selected as Manual.

# 4. WHITE BALANCE

Use this function when the color adjustment of a screen is needed.

1. Move the triangular indicator to WHITE BAL on the SETUP menu screen using the Up and Down button.
2. Select the desired mode by using the left or Right button.



- ◆ AUTO : Use this mode when the color temperature is from 2,500k to 9,500k.
- ◆ AWB : The function to search for the color which is matched well with the ambient environment.
- ◆ AWC→SET : After letting camera focus on the blank white paper to the best condition of current lighting environment, press the SET button. If the lighting condition is changed, Re-adjustment should be needed.

- ◆ **MANUAL** : Manual compensation make the more detailed control possible. First, after adjusting the white balance using the ATW or AWB mode, change the mode into the manual compensation mode and then press Set button. While looking at the color change of the subject seen on the screen after setting up the proper color temperature, increase the each value of the blue and the red.
- **KELVIN** : LOW/MIDDLE/HIGH level adjustable.
- **R-GAIN** : 0~20 level adjustable.
- **B-GAIN** : 0~20 level adjustable.
- **Return** : Every function is set up at the EXPOSURE menu, and then return the previous menu.

## NOTE

The White Balance may not be worked properly in the following conditions. If this doesn't work, use the AWB mode.

- \* When there is a very high color temperature in the circumstances of the subject.  
( for example, clear sky, Sunset)
- \* It is very dark.
- \* If the camera is headed to the fluorescent light directly or if there is a drastic lighting change, The operation of White balance may become unstable.

## 5. BACKLIGHT

On this menu, backlight image can be compensated by users selecting one of modes. (HLC, BLC, WDR)

1. Move the triangular indicator to BACKLIGHT on the SETUP menu screen using the Up and Down button.
2. Select the desired mode by using the left or Right button.





◆ Off : Deactivated status.

◆ HLC : This function is used to suppress or strong light source (for example, headlights of cars during nighttime) so that other subjects can be seen in more detail. If you select HCL, a submenu appears where you can make finer adjustments.

- LEVEL : Adjust the brightness level from which on the light source is to be masked out. 0~20 level adjustable.
- COLOR : All day/night only adjustable.





◆ BLC : This function is used to counterbalance the screen image by increasing the brightness so that a subject which appears dark due to a strong backlight can be displayed in more detail. If you select BLC, a submenu appears where you can make finer adjustments.

- H-POS/V-POS/H-SIZE/V-SIZE : Define the position and size of the area of interest by changing the position & size.



◆ WDR : The WDR (Wide Dynamic Range) function works to correct excessive light within the frame to produce a usable image. When the image has simultaneous bright and dark areas, it makes both areas distinct. If you select WDR, a submenu appears where you can make finer adjustments.

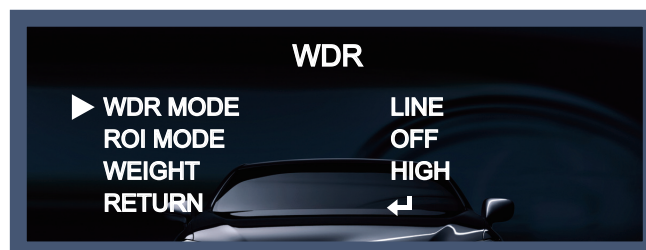

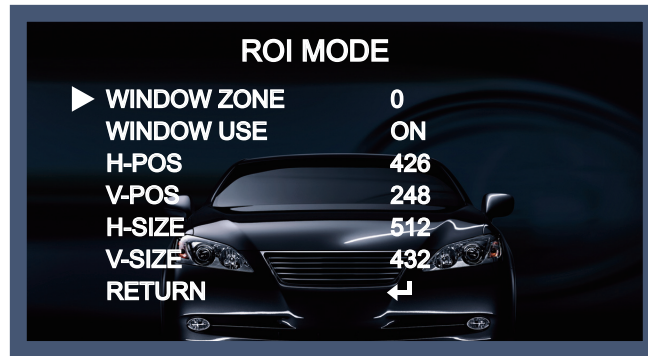

- ROI MODE : The Specific WDR area can be selected.

- WEIGHT [MIDDLE, HIGH, LOW] : Select the WDR level of the camera.

## 6. SPEC0 DNR

This function is used to improve the picture quality by filtering the noise which is generated under low brightness conditions. You can set different levels here.

1. Move the triangular indicator to SPEC0 DNR by using the Up and Down button.
2. Select the mode to use by pressing the left or Right button and OFF/LOW/MIDDLE/HIGH level selectable.



# 7. DAY&NIGHT

You can change the color mode of color or black / white by setting up the mode.

1. Select Day&Night using the Up or Down button on the Set Up menu screen.
2. Select the desired mode using the Left or Right buttons.



- ◆ AUTO : Automatically, It shifts into the color mode in the bright environment and the B/W mode in the low light condition. It can adjust the delay time, starting brightness and end brightness according to the ambient conditions by pressing the Set button.




- SMART IR. : 0~20 smart IR level adjustable.
- AGC THRES : 0~20 AGC THRES level adjustable.
- AGC MARGIN : 0~20 AGC MARGIN level adjustable.
- DELAY [LOW/MIDDLE/HIGH] : Set the delay time for switching between COLOR and B/W

◆ B/W : : 0~20 AGC MARGIN level adjustable.



- SMART IR. : 0~20 smart IR level adjustable.

◆ EXTERN : It can change the color or B/W mode automatically through the connection with the ground terminal.(Option for box camera and IR camera)

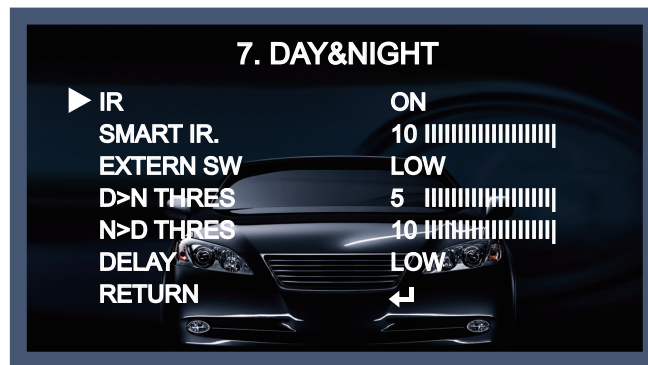

- SMART IR. : 0~20 smart IR level adjustable.

- EXTERN S/W [LOW/HIGH] : Set the external signal for switching between COLOR and B/W.

- D>N THRES : 0~5 D>N THRES level adjustable.

- N>D THRES : 0~20 N>D THRES level adjustable.


- DELAY [LOW/MIDDLE/HIGH] : Set the delay time for switching between COLOR and B/W

# 8. IMAGE

When selecting, the following submenu will appear.




Here you can optimise the image quality by adjusting different options.

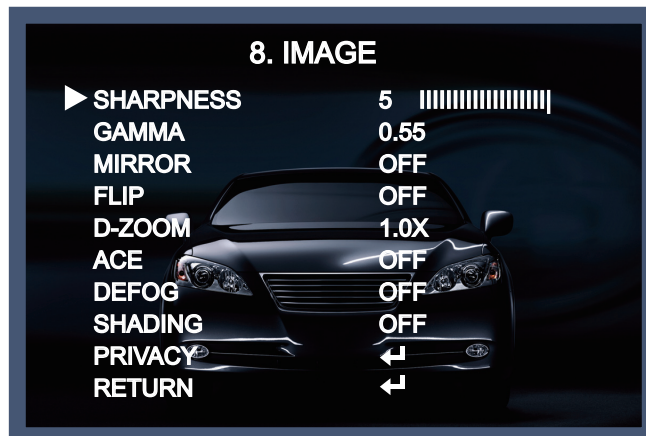

- ◆ SHARPNESS [1 ~ 20] : Adjusts the image sharpness. If the level goes up excessively, it may affect the video image and generate a noise.
- ◆ GAMMA [0.45 ~ 0.65] : Changes the gamma curve of the camera.
- ◆ MIRROR [ON, OFF] : Mirrors the image horizontally on the screen.
- ◆ FLIP [ON, OFF] : Flips the image vertically on the screen.
- ◆ D-ZOOM: You can use the digital zoom with x1~x16 magnifications.


- ◆ ACE [OFF/LOW/MIDDLE/HIGH] : Intelligent lighting level control to overcome even strong backlight conditions.
- ◆ DEFOG [ON, OFF] : This function helps to recognize the object in a dusty weather condition. ON, a submenu appears where you can make finer adjustments.
- ◆ SHADING : Compensates the shading effects of lenses when the lens is set to a very wide angle. This function will reduce the brightness difference between the centre and the edges. If you select ON, a submenu appears where you can make finer adjustments.
- ◆ PRIVACY [ON, OFF] : This is used to hide certain areas on the monitor. You can designate each different 16 area. The size of a designated area can be adjusted. The color of a privacy area can be selected various colors. When you select the return, the setting values in this function menu are saved, then get out of this menu.

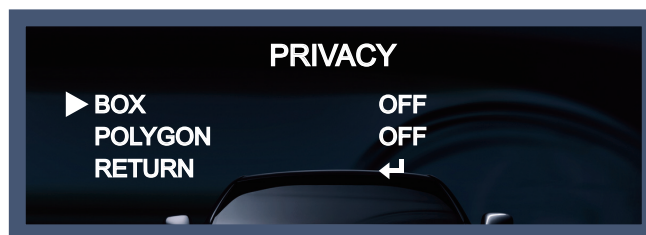

## 9. MOTION

This function is used to detect moving objects in the monitored area. When choosing ON, the following submenu will appear where you can adjust the settings for the MOTION function.



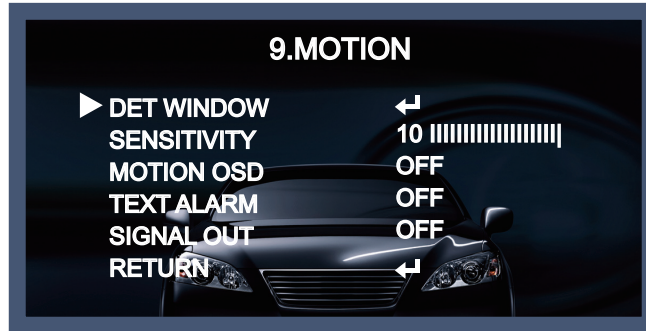

- > WINDOW TONE [0~4] : Select the number of window use for motion detection.
- > WINDOW ZONE [0~3]
- > WINDOW USE [ON, OFF]
- > DET H-POS [0~60] : Define the horizontal start position of the monitoring area.
- > DET V-POS [0~34] : Define the vertical start position of the monitoring area.
- > DET H-ZISE [0~60] : Define the horizontal size of the monitoring area.
- > DET V-SIZE [0~34] : Define the vertical size of the monitoring area.

## 10. SYSTEM

This can be used when you want to select the additional function control.

1. When the SETUP menu is displayed, select SYSTEM using the Up and Down button.
2. Select one of the mode using the Up and Down button.





- ◆ COMM : This menu is used for RS-485 communication. Users are able to select 'CAM ID(0~255)' and 'BAUDRATE(2400/4800/9600/57600/115200)'.
  - CAM ID : 1
  - BAUDRATE : 9600
- ◆ OUTPUT MODE[720P/720P CROP/1080P] : Choose output type.
- ◆ IMAGE RANGE : Adjust the rate of YC signal to 100%(FULL), 75%(COMP) or 100%~75%(USER).
- ◆ COLOR SPACE [YUV/SD-CBCR/HD-CBCR] : Select different color settings for a warmer or a colder image.
- ◆ COLOR BAR [OFF/ON] : Check current condition with color bar.
- ◆ LANGUAGE : ENG, CHN, CHN(S), JPN, KOR
- ◆ RESET [ON] : All settings will be restored to factory default.

## 11. Exit

Press the Set button in the exit menu to save the current settings and exit the Set Up menu.



# Trouble Shooting

PROBLEM	POSSIBLE CAUSE
Nothing appears on the screen.	<ul style="list-style-type: none"> <li>☞ Check the power cable, power supply output and video connection between the camera and monitor.</li> </ul>
The image on the screen is dim.	<ul style="list-style-type: none"> <li>☞ Are the camera lens or the lens glass dirty? Clean the lens / glass with a soft clean cloth.</li> <li>☞ Adjust the monitor controls, as required.</li> <li>☞ If the camera is facing a very strong light, change the camera position.</li> <li>☞ Adjust the lens focus.</li> </ul>
The image on the screen is dark.	<ul style="list-style-type: none"> <li>☞ Adjust the contrast control of the monitor.</li> <li>☞ If there is an intermediate device, correctly set the 75Ω/Hz.</li> </ul>
The camera is not working properly and the surface of the camera is hot.	<ul style="list-style-type: none"> <li>☞ Check the camera is correctly connected to an appropriate regulated power source.</li> </ul>
Motion Detection is not activated.	<ul style="list-style-type: none"> <li>☞ Has MOTION DET been set to ON in the menu?</li> <li>☞ Has MD AREA been properly defined?</li> </ul>
The color of the picture is not correct.	<ul style="list-style-type: none"> <li>☞ Check the settings in WHITE BALANCE menu.</li> </ul>
The image on the screen flickers.	<ul style="list-style-type: none"> <li>☞ Make sure that the camera isn't facing direct sunlight or fluorescent lighting. If necessary, change the camera position.</li> </ul>
The SENS-UP does not work.	<ul style="list-style-type: none"> <li>☞ Check that the AGC setting in the EXPOSURE menu is't set to OFF.</li> </ul>
Auto-Focusing Is Not Working Properly.	<ul style="list-style-type: none"> <li>☞ 1. VERY RARELY, the auto-focusing may not work. But, this is not a defect. This symptom occurs due to the product's specific feature. For this reason, if you experience this symptom, then please manually move the control board once to the left and once to the right. Then, the focusing will be corrected and working properly as it should.</li> <li>☞ 2. (Recommendation) ONE PUSH Feature In case the focusing does not work, please do the following to correct this problem. Menu -&gt; 1. 2MOTOR -&gt; 3. ONEPUSHAF -&gt; Push the "ON" button for 1 second. -&gt; The Auto Focusing will begin upon changing to "PUSHING".</li> </ul>



## LIMITED WARRANTY - VIDEO PRODUCTS

THIS WARRANTY IS VALID ONLY ON PRODUCTS PURCHASED AND USED IN THE UNITED STATES OF AMERICA AND CANADA. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL USER.

SUBJECT TO CONDITIONS AND EXCLUSIONS FOUND BELOW, THIS PRODUCT IS WARRANTED AGAINST MANUFACTURING DEFECTS IN MATERIAL AND WORKMANSHIP FOR THE FOLLOWING PERIOD FOR PARTS AND LABOR:

<b>SPECO TECHNOLOGIES CAMERAS .....</b>	<b>5 YEARS</b>	<b>DVRs .....</b>	<b>5 YEARS</b>
<b>SPECO TECHNOLOGIES IP CAMERAS.....</b>	<b>5 YEARS</b>	<b>NVRs .....</b>	<b>5 YEARS</b>
<b>SPECO PTZ AND VL CAMERAS.....</b>	<b>1 YEAR</b>	<b>BALANCE OF</b>	
<b>SPECO TECHNOLOGIES MONITORS.....</b>	<b>1 YEAR</b>	<b>SPECO TECHNOLOGIES LINE .....</b>	<b>1 YEAR</b>
<b>IR LEDS .....</b>	<b>90 DAYS</b>		

SPECO TECHNOLOGIES WILL REPAIR OR REPLACE (AT OUR DISCRETION) ANY PARTS FOUND TO BE DEFECTIVE FOR THE WARRANTY PERIOD SPECIFIED. WE WILL PROVIDE A REPLACEMENT FOR ANY DEFECTIVE PART.

### CONDITIONS

- 1. YOU MUST OBTAIN A RETURN AUTHORIZATION (RA) NUMBER FOR ANY MERCHANDISE BEING RETURNED TO SPECO TECHNOLOGIES, WHETHER FOR RETURN/EXCHANGE OR REPAIR, WHETHER IN OR OUT OF WARRANTY.**
- THIS WARRANTY WILL BE HONORED ONLY UPON PRESENTATION OF THE ORIGINAL DATED BILL OF SALE OR SALES SLIP.
- TRANSPORTATION OF THE PRODUCT TO OUR SERVICE DEPARTMENT IS THE RESPONSIBILITY OF THE USER. REPAIRED OR REPLACED PRODUCT WILL BE RETURNED PREPAID DURING THE WARRANTY PERIOD.
- SPECO TECHNOLOGIES DOES NOT AUTHORIZE ANY INTERNET OR MAIL ORDER PRODUCT SALES. IF A SPECO TECHNOLOGIES PRODUCT IS PURCHASED FROM AN UNAUTHORIZED DISTRIBUTOR OR OTHER SOURCE, INCLUDING RETAILERS, MAIL ORDER SELLERS AND ONLINE SELLERS, IT WILL NOT BE HONORED OR SERVICED UNDER THE EXISTING SPECO TECHNOLOGIES WARRANTY POLICY. ANY SPECO TECHNOLOGIES PRODUCT PURCHASED FROM THESE ONLINE MERCHANTS WILL VOID THE APPLICABLE WARRANTY AND IS INELIGIBLE FOR TECHNICAL SUPPORT. IF YOU HAVE QUESTIONS ABOUT A RESELLER, PLEASE CONTACT SPECO TECHNOLOGIES AT 1-800-645-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT: [www.specotech.com/unauthorized](http://www.specotech.com/unauthorized).

### EXCLUSIONS

- THIS WARRANTY SHALL NOT COVER ADJUSTMENT OF CUSTOMER OPERATED CONTROLS AS EXPLAINED IN THE APPROPRIATE Model 's INSTRUCTION MANUAL OR PRODUCTS WHICH HAVE BEEN ALTERED, ABUSED, OR HAVE MISSING OR ALTERED SERIAL NUMBERS.
- THIS WARRANTY SHALL NOT APPLY TO UNCRATING, SETUP, INSTALLATION, OR THE REMOVAL AND REINSTALLATION OF PRODUCTS AFTER REPAIR.
- THIS WARRANTY SHALL NOT APPLY TO REPAIRS OR REPLACEMENTS NECESSITATED BY ANY CAUSE BEYOND THE RESULT OF MANUFACTURE INCLUDING, BUT NOT LIMITED TO, ANY MALFUNCTION, DEFECTS OR FAILURE CAUSED BY OR RESULTING FROM UNAUTHORIZED SERVICE OR PARTS, IMPROPER MAINTENANCE, MODIFICATION OR REPAIR BY THE USER, ABUSE, MISUSE, NEGLIGENCE, ACCIDENT, FIRE, FLOOD, OR OTHER ACTS OF NATURE, INCORRECT LINE VOLTAGE, DAMAGE OR IMAGE BURNS TO TELEVISION PICTURE TUBES CAUSED BY OR ATTRIBUTABLE TO THE USE OF ANY ACCESSORY, ELECTRONICS GAME OR DEVICE, OR DAMAGE CAUSED TO IMAGE PICKUP DEVICES BY EXCESSIVE LIGHT.

THE FOREGOING IS IN LIEU OF ALL OTHER EXPRESSED WARRANTIES AND WE DO NOT AUTHORIZE ANY PARTY TO ASSUME FOR US ANY OTHER OBLIGATION OR LIABILITY. IN NO EVENT SHALL WE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF THIS PRODUCT, OR FOR ANY DELAY IN THE USE OF THIS PRODUCT DUE TO CAUSES BEYOND OUR CONTROL. SOME STATES DO NOT ALLOW LIMITATIONS OF HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL DAMAGES. THE ABOVE LIMITATIONS ON IMPLIED WARRANTY AND CONSEQUENTIAL DAMAGES MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

**NOTE: FOR YOUR PROTECTION IN THE EVENT OF THEFT OR LOSS OF THIS PRODUCT, PLEASE FILL IN THE INFORMATION REQUESTED BELOW AND RETAIN WITH YOUR SALES RECEIPT.**

MODEL NO.: \_\_\_\_\_ SERIAL NO.: \_\_\_\_\_  
(LOCATED ON BACK OR BOTTOM OF UNIT)

DATE OF PURCHASE: \_\_\_\_\_

WHERE PURCHASED: \_\_\_\_\_ PURCHASE PRICE: \_\_\_\_\_

Speco Technologies 200 New Highway Amityville, NY 11701 <a href="http://www.specotech.com">www.specotech.com</a>	<b>FOR MORE INFORMATION REGARDING SERVICE OR RETURN,          CALL US TOLL FREE: 1-800-645-5516 IN METRO NY: 631-957-8700</b>
---	---

**ALWAYS USE DISCRETION WHEN INSTALLING VIDEO AND/OR AUDIO SURVEILLANCE EQUIPMENT ESPECIALLY WHEN THERE IS AN EXPECTATION OF PRIVACY. INQUIRE REGARDING FEDERAL, STATE AND/OR LOCAL REGULATIONS APPLICABLE TO THE LAWFUL INSTALLATION OF VIDEO AND/OR AUDIO RECORDING OR SURVEILLANCE EQUIPMENT. PARTY CONSENT MAY BE REQUIRED.**







**200 New Highway  
Amityville, NY 11701  
631-957-8700  
1 800 645 5516  
[www.specotech.com](http://www.specotech.com)**