


Product information

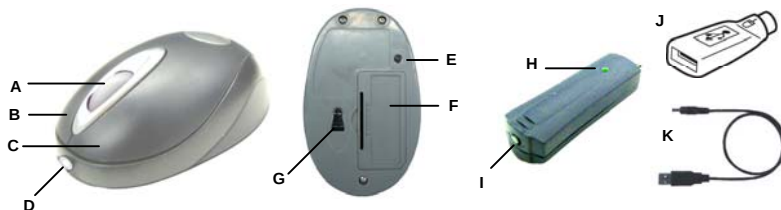

UK

Mouse

- A: Scroll-wheel and third button (push down for autoscroll)
Below scroll-wheel: Battery-low LED (lit flashing)
- B: Right button
- C: Left button
- D: Charging cable connector
- E: Connection button
- F: Battery compartment
- G: Motion sensor

Receiver

- H: Status LED
 - Lit steady: power
 - Lit flashing: mouse movement
- I: Connection button
- J: USB to PS/2 converter
- K: USB Charging cable (connect when scroll-wheel LED flashes)

Installation

1




- Insert provided rechargeable batteries
- Motion sensor lights



If use USB to PS/2 converter: (1) turn off PC; (2) connect receiver; (3) turn on PC; (4) go to 4.

2

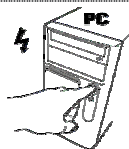

Computer on

3



- Connect receiver to USB port
- Status LED lights

4




- Press connection button on receiver.
- Status LED flashing 

5



- Press connection button on bottom of mouse.
- Status LED on Receiver stops flashing
- Windows ME/2000/XP/X-64: **go to 9**
- Windows 98(SE): **go to 6**

6

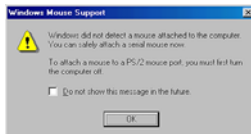

- If no other mouse is connected:
- Press [Enter] key

7



- Next
- When asked, insert Windows 98 SE CD.


8



Finish

...

9

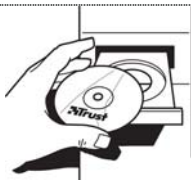

Place Trust Installation CD in CD-ROM player

10



Install Trust Easy Mouse Configuration software and read the software manual.

Reminders

)))

Less wireless performance



Metal objects close to or between the device



Batteries almost empty (Battery-low LED flashing)



Another wireless device is close by



Max. 1.5 m



General usage

-  Always use rechargeable batteries with mouse.
-  When mouse is not responding, please click on the mousewheel button to activate it.
-  When Battery-low LED flashes: connect USB charging cable to charge batteries.
-  For increased accuracy, decrease mouse speed in the windows control panel.
-  Do not use mouse on highly reflective or transparant surfaces like glas.
-  Use soft brush to clean the optical sensor when it's dusty.

If you have any problems, go to www.trust.com/14185 for FAQ, drivers and manuals.

Safety

- Do not open or repair this device.
- Keep this device away from liquids, such as water.
- Never throw the batteries onto an open fire. The batteries may explode.
- Never drill holes into the batteries.
- Keep the batteries out of the reach of small children.
- Use only rechargeable NiMH batteries with this product.



- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.trust.com/14185/ce

Wireless

- This wireless device works at a frequency of 27MHz. It meets the essential requirements and other relevant conditions of R&TTE Directive 1999/5/EC and can be used in EU countries plus: RU/NO/TR/HU. There are no limitations per channel for the above-mentioned countries. Go to www.trust.com/14185 for an updated list of the countries where the use of this device is permitted.
- There may be restrictions for the use of this device outside of the EU. If this device is used outside of the EU, check whether this device meets local regulations. Frequency: 27.195MHz, Bandwidth: 50KHz, Power: 0.01 ~ 0.03mW.
- Nowadays, there are an increasing number of wireless products (video, audio, computer, etc.) which work in the same frequency range as this device. It may, therefore, be possible that the functionality of this product is limited by or is limiting for other wireless products. This can only be avoided by paying attention to the distance between products and, where possible, by changing channels.
- Be careful when using wireless devices if you have a pacemaker or are dependent on other life-saving, sensitive electronic equipment, because this product transmits radio signals.

Warranty & copyright

- This product has a two-year manufacturer's warranty which is effective from the date of purchase. For more information see www.trust.com/warranty
- Reproduction of this manual or any part of it is prohibited without permission from Trust International B.V.