
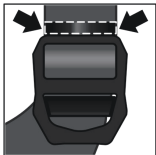


Notes and Reminders

- Make sure the two buckles on the upper belts remain in the correct position. Do not remove the buckles from the belts. In case you have removed any, put the piece back into place correctly. As shown here, each buckle should be inside the reference line (the raised area across the belt). 
- The upper belt has numbers on it to help you with the adjustment of belt length. The recommended position is 2 or 3. However, you should adjust the length according to your UX10 model and the size of your hand.

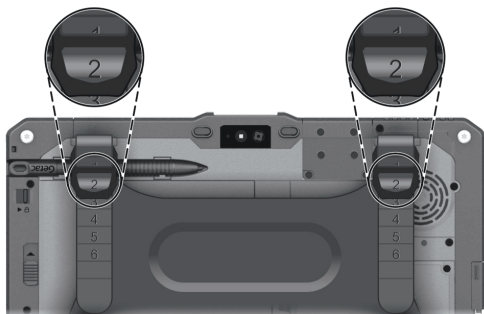

Installation

Part 1: Fastening the Upper Belts

NOTE: Be sure to pull tight throughout the procedure.

1. Insert the belt through the matching holder (❶).
2. Fold the belt over and insert it through the inner slot of the buckle's hook piece. Lift up the buckle to facilitate the insertion (❷). Pull the belt to the appropriate extent (❸). (See the previous page for information.)




3. Insert the belt through the outer slot and pull it tight (❹).
4. Proceed with the other belt.

The two belts must be adjusted to the same length.




Part 2: Fastening the Lower Belts

Attach the two hooks to the lower holders on UX10.

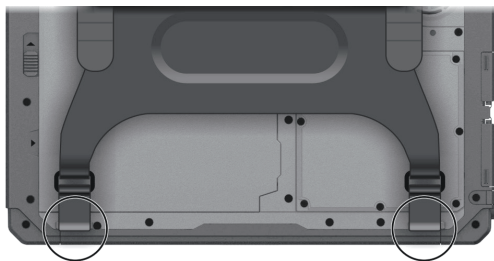

Application

To safely grip UX10, make sure the hand strap is tight enough for your hand. Adjust the length when necessary.

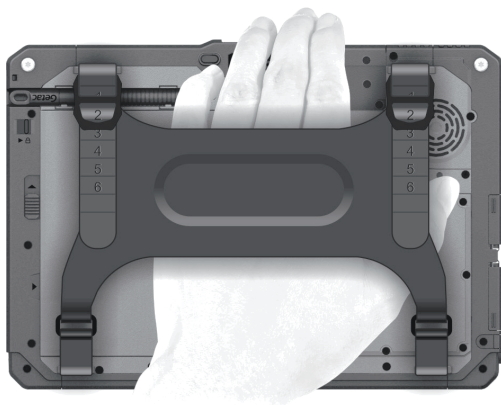

Disclaimer

Getac will not be held responsible for any damages arising from failure to follow the user guide.



5 6 1 8 1 4 1 1 0 0 6 R 0 0