## RS5100/RS6100

Enterprise Hand Mount Quick Start Guide





MN-004352-02EN Rev. A - 1/2023

Zebra Technologies | 3 Overlook Point | Lincolnshire, IL 60069 USA www.zebra.com

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. © 2023 Zebra Technologies Corp. and/or its affiliates. All rights reserved.

## Warranty

For the complete Zebra hardware product warranty statement, go to: zebra.com/warranty.

#### **Service Information**

Before you use the unit, it must be configured to operate in your facility's network and run your applications.

If you have a problem running your unit or using your equipment, contact your facility's Technical or Systems Support. If there is a problem with the equipment, they will contact the Zebra Global Customer Support at zebra.com/support.

For the latest version of this guide go to: zebra.com/support.

#### **Additional Information**

For information on using the RS5100 or RS6100, refer to the corresponding product guide available at: zebra.com/support.

## **Enterprise Hand Mount**

The Enterprise Hand Mount allows the RS5100/RS6100 to be worn on the back of your hand and provides a remote finger trigger. The hand wrap is available for right-handed and left-handed users and in multiple sizes, distinguished by the color of the stitching:

- Small = white
- · Medium = black
- Large = blue


To attach the Enterprise Hand Mount:

- **1.** Install the hand wrap to the mount, noting the position for right or left-handed user.
- 2. Position the hand mount on the hand.
- 3. Install the scanner onto the mount.


# Install Hand Wrap for a Right-Handed User

To install the hand wrap to the mount for a right-handed user:


 Insert the trigger cable and button through the trigger slot.

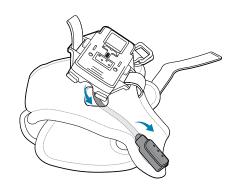

2. Insert the mount strap through the left slot of the mount (as it sits on your hand) and slide under the mount.

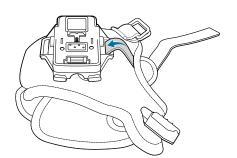


Insert the mount strap up through the remaining slot of the mount and fasten the strap end.

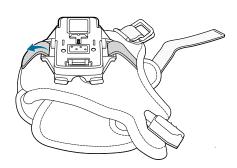


# Install Hand Wrap for a Left-Handed User

To install the hand wrap to the mount for a left-handed user:


Insert the trigger cable and button through the trigger slot.

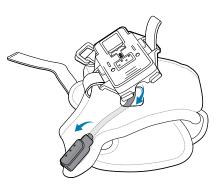

Insert the mount strap through the right slot of the mount (as it sits on your hand) and slide under the mount.

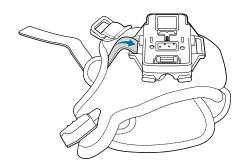


Insert the mount strap up through the remaining slot of the mount and fasten the strap end.

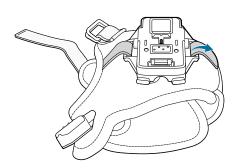


### **Position Hand Mount on Hand**

To position the hand mount on the hand:


 Slide your hand through the hand wrap, with your thumb through the smaller opening and remaining four fingers through the larger opening. Note the position for a left or right-handed user.



2. Adjust the strap to a comfortable position to fit securely.



**3.** Slide the strap through the buckle and secure the end of the strap in place.

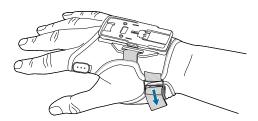




**NOTE:** The snap under the strap is a safety breakaway and is not used to secure the strap.

**4.** Position the finger trigger button to allow access by your thumb and fasten it in place.







- 5. Align the mount on the hand wrap:
- a. Lift the mount strap.

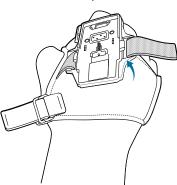

- b. Detach and lift the mount.
- **c.** Reposition the mount on the hand wrap to align the mount with your middle finger knuckle.

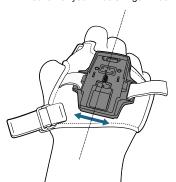

d. Fasten the strap.

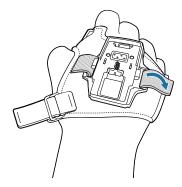

## Install RS5100/RS6100

To install the scanner onto the Enterprise Hand Mount:

 Align the contacts on the scanner with the contacts on the mount and engage the slot on the scanner (located at the top of the scanner on the backside) with the opening at the top of the hand mount.



2. Push down on the scanner to snap into place.




### **Correct Installation**






#### **Incorrect Installation**

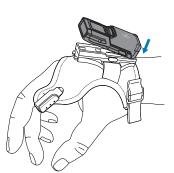




## **Detach RS5100/RS6100**

To detach the scanner from the Enterprise Hand Mount: 1. Press the release buttons on both sides of the mount.

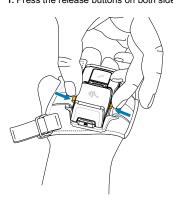


2. Lift the scanner off the mount.

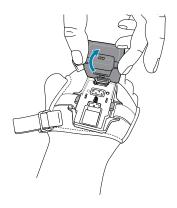


# **Cleaning the Hand Wrap**

Before cleaning the hand wrap, remove the electronics:


1. Unfasten the strap and detach the mount.

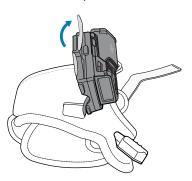

2. Slide the mount off the strap.

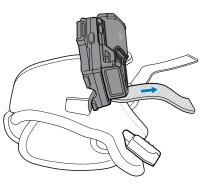

3. Remove the finger trigger button and cable from the hand wrap.

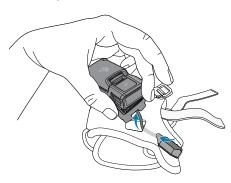

4. Use an approved cleaning agent or mild detergent on the hand wrap material only and air dry.