


- a. Fix the wall-hook plate(h) onto the wall with two screws.



- b. Fix the wall-hook plate onto the wall with double tape.




Packing items :

Model S2 includes: unit 1pc,
user manual 1pc,
double tape 1pc,
screw 2pc,
screw plug 2pc,
wall hook plate 1pc,
toothpaste holder 1pc.



UV TOOTHBRUSH SANITIZER S2

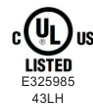

UV Toothbrush Sanitizer:

Important:

Thank you for purchasing the S2 UV Multiple Toothbrush Sanitizer.


PLEASE READ THIS ENTIRE MANUAL CAREFULLY AND REFER TO THE DIAGRAMS BEFORE USE.

1. The toothbrush sanitizer should not be placed in water or any other liquid. If this product does fall into water, remove and dry the unit immediately.
Please be sure to keep water from splashing onto the UV tube.
2. The UV light is harmful to your eyes and skin. So do not press the door switch while the front cover is open.
3. To reduce the risk of accidental eye injuries, Adult supervision of this product is required. Be sure children use this product ONLY under Adult supervision.
4. The product is to be used only for its intended use, which is to sanitize the toothbrushes, razors, shaver and tongue cleaners. Any other use is not recommended and may cause damage to the product or injury to persons.
5. When mounting the tooth brush sanitizer on the wall, make sure the surface of the device is clean and placed carefully against the wall.
6. Never use detergents, gasoline, glass cleaner, furniture polish, paint thinner or household solvents to clean any part of the sanitizer. Instead clean with a dry, soft cloth.
7. Do not attempt to sanitize a toothbrush that has been used with combustible or explosive substances such as acetone, alcohol, paint, stainer, gasoline, degreasers, solvents, kerosene, paint thinner etc.
8. Do not put toothpaste onto the brush before placing it into the sanitizer.

9. Guidelines on Battery Usage
 - a. Batteries to be removed and replaced by adults only.
 - b. Do not mix old and new batteries. Do not mix different types of batteries.
 - c. To avoid explosion or leakage, do not dispose of batteries in fire or attempt to recharge primary batteries.
 - d. Be sure to insert batteries with correct polarity.
 - e. Remove batteries and store them in cool, dry place when not in use.
 - f. Always remove expired batteries from the product.

Description:

1. This Model S2 Sanitizer is battery operated ONLY. It requires four (4) 1.5V AA batteries. The Batteries are NOT included.

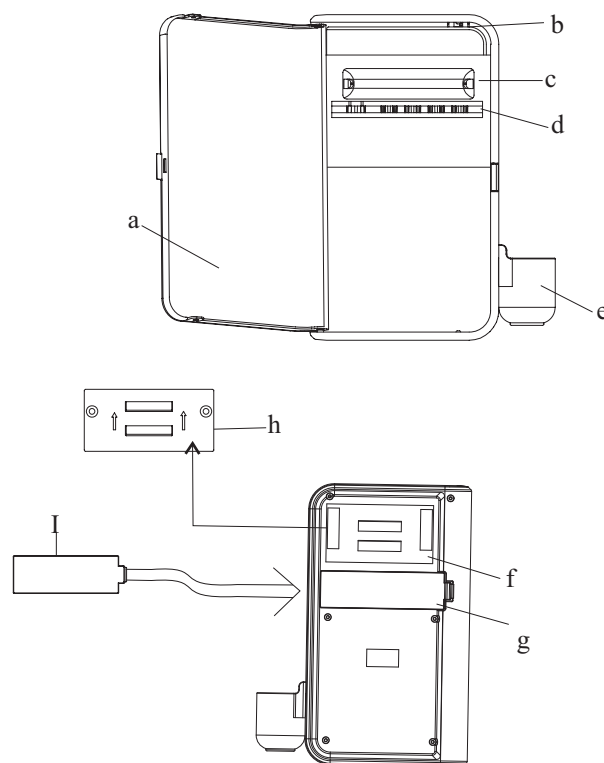

- a .Front Cover
- b .Switch
- c .UV Tube
- d .Hang brackets
- e .Toothpaste holder
- f .Wall hook hole
- g .Battery compartment
- h .Wall hook plate
- i .Battery door

Instructions:

1. Open the battery door(i) and put four batteries into the battery compartment(h)
2. Open the front cover and put your toothbrushes or shaver mount onto the Hang bracket(d) bristle towards the UV lamp(c).
3. Close the Front cover(a),and the device will switch on, the UV lamp(c) will light and last for 5-8 minutes to kill all germs and go out automatically.
4. If the UV bulb getting to dim or do not light at battery working mode, Pls replace new batteries
5. Press the product onto the hook plate(h) and slide it down to make sure the product of wall hook hole(f) is locked into the wall-hook plate.
6. While placing the toothbrush after brushing, shake off the excess water to maintain the cabinet clean and dry.
7. Wall mount bracket installation guide:

Toothbrush sanitizer provides the following two easy wall mount installation methods. In using choose one of them.