

# Humanscale<sup>®</sup>


#### STEP 7:

Position the stop ring to limit the arm's range of motion. The marked angle will be in the center of the range of motion.



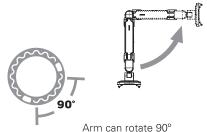

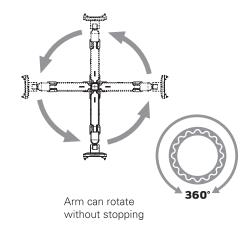

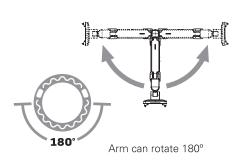


# STEP 8:

Insert monitor arm into the mount until release button locks in place.

To remove arm press release button and pull the arm up near the joint.

Note: If using a 3 link configuration, one of the links must be a 4" link.



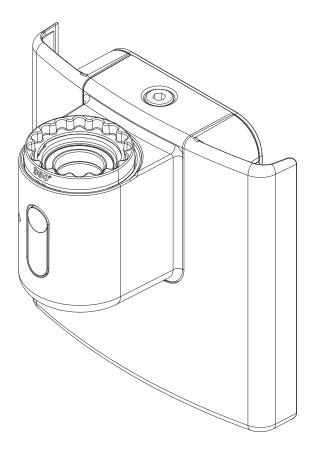


# M8.1/M10

SlatWall Mount Installation Instructions

# STEP 1:


Remove the plastic front cover.

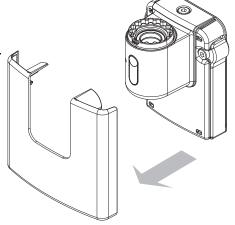

#### STEP 2:


Adjust the spacing between hooks with the top screw to fit onto rail.

Turn clockwise to tighten hooks and counter-clockwise to expand.

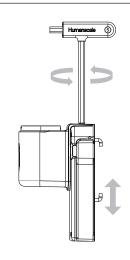


# STEP 3:

Turn both front screws counter-clockwise to loosen the top hook if needed to fit onto rail.

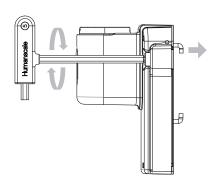


# STEP 4:

Place the mount on rail and turn both front screws clockwise to secure the top hook.

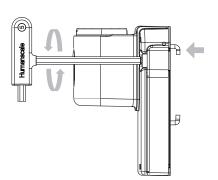

#### STEP 5:

Turn the top screw clockwise to secure the lower hook.

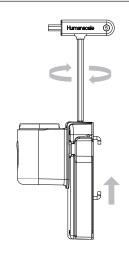

# STEP 6:

Reinstall the plastic cover.

