



Electric Motorized Projection Screen

Home 2 Series

User's Guide



Important Safety & Warning Precautions

Make sure to read this user's guide and follow the procedure below.

Caution: The Screen's Black Top Drop is already set to its maximum drop distance. There is NO extra Black Top Drop in the roller. Please be aware of this as it will void your warranty with Elite Screens. Unapproved changes or modifications (except for cutting the power cord for hardwire installations) to this unit are prohibited and will void your warranty. For more information, please contact our Technical Support Department at (877) 511-1211 Ext. 604.

- Please retain this user's guide for future reference.
- To avoid damaging the unit, do not use with any unauthorized accessories not recommended by the manufacturer.
- Handle the unit carefully during transportation to avoid any damages.
- To ensure safe and reliable operation, direct connection to a properly grounded power source is advised.
- The power outlet supplying power to the unit should be close to the unit and easily accessible.
- Do not install the unit on uneven or inclined surfaces.
- Do not place any heavy objects over the power cord.
- Position the power cord properly to avoid creating a trip obstacle.
- To avoid an electrical shock or fire, due to a loose contact or short circuit, do not overload the power cord.
- The internal & external parts of this unit are not end user serviceable. Do not attempt to disassemble this unit by yourself. No one except authorized technicians can open and make repairs to this unit.
- Make sure the power source that this unit is connected to has a continuous power flow.
- If there is need to use an extension cord, make sure the cord has an equal rating as the appliance to avoid over heat.
- Do not handle the power plug when your hands are wet or your feet are in contact with water.

Do not use this unit under the following circumstances.

- Disconnect the power cord under the conditions of heavy rain, wind thunder or lightning.
- Avoid direct sun light, rain shower and moisture.
- Keep away from fire sources and high temperature to prevent this device from overheating.
- Cut off the power supply first before transportation or maintenance.
- To avoid possible injury and/or an electric shock, do not attempt to use this screen if there is obvious damage or if there are any evident broken parts.

Installation Warning

Due to various installation environments, the instructions provided in this user's guide are for reference only. Please consult a professional installation company for further installation and safety advice. The installer must insure that proper mounting hardware is used to provide adequate strength suitable for the installation. Elite Screens is not liable for any faulty installations. For limit adjustment instructions, please contact our Technical Support Department at (877) 511-1211 Ext. 604.

The Screen's **Top Black Drop** is already set to its maximum drop distance. There is **NO** extra top black drop in the roller. Please be aware of this as it will void the limitation of your warranty.

Individual modifications to this product are prohibited and will void the warranty with the manufacturer. Please contact Elite Screens Customer Service for any questions.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that the interference will not occur on a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- ✓ **Reorient or relocate the receiving antenna of the device which may be causing the interference.**
- ✓ **Increase the separation between the screen and the device's receiver.**
- ✓ **Connect the equipment into a different power outlet other than the device.**

Pre-Installation


1. Carefully unpack the screen.
2. Always handle the screen in a leveled position on a clean surface.
3. In order to protect the screen from exposure to stains, keep the screen out of contact with foreign particles such as dust, sawdust, and/or liquids.

NOTE


Regardless of the mounting method, the screen should be securely supported so that the vibration or pulling on the viewing surface will not cause the casing to become loose or fall. The installer must insure that the fasteners used are of adequate strength and suitable for the installation location.

Accessories for Home 2 Series

Please make sure all accessories listed below are included before proceeding.

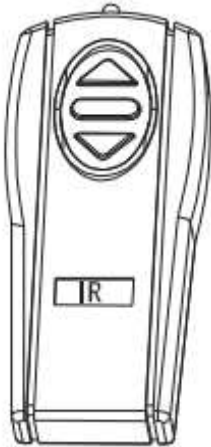

A.
IR Remote

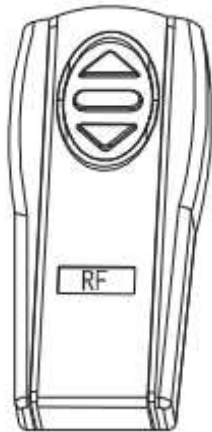


B.
RF Remote




C.
3 Way Wall Switch




D.
IR Eye Receiver

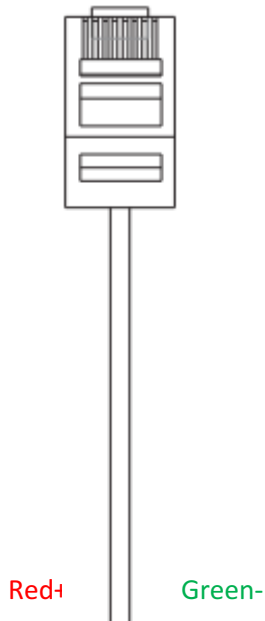

E.
12V Trigger

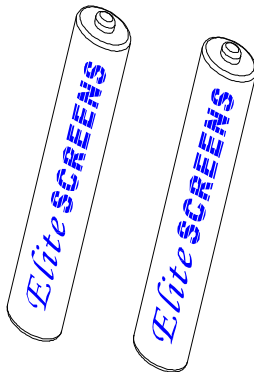


F.
AAA Batteries

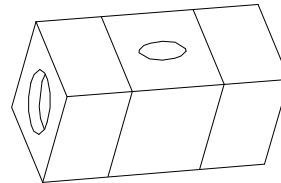


G.
Bubble Level

Hardware Parts List for Home 2 Series

Please make sure all items listed below are included before proceeding with the installation.




A



B



C

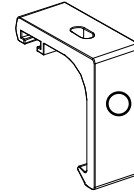

D


120" & above x 3 brackets

Hardware Parts List		QTY
A. Screw & Dry Wall Anchor		2EA.
B. Bolt		2
C. Masonry Screw & Anchor		2EA.
D. Extruded Hanging Bracket		2 or 3


Installation Instructions

Please consult a professional installer. Elite Screens is not liable for any faulty installations.


1. Insert each **Bolt (B)** through the right & left slide channel located on the top of the screen's case.

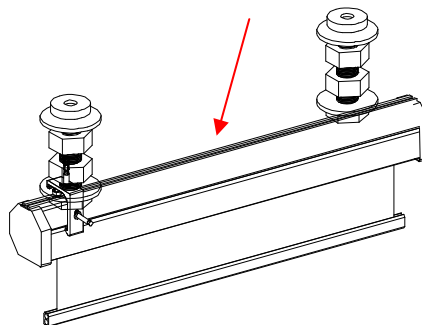


- Slide the **Extruded Hanging Bracket (D)** through the rail located below the slide channel until it meets with the top of the **Bolt (B)** and slightly secure the lug-nuts located on the top & bottom of the bolt to attach the bracket.

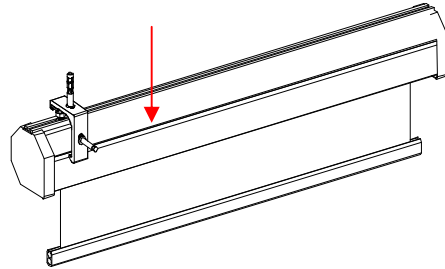

- Mark the installation location to drill your hole. Insert the proper screw and secure the bolts to the bracket.

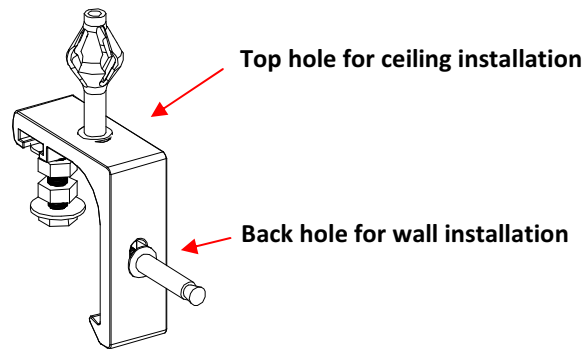

- Example of the Home 2 installed to a wall, ceiling and enclosed.

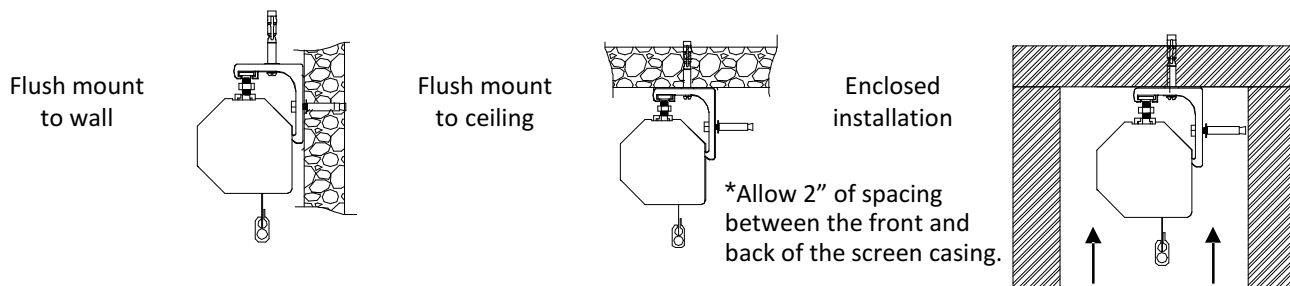

Troubleshooting & FAQ'S

For additional information, please contact Elite Screens at techsupport@elitescreens.com

1. If your screen does not move, please check the power supply. The screen will understandably not move without power.
2. Make sure the power cord is firmly plugged to the power outlet.
3. Make sure that all cable connections are secure.
4. If the screen works well with the line switch but not with the remote control, please make sure the remote controls have fresh batteries. Change the batteries every 6 months to ensure proper operation of the remotes.

1. **Q:** Why does my screen no longer function?

A: Make sure your wall plug has power and that the screen is properly plugged. The fuse on the screen will also need to be checked. Please contact techsupport@elitescreens.com for the location. The tubular motor in this screen is equipped with a thermal relay. This feature will automatically shut off the screen in the event of the motor becoming too hot. This will prevent the motor from overheating. If you should experience this, please let the screen's temperature decrease for 10-15 min. before usage.

2. **Q:** How is the screen material cleaned?

A: The screen material can be cleaned with mild soap and water.

3. **Q:** What type of batteries do the remote controls require?

A: The IR and RF remote controls use AAA alkaline batteries.

4. **Q:** Can you manually pull down the screen?

A: No, manually pulling down the screen will damage the electronic motor rolling system and void your warranty.

5. **Q:** How could I setup my Screens IR receiver to work with my learning remote control system Do you have any IR codes I can use to achieve this?

A: Our IR remote controls have been evaluated and entered in to the databases of some Universal remote control manufacturers. Please contact the manufacturer of your remote to inquire about your remotes ability to function with ours. If they have not evaluated our remote control then the following list of Binary codes will be used for most remote setups.

For Spectrum, VMAX2 (Plus), **Home2** and CineTension 2 Series

Up: 1111 0000 0001

Stop: 1111 0000 0010

Down: 1111 0000 0100


6. **Q:** What is the gain on the matte white screen material?

A: The matte white material has a gain of 1.1. For detailed information, please visit www.elitescreens.com/home2

Home 2 Dimension Table

Unit: Inch																								
Model	Diagonal Size/Aspect Ratio	Case Length (A)	Screen Width (A1)	View Width (A2)	Weight Bar Length (A3)	Bottom Edge (B4)	Screen Material to Weight Bar Height (B2)	View Height (B3)	Overall Height (B1)	Overall Height w/ bracket (B)	Case Height (B5)	Height between bracket and case (B6)	Case Width (C)	Case End to Screen (C1)	Distance between case and the wall (C2)	G1	G2	G3	G4	G5	G6	G7	G8	N.W. (LBS)
Home100WS2	101"(1:1)	80.3	74.0	71.0	75.9	2.7	75.7	71.0	80.0	81.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	24.0
Home120WS2	121"(1:1)	94.3	88.0	85.0	89.9	2.7	89.7	85.0	94.0	95.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	29.4
Home135WS2	135"(1:1)	104.8	98.5	95.5	100.4	2.7	100.2	95.5	104.5	106.1	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	37.6
Home150WS2	150"(1:1)	115.3	109.0	106.0	110.9	2.7	111.7	106.0	116.0	117.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	38.7
Home165WS	166"(1:1)	127.8	121.0	117.0	122.9	3.2	123.2	117.0	128.5	130.5	4.6	6.9	5.0	1.5	5.2	3.4	1.9	1.4	0.7	4.1	2.2	0.8	0.4	55.2
Home200WS2	200"(1:1)	152.2	145.4	141.4	147.3	3.2	150.6	141.4	155.9	157.9	4.6	6.9	5.0	1.5	5.2	3.4	1.9	1.4	0.7	4.1	2.2	0.8	0.4	62.3
Home75WV2	75"(4:3)	69.3	63.0	60.0	64.9	2.7	49.7	45.0	54.0	55.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	22.4
Home90WV2	90"(4:3)	81.3	75.0	72.0	76.9	2.7	58.7	54.0	63.0	64.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	23.7
Home100WV2	100"(4:3)	89.3	83.0	80.0	84.9	2.7	64.7	60.0	69.0	70.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	25.9
Home120WV2	120"(4:3)	105.3	99.0	96.0	100.9	2.7	76.7	72.0	81.0	82.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	31.7
Home135WV2	135"(4:3)	117.3	111.0	108.0	112.9	2.7	85.7	81.0	90.0	91.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	35.2
Home150WV2	150"(4:3)	129.3	123.0	120.0	124.9	2.7	94.7	90.0	99.0	100.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	41.5
Home75WH2	75"(16:9)	74.7	68.4	65.4	70.3	2.7	43.4	36.7	47.7	49.3	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	23.1
Home75WH2-E30	75"(16:9)	74.7	68.4	65.4	70.3	2.7	69.4	36.7	73.7	75.3	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	23.1
Home90WH2	90"(16:9)	87.7	81.4	78.4	83.3	2.7	50.8	44.1	55.1	56.7	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	25.3
Home90WH2-E30	90"(16:9)	87.7	81.4	78.4	83.3	2.7	76.8	44.1	81.1	82.7	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	28.5
Home100WH2	100"(16:9)	96.3	90.0	87.0	91.9	2.7	55.7	49.0	60.0	61.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	28.6
Home100WH2-E24	100"(16:9)	96.3	90.0	87.0	91.9	2.7	75.7	49.0	80.0	81.6	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	28.6
Home120WH2	120"(16:9)	113.9	107.6	104.6	109.5	2.7	65.5	58.8	69.8	71.4	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	35.4
Home120WH2-E24	120"(16:9)	113.9	107.6	104.6	109.5	2.7	85.5	58.8	89.8	91.4	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	35.4
Home135WH2	135"(16:9)	127.0	120.7	117.7	122.6	2.7	72.9	66.2	77.2	78.8	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	41.9
Home135WH2-E24	135"(16:9)	127.0	120.7	117.7	122.6	2.7	92.9	66.2	97.2	98.8	3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	43.2
Home150WH2	150"(16:9)							73.5			3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	45.1
Home150WH2-E12	150"(16:9)							73.5			3.7	5.1	3.8	1.4	4.1	2.8	1.5	0.9	0.5	2.9	1.6	0.8	0.4	45.1

*Measurement dimensions are intended as a reference only and subject to change without notice. Note: Data Error may be $\pm 1''$

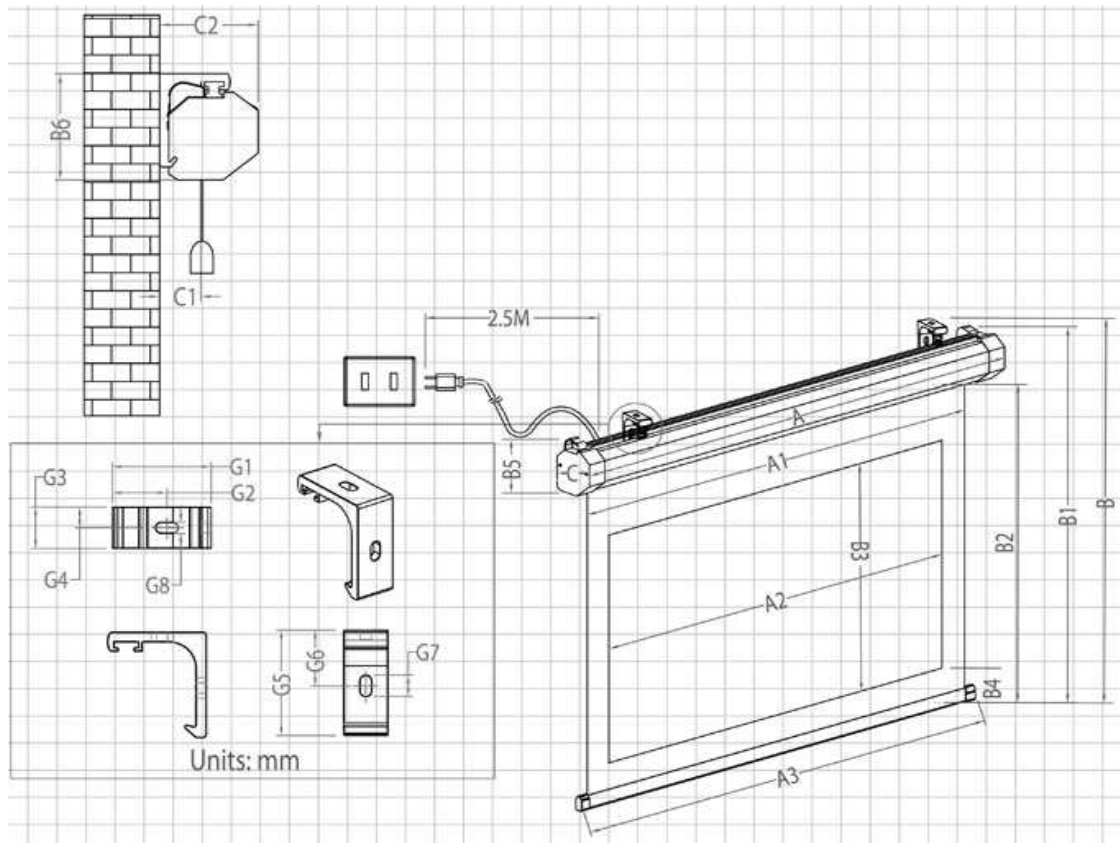

Warranty Policy

- **Two (2) Year** parts and labor warranty from defects in workmanship from purchase date as follows (except for refurbished units as specified below).
- **Three (3) Year** parts and labor warranty from defects in workmanship for **GEMR** (Government, Educational, Military, & Religious) purchases of new product only.
- **Refurbished Units** carry a **90-DAY** parts and labor warranty.
- Each party will be responsible for one way shipping during the warranty period.
- A **RMA (Return Merchandise Authorization) number** must be issued in order to process a replacement or to authorize a return for warranty repair. Elite Screens will, at its sole option replace or repair the defective unit with a replacement *(see exceptions below) after the defective unit or parts have been received. Once the product is received, Elite Screens will send out a replacement *unit to the customer by ground service (subject to inventory availability).
- **Do Not Return Any Unauthorized Items to Elite Screens, as they will be refused and returned at your expense. The RMA Number must be included on the outside label of your shipping box. Our warehouse is not authorized to accept returns without an RMA number on the shipping label.**
- **RMA Numbers are valid for 45 days from the date issued.**
- **Missing Parts** must be reported within 7 days of receipt. If reported after 7 days, the customer will be responsible for shipping and handling fees. If reported after 30 days of receipt, the customer will be responsible for cost of parts and shipping & handling fees.

*A New or refurbished replacement will be send out to the customer depending on the type of purchase (new or refurbished) and based on stock availability.

North America only U.S. and Canada

For Warranty and Service requests, please submit an RMA/Service Form at:
www.elitescreens.com/warrantysupportform

Please visit this link for full Warranty information:
www.elitescreens.com/warranty

For Customer Service and Technical questions, please contact Elite Screens at:
Telephone: (877) 511-1211 service@elitescreens.com
Fax: (562) 926-8433 techsupport@elitescreens.com

REMEMBER TO REGISTER YOUR PRODUCT AT:

WWW.ELITESCREENS.COM

Contact Information

US & Canada Tech Support & Warranty Claim

Please contact us at service@elitescreens.com or call +1 877-511-1211 #3 or fax +1-562-926-8433

Europe Tech Support & Warranty Claim

Please contact us at service@elitescreens.eu or call +49-(0) 40-30392958

Asia Tech Support & Warranty Claim

Please contact us at service@elitescreens.com.cn or call +86-(0) 755-8461-7989

Taiwan Tech Support & Warranty Claim

Please contact us at service@elitescreens.com.tw or call +866+2+8990-1999

America:

Elite Screens Inc

16410 Manning Way

Cerritos, CA 90703 USA

Tel: +1-877-511-1211

Fax: +1-562-926-8433

info@elitescreens.com

www.elitescreens.com

Europe:

Elite Screens Europe

Lübecker Straße 1

22087 Hamburg, Germany

Tel: +49-4030392494

Fax: +49-40-49219200

info@elitescreens.eu

www.elitescreens.eu

Asia:

Elite Screens China Corp.

Longxi Duimianling Industry Zone

Longcheng Longgang District,

ShenZhen Guangdong, China

Tel: +86-(0)755-8461-7989

Fax: +86-(0)755-8461-7669

info@elitescreens.com.cn

www.elitescreens.com.cn

Elite Screens France S.A.S

11, Allée William Penn

92150 Suresnes, France

Tel: +33-1-45064735

Fax: +33-1-45064735

info.fr@elitescreens.com

www.elitescreens.com/fr

Taiwan:

Elite Screens Taiwan Corp.

4F., No. 42-1 Wuguan Rd. Wugu Township Taipei

County 248, Taiwan (Wugu Industrial Park)

Taiwan (R.O.C)

Tel: +886+2+8990-1999

Fax: +886+2+8990+1366

info@elitescreens.com.tw

www.elitescreens.com.tw

Japan:

Elite Screens Japan Corp.

467-2-606 Tsuruma, Machida-shi,

Tokyo, 194-0004 Japan

Tel: 0120-07-0008

Fax: +81(0)42-706-9130

info@elitescreens.jp

www.elitescreens.jp

Latin America Contact:

Info.la@elitescreens.com

East Asia Contact:

Info.ea@elitescreens.com

India Contact:

Info.india@elitescreens.com